


SERVICE MANUAL

BG2T CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KV-PG14P10</i>	<i>RM-952</i>	<i>Oceania</i>	<i>SCC-U62B-A</i>				
<i>KV-PG14P10/G</i>	<i>RM-952</i>	<i>Australia</i>	<i>SCC-U72A-A</i>				
<i>KV-PG14P10/L</i>	<i>RM-952</i>	<i>Oceania</i>	<i>SCC-U62C-A</i>				
<i>KV-PG14P40/L</i>	<i>RM-952</i>	<i>GE</i>	<i>SCC-U69B-A</i>				
<i>KV-PG14P40/N</i>	<i>RM-952</i>	<i>GE</i>	<i>SCC-U69D-A</i>				

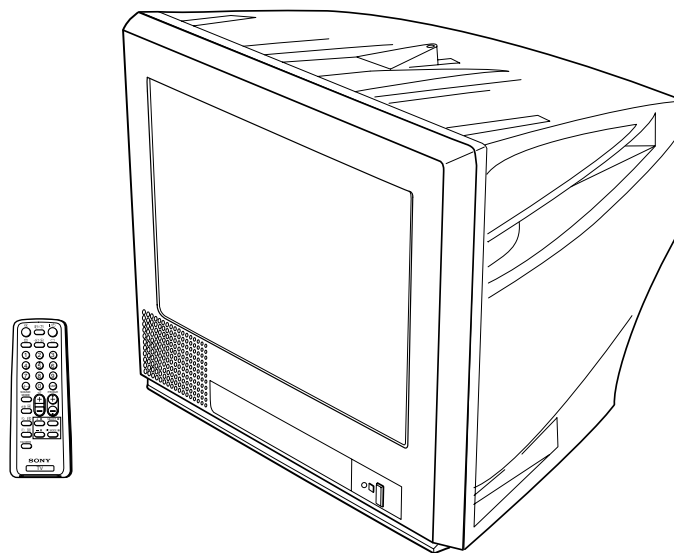

TRINITRON® COLOR TV
SONY®

SPECIFICATIONS

		Note
Power requirements	110-240 V AC, 50/60 Hz	KV-PG14P40
	220-240V AC, 50/60 Hz	KV-PG14P10
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G	
Color system	PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43	
Channel coverage	VHF: E2 to E12 / UHF: E21 to E69/ CATV: S01 to S03, S1 to S41	
	VHF: 0 to 12, 5A,19A / UHF: 28 to 69 CATV: S01 to S03, S1 to S41	Australia only
	VHF: 1 to 11 / UHF: 21 to 69 CATV: S01 to S03, S1 to S41	New Zealand only
⏏(Antenna)	75-ohm external terminal	
Audio output (Speaker)	3W	
Number of terminal		
📺 Video	Input: 2* Output: 1	Phone jacks; 1 Vp-p, 75 ohms *One input line available
🎵 Audio	Input: 2* Output: 1	Phone jacks; 500 mVrms *One input line available
🎧 (Earphone)	Output: 1	Monaural minijack
Picture tube	14 in	
Tube size (cm)	37	Measured diagonally
Screen size (cm)	34	Measured diagonally
Dimension (w/h/d,mm)	375 x 346 x 411	
Mass (kg)	12	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK \triangle ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
SELF DIAGNOSTIC FUNCTION			5. DIAGRAMS		
1. GENERAL		4	5-1. Block Diagram		25
2. DISASSEMBLY			5-2. Circuit Boards Location		27
2-1. Rear Cover Removal		11	5-3. Schematic Diagram		28
2-2. Speaker Removal		11	(1) Schematic Diagram of A Board		29
2-3. Chassis Assy Removal		11	(2) Schematic Diagrams of C and F Boards		31
2-4. F Board Removal		11	5-4. Voltage Measurement		34
2-5. Service Position		11	5-5. Waveforms		36
2-6. Terminal Bracket Removal		11	5-6. Printed Wiring Boards and Parts Location		37
2-7. Replacement Of Parts		12	5-7. Semiconductors		40
2-7-1. Replacement Of Light Guide		12	6. EXPLODED VIEWS		
2-7-2. Replacement Of Power Button		12	6-1. Picture tube and Chassis		42
2-8. Picture Tube Removal		12	7. ELECTRICAL PARTS LIST		43
3. SET-UP ADJUSTMENTS					
3-1. Beam Landing		14			
3-2. Convergence		15			
3-3. Focus Adjustment		17			
3-4. G2 (SCREEN) and white balance adjustments		17			
4. CIRCUIT ADJUSTMENTS					
4-1. Adjustment With Commander		18			
4-2. Adjustment Method		18			
4-3. Picture Quality Adjustment		23			
4-4. Deflection Adjustment		23			
4-5. A Board Adjustment After IC003 (MEMORY) Replacement		23			
4-6. Picture Distortion Adjustment		24			

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.

The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.


Result for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) • Horizontal deflection overdrive	2 times	002:000 or 002:001~255	• H.OUT Q801 is shorted. (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE) • Vertical deflection stopped	4 times	004:000 or 004:001~225	• -13V is not supplied. (A board) • IC 551 faulty (A board)	• Vertical deflection pulse is stopped
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.
 The symptom that is diagnosed first by the microcontroller is displayed on the screen.


Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

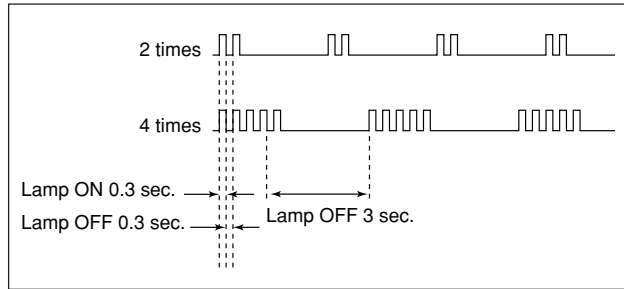

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage	2 times
Vertical deflection stopped	4 times

* One flash count is not used for self-diagnostic.

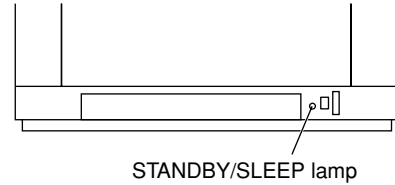

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of failure for confirmation on the screen:


[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display → channel [5] → Sound volume [-] → Power ON
 ↑

Note that this differs from entering the service mode (mode volume [+]).

Self-Diagnosis screen display

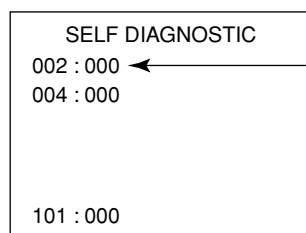

Numeral "0" means that no fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to "0".

Unless the result display is cleared to "0", the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]


To clear the result display to "0", press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel **[8]** → 0

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

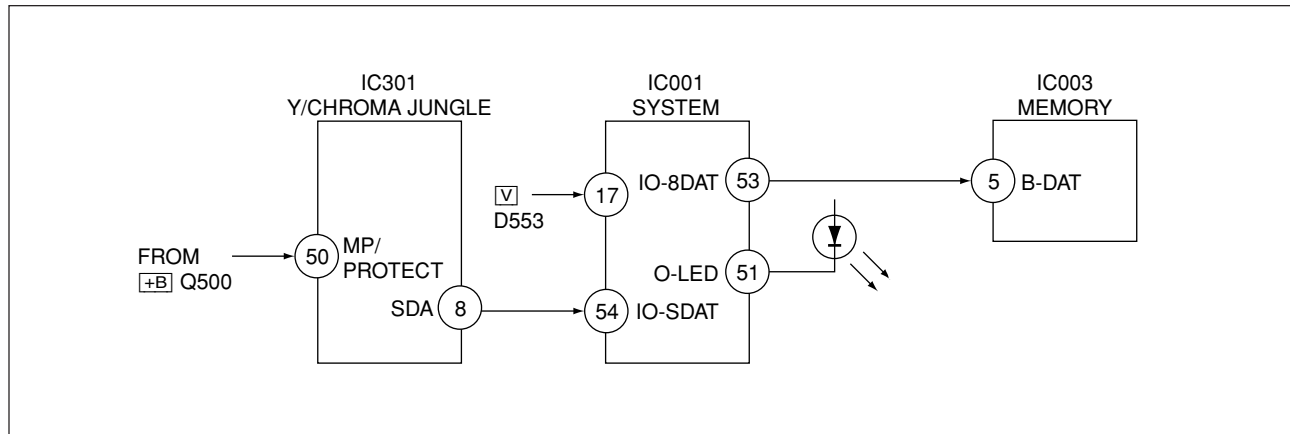

+B overcurrent (OCP)

Occurs when an overcurrent on the +B(135) line is detected by Q500. If Q500 go to ON and the voltage to pin 50 of IC301 more than 3.5V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

Vertical deflection stopped


Occurs when an absence of the vertical deflection pulse is detected by Pin 17 and IC001 shut down the power supply.

White balance failure

If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture.

* (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

A Getting Started

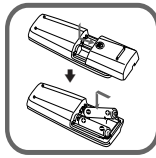


Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old batteries nor use different types of batteries together.

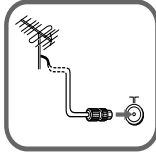


Step 2

Connect the antenna cable (not supplied) to **T** at the rear of the TV.


Tip

- You can also connect your TV to other optional components. (See **B**.)

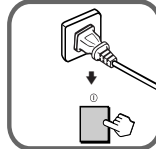

Step 3

Plug in the power cord, then press **⏻** on the TV to turn it on.

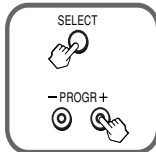


Step 4

Press **SELECT** and **PROGR +** on the TV at the same time for one to two seconds to preset the channels automatically. (See **D**.)

Tip

- To stop the automatic channel presetting, press **SELECT** twice.

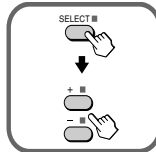


Step 5

Press **SELECT** on the remote until "LANGUAGE/语言: ENGLISH" appears on the screen, then press **+** or **-** to change the on-screen display language.


B WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 220 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

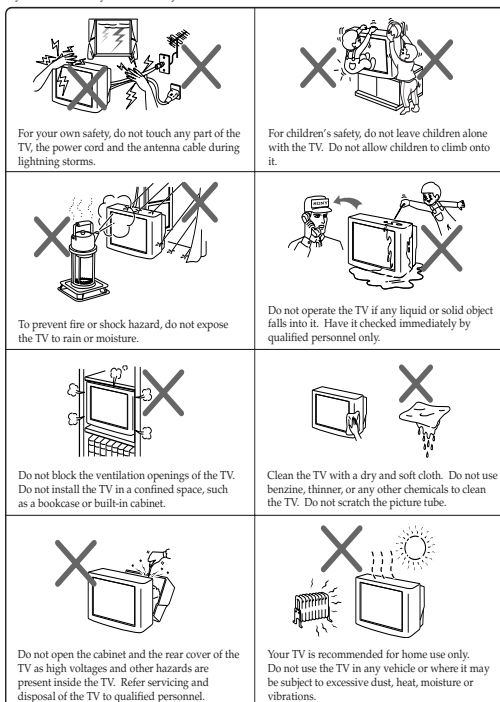

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.


WARNING (continued)

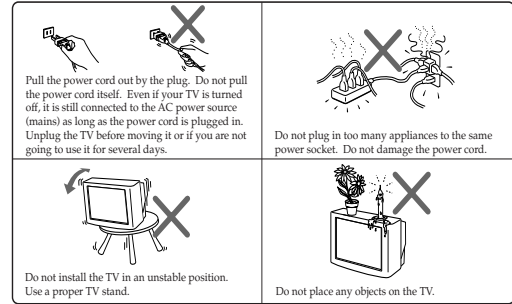

C Securing the TV


► KV-PG21P10 only

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

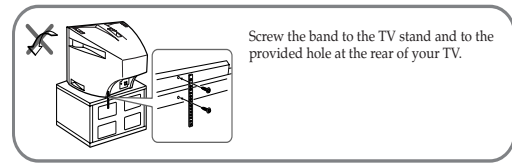

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

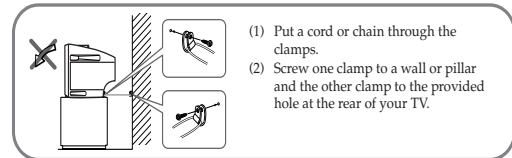


- Put a cord or chain through the clamps.
- Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

D TV front and rear panels

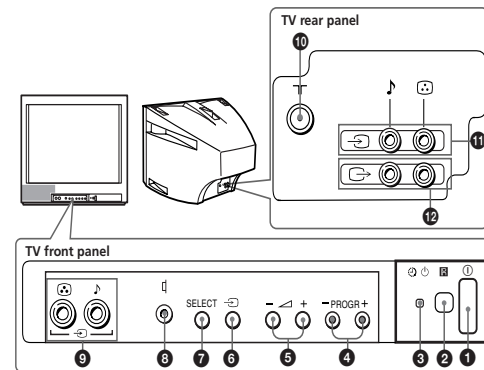


Button	Function
1 ⏻	Turn off completely or turn on the TV.
2 ⏻	Remote control sensor.
3 ⏻	Standby indicator.
4 ⏻	Wake Up indicator.
5 PROGR +/-	Select program number.
6 ⏻/+/-	Adjust volume.
7 ⏻	Select TV or video input.
8 SELECT	Select the desired item.
9 🎧	Earphone terminal.
10 📺	Video input terminal.
11 T	Antenna terminal.
12 📺	Monitor output terminal.

* You can also use the **⏻/+/-** buttons on the TV to work as the **⏻/+/-** buttons on the remote.

E Connecting optional components


Connecting to the video input terminal ()

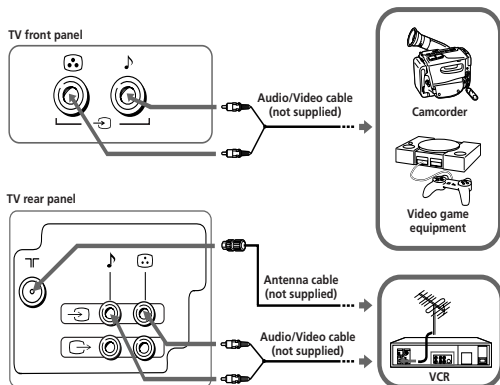


Note

- Do not connect video equipment to (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting to the monitor output terminal ()

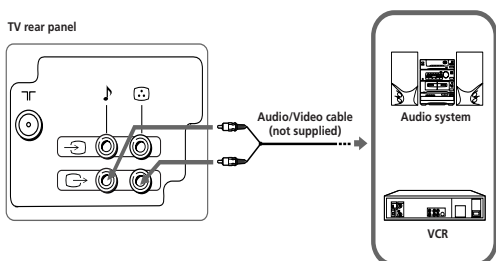

H Remote control

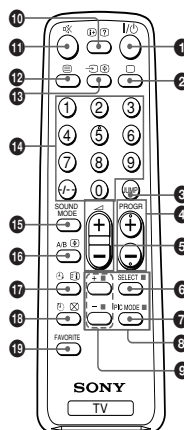

Button	Function	See
1 I/O	Turn off temporarily or turn on the TV.	-
2 □	Display the TV program.	-
3 JUMP	Jump to previous channel.	-
4 PROGR +/-	Select program number.	-
5 +/-	Adjust volume.	-
6 SELECT	Select the desired item.	-
7 PIC MODE	Select picture mode.	K
8 +/-	Adjust items.	-
9 ⓘ	Display on-screen information.	-
10 MUTE	Mute the sound.	-
11 TV/VIDEO	Select TV or video input.	-
12 0-9, +/-	Input numbers.	-
Timer operations		
13 ⏰	Set TV to turn on automatically.	I
14 ⏸	Set TV to turn off automatically.	I
15 SOUND MODE	Not function for your TV.	-
16 A/B	Not function for your TV.	-
Teletext operations		
17 ■ (red, green, yellow, blue)		
18 ?		
19 ⓘ		
20 ⓘ		
21 ⓘ		
22 ⓘ		
23 ⓘ		
24 ⓘ		
25 ⓘ		
26 ⓘ		
27 ⓘ		
28 ⓘ		
29 ⓘ		
30 ⓘ		
31 ⓘ		
32 ⓘ		
33 ⓘ		
34 ⓘ		
35 ⓘ		
36 ⓘ		
37 ⓘ		
38 ⓘ		
39 ⓘ		
40 ⓘ		
41 ⓘ		
42 ⓘ		
43 ⓘ		
44 ⓘ		
45 ⓘ		
46 ⓘ		
47 ⓘ		
48 ⓘ		
49 ⓘ		
50 ⓘ		
51 ⓘ		
52 ⓘ		
53 ⓘ		
54 ⓘ		
55 ⓘ		
56 ⓘ		
57 ⓘ		
58 ⓘ		
59 ⓘ		
60 ⓘ		
61 ⓘ		
62 ⓘ		
63 ⓘ		
64 ⓘ		
65 ⓘ		
66 ⓘ		
67 ⓘ		
68 ⓘ		
69 ⓘ		
70 ⓘ		
71 ⓘ		
72 ⓘ		
73 ⓘ		
74 ⓘ		
75 ⓘ		
76 ⓘ		
77 ⓘ		
78 ⓘ		
79 ⓘ		
80 ⓘ		
81 ⓘ		
82 ⓘ		
83 ⓘ		
84 ⓘ		
85 ⓘ		
86 ⓘ		
87 ⓘ		
88 ⓘ		
89 ⓘ		
90 ⓘ		
91 ⓘ		
92 ⓘ		
93 ⓘ		
94 ⓘ		
95 ⓘ		
96 ⓘ		
97 ⓘ		
98 ⓘ		
99 ⓘ		
100 ⓘ		
FAVORITE	Not function for your TV.	-


F Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Solutions
Snowy picture, noisy sound	<ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and on the wall. Preset the channel manually again. (See J) Check the antenna setup. Contact a Sony dealer for advice.
No picture, no sound	<ul style="list-style-type: none"> Check the power cord, antenna and the VCR connections. Press I/O (power) or ⓪ (main power) to turn on the TV.
Good picture, no sound	<ul style="list-style-type: none"> Press +/- to increase the volume level. Press MUTE to cancel the muting.
Dotted lines or stripes	<ul style="list-style-type: none"> Do not use a hair dryer or other equipment near the TV. Check the antenna setup. Contact a Sony dealer for advice.
Double images or "ghosts"	<ul style="list-style-type: none"> Use the fine tuning ("FINE") function. (See J) Turn off or disconnect the booster if it is in use. Check the antenna setup. Contact a Sony dealer for advice.
No color	<ul style="list-style-type: none"> Select the appropriate color system. (See J) Adjust the color level. (See K) Check the antenna setup. Contact a Sony dealer for advice.
Abnormal color patches	<ul style="list-style-type: none"> Keep external speakers or other electrical equipment away from the TV. Press ⓪ (main power) to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The ⓪ (standby) indicator on your TV flashes red several times after every three seconds.	<ul style="list-style-type: none"> Count the number of times the ⓪ (standby) indicator flashes. Press ⓪ (main power) to turn off your TV. Contact your nearest Sony service center.
TV cabinet creaks.	<ul style="list-style-type: none"> Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	<ul style="list-style-type: none"> The TV's demagnetizing function is working. This does not indicate a malfunction.


I Setting the timers

You can turn on and off your TV by using the ⓪ and ⓘ buttons respectively.

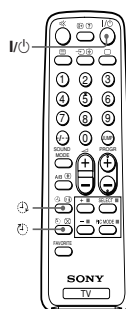

Setting the Wake Up timer

- Press ⓘ until the desired period of time appears on the screen.

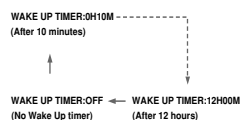

The Wake Up timer starts immediately after you have set it.


- Select the TV channel or video input you want to wake up to.

- Press I/O, or set the Sleep timer if you want the TV to turn off automatically.

The ⓘ indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press ⓘ until the desired period of time appears on the screen.




The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

J Presetting channels

You can automatically preset up to 100 TV channels in numerical sequence from program number 1, or manually preset desired channels and channels that cannot be preset automatically.

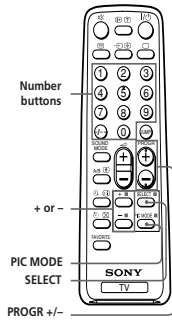

Presetting channels automatically from a specified program number

- 1 Press SELECT until "AUTO PROGRAM" appears on the screen.
- 2 Press + or - once to enter the "AUTO PROGRAM" mode.
The on-screen display will start flashing.
- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.
- 4 Press + or - to start presetting channels automatically.

Presetting channels manually

- 1 Press SELECT until "MANUAL PROGRAM" appears on the screen.
- 2 Press + or - once to enter the "MANUAL PROGRAM" mode.
- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.
- 4 Press + or - until the desired channel picture appears on the screen.
- 5 To preset other channels manually, repeat steps 3 to 4.

Presetting channels (continued)

To change the color system setting

If the color is abnormal when receiving programs through the T (antenna) terminal or the V (video input) terminal.

- (1) Press SELECT until "COLOR SYS" appears on the screen.
- (2) Press + or - to select the appropriate color system until the color is optimal.
AUTO → PAL → NTSC3.58 → NTSC4.43

To skip program numbers

- (1) Press PROGR +/- or the number buttons until the unused or unwanted program number appears on the screen.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or - once to enter the "MANUAL PROGRAM" mode.
- (4) Press PIC MODE to skip the unused or unwanted program number.
- (5) Press SELECT to exit the "MANUAL PROGRAM" mode.

Note

- To restore the skipped program number again, preset the channel automatically or manually.

To use the fine tuning function


The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

- (1) Select the program number you want to adjust.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or - once to enter the "MANUAL PROGRAM" mode.
- (4) Press F to display "FINE" on the screen.
- (5) Press + or - continuously until the above problems are minimized.
The + or - icon on the screen flashes while tuning.
- (6) Press SELECT to exit the "MANUAL PROGRAM" mode.

K Customizing the picture

You can customize the picture by selecting the picture mode or by adjusting its settings.

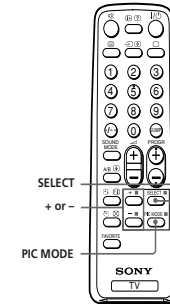


Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

Adjusting the picture setting

- 1 Press SELECT until the desired setting appears.
Each time you press SELECT, the setting item will change as follows:



- 2 Press + or - to adjust the item.
- 3 To adjust other items, repeat steps 1 to 2.



Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

L Adjusting the picture position

► KV-PG21P10 only

If the picture is slanting, you can adjust the picture position using the "PIC ROTATION" function until it is optimal.



- 1 Press SELECT repeatedly until "PIC ROTATION" appears on the screen.
- 2 Press + or - to adjust the picture position.
The ⏪ or ⏩ icon on the screen flashes while adjusting.


Note

- To reduce the slanting picture, keep external speakers or other electrical equipment away from the TV.

M Enjoying stereo or bilingual programs

► Not function for your TV

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

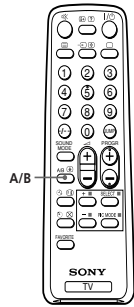

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	MONO (Regular sound) → STEREO (Stereo sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes


- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through the T (antenna) terminal, press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

N Viewing Teletext

► Not function for your TV

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

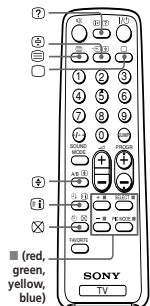


To	Do this
display a Teletext page on the TV picture	Press . Each time you press , the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press . An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROG +/-.
hold (pause) a Teletext display	Press to display the symbol "⊞" at the top left corner of the screen. To resume normal Teletext viewing, press or .
reveal concealed information (e.g., an answer to a quiz)	Press . To conceal the information, press the button again.
enlarge the Teletext display	Press . Each time you press , the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press . 2 When the page number is displayed, press to show the text.
select a FASTEXT menu or the colored boxes	Press (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press .

Note


- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

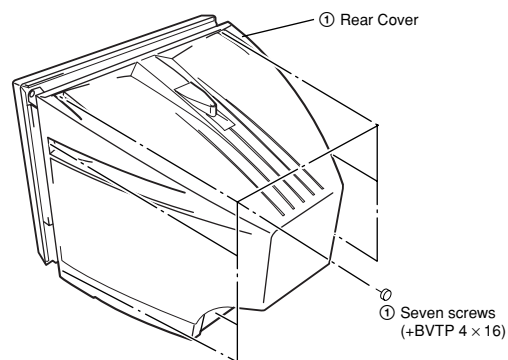


2-2. SPEAKER REMOVAL

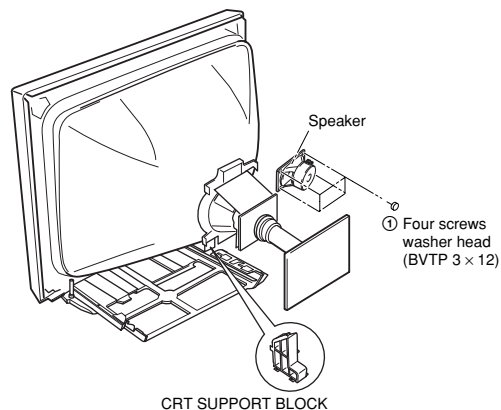


2-3. CHASSIS ASSY REMOVAL

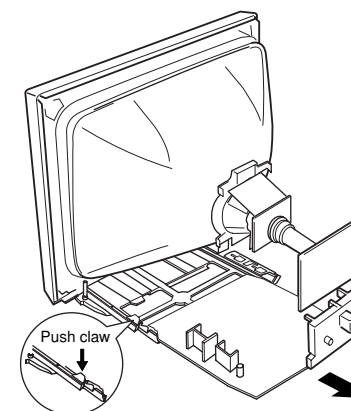


2-4. F BOARD REMOVAL

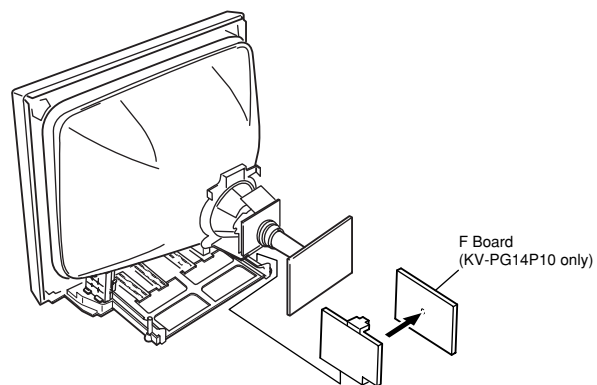

2-5. SERVICE POSITION

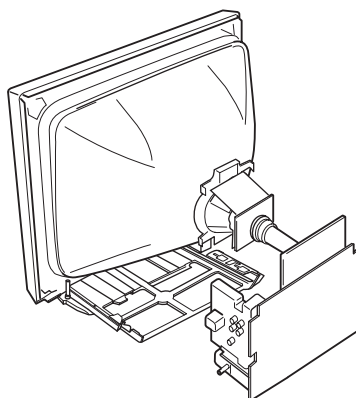

2-6. TERMINAL BRACKET REMOVAL

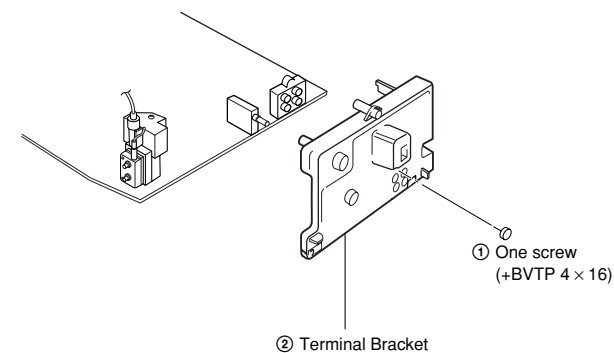


Caution: Do not take out CRT support block while TV set in standing position.

Note: Undress necessary wires that creates tension while placing the chassis into Service Position.


2-7. REPLACEMENT OF PARTS

For replacements of light guide, unscrew them, exchange with new parts and fix them with screws respectively.

2-7-1. Replacement of Light Guide

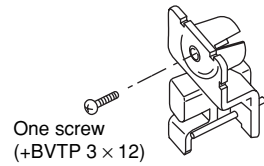


2-7-2. Replacement of Power Button

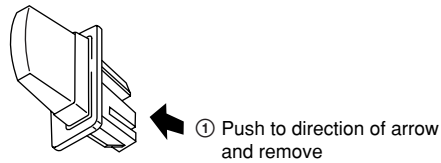

2-8. PICTURE TUBE REMOVAL

Note:


- The picture tube for Oceania model is upside down, and the position for the anode cap and the tension spring are changed accordingly.
- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.

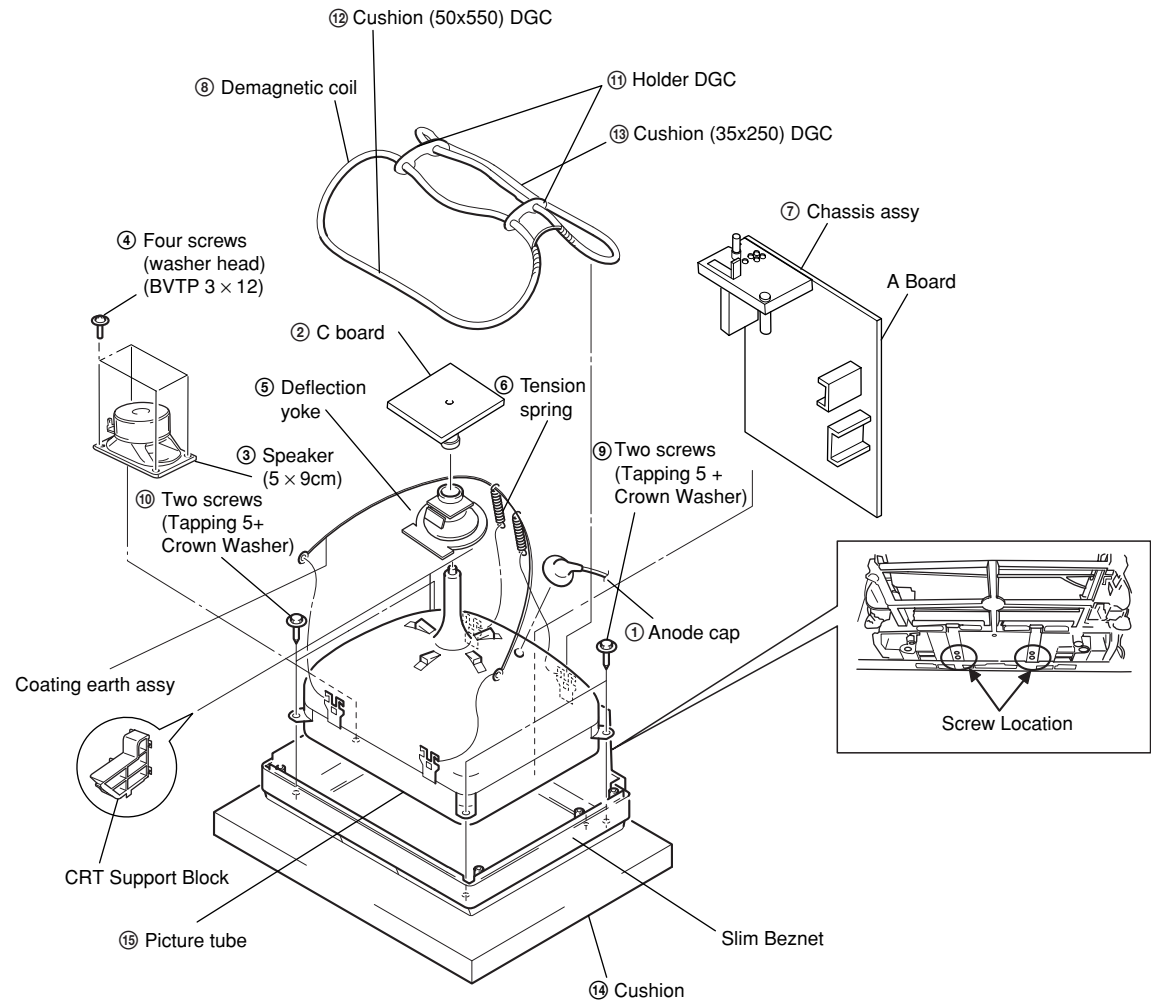


•REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.


•REMOVING PROCEDURES

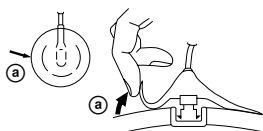

- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

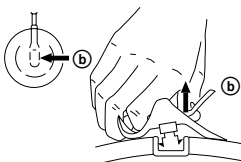


- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.

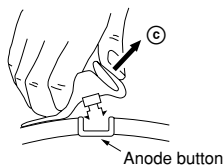

- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ③.

• HOW TO HANDLE AN ANODE-CAP

- ① Do not damage the surface of anode-caps with sharp shaped objects.
- ② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
- ③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

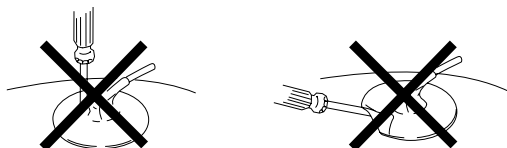

SECTION 3 SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed. These adjustments should be performed with rated power supply voltage unless otherwise noted.

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Controls and switches should be set as follows unless otherwise noted:

PICTURE control normal
 BRIGHTNESS control normal

Note : Test Equipment Required.

1. Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
 Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
 Contrast } normal
 Brightness }
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
 (See Figures 3-1 through 3-4.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it.
 (See Figure 3-4.)

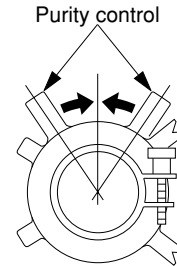


Fig. 3-2

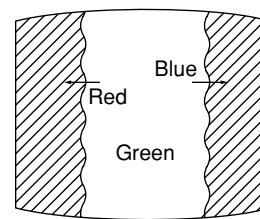


Fig. 3-3

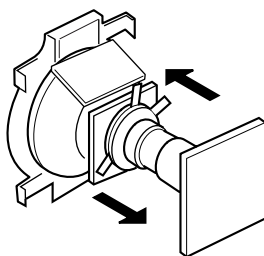


Fig. 3-1

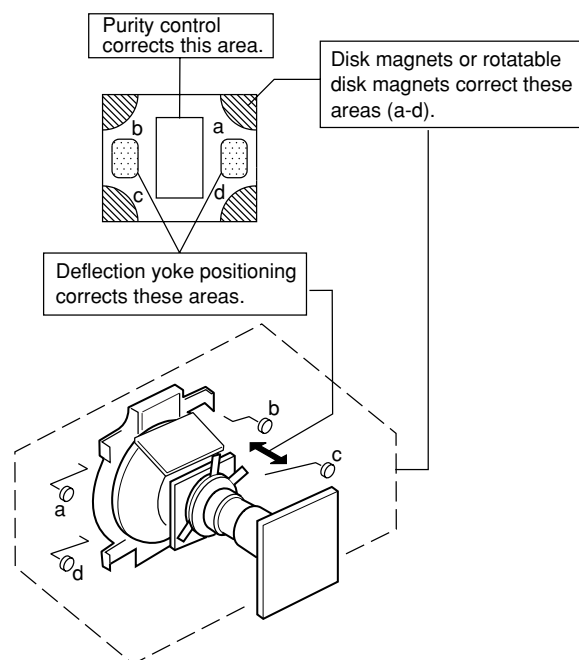



Fig. 3-4

3-2. CONVERGENCE


Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Soft.





(1) Horizontal and Vertical Static Convergence

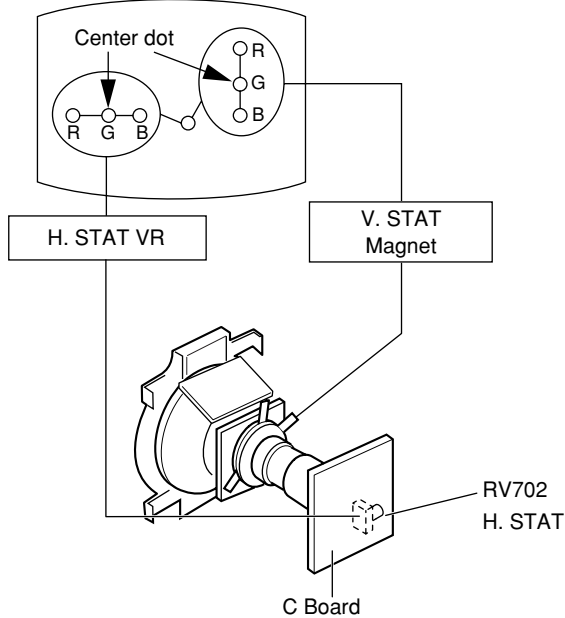

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving horizontally), adjust the H.STAT VR control so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below. (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

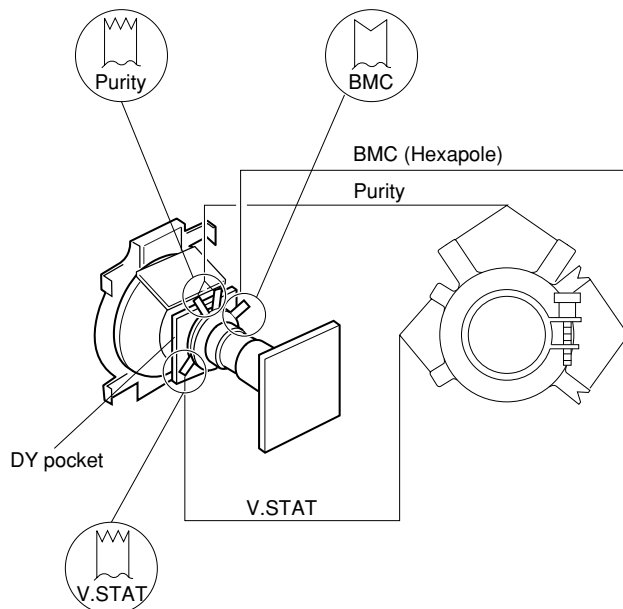


- Operation of V. Stat magnet
If the V. Stat magnet is moved in the "a" and "b" arrows, the red, green and blue dots move as shown below.

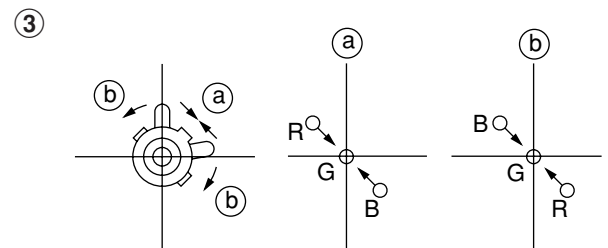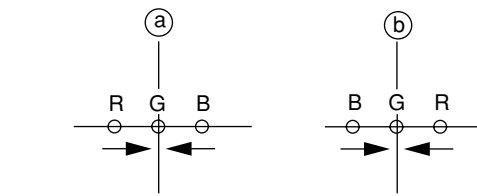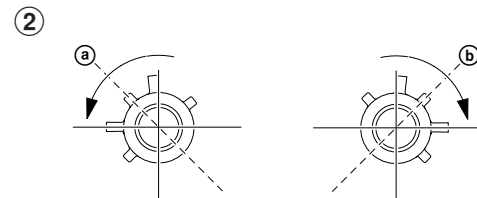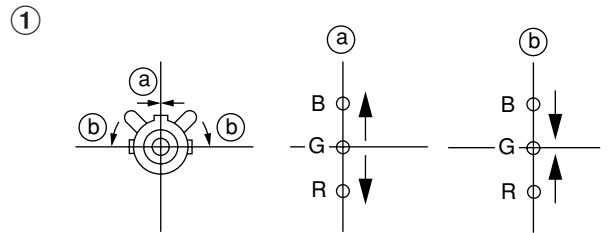

④ BMC (Hexapole) Magnet.


If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

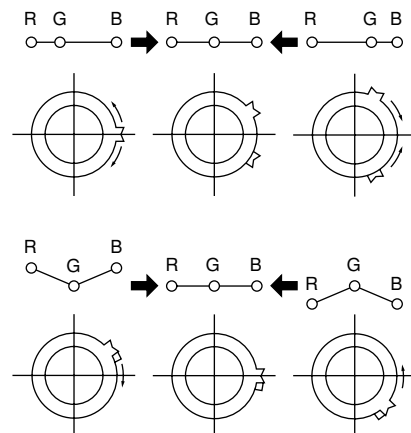

(2) Dynamic Convergence Adjustment


Preparation:

Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence


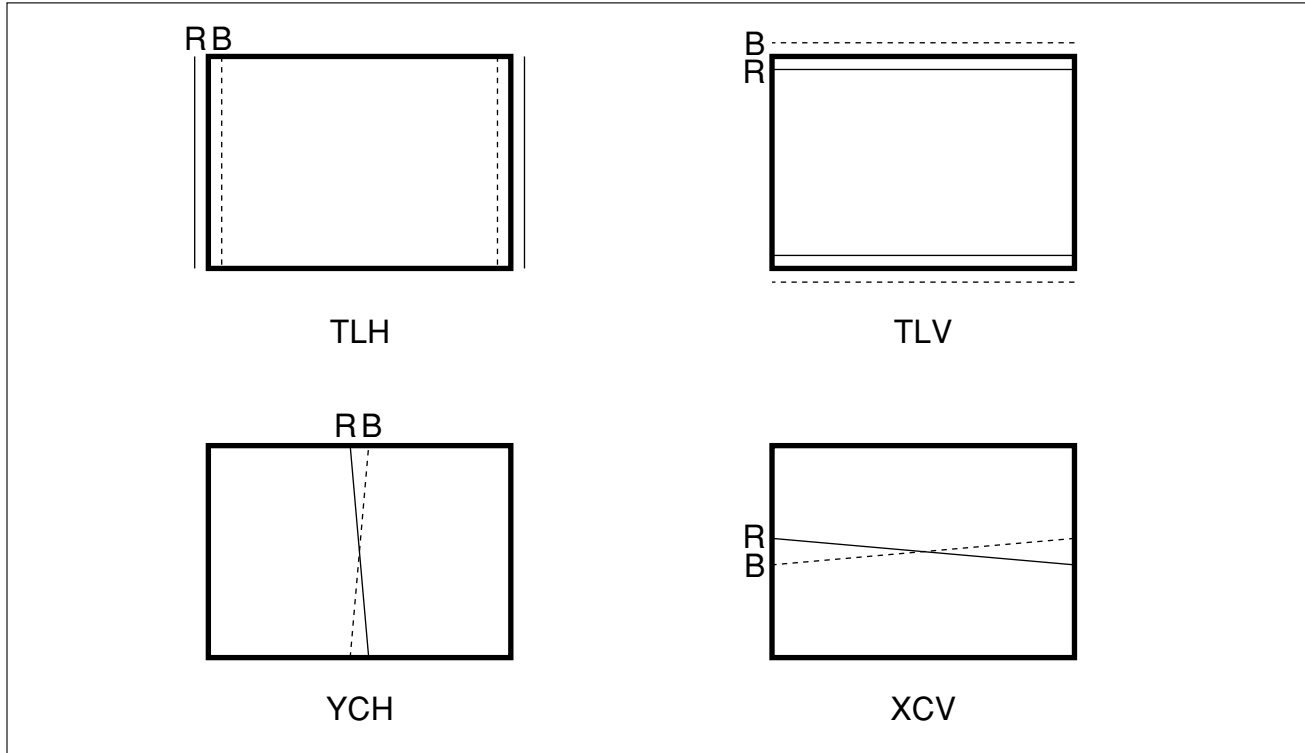


- | | | | |
|-----|--------|-----|---|
| TLH | Insert | TLH | Correction Plate to DY Pocket (Left or Right) |
| YCH | Rotate | YCH | VOL on DY |
| TLV | Rotate | TLV | VOL ON DY |
| XCV | Rotate | XCV | Adj core on DY |

ON DY:

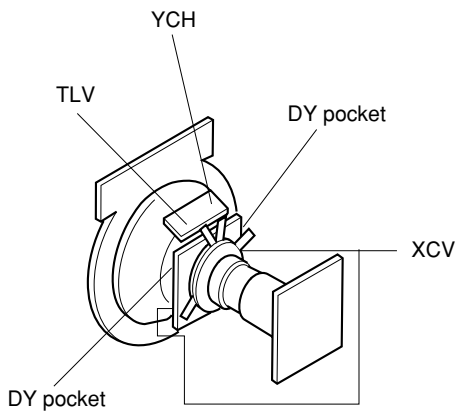


(3) Screen-corner Convergence

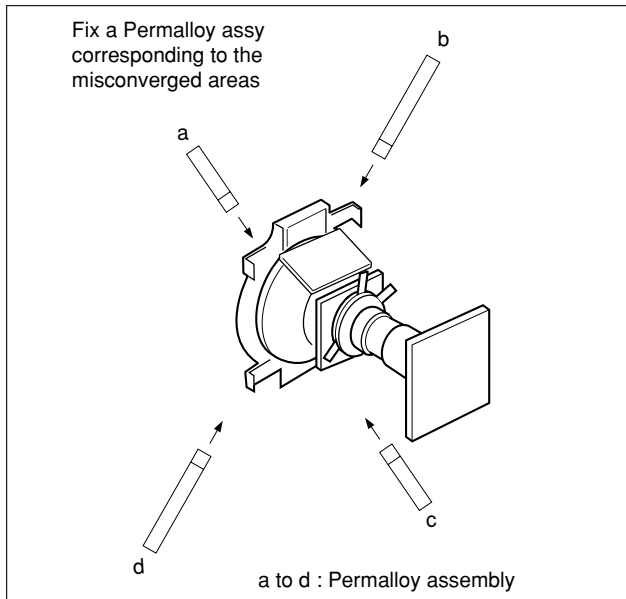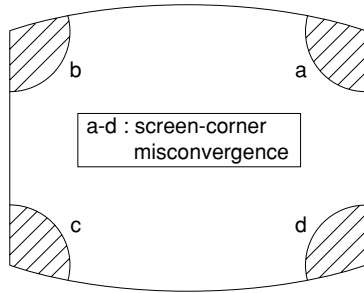

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.


1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the center of screen becomes just focus.
4. Change the receiving signal to white pattern and blue back.
5. Confirm magenta ring is not noticeable. In case magenta is very obvious, adjust focus VR to take balance of magenta ring and focus.

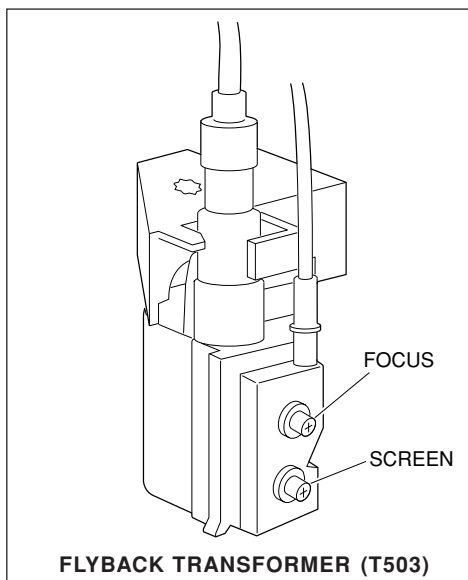

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

- 1) Set the PICTURE to normal.
- 2) Put to VIDEO input mode without signals.
- 3) Connect R, G and B of the C board cathode to the oscilloscope.
- 4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
- 5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

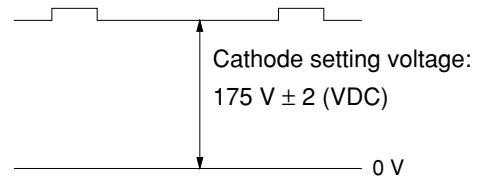


2.a) WHITE BALANCE ADJUSTMENT

- 1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
- 2) Input white raster signal.
- 3) Set 49 (ABL) and IF (VP2) service mode to 00.
- 4) Set Picture to DYNAMIC.
- 5) Select OB (RDR) with [1] and [4], and set the level to 25 with [3] and [6] for best white balance.
- 6) Select OC 'GDR' and OD 'BDR' with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 7) Write into the memory by pressing [MUTING] then [0].
- 8) Set back 49 'ABL' and IF 'VP2' service mode to original data.

2.b) SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Set 49(ABL) and IF (VP2) service mode to 00
- 3) Input a staircase signal of black to white from the pattern generator.
- 4) BRIGHTNESS 50%.
PICTURE MINIMUM
- 5) Select OE 'SBR' with [1] and [4], and adjust OE 'SBR' level with [3] and [6] so that the second stripe from the right is dimly lit.
- 6) Write into the memory by pressing [MUTING] then [0].
- 7) Set back 49 (ABL) and IF (VP2) service mode to original data.

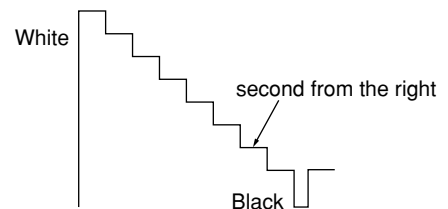


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENT WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-952


a. ENTERING SERVICE MODE

With the unit on standby



This operation sequence puts the unit into service mode.

The screen display is :

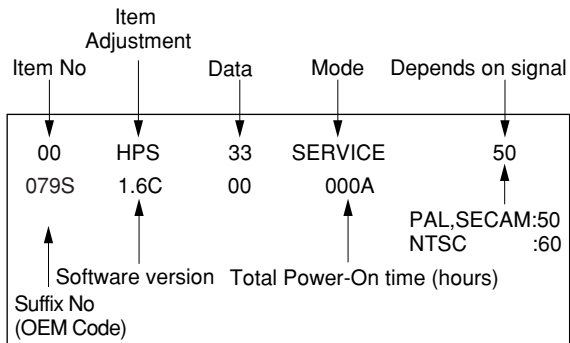

b. METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

- 1) Set to Service Mode.
- 2) Press [1] (UP) and [4] (DOWN), to select the adjustment.
- 4) Press [MUTING] button to indicate WRITE on the screen.
- 5) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again to confirm adjustments were made.

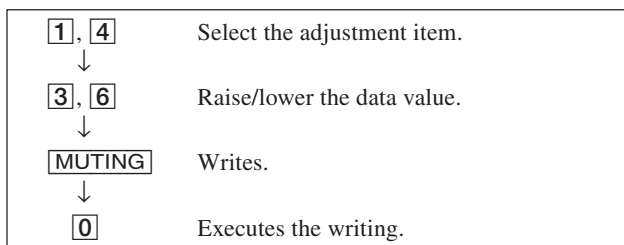

e. OTHER FUNCTION VIA REMOTE COMMANDER

- [7], [0] All the data becomes the values in memory.
- [8], [0] All user control goes to the standard state.
- [5], [0] Service data initialization (Be sure not to use usually.)
- [2], [0] Copy and write all data.
- [MUTE], [0] Write 50Hz adjustment data to 60Hz or vice versa.


4-2. ADJUSTMENT METHOD

Item Number 00 HPS


This explanation uses H Shift as an example.

1. Select "00 HPS" with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the [MUTING] button. (The display changes to WRITE.)
5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while executing, and back to SERVICE.)


Example on screen display :-



Adjusted with [3] and [6] buttons.



Write with [MUTING]

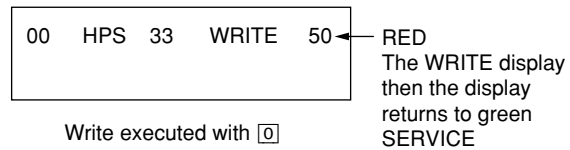

Write executed with [0]

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

- Note :**
1. In [WRITE], the data for all items are written into memory together.
 2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

Item No.	Adj. Item	Data Range	Initial Data	Note for Different Data	Function	Device
00	HSF	3F	24	50/60Hz/RGB50/RGB60	H Shift	TDA8375(8A)
01	HSZ	3F	23	50/60Hz/RGB50/RGB60	H Size	
02	PAP	3F	21	50/60Hz	Pin Amplitude	
03	CNP	3F	29	50/60Hz	Corner Pin	
04	TLT	3F	20	50/60Hz	Tilt	
05	VSL	3F	20	50/60Hz	V Slope	
06	VAP	3F	1D	50/60Hz	V Amplitude	
07	SCR	3F	20	50/60Hz	S Correction	
08	VSF	3F	20	50/60Hz	V Shift	
09	VZM	3F	20		Vertical Zoom	
0A	VSC	3F		50/60Hz	Vertical Scroll	
0B	RDR	3F	25		R Drive	
0C	GDR	3F	20		G Drive	
0D	BDR	3F	20		B Drive	
0E	SBR	7F	4B		Sub Brightness	
0F	PMX	3F	27	TV/Video/Teletext	Picture Maximum Data	
10	PMI	3F	05		Picture Minimum Data	
11	SHU	0F	07		Sub Hue	
12	SSH	03	01	TV/Video	Sub Sharpness	
13	SC1	3F	1F	50/60Hz	Sub Color Lower	
14	SC2	3F	0B	50/60Hz	Sub Color Higher	
15	FO	03	00	TV/Video/Teletext	01 Time Constant	
16	AGC	3F	06	TV/Video/Teletext	AGC Take Over	
17	VSW	01	0	TV/Video/Teletext	Video Mute Switch	
18	FOR	03	00		Forced Field Frequency	
19	DL	01	0		De-interlace	
1A	POC	01	0		Fixed 01 Synchro. Mode	
1B	COR	01	0	TV/Video/Teletext	Noise Coring	
1C	VPX	FF	00		Extra Bits (see below)	
1D	AIP	7F	40		Invalid	
1E	CT2	FF			Control 2	
1F	CT3	FF			Control 3	
20	CT4	0F			Control 4	
21	CT5	01			Control 5	
22	BCO	01			Switch-on Behaviour	
23	RBL	01			RGB Blanking	
24	YDL	0F		PAL/NTSC/SECAM	Y-Delay	
25	WST	FF	15		W/G Stereo Threshold	MSP3410D(80)
26	WBT	FF	EA		W/G Bilingual Threshold	
27	WLL	FF	05		W/G Monaural Threshold	
28	ACG	01	01		AGC Switch auto/constant	
29	CDB	3F	28		AGC Gain at Constant Mode	
2A	FGP	7F	1B		FM Prescale for B/G, I, D/K	
2B	FMP	7F	32		FM Prescale for M	
2C	FMH	7F	36		FM Prescale for HDEV (non-M)	
2D	FMM	7F	65		FM Prescale for HDEV (M)	
2E	WGP	7F	2A		W/G Prescale	
2F	NIP	7F	6D		NICAM Prescale	
30	SCP	7F	3B		SCART Input Prescale	
31	SCV	7F	2A		SCART Output Prescale	
32	CRM	01	00		Carrier Muting on/off	
33	ACO	01	01		Audio Clock-out on/off	
34	WAC	0F	00		W/G Agreement count	
35	NFT	FF	50		Auto FM Switch Threshold	
36	DLG	FF	30		W/G Search Delay	
37	DLN	FF	20		NICAM Search Delay	
38	DLS	FF	10		Stereo Status Read Delay	
39	SMX	7F	73		DFP Volume Maximum	
3A	ING	0F	00	M System/non-M/Video	Input Gain	TDA7438(88)
3B	VOM	3F	01	M System only	Volume Output Gain	
3C	BCS	03	01		Bass Center Shift	
3D	TCS	03	01		Treble Center Shift	
3E	TXH	FF	2D		Horizontal Display Position	SAA5264(58)
3F	TXV	3F	2A		Vertical Display Position (line offset from V-sync)	
40	THD	7F	00		H-sync Active Edge Shift	
41	TVD	7F	0F		V-sync Active Edge Shift	

Adjustment Item Table

Item No.	Adj. Item	Data Range	Initial Data	Note for Different Data	Function	Device
42	HPL	01	00	00 : Positive, 01 : Negative 00 : Positive, 01 : Negative 00 : Auto, 01 : Default, 02 : Fasttext, 03 : Top mode	H-sync Polarity Configuration	
43	VPL	01	00		V-sync Polarity Configuration	
44	FMD	03	02		Force Mode	
45	TBR	0F	08		Set Teletext RGB Brightness	
46	NOP	0F	01	National Option Table Configuration		
47	TCH	03	01	Twisted Character Set Configuration		
48	BKP	3F	00	00 : B/G, 01 : I, 02 : D/K, 03: M	Picture Data at Blanking OFF	
49	ODL	FF	10		Power ON Delay	
4A	OFR	0F	00		RGB Output Time (STBY OFF)	
4B	OFM	0F	00		RGB Output Time (AC OFF)	
4C	OSH	3F	0A		OSD H Position	
4D	TSY	03	00		TV System at Auto Preset	
4E	DKS	01	01		D/K Stereo enable/disable	
4F	MUT	01	00		Muting on/off at No Sync	
50	ABL	01	00		Bright ABL Switch	
51	SCM	01	00		SECAM Trap active/inactive	
52	FBT	01	01		FBT L/S C/M strict/plain	
53	SLS	01	01		Activate SL. OR. IFI Sync	
54	SSV	07	02		Space Sound Volume Step Up	
55	VPM	7F	28		Timer of Video Processor start up wait	
56	OP0	FF	2F	Optional Flags 0 (see below)		
57	OP1	FF	0F	Optional Flags 1 (see below)		
58	OP2	FF	00	Optional Flags 2 (see below)		

NOTE

- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION

No. 1E VP1

Item	HCO	EVG	SBL	PRD	HBL	AKB	MAT	VID
KV-PG14P10	0	0	0	0	0	0	0	0
KV-PG14P10/G	0	0	0	0	0	0	0	0
KV-PG14P10/L	0	0	0	0	0	0	0	0
KV-PG14P40/L	0	0	0	0	0	0	0	0
KV-PG14P40/N	0	0	0	0	0	0	0	0

HCO EHT Tracking Mode 1 = on V and E-W, 0 = only on V 0A(7)
 EVG Enable Vertical Guard 1 = enable, 0 = disable 0A(6)
 SBL Service Blanking 1 = active, 0 = inactive 0B(7)
 PRD Over-voltage Protection Detection 1 = enable, 0 = disable 0B(6)
 HBL RGB Blanking Mode 1 = wide blanking, 0 = normal blanking 02(7)
 AKB Black Current Stabilisation 1 = not active, 0 = active 02(6)
 MAT PAL-SECAM-/NTSC Matrix 1 = PAL matrix. 0 = adapted to standard 0E(7)
 VID Video IdentMode 1 = not for 01-loop, 0 = for 01-loop 09(7)

No. 1E VP1

Item	-	AV Input		AVMUT	B/G	I	D/K	M
KV-PG14P10	0	0	1	0	1	0	0	0
KV-PG14P10/G	0	0	1	0	1	0	0	0
KV-PG14P10/L	0	0	1	0	1	0	0	0
KV-PG14P40/L	0	0	1	0	1	0	0	0
KV-PG14P40/N	0	0	1	0	1	0	0	0

AV Input 00 = no AV Input model 01 = 1 AV Input model
 10 = 2 AV Input model 11 = 2AV Input and RGB input model

AVMUT 1 = AV multi is always muted if no signal input, 0 = not muted always

Other optional bits are effective if set to 1.

No. 20 VP3

Item	No NICAM	-	HDEV	1 V-Curve	XTAL SEL		MAT	VID
KV-PG14P10	0	0	0	0	1	1	0	0
KV-PG14P10/G	0	0	0	0	1	1	0	0
KV-PG14P10/L	0	0	0	0	1	1	0	0
KV-PG14P40/L	0	0	0	0	1	1	0	0
KV-PG14P40/N	0	0	0	0	1	1	0	0

XTAL SEL 00 = only 4.43 XTAL 01 = only 3.58 XTAL
 10 = not used 11 = both 4.43 and 3.58 XTAL

1 V-Curve (for monaural model)
 1 = using common volume curve for every mode and every TV system
 0 = another volume curve available for video mode and M system

HDEV 1 = High Deviation Mode switch available, 0 = not available

No NICAM 1 = NICAM search is disable in any TV system, 0 = NICAM search operates

Other optional bits are effective if set to 1.

No. 4E OP1

Item	Pic. Rot	Auto TV Sys.	No Bal.	SPC SOUND	-	VM	H. K. Bil	Thai Bil.
KV-PG14P10	0	0	0	1	0	0	0	0
KV-PG14P10/G	0	0	0	1	0	0	0	0
KV-PG14P10/L	0	0	0	1	0	0	0	0
KV-PG14P40/L	0	0	0	1	0	0	0	0
KV-PG14P40/N	0	0	0	1	0	0	0	0

Auto TV Sys. 1 = Auto TV System available, 0 = not available
 No. Bal.(for AVstereo model 1 = no balance in analog select items, 0 = balance included
 Pic. Rot 1 = Pic Rotation available, 0 = not available
 SPC SOUND 1 = Space Sound available, 0 = not available
 Other optional bits are effective if set to 1.

OPERATION GUIDE

SERVICE MODE

How to set up new NVM (or initialize already written one)

- (1) AC ON
- (2) Enter Service Mode - describing below how to enter
- (3) Push the commander button “5” and “0” sequentially (only set initial data into RAM, but not write them into NVM yet)
- (4) Push the commander button “2” and “0” sequentially (copy the data into all NVM area - all wide modes and 50/60Hz respectively)
- (5) Push the commander button “8” and “0” sequentially (initialize user data, select program 1 and exit Service Mode)
- (6) Select TV system and execute Auto Preset

How to enter Service Mode

- At power ON, push the commander button “test” and “TV ON” sequentially
- At stand-by, push the commander button “display”, “5”, “vol +” and “power” sequentially

How to exit Service Mode

- Push the commander button “other ON” or power (AC) OFF

How to increment/decrement items and data

- Items : push the commander button “1” / “4”
- Data : push the commander button “3” / “6” (not write into NVM)

Other operations

- Write data into NVM - push the commander button “mute” and “0” sequentially
- Read data from NVM - push the commander button “7” and “0” sequentially
- Copy 50Hz data into 60Hz area - push the commander button “display” and “0” sequentially

SELF DIAGNOSIS MODE

How to enter Self Diagnosis Mode

- At stand-by, push the commander button “display”, “5”, “vol-” and “power” sequentially

How to exit Self Diagnosis Mode

- Push the commander button “other ON” or power (AC) OFF

Other operations

- Clear data and Write into NVM - push the commander button “8” and “0” sequentially

HOTEL TV MODE

How to enter Hotel TV Mode ON stage

- At stand-by, push the commander button “display”, “MUTE”, “vol +” and “power” sequentially
- The Hotel TV setup display, where the maximum level of the volume can be applied (=35 or above)
- Write data into NVM - push the commander button “mute” and “0” sequentially

How to enter Hotel TV Mode OFF stage

- At stand-by, push the commander button “display”, “MUTE”, “vol -” and “power” sequentially
- Write data into NVM - push the commander button “mute” and “0” sequentially


Modification Note

The item including the new addition is yellow.

4-3. PICTURE QUALITY ADJUSTMENT

SUB COLOR ADJUSTMENT

1. Select Video.
2. Input a PAL color-bar.
3. Set to the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Set to Service Mode and select 13 'SC1' with **[1]** and **[4]** of the commander then adjust to VB2=VB3=VB4 with **[3]** and **[6]**.
6. Press **[MUTING]** → **[0]** of the commander to write the data.
7. Adjust 13 'SC1' as step 2 to 5 when receiving NTSC color-bar.

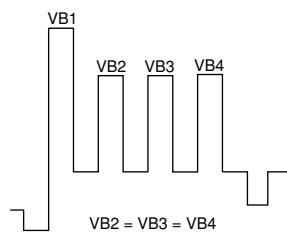

VB2 = VB3 = VB4 (Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video.
2. Input a NTSC 3.58, color-bar into Video/TV mode.
3. Set the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Select 11"SHU" with **[1]** and **[4]** of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with **[3]** and **[6]**.



VB1 = VB2 = VB3 = VB4

The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line. Ideal difference level between VB2 and VB3 should be within $\pm 110\text{mV}$.

6. Press **[MUTING]** → **[0]** of the commander to write the data.
7. Select TV channel with NTSC 3.58 and repeat 3 to 5.
8. Press **[MUTING]** → **[0]** of the commander to write the data.
9. Single system model with NTSC 4.43, select TV channel with NTSC 4.43 and repeat 3 to 5.

4-4. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set to Service mode.
2. Input PAL color bar.
3. Using the **[1]** and **[4]** button, select category GEO (Service Mode).
4. Raise/lower the data using the **[3]** and **[6]** buttons. Select and adjust the following items to obtain optimum image.

Service Item

GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMPLITUDE
03	CPN	CORNER PIN
04	TLT	TLT
05	VSL	V SLOPE
06	VAP	VERTICAL AMPLITUDE
07	SCO	S CORRECTION
08	VPS	V SHIFT

NORMAL MODE (60Hz)

5. Input 525/60Hz signal.
6. Using the **[1]** and **[4]** buttons select category GEO (Service Mode).
7. Select and adjust the following items to obtain optimum image.

Raise/lower the data with the **[3]** and **[6]** buttons.

Service Item


GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMPLITUDE
03	CPN	CORNER PIN
04	TLT	TILT
05	VSL	V SLOPE
06	VAP	VERTICAL AMPLITUDE
07	SCO	S CORRECTION
08	VPS	V SHIFT

4-5. A BOARD AJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons **[5]** and **[0]** (Data Initialize), and **[2]** and **[0]** (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
In cases where items are not well adjusted, rectify the fine adjustment.
Write the data per each item number (**[MUTING]** + **[0]**).
4. Select item numbers 4E 'OP0', 4F 'OP1', 50 'OP2' and respectively set the bit per model with command buttons **[3]** and **[6]**.
5. Press commander buttons **[8]** and **[0]** (Test Normal) to return to the data that was set on the shipment from the factory. (This will also cancel Service Mode.)


4-6. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 08

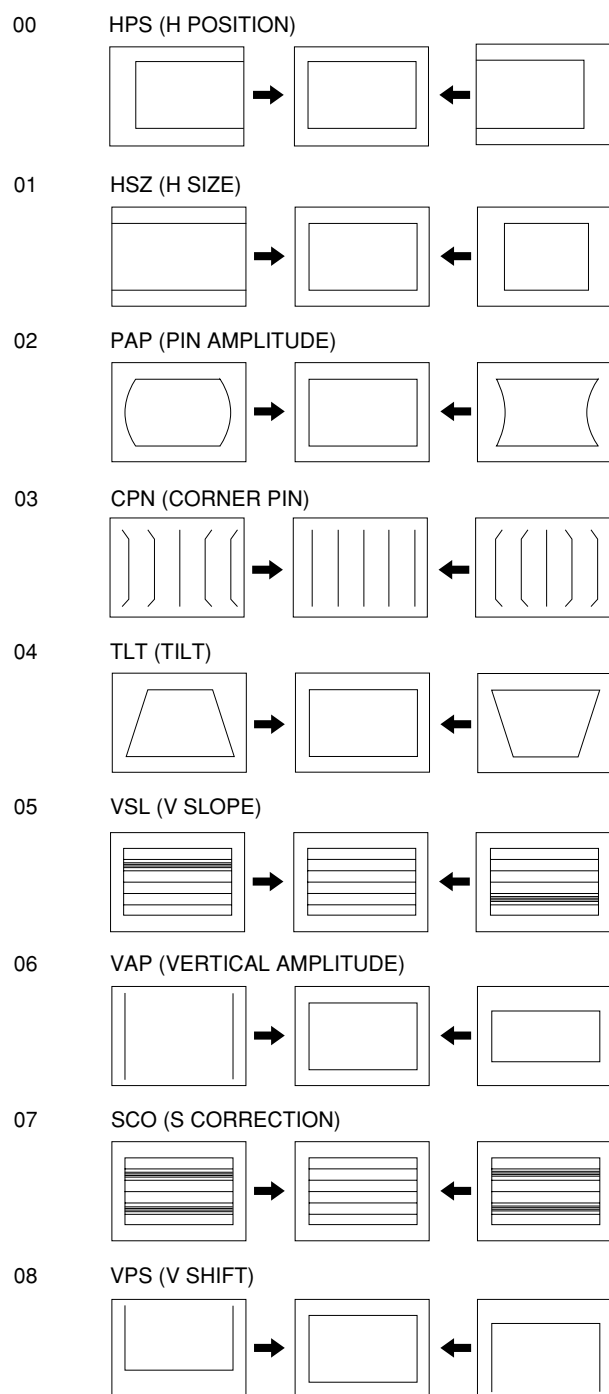


SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

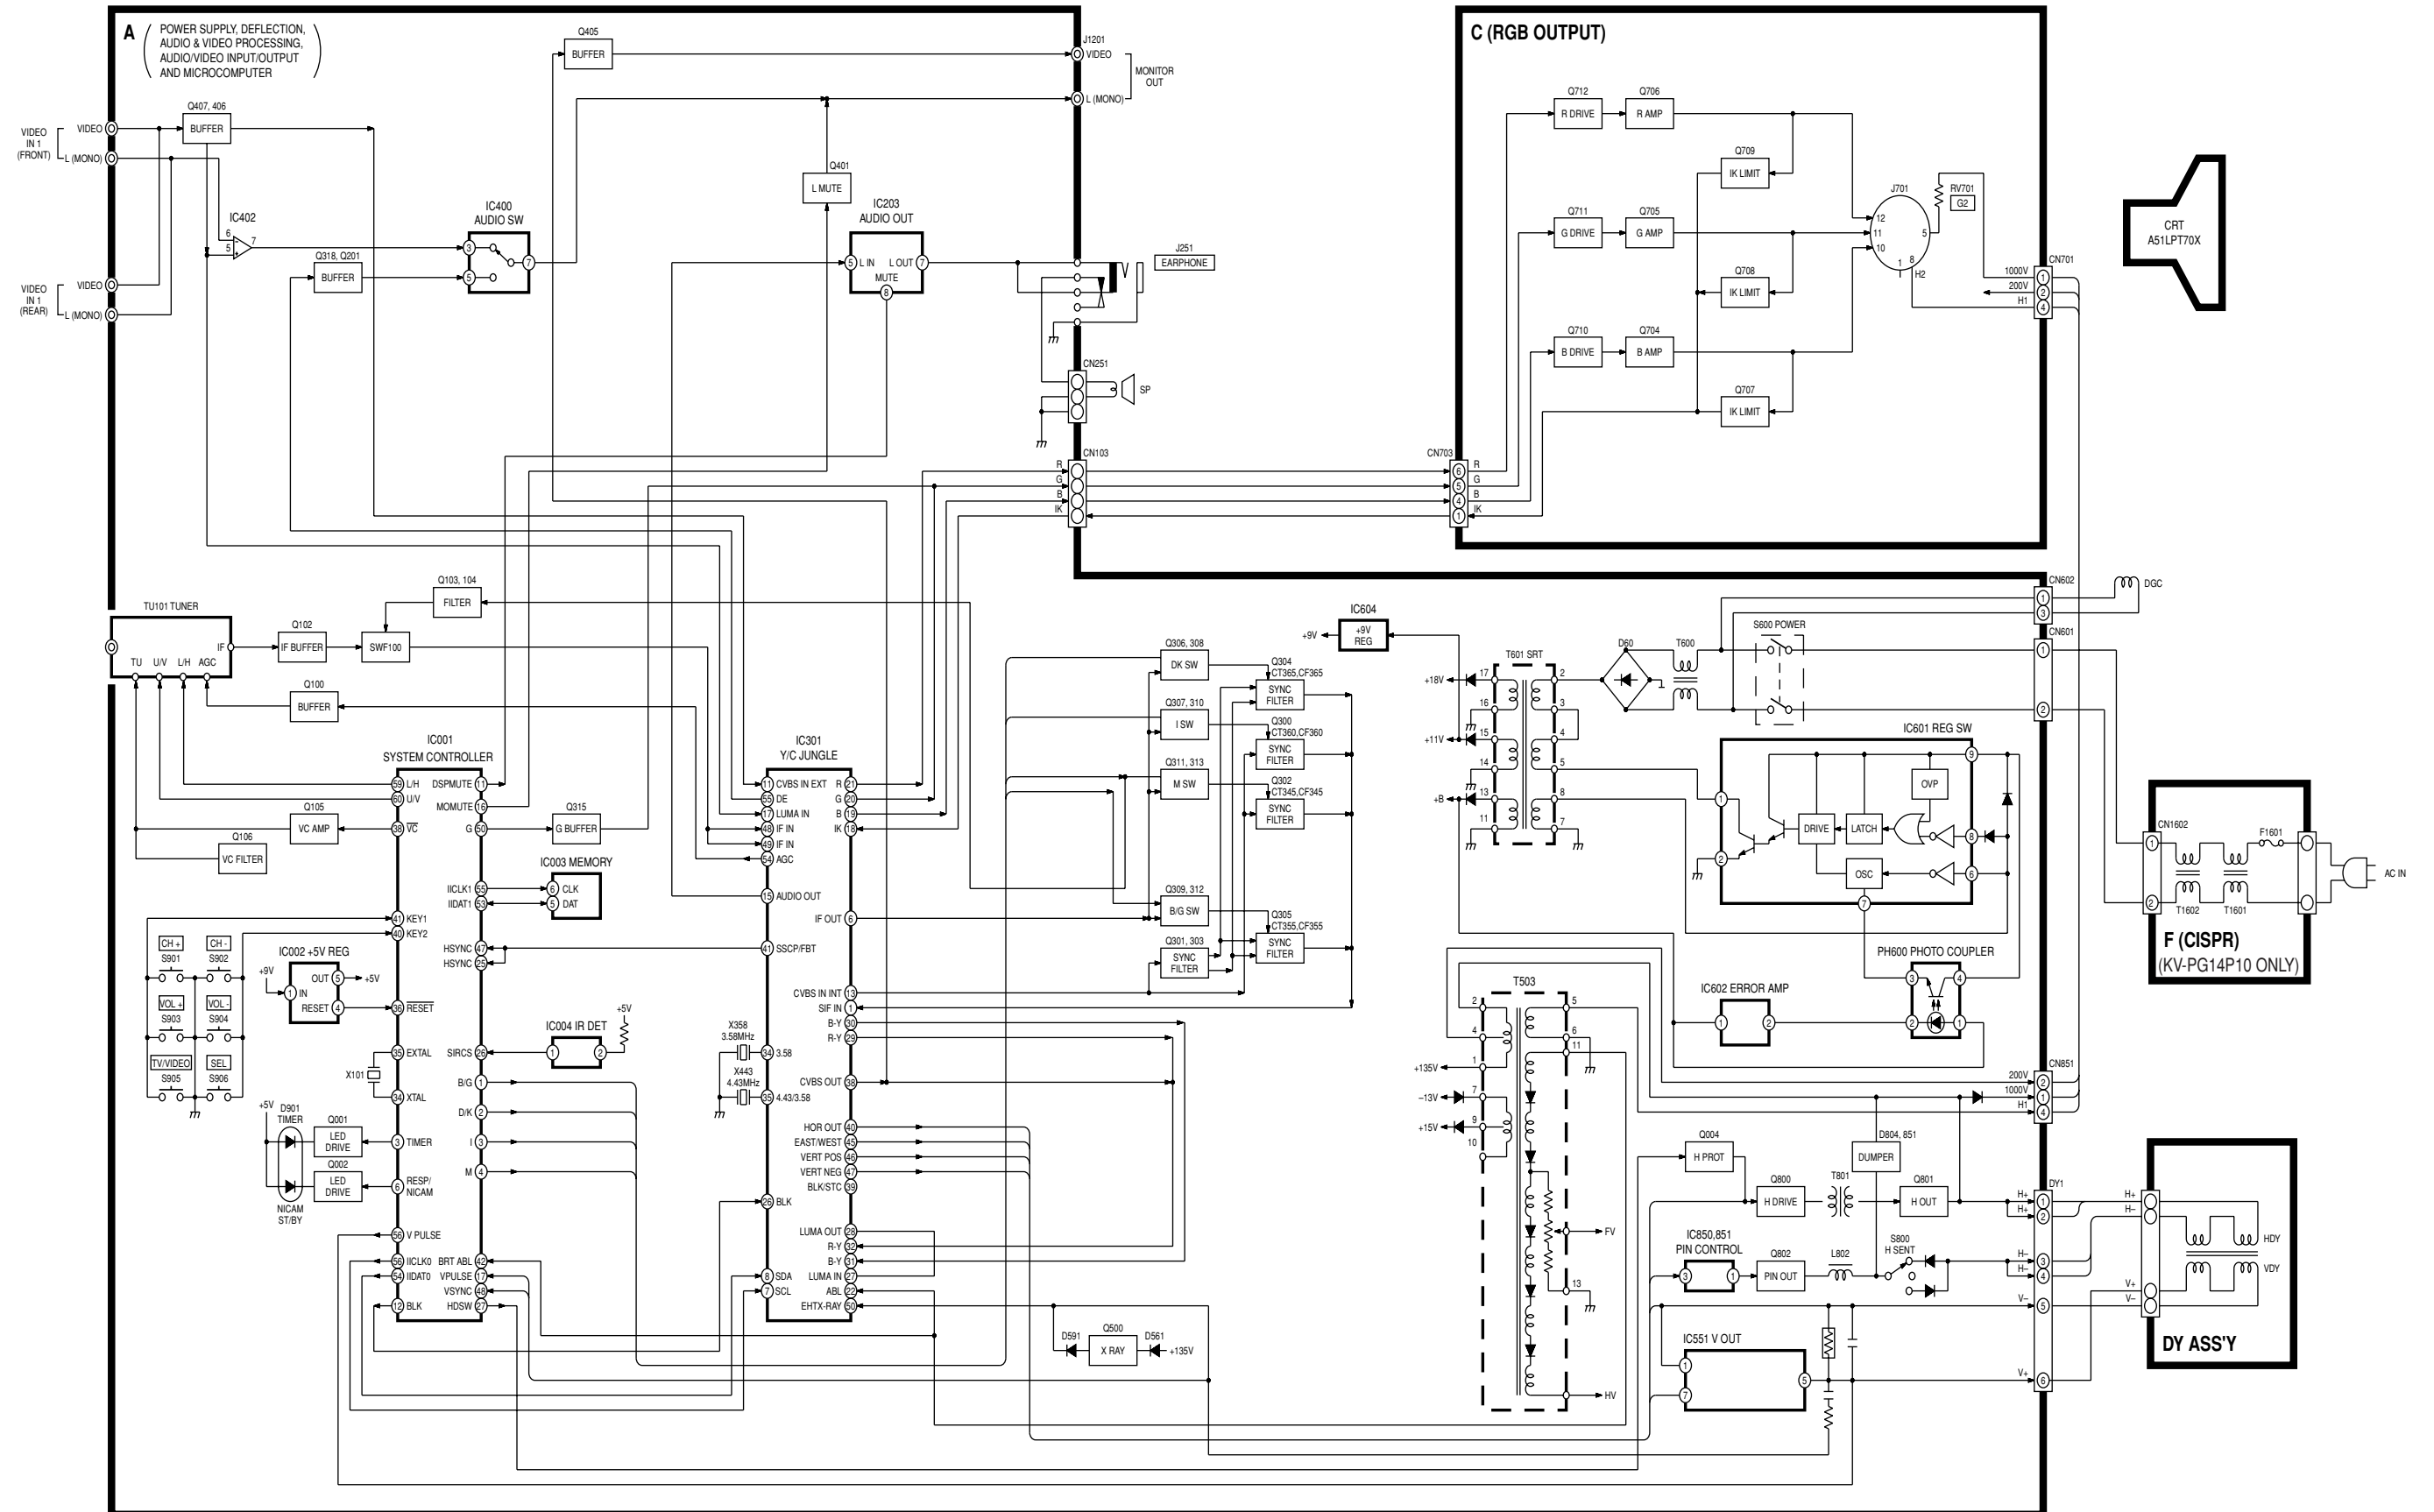

5-2. CIRCUIT BOARDS LOCATION

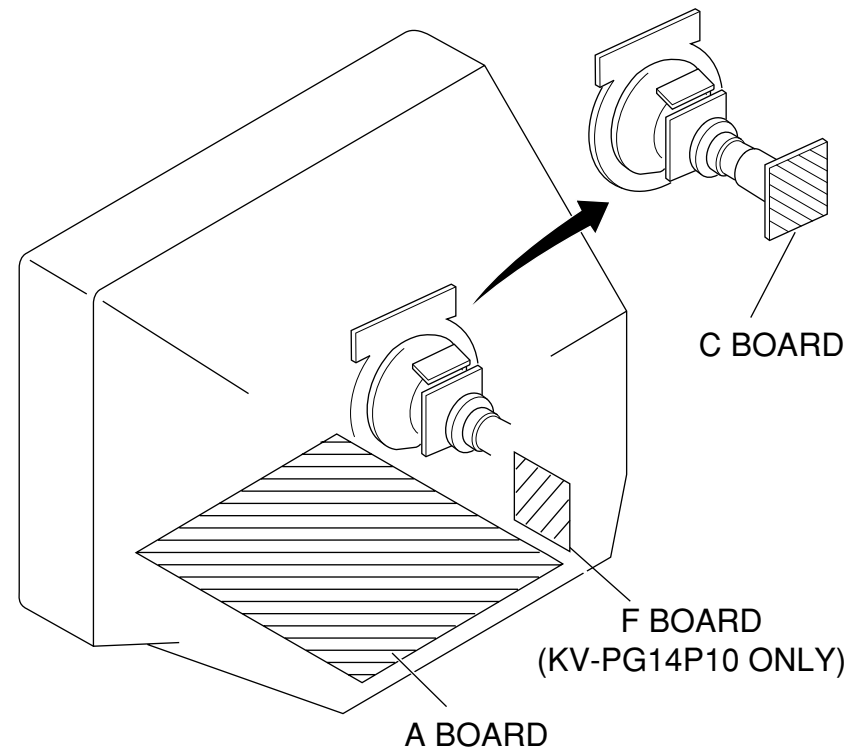

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in μF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
- Indication of resistance which does not have rating electrical power is as follows.

Pitch: 5 mm
Rating electrical power 1/4W (CHIP: 1/10W)


- : nonflammable resistor.
- Δ : internal component.
- : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
no mark : Common
() : PAL
[] : NTSC 3.58
- **Readings are taken with a 10 $\text{M}\Omega$ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in Volt.**
- * : Cannot be measured.
- **Circled numbers are waveform references.**
- : B +bus.
- : B -bus.
- : signal path.

Reference information


RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark Δ are critical for safety. Replace only with part number specified.

(1) Schematic Diagram of A Board

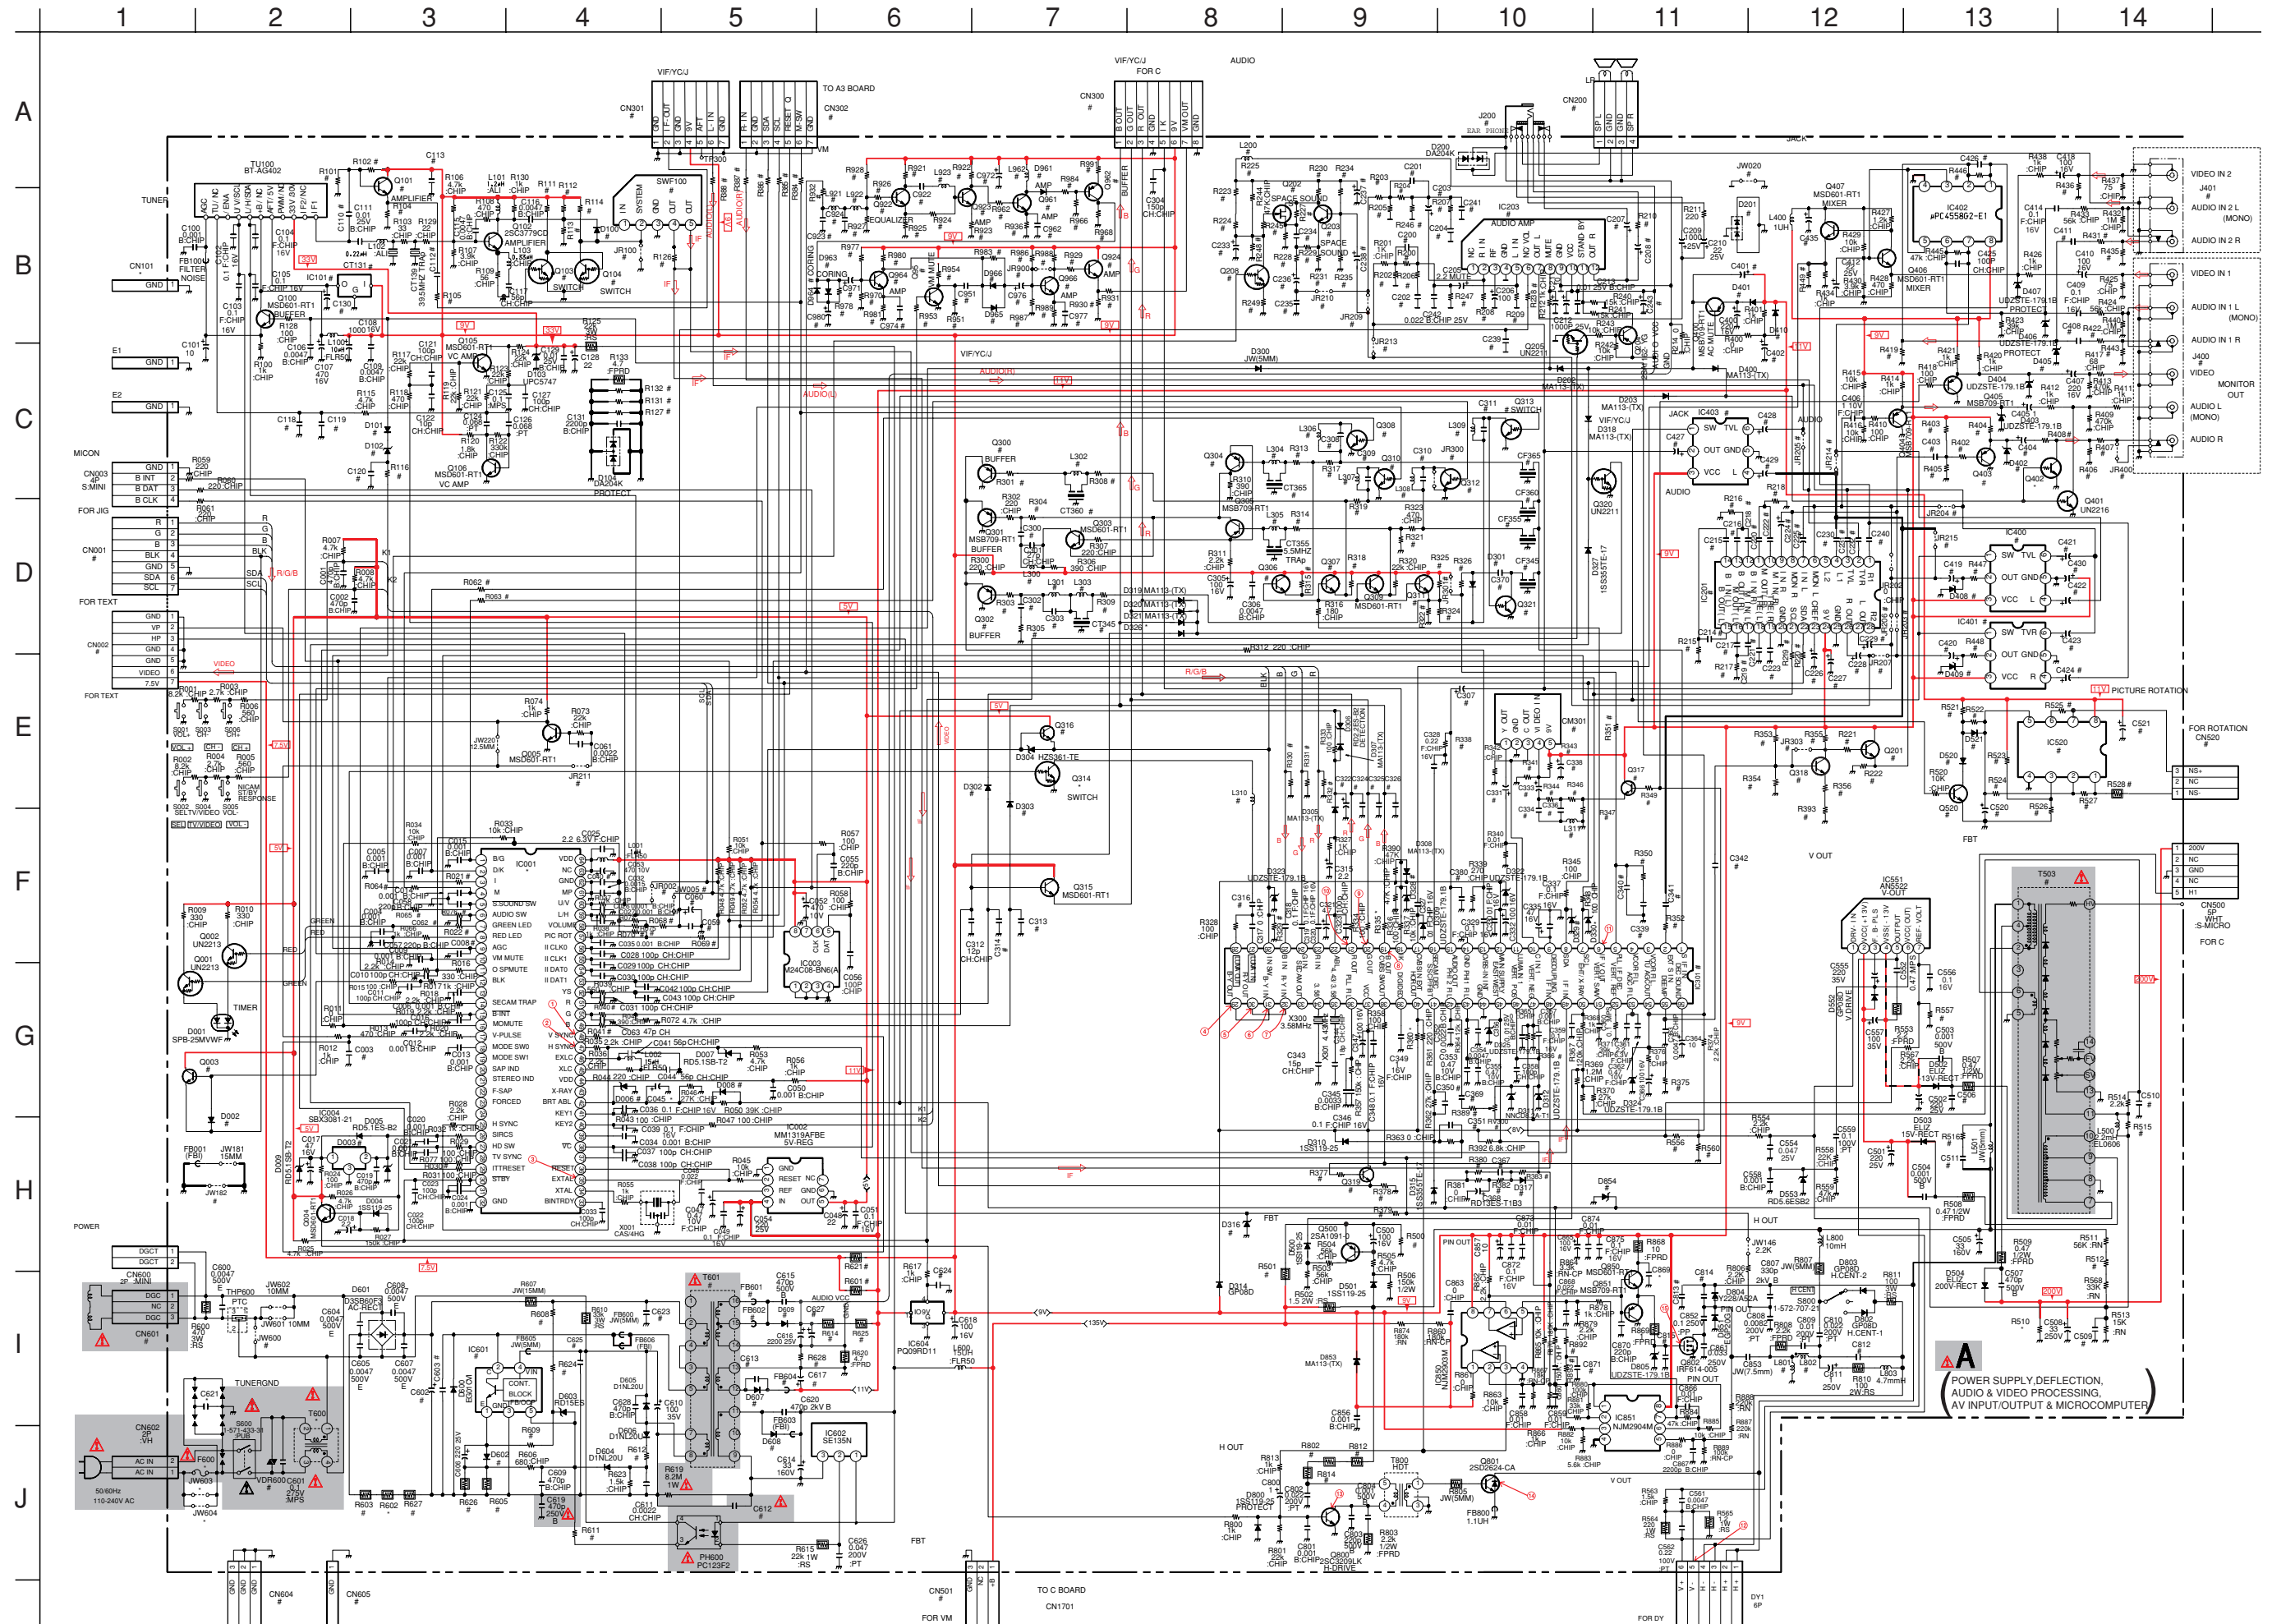

(2) Schematic Diagrams of C and F Boards

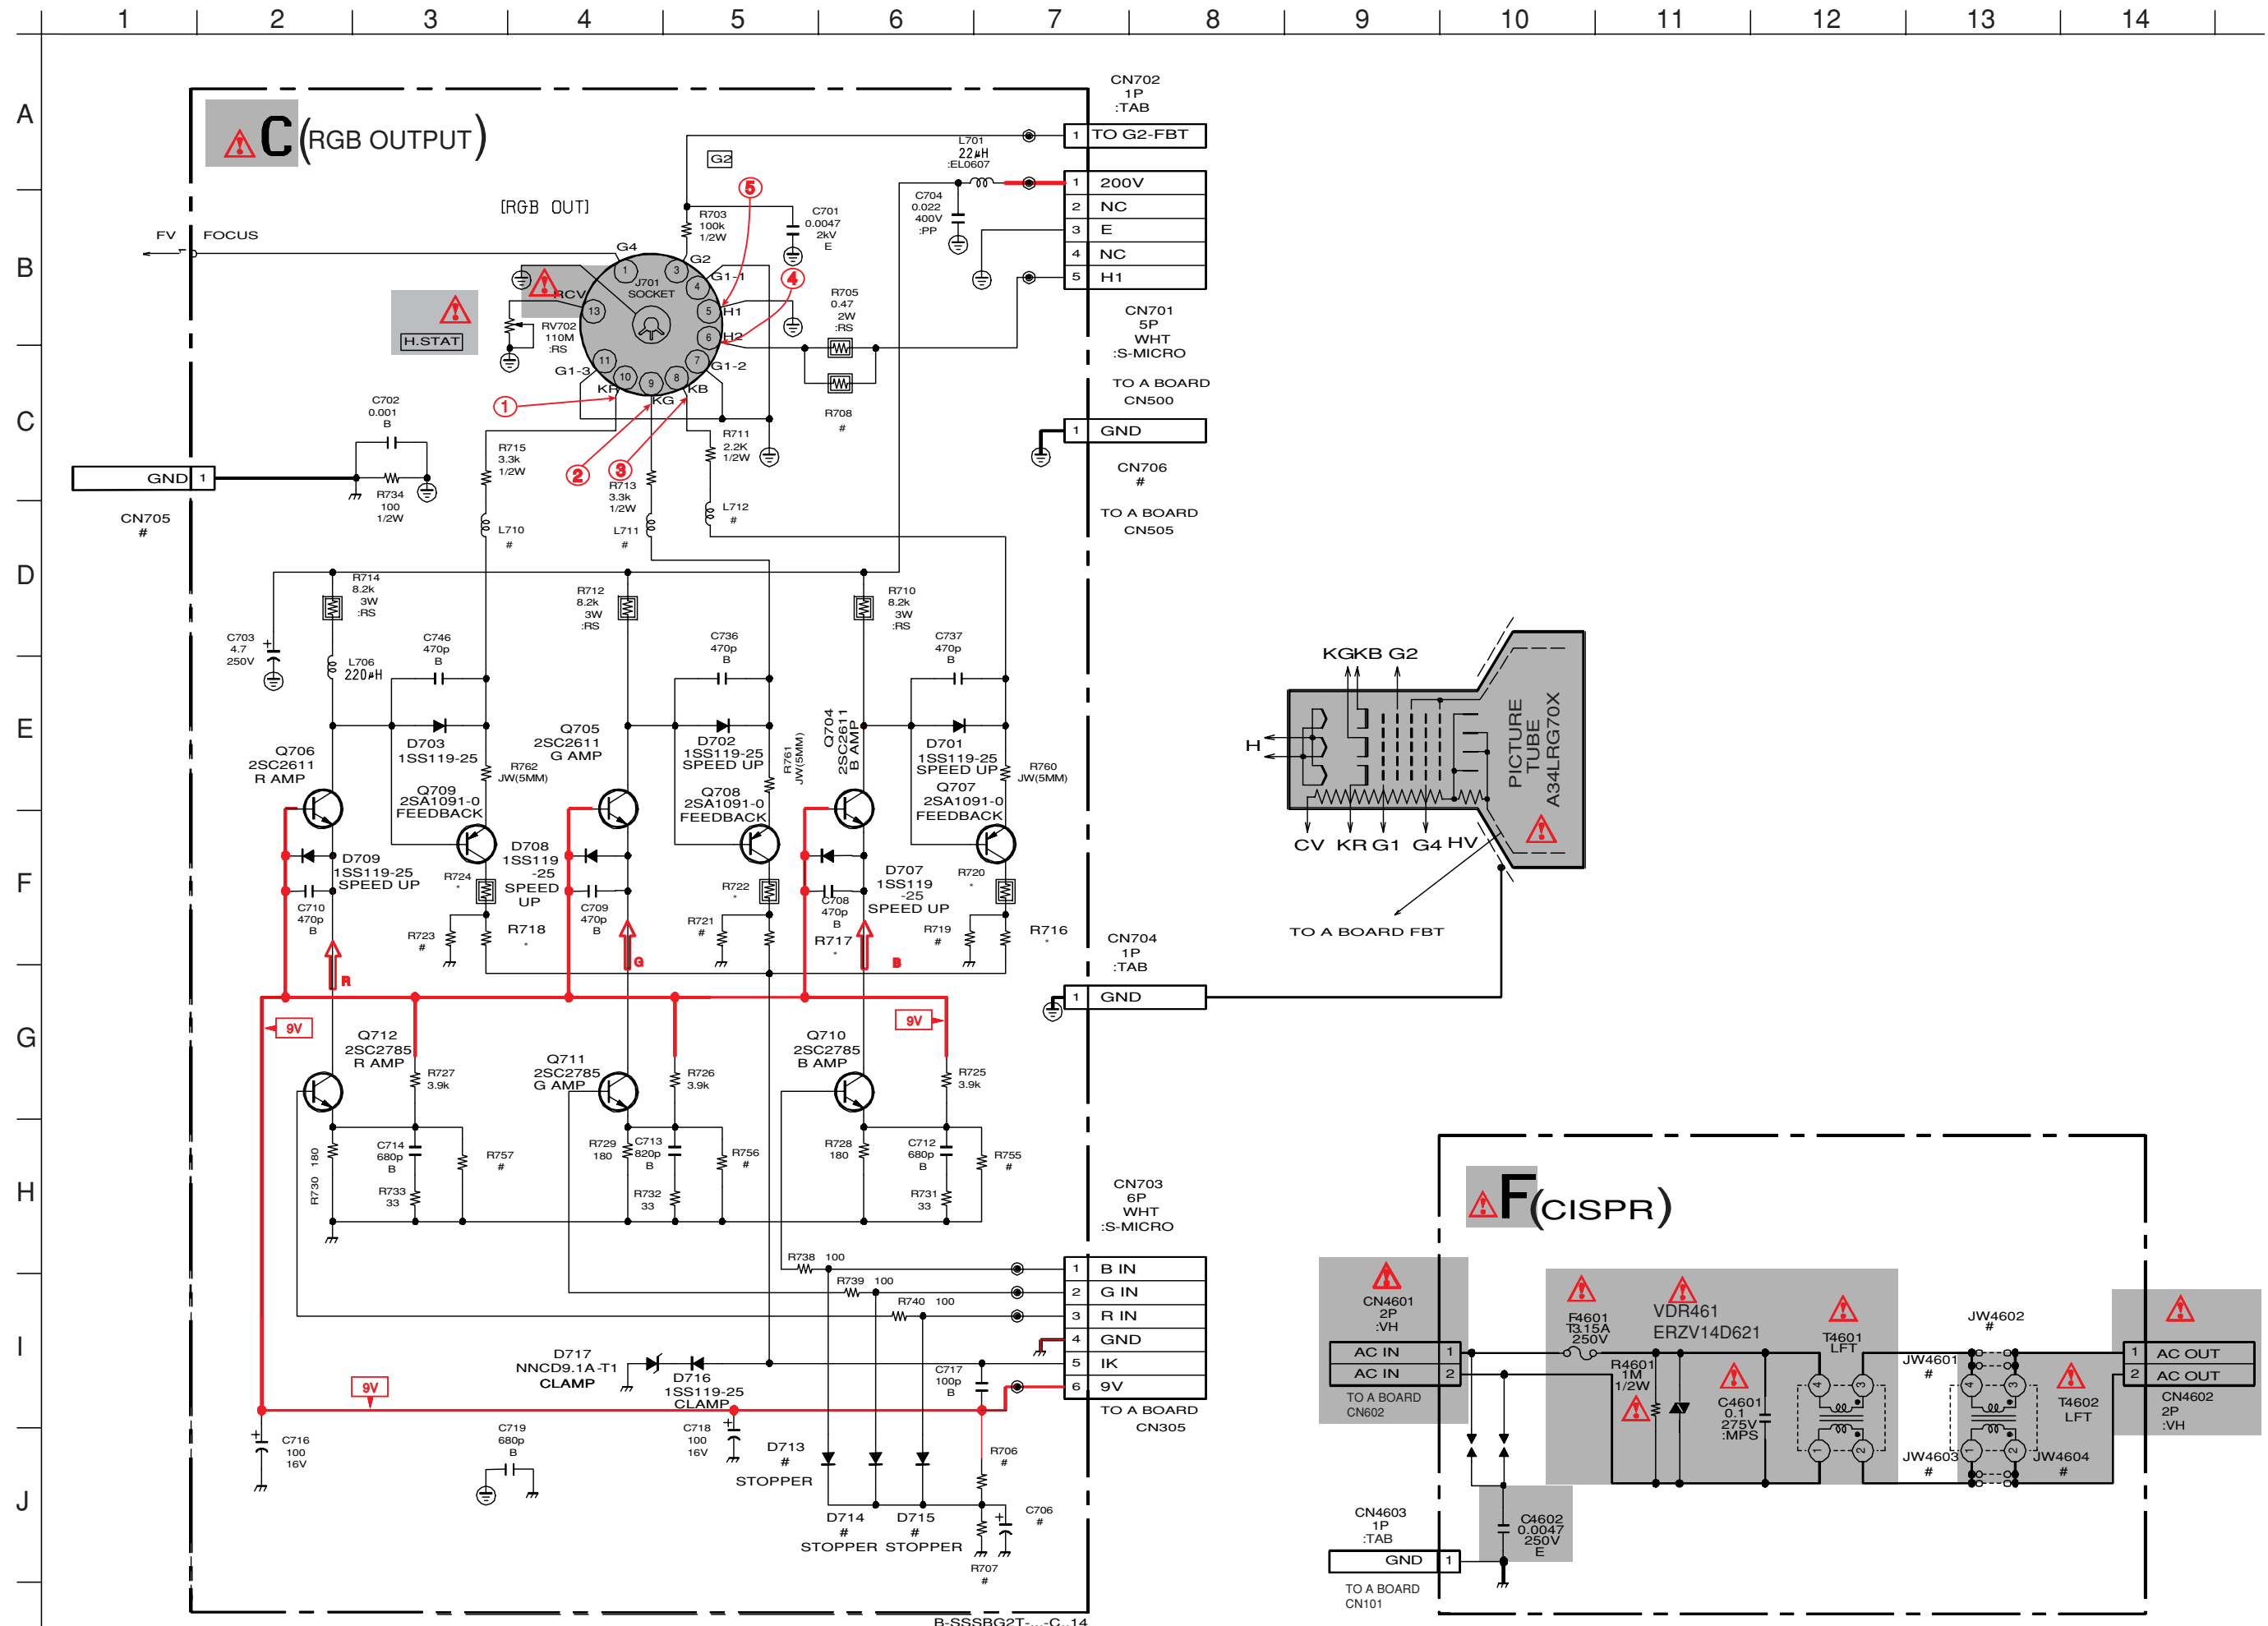

A Board * Mark List

	KV-PG14P10	KV-PG14P10/G	KV-PG14P10/L	KV-PG14P40/L	KV-PG14P40/N
C621	#	#	#	4700P 250V	4700P 250V
CLP002	Pin Lead Coating	Pin Lead Coating	Pin Lead Coating	#	#
CN101	1P	1P	1P	#	#
D326	1SS355TE-17	1SS355TE-17	1SS355TE-17	#	#
F600	#	#	#	3.15A/250V	3.15A/250V
R602	3.3 10W	3.3 10W	3.3 10W	2.2 10W	2.2 10W

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

5-4. VOLTAGE MEASUREMENT

A(1/2) BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]		
IC001	1	4.7		4	13.4		16	0.5		
	2	0		5	5.0		17	(3.4) [3.9]		
	3	0		6	0		18	6.2		
	4	0		7	0		19	2.6		
	5	5.0		8	0.3		20	2.6		
	6	(0) [5.0]		IC004	1		4.9	21	2.7	
	7	0			2		3.8	22	(2.4) [2.1]	
	8	(0) [0.2]			3		0	23	3.5	
	9	5.0	IC101	I	8.9		24	3.5		
	10	5.0		G	0		25	3.5		
	11	0		O	0.4		26	0.1		
	12	0	IC201	1	0.5		27	2.7		
	13	0		2	0.5		28	2.7		
	14	0		3	0.4		29	2.4		
	15	5.0		4	0.4		30	2.4		
	16	0		5	0.4		31	2.4		
	17	0		6	0.4		32	2.4		
	18	0		7	0.4		33	0.3		
	19	0.6		8	0.4		34	2.5		
	20	0		9	0.4		35	2.5		
	21	5.0		10	0.4		36	4.7		
	22	0		11	0.4		37	8.1		
	23	(0) [5.0]		12	0.4		38	2.5		
	24	(5.0) [0]		13	0.4		39	4.9		
	25	(0) [0.3]		14	0.4		40	1.1		
	26	3.8		15	0.4		41	(*) [0.6]		
	27	0		16	0.4		42	3.1		
	28	0.5		17	0.4		43	(4.0) [4.3]		
	29	5.0		18	0.4		44	0		
	30	5.0		19	0.4		45	(4.2) [4.0]		
	31	5.0		20	0		46	1.4		
	32	0		21	0.4		47	1.4		
	33	5.0		22	0.4		48	4.7		
	34	2.5		23	0.4		49	4.7		
	35	2.2		24	0.4		50	1.5		
	36	5.0		25	0		51	3.8		
	37	0		26	0.4		52	3.8		
	38	(2.8) [4.9]		27	0.4		53	(4.6) [1.1]		
	39	0.5		28	0.3		54	(4.2) [8.0]		
	40	5.0	IC203	1	0.4		55	2.9		
	41	5.0		2	0.4		56	3.1		
	42	0.1		3	15.4		IC400	1	(0) [4.9]	
	43	0.7		4	0			2	4.4	
	44	5.0		5	0			3	8.9	
	45	(2.8) [5.0]		6	0.4			4	5.2	
	46	(2.8) [5.0]		7	7.2			5	0	
	47	0.4		8	0.5			6	5.2	
	48	0		9	0		IC402	1	1.4	
	49	0		10	16.5			2	1.3	
	50	0		11	8.2			3	2.5	
	51	0		12	0.3			4	0	
	52	0		IC301	1			0.7	5	2.5
	53	5.0			2			3.7	6	2.5
	54	4.8	3		0.4			7	5.5	
	55	5.0	4		0.4			8	8.9	
	56	4.8	5		(2.6) [3.6]		IC551	1	0.6	
	57	5.0	6		(2.9) [4.6]			2	12.9	
	58	0	7		4.8			3	12.4	
	59	8.8	8		4.8			4	(13) [-12.9]	
	60	(0.2) [8.8]	9	6.7	5			0.3		
	61	0	10	0	6			12.7		
	62	0	11	3.4	7			0.6		
	63	5.0	12	8.1	IC002					
	64	5.0	13	(3.8) [4.4]						
		14	0							
		15	2.9							

A(2/2) BOARD VOLTAGE LIST


Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC601	1	0.9	Q106	B	0	Q313	B	0
	2	0.2		C	3.9		C	8.9
	3	(45.5) [0.4]		E	0.6		E	0
	4	(8.7) [0.4]	Q201	B	(0.4) [4.7]	Q314	B	0
5	(0.2) [0]	C		8.9	C		0.6	
		E		5.3	E		0	
IC602	1	0	Q204	B	16.5	Q315	B	2.6
	2	121.9		C	16.5		C	8.9
	3	134		E	15.8		E	0
IC604	I	13.4	Q205	B	(4.8) [0.2]	Q318	B	2.1
	G	8.9		C	(0) [0.2]		C	(0.4) [5.4]
	O	0		E	(0) [4.8]		E	2.7
IC850	1	(*) [2.2]	Q300	B	(3.0) [3.6]	Q320	B	0
	2	0.8		C	0		C	3.3
	3	1.0		E	8.9		E	0
	4	0	Q301	B	(3.0) [3.6]	Q400	B	13.3
	5	2.7		C	0		C	-0.3
	6	(*) [2.2]		E	(2.3) [3.9]		E	13.4
	7	5.9	Q302	B	(3.0) [3.9]	Q401	B	0
	8	8.9		C	0		C	0
		E		8.9	E		(-0.5) [-0.1]	
IC851	1	(2.2) [2.7]	Q303	B	(2.3) [3.7]	Q402	B	0
	2	3.2		C	(7.7) [6.1]		C	0.4
	3	3.2		E	(2.9) [4.2]		E	(-0.5) [-0.2]
	4	0	Q304	B	(2.9) [4.2]	Q403	B	0.4
	5	(2.5) [2.8]		C	(2.3) [3.7]		C	0
	6	(2.5) [2.8]		E	8.9		E	(0.4) [0.6]
	7	(3.9) [3.7]	Q305	B	(3.0) [4.0]	Q404	B	5.2
	8	8.9		C	(2.3) [3.5]		C	0
		E		(2.3) [3.6]	E		4.5	
PH600	1	133.4	Q306	B	8.9	Q405	B	3.2
	2	(121.7) [*]		C	8.9		C	0
	3	(134.4) [8.7]		E	(2.9) [4.6]		E	2.5
	4	(134.4) [1.4]						
Q002	B	(5.0) [0]	Q307	B	8.9	Q406	B	1.8
	C	(0) [4.9]		C	(3.2) [9.0]		C	4.2
	E	0		E	(2.9) [4.7]		E	2.5
Q003	B	(0.4) [0.1]	Q308	B	0	Q407	B	(0.5) [3.5]
	C	5.0		C	(0.3) [8.8]		C	8.9
	E	0		E	(0.2) [0]		E	4.2
Q004	B	(0.2) [0.1]	Q309	B	(1.7) [3.8]	Q801	B	0.2
	C	5.0		C	(4.5) [9.0]		C	0
	E	(0.1) [0.2]		E	(2.9) [4.7]		E	0
Q100	B	3.6 [7.4]	Q310	B	0	Q802	B	5.0
	C	8.8		C	8.9		C	(8) [9]
	E	(4.2) [8]		E	0		E	0
Q103	B	0	Q311	B	8.9	Q850	B	5.8
	C	3.2		C	8.9		C	8.9
	E	0		E	(2.9) [4.7]		E	5.9
Q104	B	0	Q312	B	0	Q851	B	(5.6) [6.0]
	C	0		C	0		C	0
	E	(0.4) [3.2]		E	3.9		E	5.9
Q105	B	(0.4) [0]						
	C	(9.3) [0]						
	E	(0) [0.6]						

C BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
J701	G2	(260.4) [258.4]
	H2	*
	KB	120
	KG	(120) [125]
	KR	(117) [119]
Q705	B	8.9
	C	(8.3) [124.4]
	E	(8.3) [0.3]
Q710	B	2.7
	C	8.3
	E	2.0
Q711	B	2.7
	C	8.3
	E	2.0
Q704	B	8.9
	C	(121.7) [123.2]
	E	(8.3) [6.3]
Q706	B	8.9
	C	119
	E	(8.3) [6]
Q707	B	(122) [125.2]
	C	7.3
	E	(120) [125.2]
Q708	B	(120.7) [123.4]
	C	7.4
	E	(118.2) [124.3]
Q709	B	(119) [120.1]
	C	(7.3) [8]
	E	(116) [119.8]
Q712	B	(2.7) [0.3]
	C	(8.3) [6]
	E	(2.1) [1.8]

5-5. WAVEFORMS


A BOARD WAVEFORM

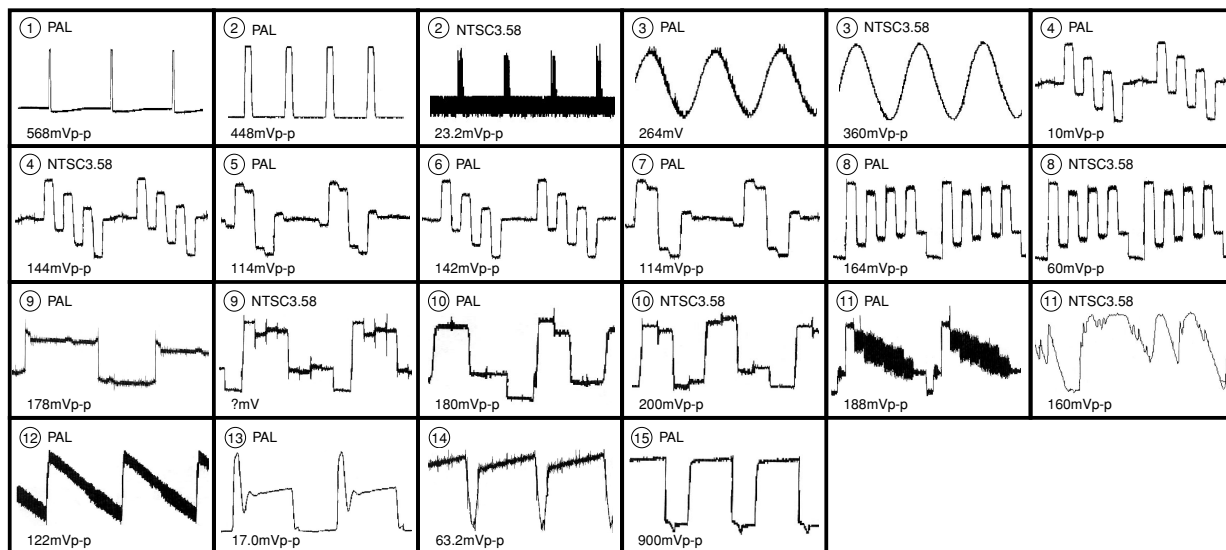

5-6. PRINTED WIRING BOARDS AND PARTS LOCATION


PRINTED WIRING BOARDS

A [POWER SUPPLY, DEFLECTION, AUDIO AND VIDEO PROCESSING, AUDIO/VIDEO INPUT/OUTPUT AND MICROCOMPUTER]

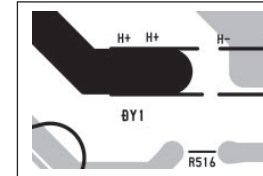

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

- A Board -

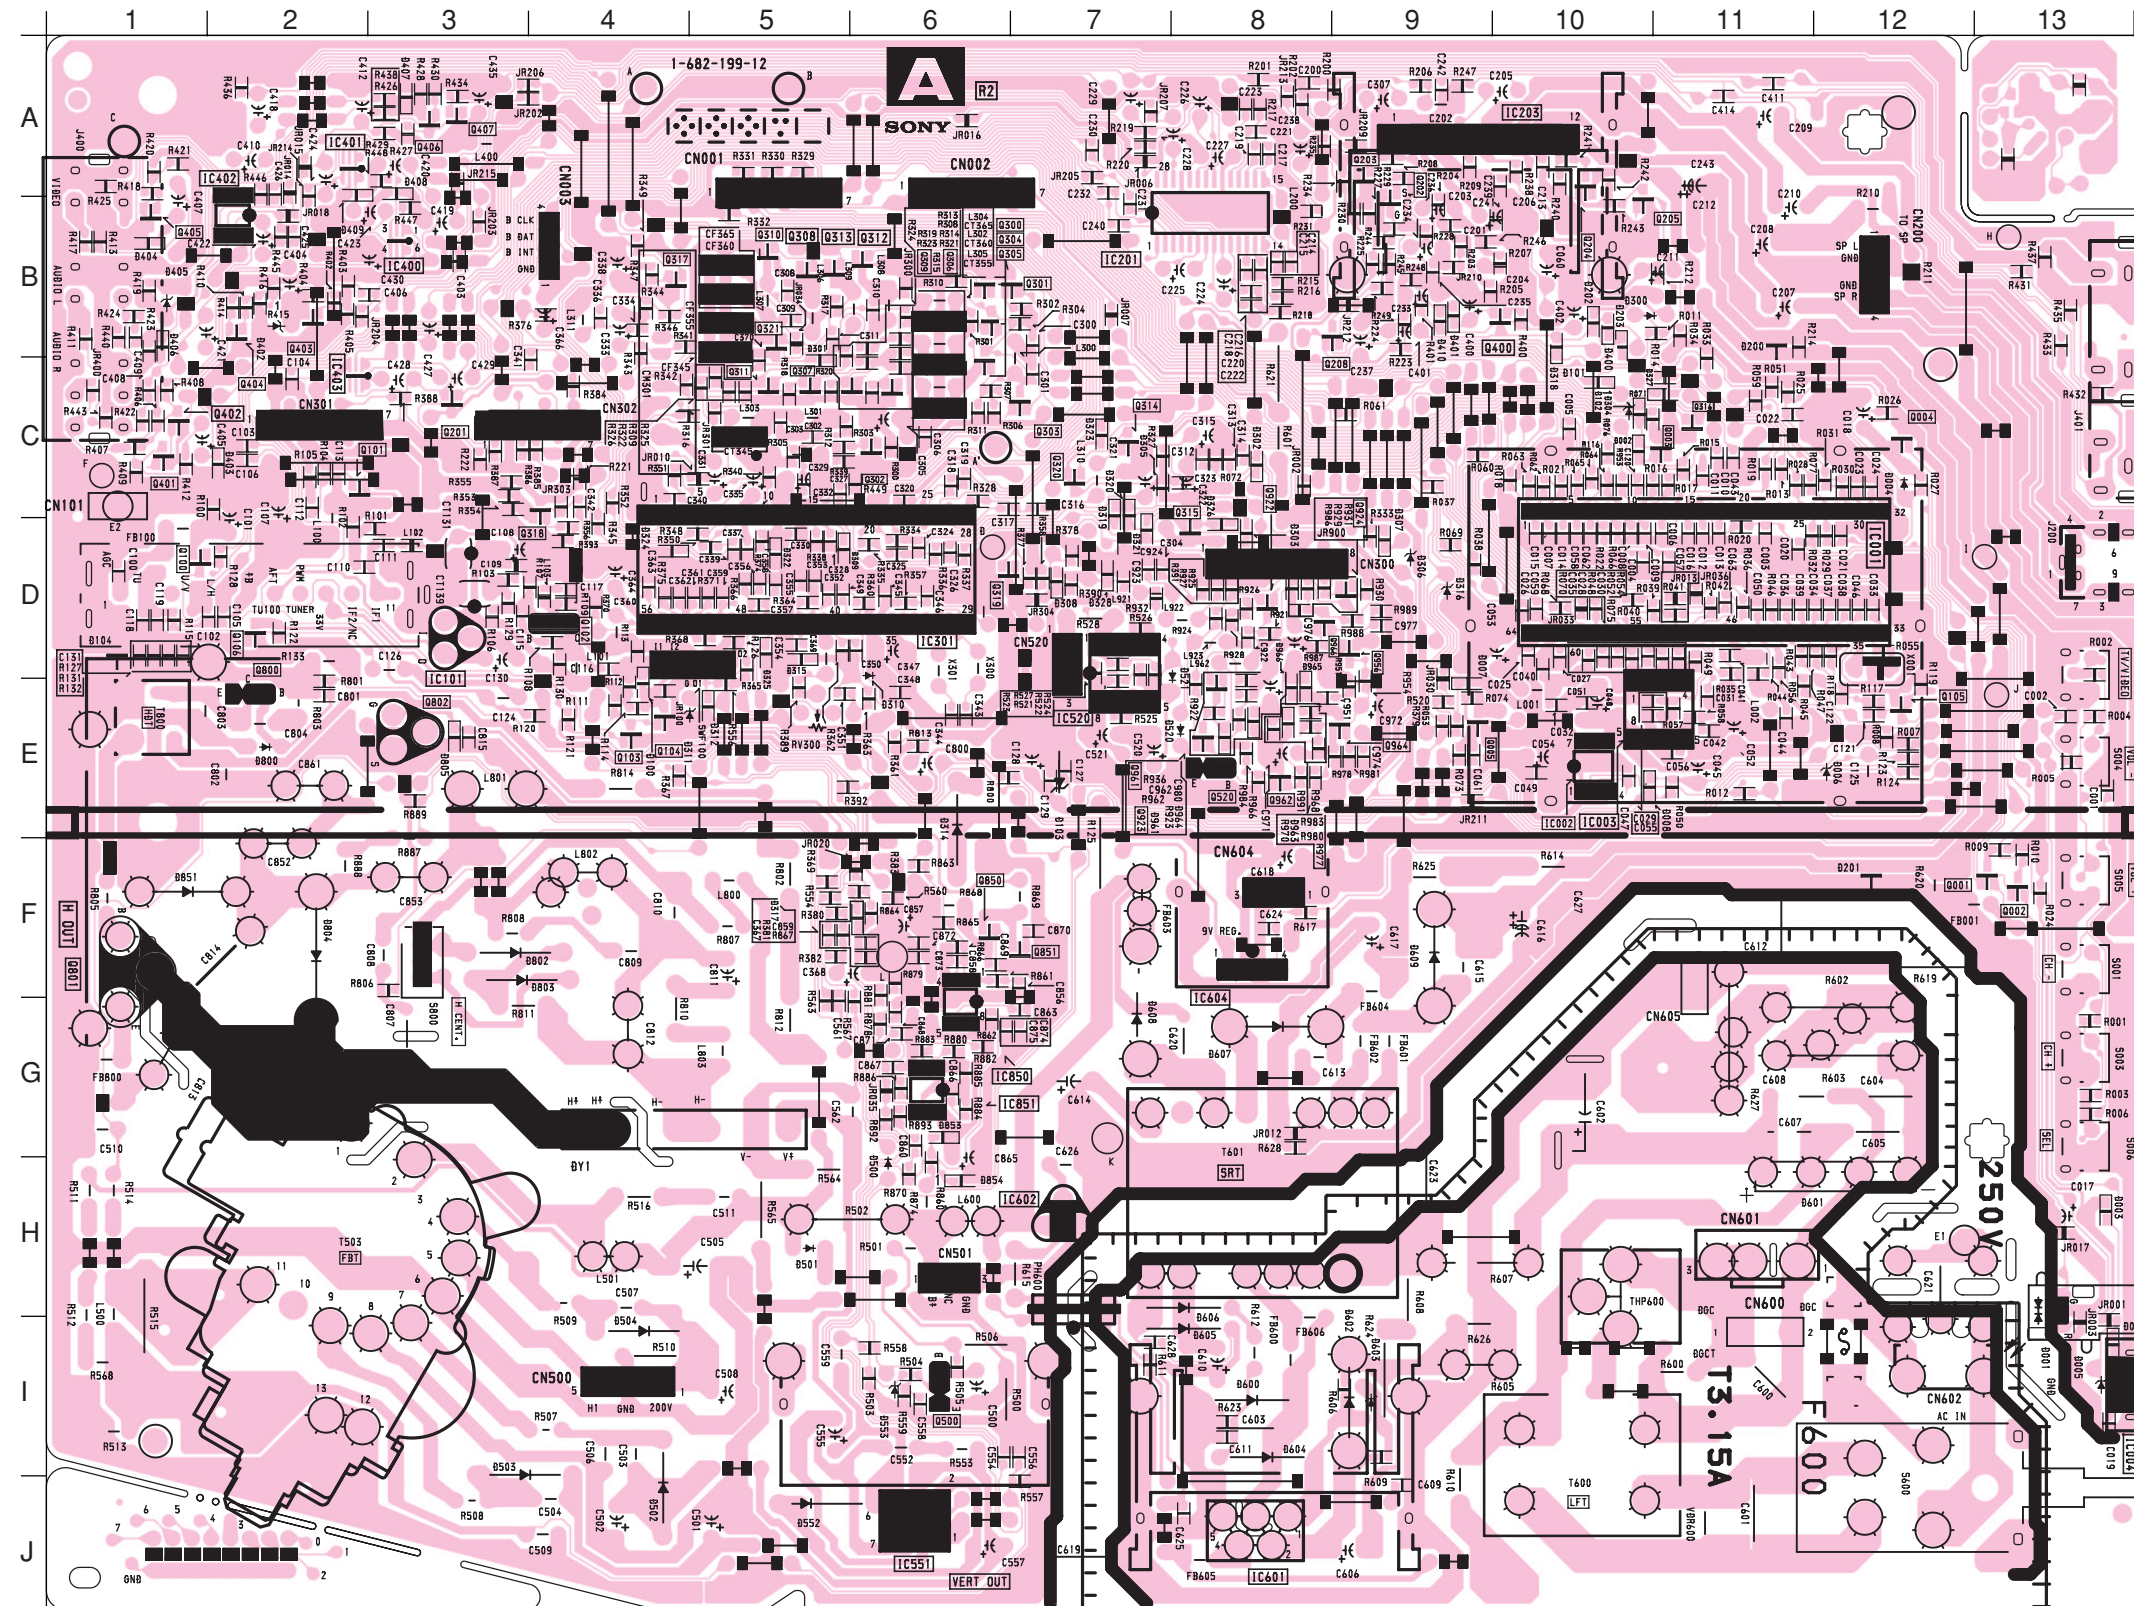


A BOARD

IC		DIODE			
IC001	D-12	Q403	B-2	D401	B-9
IC002	F10	Q404	C-2	D402	B-2
IC003	F10	Q406	A-3	D403	C-2
IC004	I-13	Q407	A-3	D404	B-1
IC201	B-7	Q500	I-6	D405	B-1
IC203	A-10	Q520	E-8	D406	B-1
IC301	D-6	Q800	D-2	D407	A-3
IC400	B-3	Q801	F-1	D408	A-3
IC401	A-2	Q802	E-3	D409	B-2
IC402	A-2	Q850	F-6	D410	B-9
IC403	C-2	Q851	F-7	D500	H-6
IC520	E-7	Q922	C-8	D501	H-5
IC551	J-6	Q923	E-7	D502	J-4
IC601	J-8	Q924	C-9	D503	I-3
IC602	H-6	Q956	D-9	D504	I-4
IC604	G-8	Q961	E-7	D520	E-7
IC850	G-6	Q962	E-8	D521	D-8
IC851	G-6	Q964	E-9	D552	J-5
PH600	H-7			D553	I-6
TRANSISTOR		DIODE			
Q001	F-12	D600	I-8	D601	H-11
Q002	F-13	D601	I-9	D602	I-9
Q003	C-11	D602	C-10	D603	I-9
Q004	C-12	D603	H-13	D604	I-8
Q005	E-9	D604	C-12	D605	I-8
Q100	D-1	D605	I-13	D606	I-8
Q101	C-2	D606	E-12	D607	G-8
Q102	D-4	D607	D-9	D608	G-7
Q103	E-4	D608	E-11	D609	F-9
Q104	E-4	D609	I-13	D800	E-2
Q105	E-12	D610	E-4	D802	F-4
Q106	D-2	D611	C-10	D803	F-4
Q201	C-3	D612	C-10	D804	F-2
Q202	A-9	D613	E-7	D805	E-3
Q203	A-9	D614	D-1	D851	F-1
Q204	B-10	D615	D-10	D853	G-6
Q205	B-11	D616	B-11	D961	E-7
Q300	B-6	D617	F-12	D965	D-8
Q301	B-7	D618	B-10	D966	D-8
Q302	C-6	D619	B-10		
Q303	C-7	D620	B-10		
Q304	B-6	D301	B-5		
Q305	B-6	D302	C-8		
Q306	B-6	D303	C-8		
Q307	C-5	D304	C-10		
Q308	B-5	D305	C-7		
Q309	B-6	D306	D-9		
Q310	B-5	D307	D-7		
Q311	C-5	D308	D-6		
Q312	B-6	D309	E-6		
Q313	B-5	D310	E-4		
Q314	C-7	D311	E-5		
Q315	C-8	D312	E-6		
Q316	C-11	D313	D-5		
Q317	B-4	D314	D-9		
Q318	D-4	D315	F-5		
Q319	D-6	D316	C-10		
Q320	C-7	D317	C-7		
Q321	B-5	D318	D-7		
Q400	C-10	D319	C-7		
Q401	C-1	D320	C-7		
Q402	C-2	D321	D-7		
		D322	C-7		
		D323	C-7		
		D324	D-4		
		D325	D-5		
		D326	C-8		
		D327	C-10		
		D400	B-10		


PRINTED WIRING BOARDS

C [RGB OUTPUT] **F** [CISPR]

– C Board –

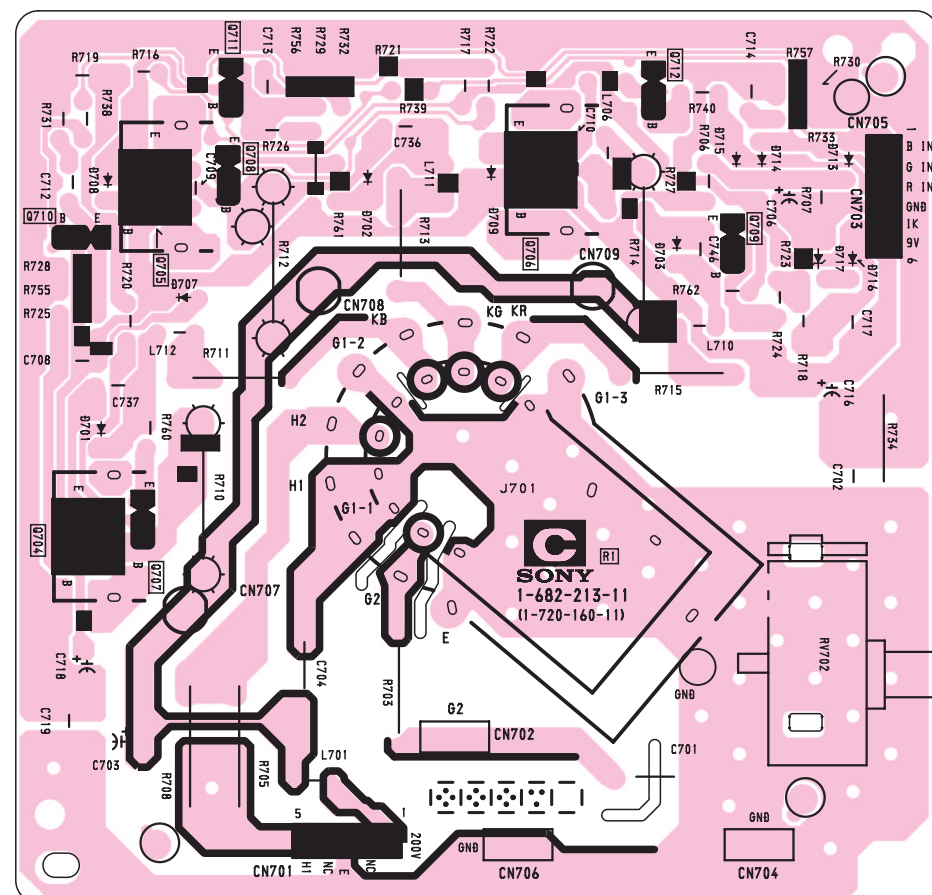

– F Board – (KV-PG14P10 ONLY)

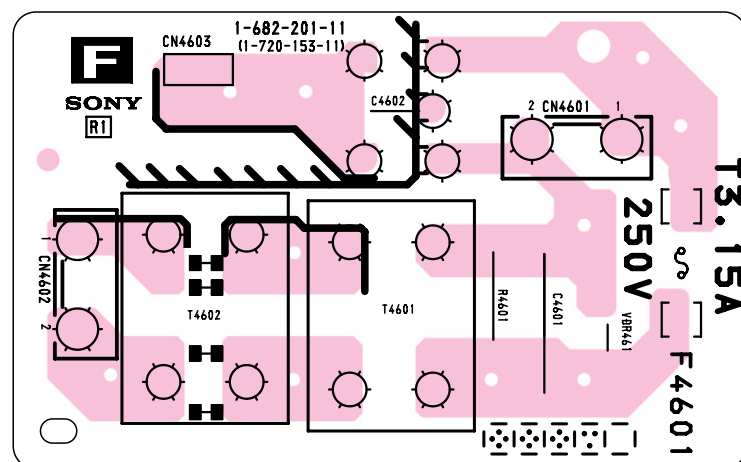

5-7. SEMICONDUCTORS

DIODE

D1N120U ELIZ EG01CV1 GPO8D EGP20G	NNCD8.2A-T1 NNCD9.1A-T1 RU4AM-T3 1SS119-25	RD5.6ESB2 RD5.1SB-T2 UDZSTE-179.1B 1SS355TE-17	RD2.2ES-B2 RD5.1ESB2 RD15ES-B1 S3L20UF4	SPB-25MVWF	DA204K

TRANSISTOR



D3SB60F3	BY228	UPC574J	IRF614-005	2SC3209LK	2SD2624-CA

IC

2SC2785-HFE	MSD601-RT1 MSB709-RT1 UN2211 UN2213 UN2216 2SA1162-G	2SA1091-0	2SC2611	2SC3779	SBX3081-21

MM1319AFBE UPC4558G2 NJM2903M	M24C08-BN6 (A)(8 PIN) CXP85224A-079S	STR-F6706A TDA8843

IC

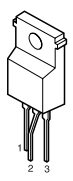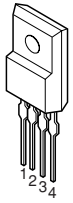 <p>A technical drawing of a 3-pin integrated circuit component. It features a rectangular body with a circular hole on top and three pins extending from the bottom. The pins are labeled 1, 2, and 3 from left to right.</p>	 <p>A technical drawing of a 4-pin integrated circuit component. It features a rectangular body with a circular hole on top and four pins extending from the bottom. The pins are labeled 1, 2, 3, and 4 from left to right.</p>
SE-135N	PQO9RD11

SECTION 6 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

6-1. PICTURE TUBE AND CHASSIS

- : 7-685-648-79 SCREW +BVTP 3 x 12
- : 7-685-663-71 SCREW +BVTP 4 x 16

Caution : Do not take out CRT Support block while TV set in standing position.

NOTE : The picture tube for OCE model is upside down, and the position for the anode and tension springs are changed accordingly.

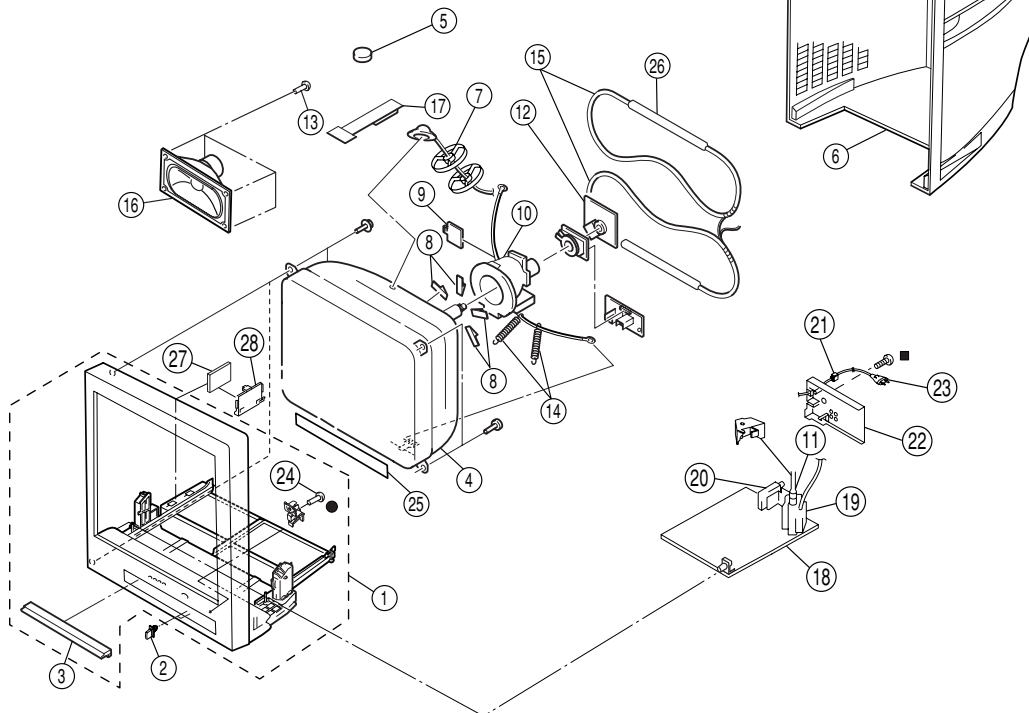

REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4039-346-1	BEZNET ASSY (KV-PG14P10)	3, 24
	X-4039-449-1	BEZNET ASSY (KV-PG14P10/G)	3, 24
	X-4039-452-1	BEZNET ASSY (KV-PG14P10/L/PG14P40/L)	3, 24
	X-4039-479-1	BEZNET ASSY (KV-PG14P40/N)	3, 24
2	4-081-868-01	BUTTON POWER	
3	X-4039-301-1	DOOR ASSY, CONTROL (KV-PG14P10)	
	X-4039-450-1	DOOR ASSY, CONTROL (KV-PG14P10/G)	
	X-4039-399-1	DOOR ASSY, CONTROL (KV-PG14P10/L/PG14P40/L)	
	X-4039-397-1	DOOR ASSY, CONTROL (KV-PG14P40/N)	
4	\triangle 8-735-570-05	PICTURE TUBE (A34LRG70X)	
5	1-452-032-00	MAGNET DISC	
6	4-082-275-01	COVER REAR (■ 8 SCREWS)	
7	* 3-704-372-11	HOLDER HV CABLE	
8	4-081-577-01	SPACER (S) DY	
9	4-077-228-02	PIECE TLH CONVERGENCE	
10	\triangle 8-451-401-11	DEFLECTION YOKE (Y14RSA-S)	
11	1-900-212-58	LEAD ASSY FOCUS	
12	* A-1332-226-A	C BOARD MOUNTED	
13	4-365-808-01	SCREW (5) TAPPING	

REF. NO.	PART NO.	DESCRIPTION	REMARK
14	4-078-765-01	SPRING EXTENSION	
15	\triangle 1-419-185-11	COIL, DEGAUSSING	
16	1-544-965-11	SPEAKER (9 x 5CM) (● 4 SCREWS)	
17	4-051-736-42	PIECE A (90) CONV, CORRECT	
18	* A-1299-622-A	A BOARD COMPLETE (KV-PG14P10/L/G)	
	* A-1299-614-A	A BOARD COMPLETE (KV-PG14P40/L/PG14P40/N)	
19	\triangle 1-453-309-21	TRANSFORMER ASSY FLYBACK (NX-4450/M3A4)	
20	8-598-591-00	TUNER BT-AG402	
21	4-022-115-00	HOLDER AC CORD	
22	4-059-710-01	BRACKET TERMINAL BOARD (■ 1 SCREW)	
23	1-823-550-11	CORD POWER WITH CONNECTOR (KV-PG14P10)	
	1-823-480-11	CORD POWER WITH CONNECTOR (KV-PG14P40)	
24	* 4-081-867-01	BAR OPTICAL	
25	4-070-789-02	SHEET BLOTING	
26	* 4-072-857-02	CUSHION DGC	
27	* A-1241-499-A	F BOARD MOUNTED (KV-PG14P10 only)	
28	* 4-049-158-01	BRACKET F1, PC BOARD (KV-PG14P10 only)	

SECTION 7 ELECTRICAL PARTS LIST



NOTE:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- All resistors are in ohms
- F : nonflammable

CAPACITORS

- MF : μ F, PF : μ μ F

COILS

- MMH : mH, UH : μ H

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	* A-1299-622-A	A BOARD COMPLETE (KV-PG14P10)		C038	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
	* A-1299-614-A	A BOARD COMPLETE (KV-PG14P40) *****		C039	1-163-038-91	CERAMIC CHIP 0.1UF	25V
	1-533-223-11	CLIP, FUSE (KV-PG14P40)		C041	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
	* 4-055-304-01	HOLDER, LED		C042	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
	* 4-082-454-01	HOLDER, FBT		C043	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
	* 4-352-844-01	PIN, LEAD, COATING		C044	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
	4-382-854-01	SCREW (M3X8), P, SW (+)		C045	1-126-962-11	ELECT 3.3UF	20.00% 50V
	4-382-854-21	SCREW (M3X14), P, SW (+)		C046	1-162-995-11	CERAMIC CHIP 0.022UF	50V
	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3		C047	1-113-619-11	CERAMIC CHIP 0.47UF	10V
		<CAPACITOR>		C048	1-126-965-91	ELECT 22UF	20.00% 50V
C001	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V	C049	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C002	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V	C050	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C004	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C051	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C005	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C052	1-126-935-11	ELECT 470UF	20.00% 10V
C006	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C053	1-126-935-11	ELECT 470UF	20.00% 10V
C007	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C054	1-104-666-11	ELECT 220UF	20.00% 25V
C009	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C055	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C010	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C056	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C011	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C057	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C012	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C058	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C013	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C061	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C014	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C063	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C015	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C100	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C016	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C101	1-126-964-11	ELECT 10UF	20.00% 50V
C017	1-126-947-11	ELECT 47UF	20.00% 16V	C102	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C018	1-126-961-11	ELECT 2.2UF	20.00% 50V	C103	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C019	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V	C104	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C020	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C105	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C021	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C106	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C022	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C107	1-126-935-11	ELECT 470UF	20.00% 16V
C023	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C108	1-126-767-11	ELECT 1000UF	20.00% 16V
C024	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C109	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C025	1-135-834-91	CERAMIC CHIP 2.2E+06PF 6.3V		C111	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C026	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C115	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C027	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C116	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C028	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C117	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
C029	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C121	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C030	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C122	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
C031	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C124	1-130-493-00	MYLAR 0.068UF	5.00% 50V
C032	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C125	1-130-495-00	MYLAR 0.1UF	5.00% 50V
C033	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C126	1-130-493-00	MYLAR 0.068UF	5.00% 50V
C034	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C127	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C035	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C128	1-126-965-91	ELECT 22UF	20.00% 50V
C036	1-163-038-91	CERAMIC CHIP 0.1UF	25V	C129	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C037	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C131	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
				C200	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
				C202	1-136-169-00	FILM 0.22UF	5.00% 50V
				C205	1-126-961-11	ELECT 2.2UF	20.00% 50V
				C206	1-126-965-91	ELECT 22UF	20.00% 50V
				C209	1-126-942-61	ELECT 1000UF	20.00% 25V

KV-PG14P10/PG14P10/G/PG14P10/L
KV-PG14P40/L/PG14P40/N
RM-952

The components identified by shading and mark Δ are critical for safety.
 Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
C210	1-128-551-11	ELECT	22UF 20.00% 25V
C211	1-126-964-11	ELECT	10UF 20.00% 50V
C212	1-126-942-61	ELECT	1000UF 20.00% 25V
C213	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C242	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V
C300	1-162-924-11	CERAMIC CHIP	56PF 5.00% 50V
C301	1-162-920-11	CERAMIC CHIP	27PF 5.00% 50V
C304	1-119-662-91	CERAMIC CHIP	150PF 1.00% 50V
C305	1-126-933-11	ELECT	100UF 20.00% 16V
C306	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C307	1-126-957-11	ELECT	0.22UF 20.00% 50V
C310	1-163-131-00	CERAMIC CHIP	390PF 5.00% 50V
C312	1-162-916-11	CERAMIC CHIP	12PF 5.00% 50V
C315	1-126-961-11	ELECT	2.2UF 20.00% 50V
C317	1-216-295-91	SHORT	0
C318	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C319	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C320	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C321	1-126-963-11	ELECT	4.7UF 20.00% 50V
C323	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C327	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C328	1-164-222-91	CERAMIC CHIP	0.22UF 25V
C329	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C330	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C332	1-126-933-11	ELECT	100UF 20.00% 16V
C335	1-126-947-11	ELECT	47UF 20.00% 16V
C337	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C339	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C341	1-113-619-11	CERAMIC CHIP	0.47UF 10V
C342	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C343	1-162-917-11	CERAMIC CHIP	15PF 5.00% 50V
C344	1-162-917-11	CERAMIC CHIP	15PF 5.00% 50V
C345	1-162-967-11	CERAMIC CHIP	0.0033UF 10.00% 50V
C346	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C347	1-126-933-11	ELECT	100UF 20.00% 16V
C348	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C349	1-164-346-11	CERAMIC CHIP	1UF 16V
C352	1-162-966-11	CERAMIC CHIP	0.0022UF 10.00% 50V
C353	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V
C354	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C355	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V
C356	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C357	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C358	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C359	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C360	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C361	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V
C362	1-113-619-11	CERAMIC CHIP	0.47UF 10V
C363	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C364	1-126-964-11	ELECT	10UF 20.00% 50V
C366	1-126-933-11	ELECT	100UF 20.00% 16V
C400	1-126-934-11	ELECT	220UF 20.00% 16V
C405	1-126-960-11	ELECT	1UF 20.00% 50V
C406	1-115-156-11	CERAMIC CHIP	1UF 10V
C407	1-126-934-11	ELECT	220UF 20.00% 16V
C409	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C410	1-126-933-11	ELECT	100UF 20.00% 16V
C412	1-128-551-11	ELECT	22UF 20.00% 25V
C414	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C418	1-126-933-11	ELECT	100UF 20.00% 16V
C419	1-126-964-11	ELECT	10UF 20.00% 50V
C421	1-126-964-11	ELECT	10UF 20.00% 50V

REF NO.	PART NO.	DESCRIPTION	REMARK
C422	1-126-964-11	ELECT	10UF 20.00% 50V
C425	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C430	1-126-964-11	ELECT	10UF 20.00% 50V
C435	1-126-934-11	ELECT	220UF 20.00% 16V
C500	1-126-933-11	ELECT	100UF 20.00% 16V
C501	1-104-666-11	ELECT	220UF 20.00% 25V
C502	1-104-666-11	ELECT	220UF 20.00% 25V
C503	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C504	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C505	1-123-024-21	ELECT	33UF 160V
C507	1-102-228-00	CERAMIC	470PF 10.00% 500V
C508	1-107-654-11	ELECT	33UF 20.00% 250V
C509	1-137-350-11	MYLAR	0.015UF 10.00% 100V
C510	1-106-379-12	MYLAR	0.033UF 10.00% 100V
C552	1-137-194-81	FILM	0.47UF 5.00% 50V
C554	1-163-035-00	CERAMIC CHIP	0.047UF 50V
C555	1-126-949-11	ELECT	220UF 20.00% 35V
C556	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C557	1-126-948-11	ELECT	100UF 20.00% 35V
C558	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C559	1-106-220-00	MYLAR	0.1UF 10.00% 100V
C561	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C562	1-137-401-11	MYLAR	0.22UF 10.00% 100V
C600	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C601	Δ 1-115-165-11	FILM	0.1UF 20.00% 275V
C602	1-117-751-11	ELECT(BLOCK)	220UF 20.00% 450V
C603	1-117-619-11	FILM	1000PF 3.00% 1.2KV
C604	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C605	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C606	1-104-666-11	ELECT	220UF 20.00% 25V
C607	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C608	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C609	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V
C610	1-126-948-11	ELECT	100UF 20.00% 35V
C611	1-163-145-00	CERAMIC CHIP	0.0015UF 5.00% 50V
C614	1-123-024-21	ELECT	33UF 160V
C615	1-102-228-00	CERAMIC	470PF 10.00% 500V
C616	1-126-943-11	ELECT	2200UF 20.00% 25V
C617	1-126-967-11	ELECT	47UF 20.00% 50V
C618	1-126-933-11	ELECT	100UF 20.00% 16V
C619	Δ 1-119-886-51	CERAMIC	470PF 10.00% 250V
C620	1-162-134-11	CERAMIC	470PF 10.00% 2KV
C621	1-117-703-41	CERAMIC	0.0047UF 99% 250V (KV-PG14P40 ONLY)
C623	1-119-886-51	CERAMIC	470PF 10.00% 250V
C626	1-106-383-00	MYLAR	0.047UF 10.00% 200V
C628	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V
C800	1-126-960-11	ELECT	1UF 20.00% 50V
C801	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C802	1-106-375-12	MYLAR	0.022UF 99% 200V
C803	1-102-244-00	CERAMIC	220PF 10.00% 500V
C804	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C807	1-162-115-00	CERAMIC	330PF 10.00% 2KV
C808	1-106-365-00	MYLAR	0.0082UF 10.00% 200V
C809	1-107-364-11	MYLAR	0.01UF 10.00% 200V
C810	1-106-375-12	MYLAR	0.022UF 99% 200V
C811	1-107-957-11	ELECT	1UF 20.00% 250V
C812	1-117-664-11	FILM	0.27UF 5.00% 250V
C813	1-161-754-00	CERAMIC	0.001UF 10.00% 2KV
C814	1-117-644-11	FILM	10000PF 3.00% 1.2KV
C852	1-117-661-71	FILM	0.15UF 5.00% 250V

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
C856	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C857	1-126-964-11	ELECT	10UF 20.00% 50V
C858	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C859	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C860	1-208-834-11	METAL CHIP	150K 0.5% 1/10W
C863	1-216-295-91	SHORT	0
C865	1-126-933-11	ELECT	100UF 20.00% 16V
C866	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C867	1-162-966-11	CERAMIC CHIP	0.0022UF 10.00% 50V
C868	1-162-995-11	CERAMIC CHIP	0.022UF 50V
C869	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C870	1-162-960-11	CERAMIC CHIP	220PF 10.00% 50V
C872	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C873	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C874	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C875	1-163-038-91	CERAMIC CHIP	0.1UF 25V
		<FILTER>	
CF355	1-234-686-21	FILTER, BAND PASS (F5.5C)	
		<#####>	
CLP002	4-352-844-01	PIN, LEAD, COATING (KV-PG14P10 ONLY)	
		<CONNECTOR>	
CN003	* 1-508-797-00	PIN, CONNECTOR 4P	
CN101	1-695-915-11	TAB (CONTACT) (KV-PG14P10 ONLY)	
CN200	* 1-564-506-11	PLUG, CONNECTOR 3P	
CN300	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN500	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN600	* 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
CN601	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
CN602	1-580-843-11	PIN, CONNECTOR (POWER)	
		<TRIMMER>	
CT131	1-767-774-22	TRAP, CERAMIC	
CT139	1-767-775-22	TRAP, CERAMIC	
CT355	1-795-343-21	TRAP, CERAMIC (T55B)	
		<DIODE>	
D001	8-719-083-18	DIODE SPB-25MVWF	
D004	8-719-911-19	1SS119-25	
D005	8-719-109-85	RD5.1ESB2	
D007	8-719-159-10	RD5.1SB-T2	
D009	8-719-159-10	RD5.1SB-T2	
D103	8-759-157-40	UPC574J	
D104	8-719-914-42	DA204K	
D200	8-719-914-42	DA204K	
D202	8-719-988-61	1SS355TE-17	
D203	8-719-988-61	1SS355TE-17	
D304	8-719-063-66	HZS361-TE	
D305	8-719-988-61	1SS355TE-17	
D306	8-719-109-54	RD2.2ES-B2	
D307	8-719-988-61	1SS355TE-17	
D308	8-719-988-61	1SS355TE-17	
D309	8-719-069-60	UDZSTE-179.1B	
D310	8-719-911-19	1SS119-25	
D311	8-719-070-15	NNCD8.2A-T1	

REF NO.	PART NO.	DESCRIPTION	REMARK
D312	8-719-069-60	UDZSTE-179.1B	
D314	8-719-908-03	GP08D	
D315	8-719-988-61	1SS355TE-17	
D318	8-719-988-61	1SS355TE-17	
D319	8-719-988-61	1SS355TE-17	
D320	8-719-988-61	1SS355TE-17	
D321	8-719-988-61	1SS355TE-17	
D322	8-719-069-60	UDZSTE-179.1B	
D323	8-719-069-60	UDZSTE-179.1B	
D324	8-719-069-60	UDZSTE-179.1B	
D325	8-719-069-60	UDZSTE-179.1B	
D326	8-719-988-61	1SS355TE-17 (KV-PG14P10 ONLY)	
D327	8-719-988-61	1SS355TE-17	
D329	8-719-109-89	RD5.6ESB2	
D330	8-719-109-89	RD5.6ESB2	
D400	8-719-988-61	1SS355TE-17	
D401	8-719-988-61	1SS355TE-17	
D403	8-719-069-60	UDZSTE-179.1B	
D404	8-719-069-60	UDZSTE-179.1B	
D406	8-719-069-60	UDZSTE-179.1B	
D407	8-719-069-60	UDZSTE-179.1B	
D408	8-719-069-60	UDZSTE-179.1B	
D500	8-719-911-19	1SS119-25	
D501	8-719-911-19	1SS119-25	
D502	8-719-302-43	EL1Z	
D503	8-719-302-43	EL1Z	
D504	8-719-302-43	EL1Z	
D552	8-719-908-03	GP08D	
D553	8-719-109-89	RD5.6ESB2	
D600	8-719-030-33	DIODE EG01CV1	
D601	8-719-077-77	D3SB60F3	
D602	8-719-084-25	DIODE RM2LF-C4	
D603	8-719-110-39	RD15ES-B1	
D604	8-719-063-70	D1NL20U	
D605	8-719-063-70	D1NL20U	
D606	8-719-063-70	D1NL20U	
D608	8-719-312-10	RU4AM-T3	
D609	8-719-510-73	S3L20UF4	
D800	8-719-911-19	1SS119-25	
D802	8-719-908-03	GP08D	
D803	8-719-908-03	GP08D	
D804	8-719-081-00	DIODE BY228/A52A/	
D805	8-719-069-60	UDZSTE-179.1B	
D851	8-719-979-85	EGP20G	
D853	8-719-988-61	1SS355TE-17	
D854	8-719-158-53	RD13SB2	
		<CONNECTOR>	
DY1	*1-580-798-11	CONNECTOR PIN (DY) 6P	
		<FUSE>	
F600	Δ 1-532-237-11	FUSE, TIME-LAG (BET) 3.15A/250V (KV-PG14P40 ONLY)	
		<FERRITE BEAD>	
FB001	1-410-397-21	FERRITE	1.1UH
FB100	1-239-358-21	FILTER, NOISE	
FB602	1-410-397-21	FERRITE	1.1UH

KV-PG14P10/PG14P10/G/PG14P10/L
KV-PG14P40/L/PG14P40/N
RM-952

The components identified by shading and mark Δ are critical for safety.
 Replace only with part number specified.



REF NO.	PART NO.	DESCRIPTION	REMARK
FB603	1-412-911-31	FERRITE	0UH
FB800	1-410-397-21	FERRITE	1.1UH
<IC>			
IC001	8-752-925-64	IC CXP85224A-079S	
IC002	8-759-371-21	MM1319AFBE	
IC003	8-759-672-78	M24C08-BN6(A)	
IC004	8-742-225-20	IC SBX3081-21	
IC203	6-700-036-01	IC AN5279	
IC301	6-700-145-01	IC TDA8843/N2	
IC400	6-700-033-01	IC MM1501XNRE	
IC402	8-759-100-96	UPC4558G2	
IC551	8-759-835-98	IC AN5522	
IC601	8-749-019-43	IC STR-F6706A	
IC602	8-749-920-61	SE-135N	
IC604	8-759-459-99	PQ09RD11	
IC850	8-759-700-07	NJM2903M	
IC851	8-759-100-96	UPC4558G2	
<JACK>			
J200	1-770-785-12	JACK	
J400	1-779-849-11	JACK BLOCK, PIN 4P	
J401	1-779-205-11	JACK, PIN 2P	
<CHIP CONDUCTOR>			
JR001	1-216-295-91	SHORT	0
JR003	1-216-295-91	SHORT	0
JR012	1-216-295-91	SHORT	0
JR013	1-216-295-91	SHORT	0
JR014	1-216-295-91	SHORT	0
JR015	1-216-295-91	SHORT	0
JR017	1-216-295-91	SHORT	0
JR018	1-216-295-91	SHORT	0
JR020	1-216-295-91	SHORT	0
JR035	1-216-295-91	SHORT	0
JR036	1-216-295-91	SHORT	0
JR100	1-216-295-91	SHORT	0
JR202	1-216-295-91	SHORT	0
JR212	1-216-295-91	SHORT	0
JR214	1-216-295-91	SHORT	0
JR300	1-216-295-91	SHORT	0
JR304	1-216-295-91	SHORT	0
<COIL>			
L001	1-414-855-31	INDUCTOR	1UH
L002	1-414-184-41	INDUCTOR	15UH
L100	1-414-856-11	INDUCTOR	10UH
L101	1-410-498-11	INDUCTOR	1.2UH
L102	1-410-985-42	INDUCTOR	0.22UH
L103	1-410-987-42	INDUCTOR	0.33UH
L300	1-410-511-11	INDUCTOR	15UH
L305	1-410-510-11	INDUCTOR	12UH
L308	1-410-501-11	INDUCTOR	2.2UH
L400	1-414-187-11	INDUCTOR	47UH
L500	1-408-947-00	INDUCTOR	2.2MH
L600	1-412-533-21	INDUCTOR	47UH
L800	1-406-677-11	INDUCTOR	10MH
L802	1-424-795-11	COIL, HORIZONTAL LINEARITY	
L803	1-414-493-41	INDUCTOR	4.7MH

REF NO.	PART NO.	DESCRIPTION	REMARK
<PHOTO COUPLER>			
PH600	Δ 8-749-010-64	PC123F2	
<TRANSISTOR>			
Q001	8-729-421-19	UN2213	
Q002	8-729-421-19	UN2213	
Q003	8-729-010-25	MSD601-RT1	
Q004	8-729-010-25	MSD601-RT1	
Q005	8-729-010-25	MSD601-RT1	
Q100	8-729-010-25	MSD601-RT1	
Q102	8-729-022-54	TRANSISTOR 2SC3779C,D-AA	
Q105	8-729-010-25	MSD601-RT1	
Q106	8-729-010-25	MSD601-RT1	
Q201	8-729-010-25	MSD601-RT1	
Q204	8-729-216-22	2SA1162-G	
Q205	8-729-421-22	UN2211	
Q301	8-729-010-05	MSB709-RT1	
Q303	8-729-422-27	2SD601A-Q	
Q305	8-729-010-05	MSB709-RT1	
Q309	8-729-010-25	MSD601-RT1	
Q315	8-729-010-25	MSD601-RT1	
Q318	8-729-010-25	MSD601-RT1	
Q320	8-729-421-22	UN2211	
Q400	8-729-010-05	MSB709-RT1	
Q401	8-729-424-67	UN2216	
Q404	8-729-010-05	MSB709-RT1	
Q405	8-729-010-05	MSB709-RT1	
Q406	8-729-010-25	MSD601-RT1	
Q407	8-729-010-25	MSD601-RT1	
Q500	8-729-200-17	2SA1091-O	
Q800	8-729-140-50	2SC3209LK	
Q801	8-729-055-74	TRANSISTOR 2SD2624-CA	
Q802	8-729-050-48	TRANSISTOR IRF614-005	
Q850	8-729-010-25	MSD601-RT1	
Q851	8-729-010-05	MSB709-RT1	
<RESISTOR>			
R001	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R002	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R003	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
R004	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
R005	1-216-043-91	RES-CHIP	560 5% 1/10W
R006	1-216-043-91	RES-CHIP	560 5% 1/10W
R007	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R008	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R009	1-216-037-00	RES-CHIP	330 5% 1/10W
R010	1-216-037-00	RES-CHIP	330 5% 1/10W
R011	1-216-295-91	SHORT	0
R012	1-216-049-11	RES-CHIP	1K 5% 1/10W
R013	1-216-041-00	RES-CHIP	470 5% 1/10W
R014	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R015	1-216-025-11	RES-CHIP	100 5% 1/10W
R016	1-216-037-00	RES-CHIP	330 5% 1/10W
R017	1-216-049-11	RES-CHIP	1K 5% 1/10W
R018	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R019	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R020	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R022	1-216-049-11	RES-CHIP	1K 5% 1/10W
R024	1-216-025-11	RES-CHIP	100 5% 1/10W



REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R025	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R200	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
R026	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R201	1-216-049-11	RES-CHIP	1K 5% 1/10W
R027	1-216-101-00	RES-CHIP	150K 5% 1/10W	R206	1-216-055-00	RES-CHIP	1.8K 5% 1/10W
R028	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R209	1-216-073-91	RES-CHIP	10K 5% 1/10W
R029	1-216-025-11	RES-CHIP	100 5% 1/10W	R211	1-249-409-11	CARBON	220 5% 1/4W
R031	1-216-025-11	RES-CHIP	100 5% 1/10W	R212	1-216-049-11	RES-CHIP	1K 5% 1/10W
R032	1-216-049-11	RES-CHIP	1K 5% 1/10W	R214	1-216-295-91	SHORT	0
R033	1-216-073-91	RES-CHIP	10K 5% 1/10W	R221	1-216-025-11	RES-CHIP	100 5% 1/10W
R034	1-216-073-91	RES-CHIP	10K 5% 1/10W	R222	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R035	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R240	1-216-077-91	RES-CHIP	15K 5% 1/10W
R036	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R241	1-216-077-91	RES-CHIP	15K 5% 1/10W
R037	1-216-049-11	RES-CHIP	1K 5% 1/10W	R242	1-216-073-91	RES-CHIP	10K 5% 1/10W
R038	1-216-049-11	RES-CHIP	1K 5% 1/10W	R243	1-216-073-91	RES-CHIP	10K 5% 1/10W
R039	1-216-043-91	RES-CHIP	560 5% 1/10W	R300	1-216-033-00	RES-CHIP	220 5% 1/10W
R042	1-216-039-00	RES-CHIP	390 5% 1/10W	R302	1-216-033-00	RES-CHIP	220 5% 1/10W
R043	1-216-025-11	RES-CHIP	100 5% 1/10W	R304	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R044	1-216-033-00	RES-CHIP	220 5% 1/10W	R306	1-216-039-00	RES-CHIP	390 5% 1/10W
R045	1-216-073-91	RES-CHIP	10K 5% 1/10W	R307	1-216-033-00	RES-CHIP	220 5% 1/10W
R046	1-216-685-11	METAL CHIP	27K 0.5% 1/10W	R310	1-216-039-00	RES-CHIP	390 5% 1/10W
R047	1-216-025-11	RES-CHIP	100 5% 1/10W	R311	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R048	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R312	1-216-033-00	RES-CHIP	220 5% 1/10W
R049	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R314	1-216-037-00	RES-CHIP	330 5% 1/10W
R050	1-208-820-11	METAL CHIP	39K 0.5% 1/10W	R316	1-216-031-00	RES-CHIP	180 5% 1/10W
R051	1-216-073-91	RES-CHIP	10K 5% 1/10W	R320	1-216-081-00	RES-CHIP	22K 5% 1/10W
R052	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R323	1-216-041-00	RES-CHIP	470 5% 1/10W
R053	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R327	1-216-049-11	RES-CHIP	1K 5% 1/10W
R054	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R328	1-216-025-11	RES-CHIP	100 5% 1/10W
R055	1-216-049-11	RES-CHIP	1K 5% 1/10W	R329	1-216-043-91	RES-CHIP	560 5% 1/10W
R056	1-216-049-11	RES-CHIP	1K 5% 1/10W	R330	1-216-295-91	SHORT	0
R057	1-216-025-11	RES-CHIP	100 5% 1/10W	R331	1-216-295-91	SHORT	0
R058	1-216-025-11	RES-CHIP	100 5% 1/10W	R332	1-216-295-91	SHORT	0
R059	1-216-033-00	RES-CHIP	220 5% 1/10W	R333	1-216-025-11	RES-CHIP	100 5% 1/10W
R060	1-216-033-00	RES-CHIP	220 5% 1/10W	R334	1-216-025-11	RES-CHIP	100 5% 1/10W
R061	1-216-033-00	RES-CHIP	220 5% 1/10W	R335	1-216-025-11	RES-CHIP	100 5% 1/10W
R066	1-216-049-11	RES-CHIP	1K 5% 1/10W	R336	1-216-025-11	RES-CHIP	100 5% 1/10W
R072	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R337	1-216-073-91	RES-CHIP	10K 5% 1/10W
R073	1-216-081-00	RES-CHIP	22K 5% 1/10W	R338	1-216-077-91	RES-CHIP	15K 5% 1/10W
R074	1-216-049-11	RES-CHIP	1K 5% 1/10W	R339	1-216-035-00	RES-CHIP	270 5% 1/10W
R076	1-216-025-11	RES-CHIP	100 5% 1/10W	R340	1-162-974-11	CERAMIC CHIP	0.01UF 50V
R077	1-216-025-11	RES-CHIP	100 5% 1/10W	R342	1-216-295-91	SHORT	0
R100	1-216-049-11	RES-CHIP	1K 5% 1/10W	R345	1-216-025-11	RES-CHIP	100 5% 1/10W
R103	1-211-981-11	METAL CHIP	33 0.5% 1/10W	R348	1-216-025-11	RES-CHIP	100 5% 1/10W
R106	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R350	1-216-039-00	RES-CHIP	390 5% 1/10W
R107	1-216-063-91	RES-CHIP	3.9K 5% 1/10W	R352	1-216-073-91	RES-CHIP	10K 5% 1/10W
R108	1-216-041-00	RES-CHIP	470 5% 1/10W	R353	1-216-119-00	RES-CHIP	820K 5% 1/10W
R109	1-216-019-00	RES-CHIP	56 5% 1/10W	R354	1-216-119-00	RES-CHIP	820K 5% 1/10W
R115	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R355	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R117	1-216-081-00	RES-CHIP	22K 5% 1/10W	R356	1-216-049-11	RES-CHIP	1K 5% 1/10W
R118	1-216-041-00	RES-CHIP	470 5% 1/10W	R357	1-216-101-00	RES-CHIP	150K 5% 1/10W
R119	1-216-081-00	RES-CHIP	22K 5% 1/10W	R358	1-216-025-11	RES-CHIP	100 5% 1/10W
R120	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R360	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R121	1-216-081-00	RES-CHIP	22K 5% 1/10W	R361	1-216-033-00	RES-CHIP	220 5% 1/10W
R122	1-216-109-00	RES-CHIP	330K 5% 1/10W	R362	1-216-083-00	RES-CHIP	27K 5% 1/10W
R123	1-216-081-00	RES-CHIP	22K 5% 1/10W	R363	1-216-295-91	SHORT	0
R124	1-216-081-00	RES-CHIP	22K 5% 1/10W	R364	1-216-077-91	RES-CHIP	15K 5% 1/10W
R125	1-215-925-11	METAL OXIDE	22K 5% 3W	R365	1-216-295-91	SHORT	0
R128	1-216-025-11	RES-CHIP	100 5% 1/10W	R367	1-216-099-00	RES-CHIP	120K 5% 1/10W
R129	1-211-977-11	METAL CHIP	22 0.5% 1/10W	R368	1-216-049-11	RES-CHIP	1K 5% 1/10W
R130	1-216-049-11	RES-CHIP	1K 5% 1/10W	R369	1-216-123-11	RES-CHIP	1.2M 5% 1/10W
R133	1-249-389-11	CARBON	4.7 5% 1/4W	R370	1-216-083-00	RES-CHIP	27K 5% 1/10W
				R371	1-208-820-11	METAL CHIP	39K 0.5% 1/10W

KV-PG14P10/PG14P10/G/PG14P10/L
KV-PG14P40/L/PG14P40/N
RM-952

The components identified by shading and mark Δ are critical for safety.
 Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
R374	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R376	1-216-295-91	SHORT	0
R385	1-216-295-91	SHORT	0
R386	1-216-295-91	SHORT	0
R390	1-208-822-11	METAL CHIP	47K 0.5% 1/10W
R391	1-208-822-11	METAL CHIP	47K 0.5% 1/10W
R392	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
R393	1-216-049-11	RES-CHIP	1K 5% 1/10W
R400	1-216-295-91	SHORT	0
R401	1-216-049-11	RES-CHIP	1K 5% 1/10W
R409	1-216-113-00	RES-CHIP	470K 5% 1/10W
R410	1-216-025-11	RES-CHIP	100 5% 1/10W
R411	1-216-049-11	RES-CHIP	1K 5% 1/10W
R412	1-216-049-11	RES-CHIP	1K 5% 1/10W
R413	1-216-113-00	RES-CHIP	470K 5% 1/10W
R414	1-216-049-11	RES-CHIP	1K 5% 1/10W
R415	1-216-073-91	RES-CHIP	10K 5% 1/10W
R416	1-216-073-91	RES-CHIP	10K 5% 1/10W
R417	1-216-021-00	RES-CHIP	68 5% 1/10W
R418	1-216-025-11	RES-CHIP	100 5% 1/10W
R420	1-216-049-11	RES-CHIP	1K 5% 1/10W
R421	1-216-049-11	RES-CHIP	1K 5% 1/10W
R423	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R424	1-216-091-00	RES-CHIP	56K 5% 1/10W
R425	1-211-990-11	METAL CHIP	75 0.5% 1/10W
R426	1-216-049-11	RES-CHIP	1K 5% 1/10W
R427	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R428	1-216-041-00	RES-CHIP	470 5% 1/10W
R429	1-216-073-91	RES-CHIP	10K 5% 1/10W
R430	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
R432	1-216-121-11	RES-CHIP	1M 5% 1/10W
R433	1-216-091-00	RES-CHIP	56K 5% 1/10W
R434	1-216-049-11	RES-CHIP	1K 5% 1/10W
R436	1-211-990-11	METAL CHIP	75 0.5% 1/10W
R438	1-216-049-11	RES-CHIP	1K 5% 1/10W
R440	1-216-121-11	RES-CHIP	1M 5% 1/10W
R445	1-216-089-91	RES-CHIP	47K 5% 1/10W
R447	1-216-025-11	RES-CHIP	100 5% 1/10W
R501	1-249-418-11	CARBON	1.2K 5% 1/4W
R502	1-216-371-00	METAL OXIDE	1.5 5% 2W
R503	1-216-091-00	RES-CHIP	56K 5% 1/10W
R504	1-216-091-00	RES-CHIP	56K 5% 1/10W
R505	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R506	1-260-125-11	CARBON	150K 5% 1/2W
R507	1-260-288-11	CARBON	0.47 5% 1/2W
R508	1-260-288-11	CARBON	0.47 5% 1/2W
R509	1-260-288-11	CARBON	0.47 5% 1/2W
R511	1-215-463-00	METAL	56K 1% 1/4W
R512	1-215-453-00	METAL	22K 1% 1/4W
R513	1-215-449-00	METAL	15K 1% 1/4W
R514	1-249-421-11	CARBON	2.2K 5% 1/4W
R553	1-249-385-11	CARBON	2.2 5% 1/4W
R554	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R557	1-216-655-11	METAL CHIP	1.5K 0.5% 1/10W
R558	1-216-081-00	RES-CHIP	22K 5% 1/10W
R559	1-216-089-91	RES-CHIP	47K 5% 1/10W
R563	1-216-655-11	METAL CHIP	1.5K 0.5% 1/10W
R564	1-215-865-11	METAL OXIDE	220 5% 1W
R565	1-216-350-11	METAL OXIDE	1.2 5% 1W
R567	1-208-790-11	METAL CHIP	2.2K 0.5% 1/10W

REF NO.	PART NO.	DESCRIPTION	REMARK
R568	1-215-457-00	METAL	33K 1% 1/4W
R600	1-215-915-11	METAL OXIDE	470 5% 3W
R602	1-202-962-11	CEMENTED (KV-PG14P10)	3.3 5% 10W
R602	1-205-997-11	CEMENTED (KV-PG14P40)	2.2 5% 10W
R605	1-207-615-00	METAL	0.33 10% 2W
R606	1-216-045-00	RES-CHIP	680 5% 1/10W
R608	1-260-129-11	CARBON	330K 5% 1/2W
R609	1-216-097-11	RES-CHIP	100K 5% 1/10W
R610	1-215-926-00	METAL OXIDE	33K 5% 3W
R611	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R612	1-249-419-11	CARBON	1.5K 5% 1/4W
R614	1-216-397-11	METAL OXIDE	4.7 5% 3W
R615	1-215-877-11	METAL OXIDE	22K 5% 1W
R617	1-216-049-11	RES-CHIP	1K 5% 1/10W
R619	Δ 1-218-265-11	METAL	8.2M 5% 1W
R620	1-249-389-11	CARBON	4.7 5% 1/4W
R623	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R624	1-260-125-11	CARBON	150K 5% 1/2W
R625	1-216-397-11	METAL OXIDE	4.7 5% 3W
R626	1-260-292-11	CARBON	1 5% 1/2W
R628	1-216-295-91	SHORT	0
R800	1-216-049-11	RES-CHIP	1K 5% 1/10W
R801	1-216-081-00	RES-CHIP	22K 5% 1/10W
R802	1-215-919-11	METAL OXIDE	2.2K 5% 3W
R803	1-260-332-51	CARBON	2.2K 5% 1/2W
R806	1-216-295-91	SHORT	0
R808	1-249-421-11	CARBON	2.2K 5% 1/4W
R810	1-215-886-11	METAL OXIDE	100 5% 2W
R811	1-215-911-11	METAL OXIDE	100 5% 3W
R812	1-215-919-11	METAL OXIDE	2.2K 5% 3W
R813	1-216-049-11	RES-CHIP	1K 5% 1/10W
R860	1-216-103-00	RES-CHIP	180K 5% 1/10W
R861	1-216-295-91	SHORT	0
R862	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R863	1-216-073-91	RES-CHIP	10K 5% 1/10W
R864	1-208-794-11	METAL CHIP	3.3K 0.5% 1/10W
R865	1-216-073-91	RES-CHIP	10K 5% 1/10W
R866	1-216-049-11	RES-CHIP	1K 5% 1/10W
R867	1-208-812-11	METAL CHIP	18K 0.5% 1/10W
R868	1-249-393-11	CARBON	10 5% 1/4W
R869	1-249-381-11	CARBON	1 5% 1/4W
R870	1-216-103-00	RES-CHIP	180K 5% 1/10W
R874	1-215-475-00	METAL	180K 1% 1/4W
R878	1-216-049-11	RES-CHIP	1K 5% 1/10W
R879	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R880	1-216-097-11	RES-CHIP	100K 5% 1/10W
R881	1-216-085-91	RES-CHIP	33K 5% 1/10W
R882	1-216-073-91	RES-CHIP	10K 5% 1/10W
R883	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R884	1-216-089-91	RES-CHIP	47K 5% 1/10W
R885	1-216-073-91	RES-CHIP	10K 5% 1/10W
R886	1-216-295-91	SHORT	0
R887	1-215-477-00	METAL	220K 1% 1/4W
R888	1-215-477-00	METAL	220K 1% 1/4W
R889	1-208-830-11	METAL CHIP	100K 0.5% 1/10W
S001	1-692-431-21	SWITCH, TACTILE	
S002	1-692-431-21	SWITCH, TACTILE	

<SWITCH>

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF NO.	PART NO.	DESCRIPTION	REMARK
S003	1-692-431-21	SWITCH, TACTILE	
S004	1-692-431-21	SWITCH, TACTILE	
S005	1-692-431-21	SWITCH, TACTILE	
S006	1-692-431-21	SWITCH, TACTILE	
S600	Δ 1-571-433-21	SWITCH, PUSH (AC POWER)	
S800	1-572-707-11	SWITCH, LEVER	
<#####>			
SWF100	1-577-169-12	SAWF	
<TRANSFORMER>			
T503	Δ 1-453-309-21	TRANSFORMER ASSY FLY BACK (NX-4450/M3A4)	
T600	Δ 1-431-746-11	TRANSFORMER, LINE FILTER	
T601	Δ 1-437-332-11	TRANSFORMER, CONVERTER (SRT)	
T800	1-435-374-11	TRANSFORMER, FERRITE (HDT)	
<THERMISTOR>			
THP600	1-803-744-11	THERMISTOR, POSITIVE	
<TUNER>			
TU100	8-598-591-00	TUNER, VSS BT-AG402	
<CRYSTAL>			
X001	1-577-358-21	VIBRATOR, CERAMIC	
X300	1-567-505-11	OSCILLATOR, CRYSTAL	
X301	1-567-504-11	OSCILLATOR, CRYSTAL	

	* A-1332-226-A	C BOARD MOUNTED	*****
	4-382-854-01	SCREW (M3X8), P, SW (+)	
<CAPACITOR>			
C701	1-115-350-51	CERAMIC	0.0047UF 2KV
C702	1-102-074-00	CERAMIC	0.001UF 10.00% 50V
C703	1-107-651-11	ELECT	4.7UF 20.00% 250V
C704	1-130-202-00	FILM	0.022UF 5.00% 400V
C708	1-102-114-00	CERAMIC	470PF 10.00% 50V
C709	1-102-114-00	CERAMIC	470PF 10.00% 50V
C710	1-102-114-00	CERAMIC	470PF 10.00% 50V
C712	1-102-116-00	CERAMIC	680PF 10.00% 50V
C713	1-102-117-00	CERAMIC	820PF 10.00% 50V
C714	1-102-116-00	CERAMIC	680PF 10.00% 50V
C716	1-126-933-11	ELECT	100UF 20.00% 16V
C717	1-102-106-00	CERAMIC	100PF 10.00% 50V
C718	1-126-933-11	ELECT	100UF 20.00% 16V
C719	1-102-116-00	CERAMIC	680PF 10.00% 50V
C736	1-102-114-00	CERAMIC	470PF 10.00% 50V
C737	1-102-114-00	CERAMIC	470PF 10.00% 50V
C746	1-102-114-00	CERAMIC	470PF 10.00% 50V

REF NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>			
CN701	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN702	1-695-915-11	TAB (CONTACT)	
CN703	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN704	1-695-915-11	TAB (CONTACT)	
<DIODE>			
D701	8-719-911-19	ISS119-25	
D702	8-719-911-19	ISS119-25	
D703	8-719-911-19	ISS119-25	
D707	8-719-911-19	ISS119-25	
D708	8-719-911-19	ISS119-25	
D709	8-719-911-19	ISS119-25	
D716	8-719-911-19	ISS119-25	
D717	8-719-070-16	NNCD9.1A-T1	
<JACK>			
J701	Δ 1-540-071-22	SOCKET, CRT	
<COIL>			
L701	1-412-529-11	INDUCTOR	22UH
L706	1-414-191-11	INDUCTOR	150UH
<TRANSISTOR>			
Q704	8-729-326-11	2SC2611	
Q705	8-729-326-11	2SC2611	
Q706	8-729-326-11	2SC2611	
Q707	8-729-200-17	2SA1091-O	
Q708	8-729-200-17	2SA1091-O	
Q709	8-729-200-17	2SA1091-O	
Q710	8-729-119-78	2SC2785-HFE	
Q711	8-729-119-78	2SC2785-HFE	
Q712	8-729-119-78	2SC2785-HFE	
<RESISTOR>			
R703	1-219-752-11	CARBON	100K 5% 1/2W
R705	1-216-365-00	METAL OXIDE	0.47 5% 2W
R710	1-216-486-00	METAL OXIDE	8.2K 5% 3W
R711	1-260-103-11	CARBON	2.2K 5% 1/2W
R712	1-216-486-00	METAL OXIDE	8.2K 5% 3W
R713	1-260-105-11	CARBON	3.3K 5% 1/2W
R714	1-216-486-00	METAL OXIDE	8.2K 5% 3W
R715	1-260-105-11	CARBON	3.3K 5% 1/2W
R716	1-249-417-11	CARBON	1K 5% 1/4W
R717	1-249-417-11	CARBON	1K 5% 1/4W
R718	1-249-417-11	CARBON	1K 5% 1/4W
R725	1-249-424-11	CARBON	3.9K 5% 1/4W
R726	1-249-424-11	CARBON	3.9K 5% 1/4W
R727	1-249-424-11	CARBON	3.9K 5% 1/4W
R728	1-249-408-11	CARBON	180 5% 1/4W
R729	1-249-408-11	CARBON	180 5% 1/4W
R730	1-249-408-11	CARBON	180 5% 1/4W
R731	1-249-399-11	CARBON	33 5% 1/4W
R732	1-249-399-11	CARBON	33 5% 1/4W
R733	1-249-399-11	CARBON	33 5% 1/4W
R734	1-219-743-11	CARBON	100 5% 1/2W
R738	1-247-807-31	CARBON	100 5% 1/4W

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.



REF NO.	PART NO.	DESCRIPTION	REMARK
R739	1-247-807-31	CARBON	100 5% 1/4W
R740	1-247-807-31	CARBON	100 5% 1/4W
<VARIABLE RESISTOR>			
RV702	1-241-656-11	RES, ADJ, METAL FILM 110M	

* A-1241-499-A	F BOARD MOUNTED (KV-PG14P10 ONLY)		*****
1-533-223-11	CLIP, FUSE		
<CAPACITOR>			
C4601	\triangle 1-115-165-11	FILM	0.1UF 20.00% 275V
C4602	\triangle 1-117-703-11	CERAMIC	0.0047UF 99% 250V
<CONNECTOR>			
CN4601	1-580-843-11	PIN, CONNECTOR (POWER)	
CN4602	1-580-843-11	PIN, CONNECTOR (POWER)	
CN4603	1-695-915-11	TAB (CONTACT)	
<FUSE>			
F4601	\triangle 1-532-237-00	FUSE, CYLINDRICAL (TIME-LAG)	3.15A/250V
<RESISTOR>			
R4601	\triangle 1-202-719-00	SOLID	1M 10% 1/2W

REF NO.	PART NO.	DESCRIPTION	REMARK
<TRANSFORMER>			
T4601	\triangle 1-431-182-11	TRANSFORMER, LINE FILTER	
T4602	\triangle 1-431-182-11	TRANSFORMER, LINE FILTER	
<VARISTOR>			
VDR461	1-803-830-11	VARISTOR (ERZV14D621)	

ACCESSORIES AND PACKING MATERIALS			

* 4-377-015-01	BAG, PROTECTION		
* 4-083-188-01	CUSHION, LOWER		
* 4-083-189-01	CUSHION, UPPER		
* 4-084-391-01	INDIVIDUAL CARTON		
1-501-372-81	ANTENNA, TELESCOPIC (KV-PG14P10)		
1-417-151-21	MATCHING TRANSFORMER, ANTENNA (KV-PG14P10)		

REMOTE COMMANDER			

1-418-163-51	REMOTE COMMANDER (RM-952)		
9-939-697-01	BATTERY COVER REMOTE COMMANDER		