

# TOSHIBA


FILE NO. 050-200504  
(MFR'S VERSION A)

## SERVICE MANUAL

## COLOR TELEVISION

# *20AF45*

# *20AF45C*

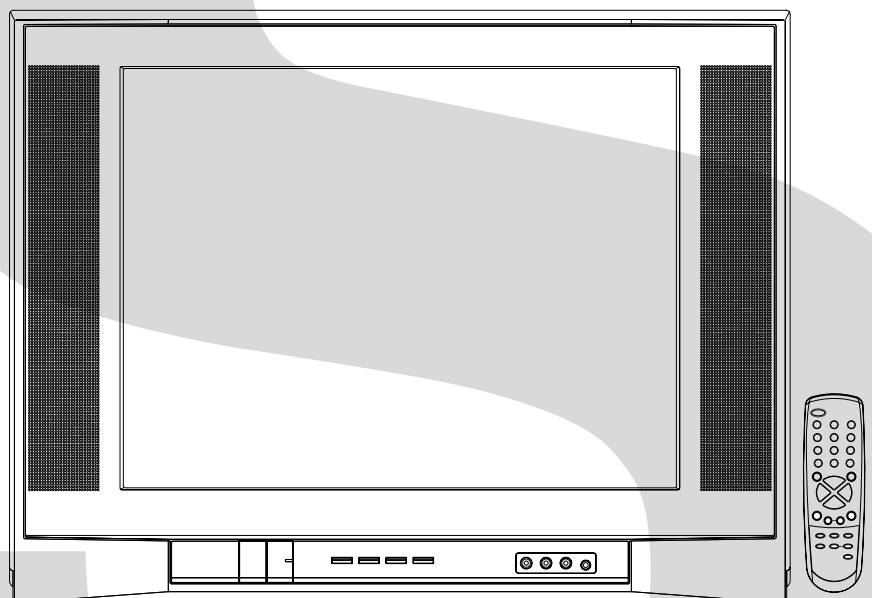

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Headphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Befor applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

## ABOUT LEAD FREE SOLDER (PbF)

### Distinction of PbF PCB:

PCBs (manufactured) using lead free solder will have a PbF printing on the PCB.  
(Please refer to figures.)



### Caution:

- Pb free solder has a higher melting point than standard solder;  
Typically the melting point is 50°F~70°F(30°C~40°C) higher.  
Please use a soldering iron with temperature control and adjust it to 650°F ± 20°F (350°C ± 10°C).  
In case of using high temperature soldering iron, please be careful not to heat too long.
- Pb free solder will tend to splash when heated too high (about 1100°F/ 600°C).
- All products with the printed circuit board with PbF printing must be serviced with lead free solder.  
When soldering or unsoldering, completely remove all of the solder from the pins or solder area,  
and be sure to heat the soldering points with the lead free solder until it melts sufficiently.

### Recommendations

Recommended lead free solder composition is Sn-3.0Ag-0.5Cu.

# TABLE OF CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>IMPORTANT</b> .....	A1-1
<b>ABOUT LEAD FREE SOLDER (PbF)</b> .....	A1-2
<b>TABLE OF CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-10
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP .....	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C-1
<b>CONFIRMATION OF HOURS USED</b> .....	C-1
<b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....	C-1
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-6
<b>BLOCK DIAGRAMS</b> .....	E-1, E-2
<b>PRINTED CIRCUIT BOARDS</b>	
MAIN/CRT .....	F-1~F-4
<b>SCHEMATIC DIAGRAMS</b>	
MICON .....	G-1, G-2
CHROMA .....	G-3, G-4
DEFLECTION .....	G-5, G-6
POWER .....	G-7, G-8
SOUND .....	G-9, G-10
TUNER/STEREO .....	G-11, G-12
COMB/FILTER/AV .....	G-13, G-14
CRT .....	G-15, G-16
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEWS</b> .....	I-1, I-2
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1, J1-2
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1~J2-8

# GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	20 inch / 508mmV	
			CRT Type	Flat	
			Magnetic Field	BV/BH	+0.45G/0.18G
			Color System		NTSC
			Speaker		2 Speaker
				Position	Front Side
				Size	2 x 4.7 Inch
				Impedance	8 ohm
				Sound Output	MAX 2.5+2.5 W
					10%(Typical) - W
		NTSC3.58+4.43 / PAL60Hz		No	
G-2	Tuning System	Broadcasting System		US System M	
		Tuner and Receive CH	System	1Tuner	
			Destination	USA(W/ CATV)	
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84	
		Intermediate Frequency	Picture(FP)	45.75MHz	
			Sound(FS)	41.25MHz	
			FP-FS	4.50MHz	
			Preset CH		No
G-3	Power	Power Source	AC	120V AC 60Hz	
			DC		
		Power Consumption		at AC	
			Stand by (at AC)		105 W at AC 120 V 60 Hz
			Per Year		3 W at AC 120 V 60 Hz
				-- kWh/Year	
	Protector	Power Fuse		Yes	
		Safety Circuit		Yes	
		IC Protector(Micro Fuse)		No	
G-4	Regulation	Safety		UL	
		Radiation		FCC	
		X-Radiation		DHHS	
G-5	Temperature	Operation		+5oC ~ +40oC	
		Storage		-20oC ~ +60oC	
G-6	Operating Humidity			Less than 80% RH	

# GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes		
		Menu Type		Icon		
		Picture		Yes		
				Contrast		Yes
				Brightness		Yes
				Color		Yes
				Tint		Yes
				Sharpness		Yes
				Sound		Yes
				Bass		Yes
				Treble		Yes
				Balance		Yes
				BBE On/Off		No
				Stable Sound On/Off		Yes
				Surround On/Off		Yes
				Set Up		Yes
				TV/CATV		Yes
				Auto CH Memory		Yes
				Add/ Delete		Yes
				Option		Yes
				Language		Yes
				CH Label		Yes
				Favorite CH		Yes
				V-Chip		Yes
				Lock		Yes
				On/Off Timer		Yes
				Color Stream DVD/DTV		Yes
				Control Level		Yes
				Volume		Yes
				Brightness		Yes
				Contrast		Yes
				Color		Yes
				Tint		Yes
		Sharpness		Yes		
		Tuning		No		
		Bass		Yes		
		Treble		Yes		
		Balance		Yes		
		Back Light		No		
		Stereo,Audio Output,SAP		Yes		
		Video		Yes		
		Color Stream		Yes		
		Channel(TV/Cable)		Yes		
		CH Label		Yes		
		Game Timer		Yes		
		Sleep Timer		Yes		
		Sound Mute		Yes		
		V-chip Rating		Yes		
		16: 9		Yes		
G-8	OSD Language			English French Spanish		
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min		
			Step	__10__Min		
		On/Off Timer	Program(On Timer / Off Timer / Clock)	Yes		
		Wake Up Timer		No		
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec		

# GENERAL SPECIFICATIONS

<b>G-10</b>	<b>Remote Control</b>	Unit	RC-GQ		
		Glow in Dark Remocon	Yes		
		Format	Toshiba		
		Remocon Format	Toshiba		
		Custom Code	TV:40-BF h		
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs	
		Total Keys		30 Keys	
		Keys	Power	Yes	
			1	Yes	
			2	Yes	
			3	Yes	
			4	Yes	
			5	Yes	
			6	Yes	
			7	Yes	
			8	Yes	
			9	Yes	
			0	Yes	
			100	Yes	
			CH Up	Yes	
			CH Down	Yes	
			Volume Up	Yes	
			Volume Down	Yes	
			Cap/Text(TV/Caption/Text)	Yes	
			1/2(CH1/CH2)	Yes	
			TV/Video(TV/AV)	Yes	
			CH RTN(Quick View)	Yes	
			Sleep	Yes	
			RECall(Call)	Yes	
			Reset	Yes	
			Menu/Enter	Yes	
			Mute	Yes	
			Exit	Yes	
			MTS(Audio Select)	Yes	
			Fav.Up	Yes	
			Fav.Down	Yes	
			16: 9	Yes	
			Multi Brand Keys	CH Up(VCR)	No
				CH Down(VCR)	No
				Pause/Still	No
				TV/VCR(VCR)	No
				FF	No
				Rew	No
		Rec		No	
		Play		No	
		Stop		No	
		TV		No	
		VCR		No	
		Cable		No	
		DVD		No	
CODE	No				
DVD MENU <	No				
DVD MENU >	No				
DVD CLEAR	No				
TOP MENU	No				
DVD MENU	No				

## GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA, Toshiba Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	Yes 2 Lines
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
G-12	Accessories	Owner's Manual	Language W/ Warranty
		Remote Control Unit	English/Spanish
		Rod Antenna	No
		Loop Antenna	No
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes UM size x pcs UM-4 x 2
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	Yes
		PTB Sheet	No
		ESP Card	No
		300 ohm to 75 ohm Antenna Adapter	No

# GENERAL SPECIFICATIONS

<b>G-13</b>	<b>Interface</b>	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Rear	AC/DC
		TV/CATV Selector	No		
		Degauss	No		
		Main Power SW	No		
		Indicator	Power	Yes(RED)	
			Stand-by	No	
			On Timer	No	
		Terminals	Front	Video Input = VIDEO2	RCA
				Audio Input = VIDEO2	RCA x 2
				Other Terminal	Head Phone
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	No
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	No
				Video Output	No
				Audio Output	No
				Euro Scart	No
				Color Stream	RCA x 3
				S Input	Yes
Diversity	No				
Ext Speaker	No				
DC Jack 12V(Center +)	No				
VHF/UHF Antenna Input	F Type				
AC Outlet	No				
<b>G-14</b>	<b>Set Size</b>	Approx. W x D x H (mm)		<u>590</u> x <u>484</u> x <u>446.5</u>	
<b>G-15</b>	<b>Weight</b>	Net (Approx.)		<u>23 kg</u> ( <u>50.6 lbs</u> )	
		Gross (Approx.)		<u>26.5 kg</u> ( <u>58.3 lbs</u> )	
<b>G-16</b>	<b>Carton</b>	Master Carton	Content	No	
			Material	--- Sets	
			Dimensions W x D x H(mm)	-- /--	
			Description of Origin	No	
		Gift Box	Material	Double/Brown	
			Dimensions W x D x H(mm)	<u>695</u> x <u>575</u> x <u>549</u>	
			Description of Origin	Yes	
		Drop Test	Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces		
			Height (cm)	60 (ORION SPEC:46)	
			Container Stuffing	<u>272</u> Sets/40' container	
<b>G-17</b>	<b>Cabinet Material</b>	Cabinet	Cabinet Front	PS 94V0 DECABROM	
			Cabinet Rear	PS 94V0 DECABROM	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
<b>G-18</b>	<b>Environment</b>	Pb-free Soldering	Yes		
		Parts Specification(Phase3 : based on RoHS)	Yes		

## GENERAL SPECIFICATIONS

<b>G-1</b>	<b>TV System</b>	CRT	CRT Size / Visual Size	20 inch / 508mmV
			CRT Type	Flat
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
			Position	Front Side
			Size	2 x 4.7 Inch
			Impedance	8 ohm
		Sound Output	MAX	2.5+2.5 W
			10%(Typical)	- W
		NTSC3.58+4.43 /PAL60Hz	No	
<b>G-2</b>	<b>Tuning System</b>	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CATV)
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
	Stereo/Dual TV Sound	Yes		
	Tuner Sound Muting	Yes		
<b>G-3</b>	<b>Power</b>	Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption		at AC
			Stand by (at AC)	<u>105 W at AC 120 V 60 Hz</u>
			Per Year	<u>3 W at AC 120 V 60 Hz</u> <u>-- kWh/Year</u>
	Protector	Power Fuse	Yes	
		Safety Circuit	Yes	
		IC Protector(Micro Fuse)	No	
<b>G-4</b>	<b>Regulation</b>	Safety		CSA
		Radiation		IC
		X-Radiation		HWC
<b>G-5</b>	<b>Temperature</b>	Operation		+5oC ~ +40oC
		Storage		-20oC ~ +60oC
<b>G-6</b>	<b>Operating Humidity</b>			Less than 80% RH

# GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Menu Type	Yes		
			Picture	Icon		
			Contrast	Yes		
			Brightness	Yes		
			Color	Yes		
			Tint	Yes		
			Sharpness	Yes		
			Sound	Yes		
			Bass	Yes		
			Treble	Yes		
			Balance	Yes		
			BBE On/Off	No		
			Stable Sound On/Off	Yes		
			Surround On/Off	Yes		
			Set Up	Yes		
			TV/CATV	Yes		
			Auto CH Memory	Yes		
			Add/ Delete	Yes		
			Option	Yes		
			Language	Yes		
			CH Label	Yes		
			Favorite CH	Yes		
			V-Chip	No		
			Lock	Yes		
			On/Off Timer	Yes		
			Color Stream DVD/DTV	Yes		
			Control Level	Yes		
			Volume	Yes		
			Brightness	Yes		
			Contrast	Yes		
			Color	Yes		
			Tint	Yes		
			Sharpness	Yes		
Tuning	No					
Bass	Yes					
Treble	Yes					
Balance	Yes					
Back Light	No					
Stereo,Audio Output,SAP	Yes					
Video	Yes					
Color Stream	Yes					
Channel(TV/Cable)	Yes					
CH Label	Yes					
Game Timer	Yes					
Sleep Timer	Yes					
Sound Mute	Yes					
V-chip Rating	No					
16: 9	Yes					
G-8	OSD Language		English	French	Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min		
			Step	10 Min		
		On/Off Timer	Program(On Timer / Off Timer / Clock)	Yes		
		Wake Up Timer		No		
	Timer Back-up (at Power Off Mode)	more than	--	Min	Sec	

# GENERAL SPECIFICATIONS

<b>G-10</b>	<b>Remote Control</b>	Unit	RC-GQ	
		Glow in Dark Remocon	Yes	
		Format	Toshiba	
		Remocon Format	Toshiba	
		Custom Code	TV:40-BF h	
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs
		Total Keys		30 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	Yes
			CH Up	Yes
			CH Down	Yes
			Volume Up	Yes
			Volume Down	Yes
			Cap/Text(TV/Caption/Text)	Yes
			1/2(CH1/CH2)	Yes
			TV/Video(TV/AV)	Yes
			CH RTN(Quick View)	Yes
			Sleep	Yes
			RECall(Call)	Yes
			Reset	Yes
			Menu/Enter	Yes
			Mute	Yes
			Exit	Yes
			MTS(Audio Select)	Yes
			Fav.Up	Yes
			Fav.Down	Yes
			16: 9	Yes
			Multi Brand Keys	
			CH Up(VCR)	No
			CH Down(VCR)	No
			Pause/Still	No
			TV/VCR(VCR)	No
			FF	No
			Rew	No
			Rec	No
			Play	No
			Stop	No
			TV	No
			VCR	No
			Cable	No
	DVD	No		
	CODE	No		
	DVD MENU <	No		
	DVD MENU >	No		
	DVD CLEAR	No		
	TOP MENU	No		
	DVD MENU	No		

## GENERAL SPECIFICATIONS

<b>G-11</b>	<b>Features</b>	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	No
		Type	- Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	Yes 2 Lines
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
<b>G-12</b>	<b>Accessories</b>	Owner's Manual	Language W/ Warranty
		Remote Control Unit	English / French Yes
		Rod Antenna	No
		Poles Terminal	
		Loop Antenna	No
		Terminal	-
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes UM-4 x 2
		UM size x pcs OEM Brand	No
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	No
PTB Sheet	No		
ESP Card	No		
300 ohm to 75 ohm Antenna Adapter	No		

# GENERAL SPECIFICATIONS

<b>G-13</b>	<b>Interface</b>	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
			Rear	Volume Up	Yes
				Volume Down	Yes
				AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator	Power	Yes(RED)	
			Stand-by	No	
			On Timer	No	
		Terminals	Front	Video Input = VIDEO2	RCA
				Audio Input = VIDEO2	RCA x 2
				Other Terminal	Head Phone
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	No
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	No
				Video Output	No
				Audio Output	No
Euro Scart	No				
Color Stream	RCA x 3				
S Input	Yes				
Diversity	No				
Ext Speaker	No				
DC Jack 12V(Center +)	No				
VHF/UHF Antenna Input	F Type				
AC Outlet	No				
<b>G-14</b>	<b>Set Size</b>			Approx. W x D x H (mm)	
<b>G-15</b>	<b>Weight</b>	Net (Approx.)		<u>23 kg ( 50.6 lbs)</u>	
		Gross (Approx.)		<u>26.5 kg ( 58.3 lbs)</u>	
<b>G-16</b>	<b>Carton</b>	Master Carton		No	
			Content	--- Sets	
			Material	-- /--	
			Dimensions W x D x H(mm)	-- x -- x --	
		Gift Box	Description of Origin	No	
			Material	Double/Brown	
			Dimensions W x D x H(mm)	<u>695 x 575 x 549</u>	
		Drop Test	Description of Origin	Yes	
				Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces	
			Height (cm)	60 (ORION SPEC:46)	
<b>G-17</b>	<b>Cabinet Material</b>	Cabinet	Cabinet Front	PS 94V0 DECABROM	
			Cabinet Rear	PS 94V0 DECABROM	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
<b>G-18</b>	<b>Environment</b>	Pb-free Soldering	Yes		
		Parts Specification(Phase3 : based on RoHS)	Yes		

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP


Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.


### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

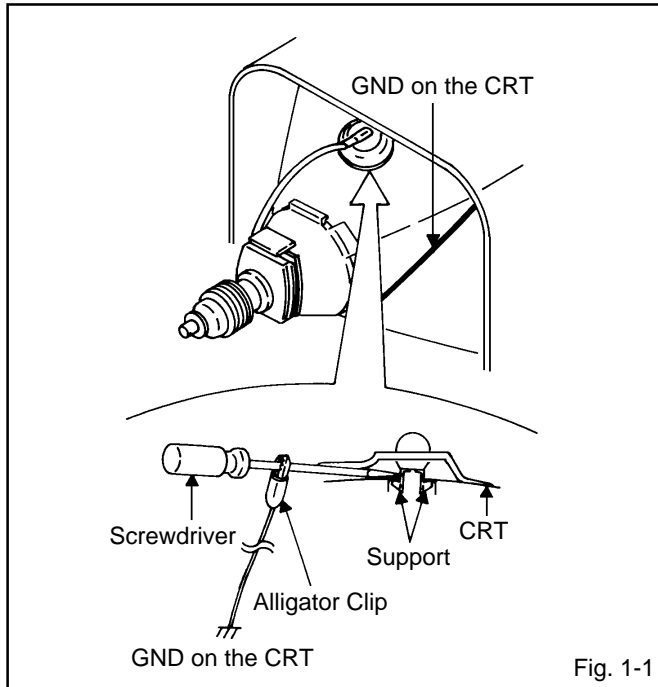

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

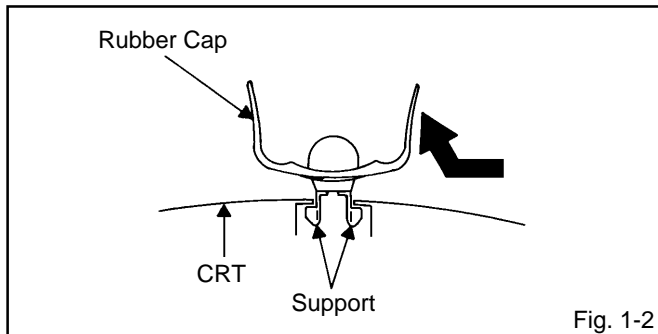


3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION


1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

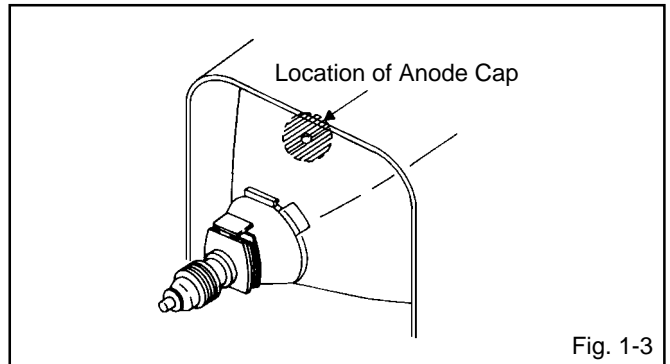


### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

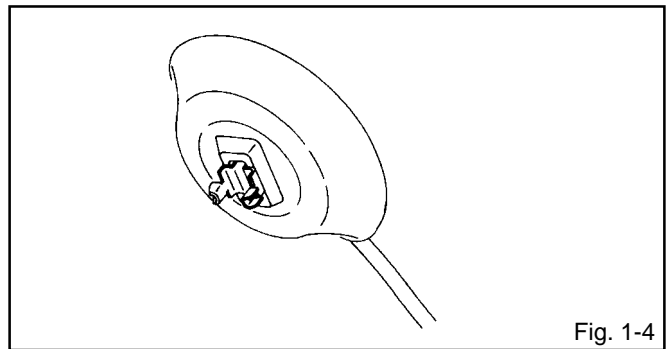

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

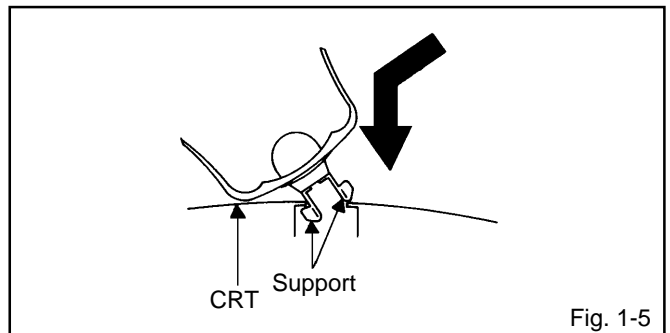

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

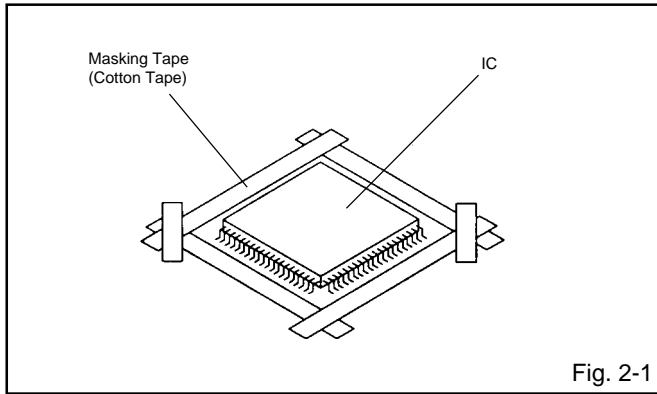

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not rotate or move the IC back and forth, until IC can move back and forth easily after desoldering the leads completely.

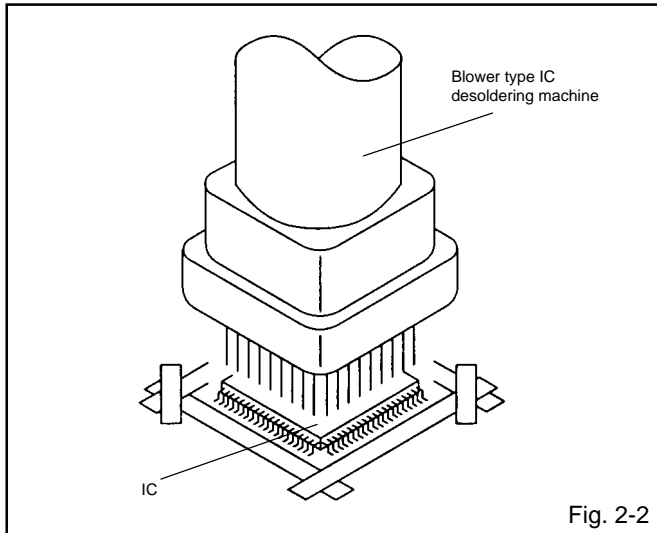

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE

Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

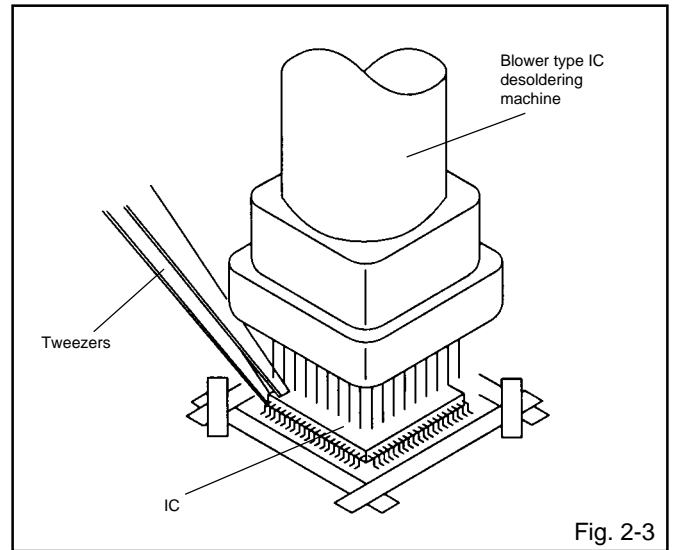


4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

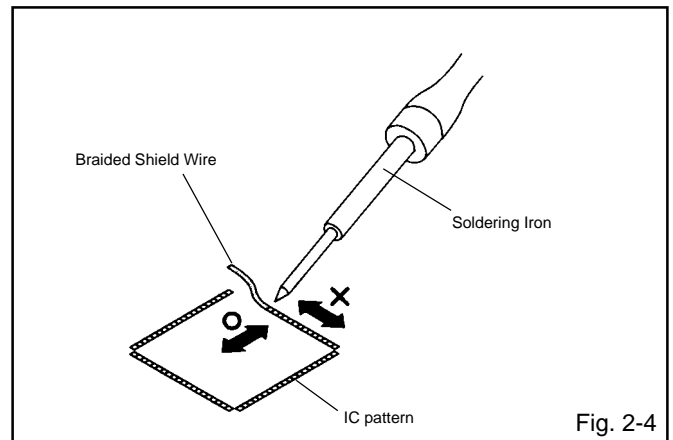


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

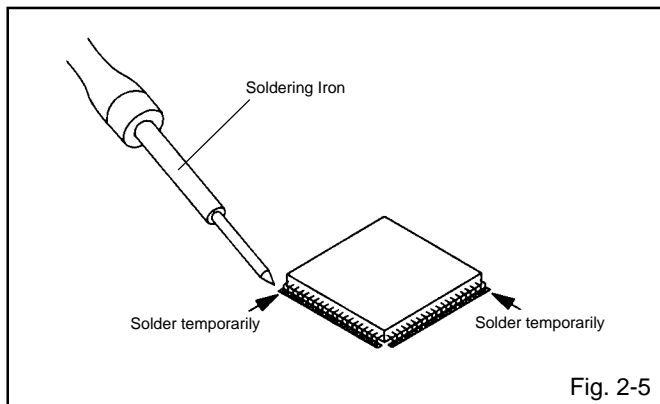


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

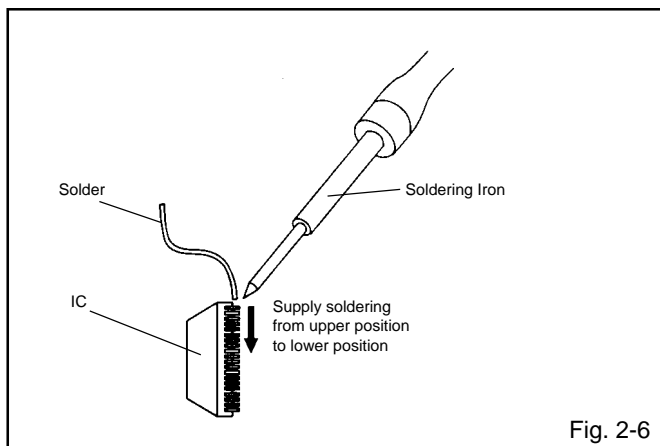


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

### NOTE

Do not absorb the solder to excess.

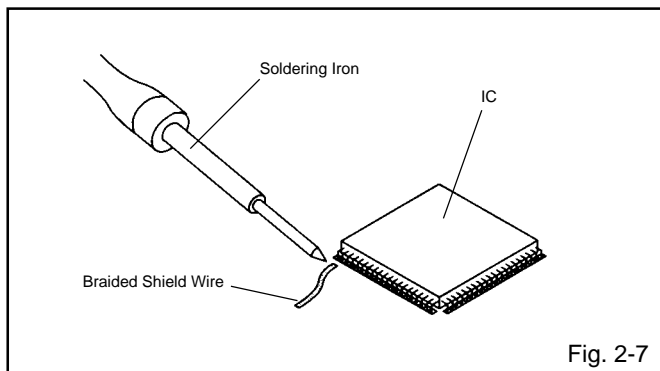

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

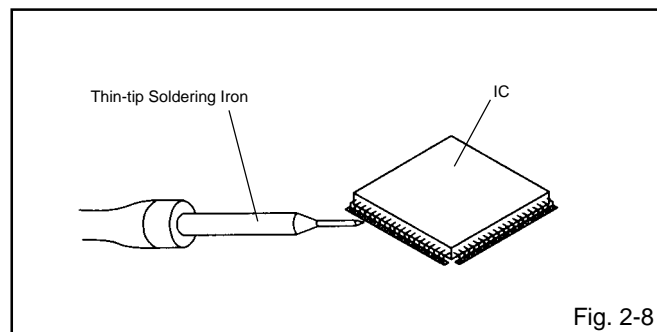

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

## SERVICE MODE LIST

This unit is provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter to the Service Mode, press both set key and remote control key for more than 2 seconds.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of factory data. NOTE: Do not use this for normal servicing. If you set factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

### CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

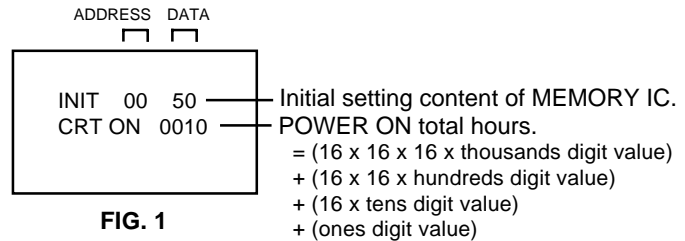

### WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: No need to set data after position INI 1F due to the adjustment value.**

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	E8	0A	45	5E	B3	24	B5	*1	AC	0B	84	40	40	40	7F
10	50	00	00	00	03	00	00	00	3F	0F	0D	E2	94	88	3F	00

\*1

INI	USA	CANADA
08	3B	3A

**Table 1**

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.  
**After the data input, set to the initializing of shipping.**
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button (1) on the remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in Fig. 1-1.

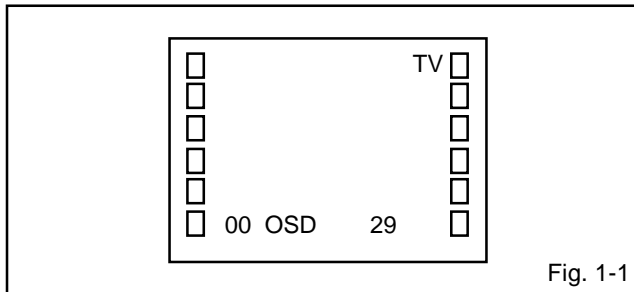


Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	18	CONTRAST MAX
01	CUT OFF	19	CONTRAST CENT
02	H. VCO	20	CONTRAST MIN
03	H. PHASE	21	COLOR MAX
04	AFC GAIN	22	COLOR CENTER
05	V. SHIFT	23	COLOR MIN
06	H. SIZE	24	TINT
07	V. SIZE	25	SHARPNESS
08	V. LINERITY	26	CB DL
09	VS CORRECTION	27	CR DL
10	R DRIVE	28	CB PED
11	B DRIVE	29	CR PED
12	R BIAS	30	PARABOLA
13	G BIAS	31	CORNER
14	B BIAS	32	TRAPWZIUM
15	BRIGHT MAX	33	LEVEL
16	BRIGHT CENT	34	SEPARATION1
17	BRIGHT MIN	35	SEPARATION2

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: CONSTANT VOLTAGE

1. Place the set in AV MODE without signal.
2. Connect the digital voltmeter to the TP003.
3. Adjust the VR502 until the digital voltmeter is  $113 \pm 0.5V$ .

### 2-2: CUT OFF

1. Place the set in Aging Test for more than 15 minutes.
2. Set condition is AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "CUT OFF".
5. Adjust the Screen Volume until a dim raster is obtained.

### 2-3: WHITE BALANCE, WHITE BALANCE CS

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set in Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator with Brust On.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (12) on the remote control to select "R. BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R. BIAS", "G. BIAS", "B. BIAS", "B. DRIVE" or "R. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, B. DRIVE and R. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.
8. Press the TV/VIDEO button on the remote control to set to the CS mode.
9. Receive the gray scale pattern from the Pattern Generator or with Brust On.
10. If the picture is too much green. Activate the adjustment mode display of Fig. 1-1 and press the channel button (28) on the remote control to select "CB PED".
11. Adjust the VOL. UP/DOWN button on the remote control to select the step up.
12. If the picture is too much red. Activate the adjustment mode display of Fig. 1-1 and press the channel button (29) on the remote control to select "CR PED".
13. Adjust the VOL. UP/DOWN button on the remote control to select the step down.


### 2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

# ELECTRICAL ADJUSTMENTS

## 2-5: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.  
(Refer to Fig. 2-1)

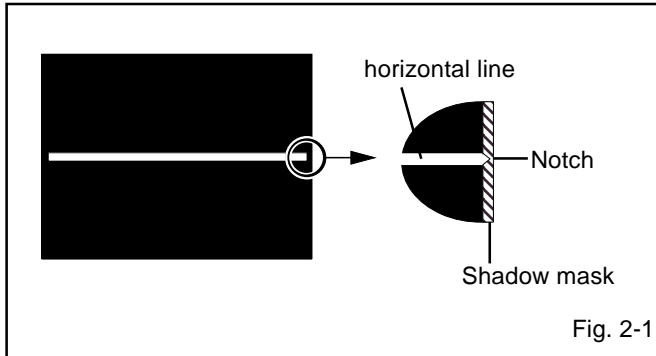

## 2-6: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(07)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $9 \pm 2\%$ .

## 2-7: VERTICAL LINEARITY

**NOTE:** Adjust after performing adjustments in section 2-6. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness, contrast, to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(08)** on the remote control to select "V. LINEARITY".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

## 2-8: LEVEL

1. Connect the AC voltmeter to **pin 6 of CP101**.
2. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(33)** on the remote control to select "LEVEL".
3. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is  $85 \pm 2mV$ .

## 2-9: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(03)** on the remote control to select "H.PHASE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

## 2-10: CONTRAST MAX

1. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(18)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "95".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.
5. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 1~3.

## 2-11: SEPARATION 1, 2

**Please do the method (1) or method (2) adjustment.**

### Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **pin 6 and pin 7 of CP101**.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(34)** on the remote control to select "SEP 1".
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.


### Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch=Non input and receive the RF.
2. Connect the oscilloscope to the **pin 6 of CP101**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(34)** on the remote control to select "SEP 1".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **pin 7 of CP101**.
8. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(35)** on the remote control to select "SEP 2".
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum. The output difference of the between with Filter and without Filter should be more than 25db for both L and R.

# ELECTRICAL ADJUSTMENTS

## 2-12: OSD POSITION

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-2**)

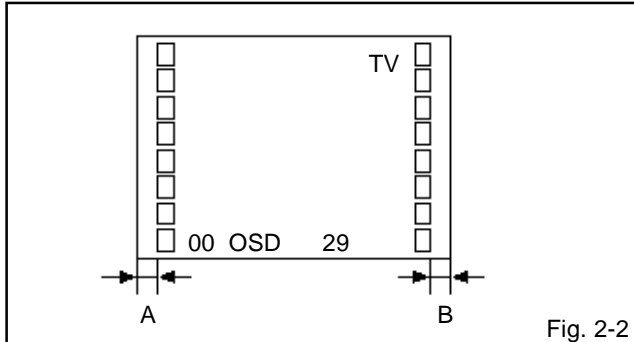


## 2-13: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible.
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "80".


## 2-14: COLOR CENT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COLOR CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $120 \pm 5\%$  of the white level. (**Refer to Fig. 2-3**)
7. Receive the video color bar pattern. (Audio Video Input)
8. Place the set in AV mode. Then perform the above adjustments 2~6.
9. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~4.
10. Press the VOL. UP/DOWN button on the remote control until the color step No. becomes "66".

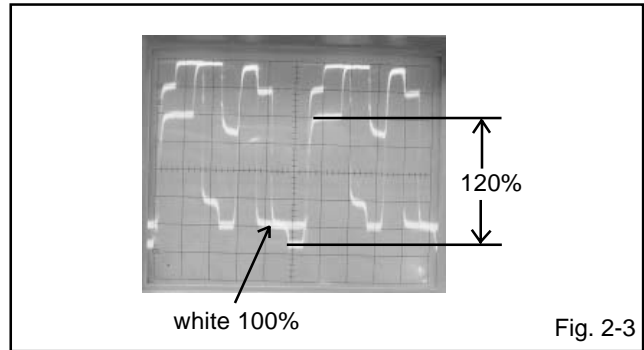

## 2-15: TINT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line. (**Refer to Fig. 2-4**)
6. Receive the video color bar pattern. (Audio Video Input)
7. Place the set in AV mode. Then perform the above adjustments 2~5.
8. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~4.
9. Press the VOL. UP/DOWN button on the remote control until the tint step No. becomes "52".

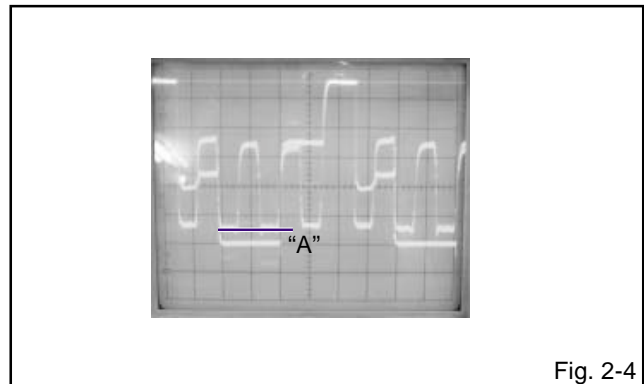

## ELECTRICAL ADJUSTMENTS

### 2-16: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	CS
02	H.VCO	03	03	03
04	AFC GAIN	07	07	07
05	V.SHIFT	02	02	02
06	H.SIZE	01	01	01
09	VS CORRECTION	34	34	34
15	BRI.MAX	125	125	125
17	BRI.MIN	75	75	75
19	CONT.CENT	50	50	50
20	CONT.MIN	18	18	18
21	COL.MAX	90	90	90
23	COL.MIN	00	00	00
25	SHARPNESS	40	40	40
26	CB DL	00	00	00
27	CR DL	00	00	00
30	PARABOLA	31	31	31
31	CORNER	31	31	31
32	TRAPEZIUM	31	31	31

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

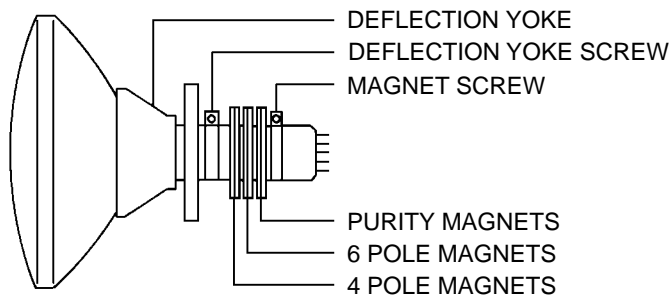


Fig. 3-1

### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


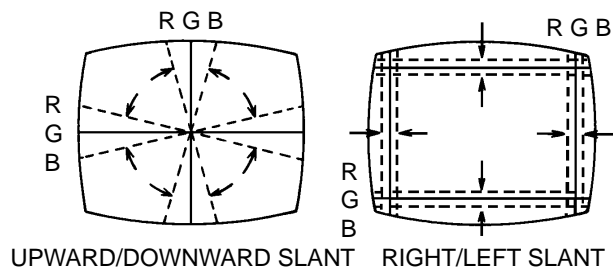


Fig. 3-2-a

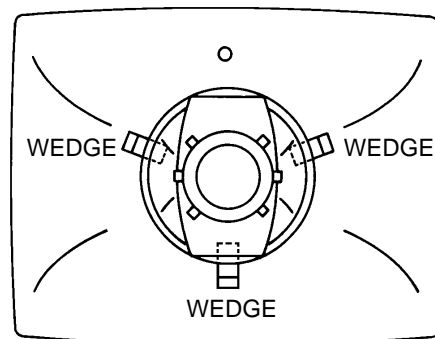


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS

## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

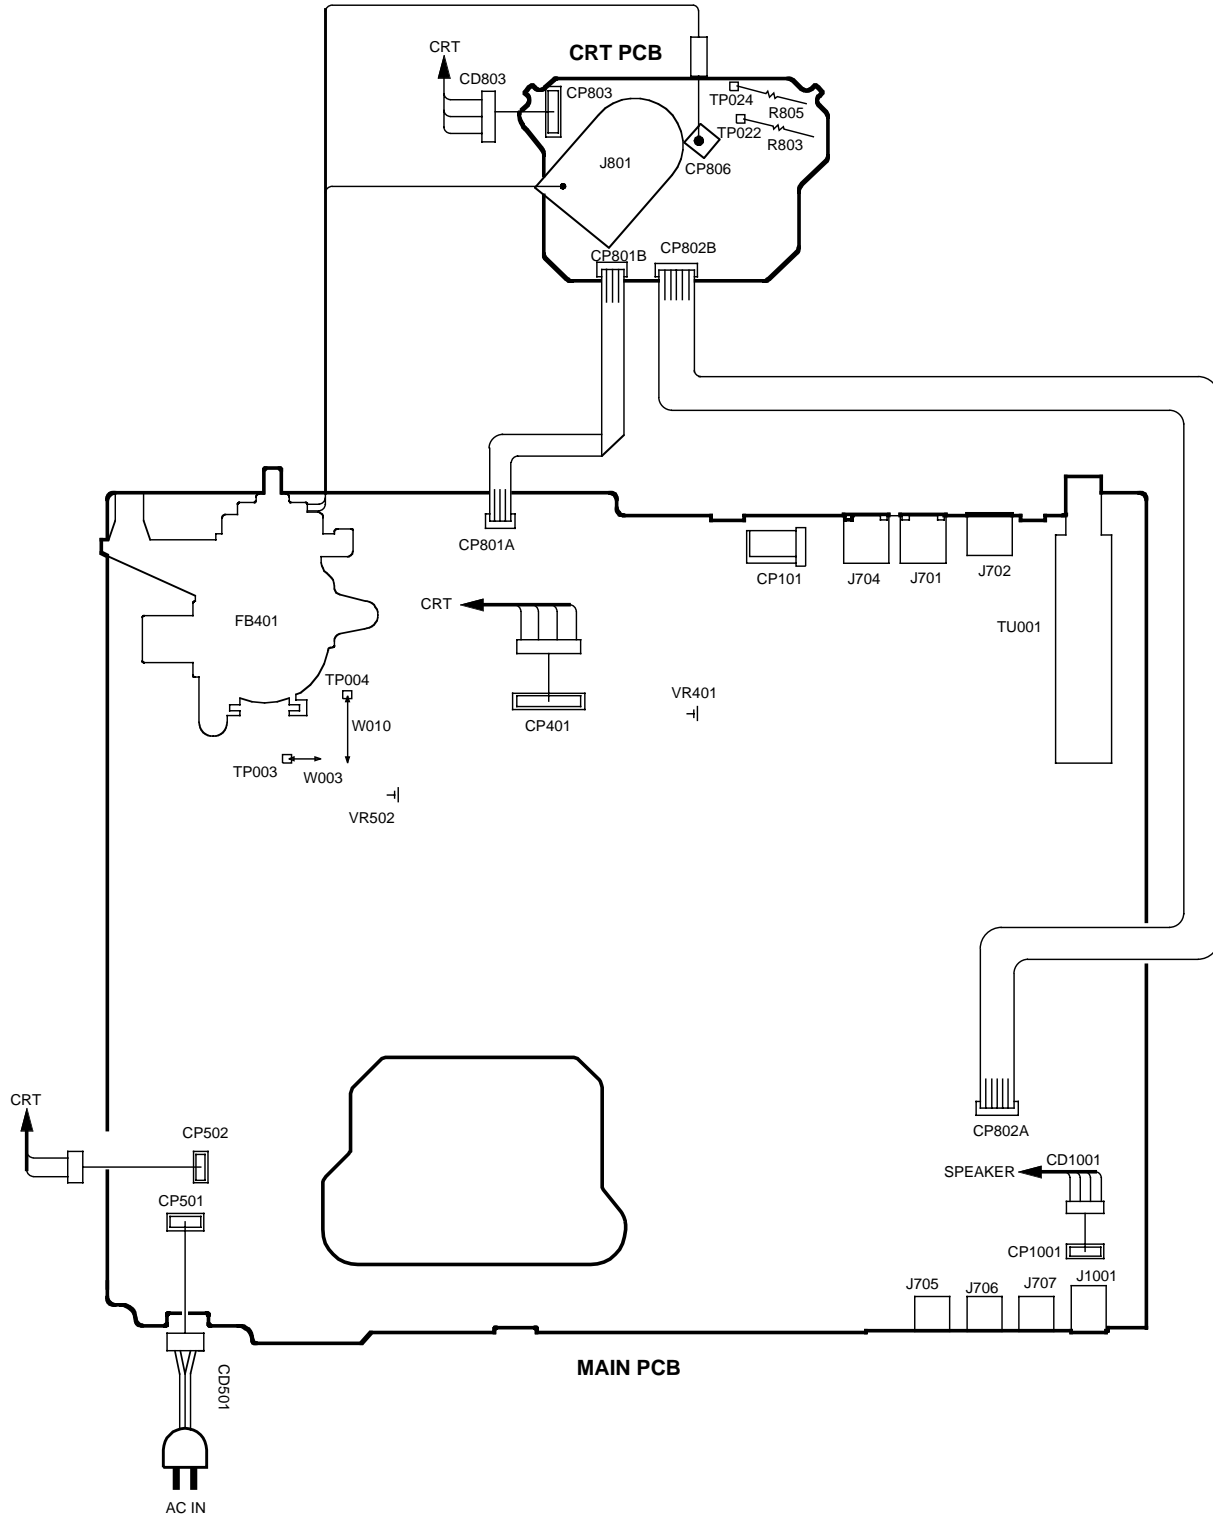

### BLOCK DIAGRAM

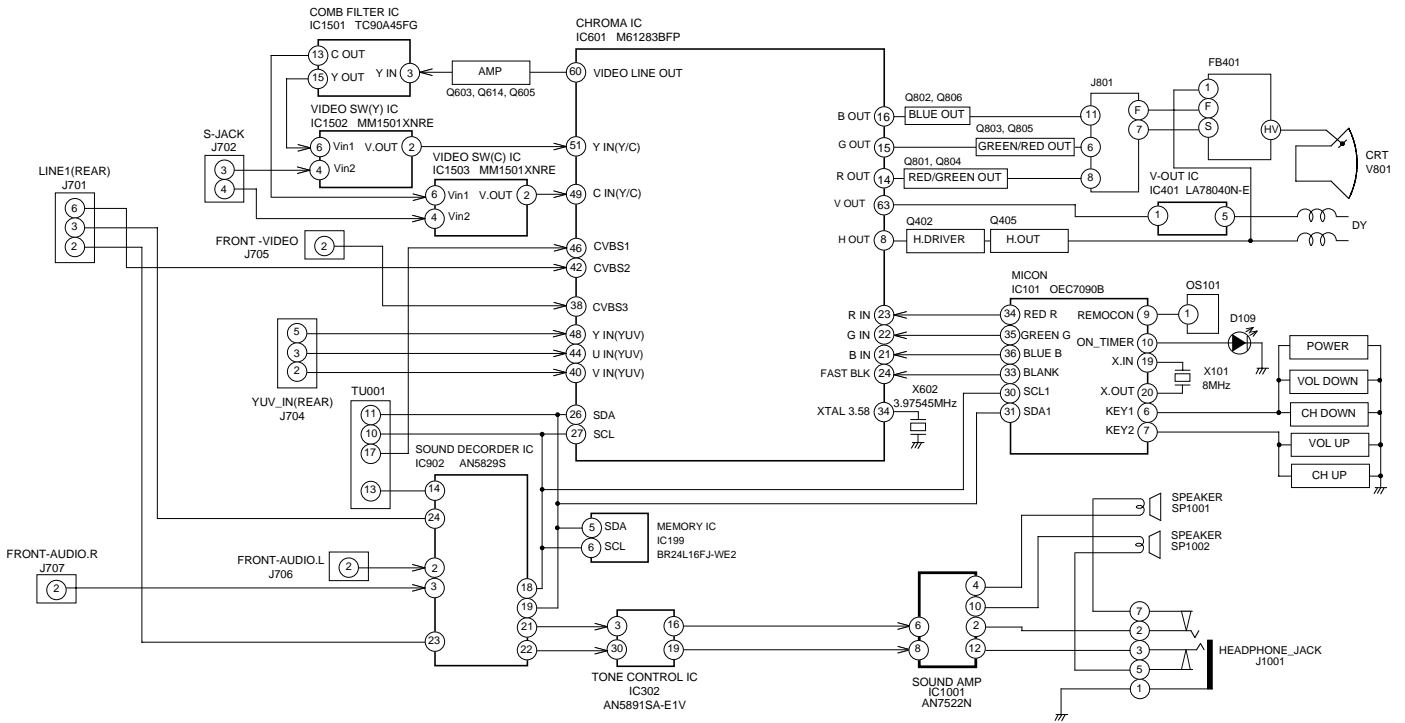








# CHROMA SCHEMATIC DIAGRAM (MAIN PCB)

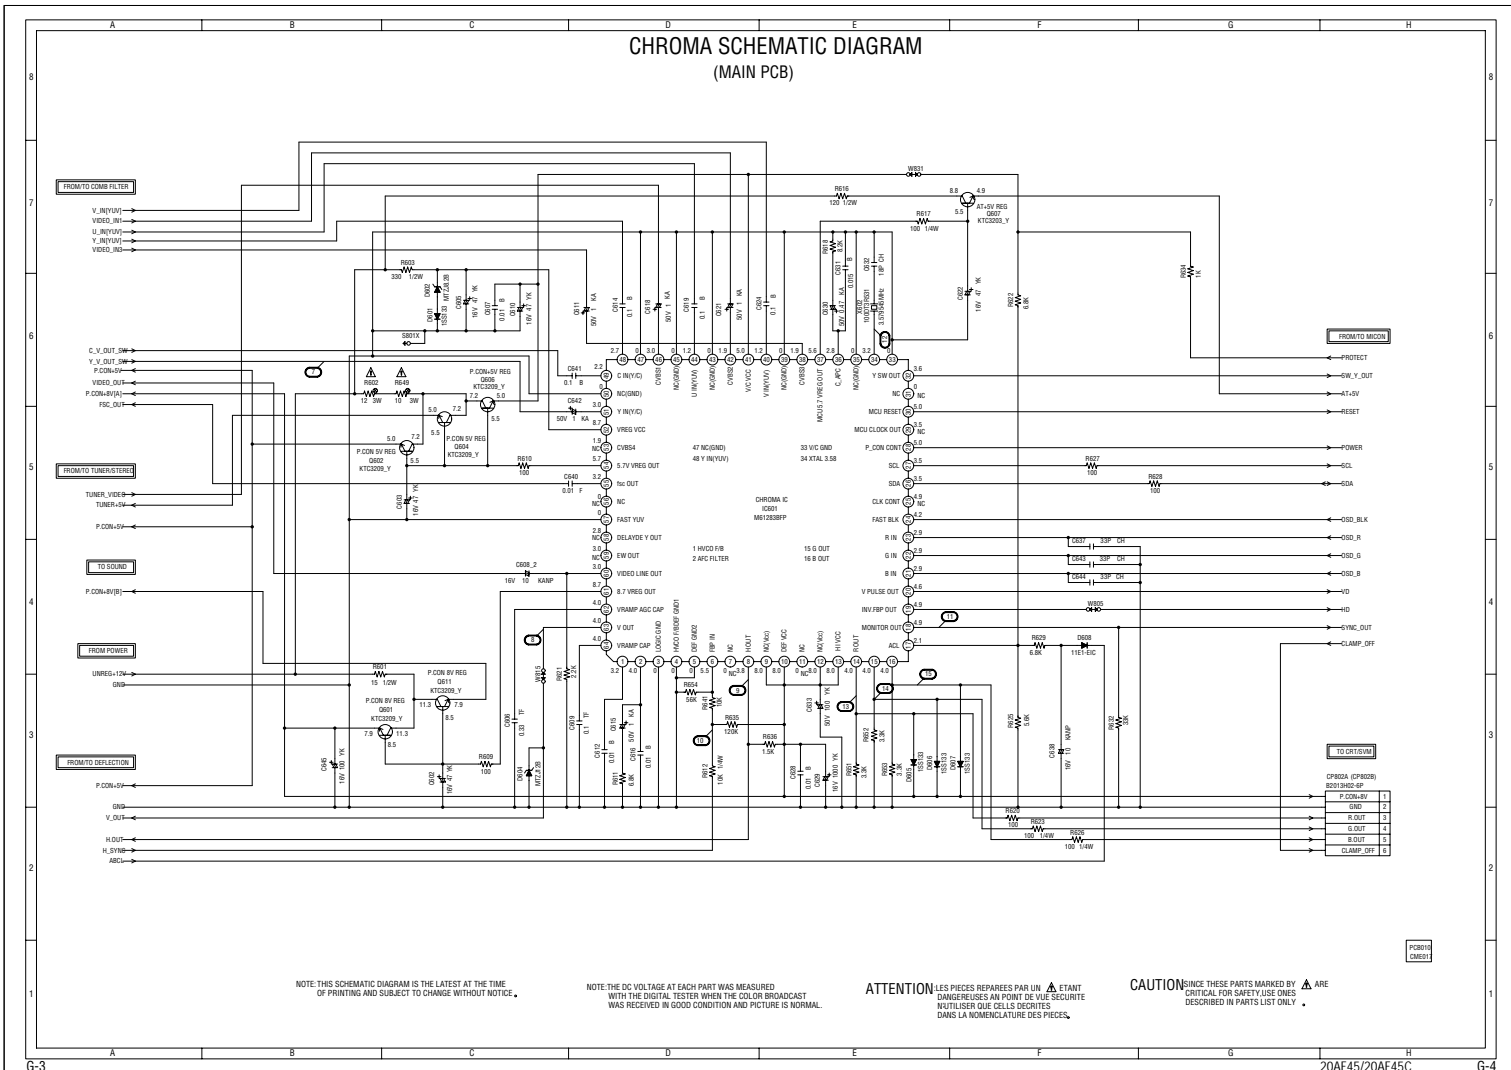

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**ATTENTION** LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES À UN POINT DE VUE SÉCURITÉ, UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** SINCE THESE PARTS MARKED ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

PCB010  
C0001

## DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

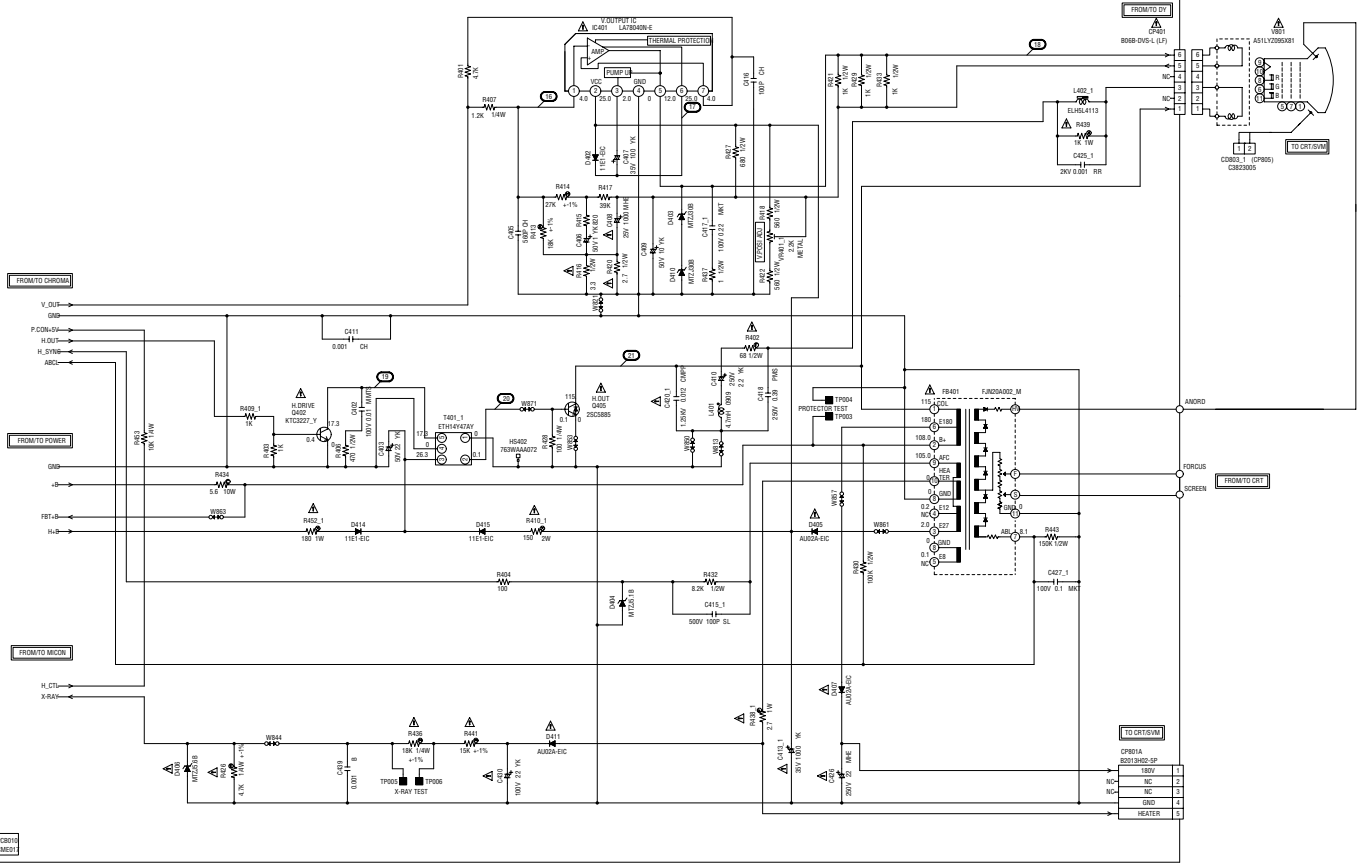

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ UTILISER QUE CELLES SÉCRITÉS DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

# POWER SCHEMATIC DIAGRAM (MAIN PCB)

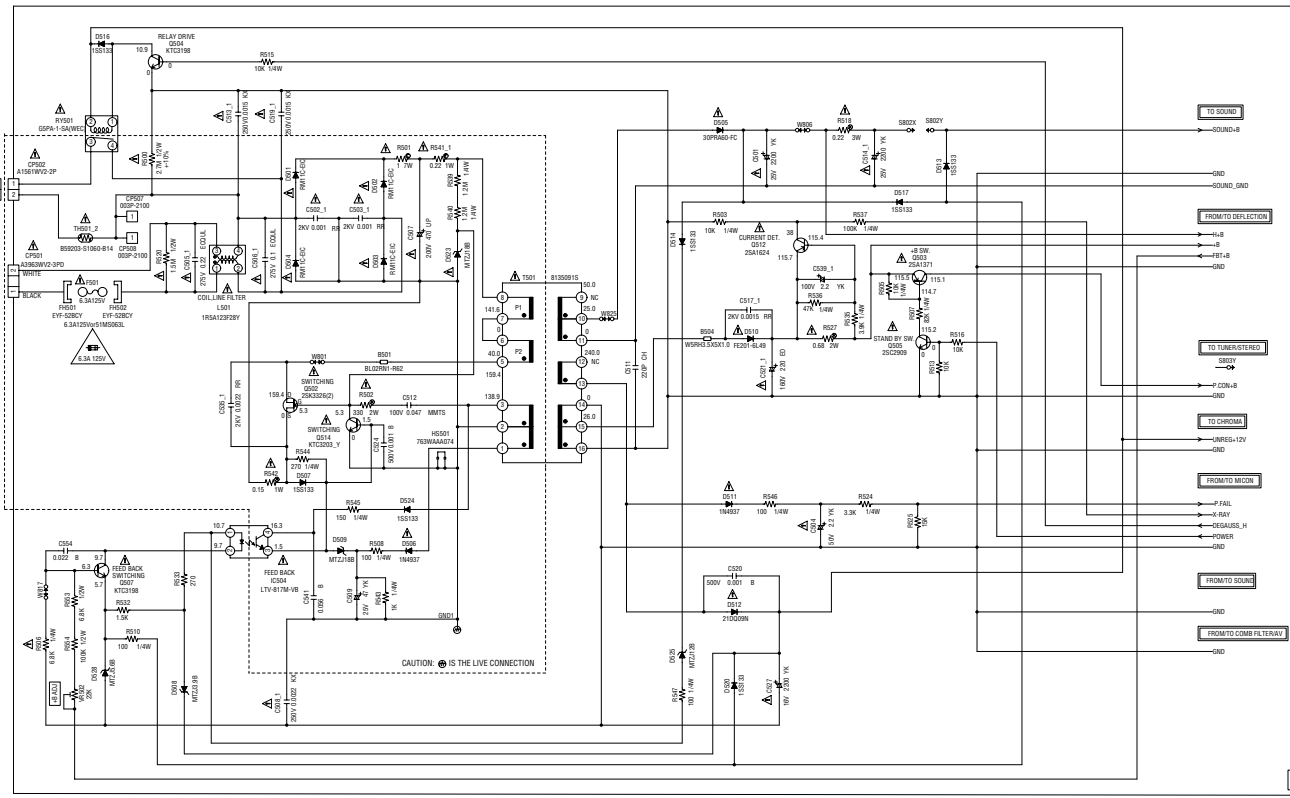

**CAUTION** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501)

**ATTENTION** POUR UNE PROTECTION CONTINUE LES RISQUES D'INCENDIE N'UTILISER QUE DES FUSIBLES DE MEME TYPE 6.3A 125V(F501)

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

**ATTENTION** LES PIÈCES REPARÉES PAR UN **⚠** ÉTANT DANGEREUSES À UN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES SÉLECTIONNÉES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** SINCE THESE PARTS MARKED BY **⚠** ARE CRITICAL FOR SAFETY USE ONES DESCRIBED IN PARTS LIST ONLY.

## SOUND SCHEMATIC DIAGRAM (MAIN PCB)

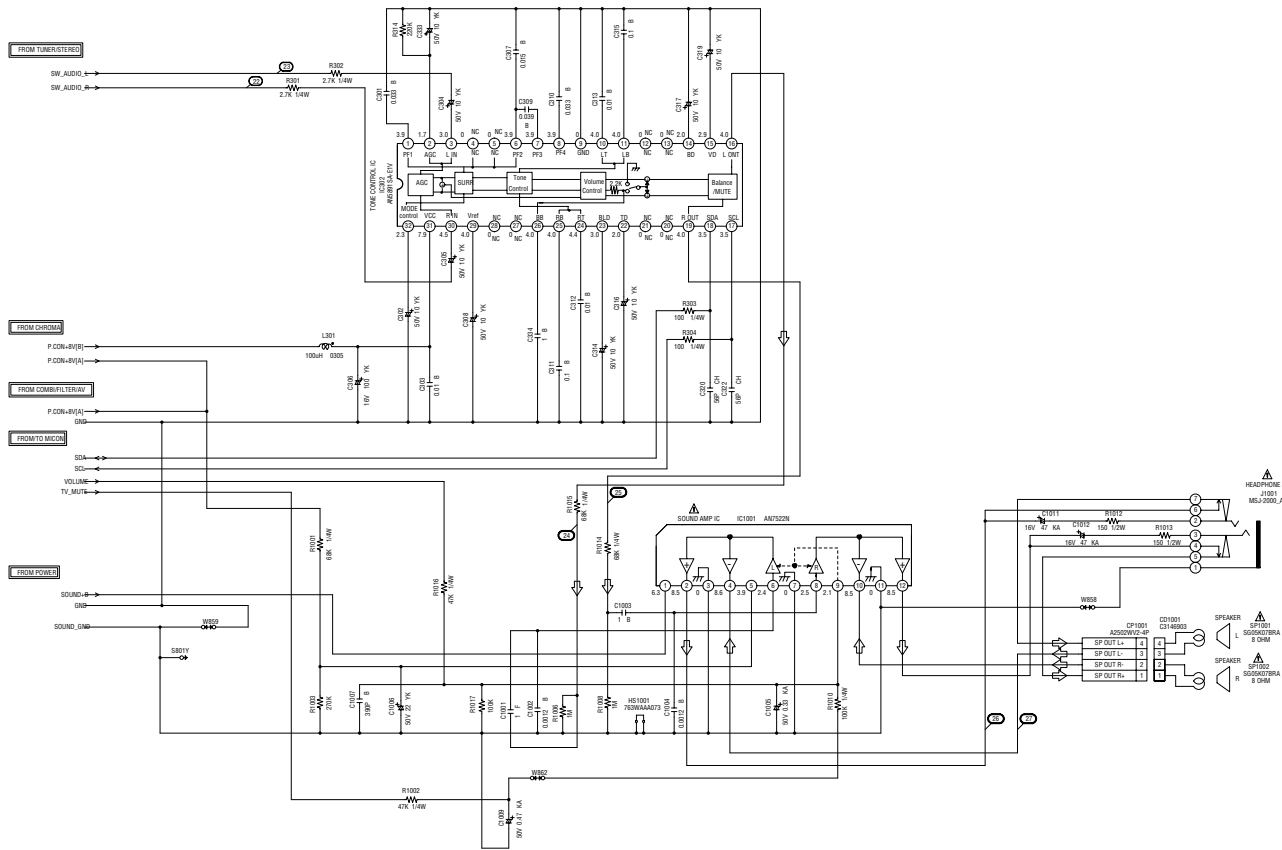

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**ATTENTION** LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ, UTILISER QUE CELLES ÉCRITES DANS LA NOMÉCLATURE DES PIÈCES.


**CAUTION** SINCE THESE PARTS MARKED WITH ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

◀ AUDIO SIGNAL

FIG.101  
C8001



## COMB/FILTER/AV SCHEMATIC DIAGRAM (MAIN PCB)

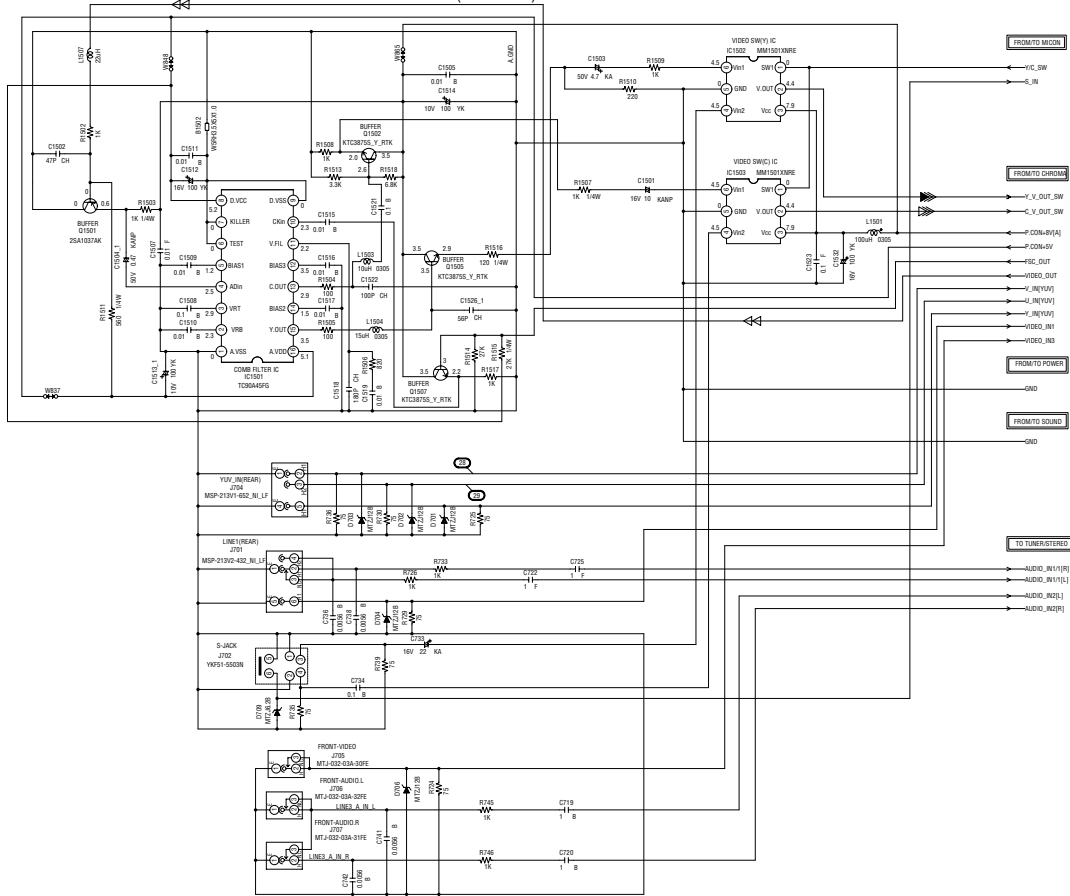


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

◀ LUMINANCE SIGNAL  
 ◀◀ COLOR SIGNAL  
 ◀◀◀ TUNER VIDEO SIGNAL

FR0010  
 CR0010

### CRT SCHEMATIC DIAGRAM (CRT PCB)

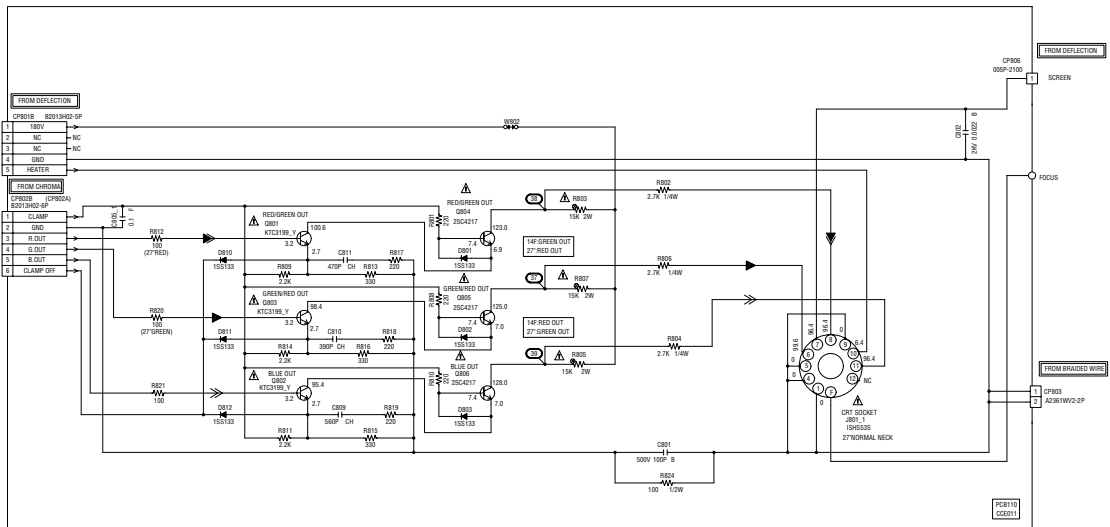

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIÈCES REPAREES PAR UN ETANT DANGEREUSES AU POINT DE VUE SECURITE, UTILISER QUE CELLES IDENTIFIEES DANS LA NOMENCLATURE DES PIÈCES.


◀ R. SIGNAL  
◀ G. SIGNAL  
◀ B. SIGNAL

# WAVEFORMS


## MICON

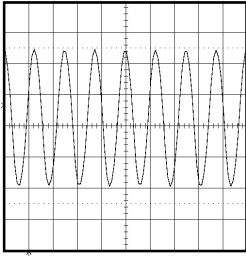


① 1V 0.1 $\mu$ s/div

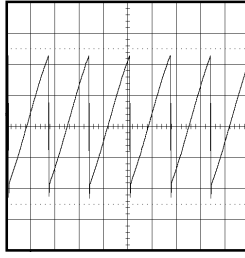


⑧ 0.5V 10ms/div

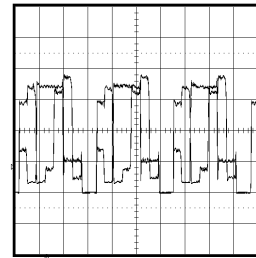


⑬ 1V 20 $\mu$ s/div

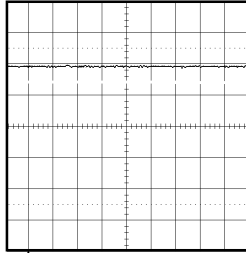


② 1V 1 $\mu$ s/div

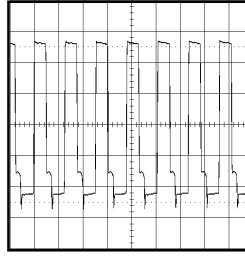


⑨ 1V 50 $\mu$ s/div

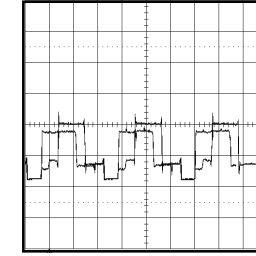


⑭ 2V 20 $\mu$ s/div

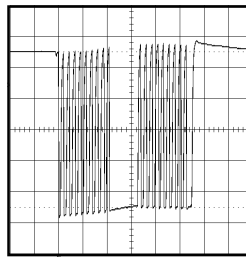


③ 1V 50 $\mu$ s/div

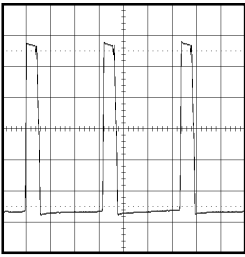


⑩ 2V 20 $\mu$ s/div

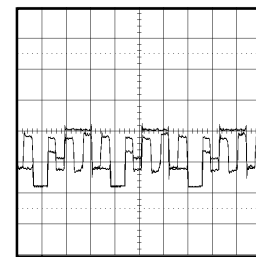


⑮ 2V 20 $\mu$ s/div

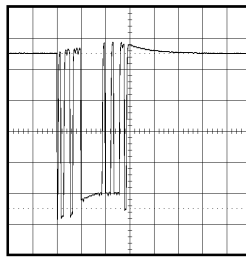

④ 1V 0.1ms/div

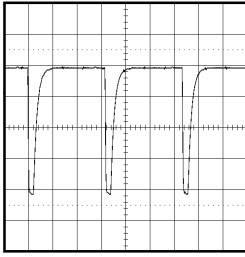


⑪ 0.5V 20 $\mu$ s/div

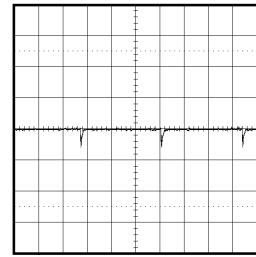


⑯ 2V 5ms/div


## CHROMA

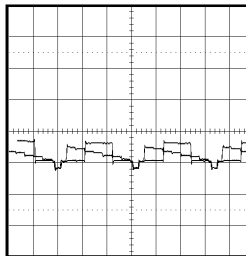

⑦ 1V 20 $\mu$ s/div

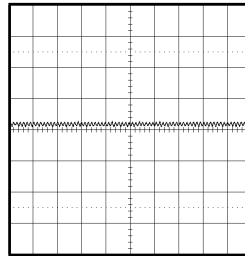

⑫ 1V 2 $\mu$ s/div

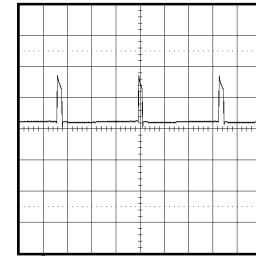


⑰ 20V 5ms/div


## DEFLECTION

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

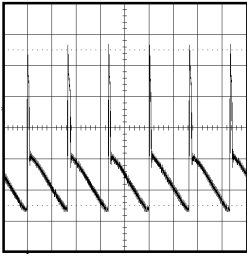


⑱ 10V 10ms/div

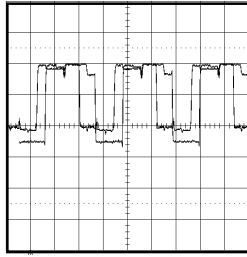


⑳ 50V 20μs/div

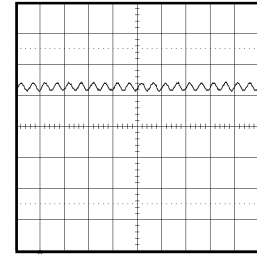


㉑ 2V 5ms/div

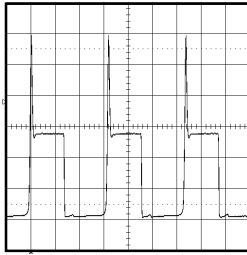

㉒ 20V 20μs/div

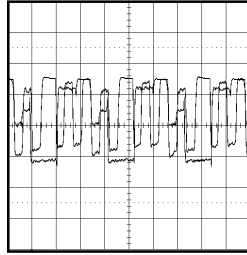


㉓ 50V 20μs/div

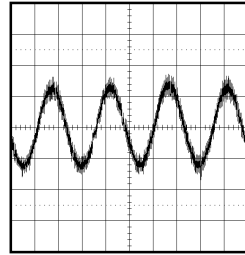


㉔ 0.5V 1ms/div


## SOUND

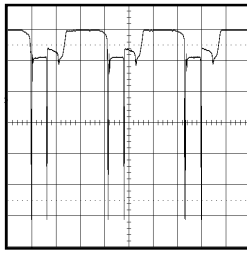

㉕ 2V 20μs/div

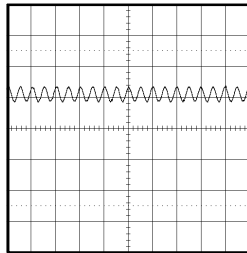


㉖ 2V 5ms/div

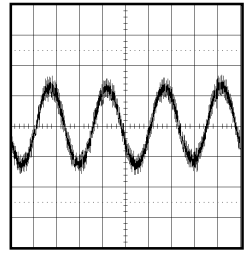


㉗ 0.5V 1ms/div


## COMB/FILTER/AV

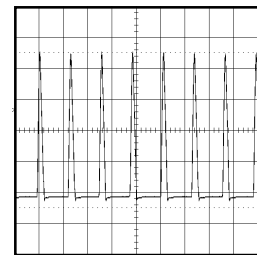

㉘ 200V 50μs/div

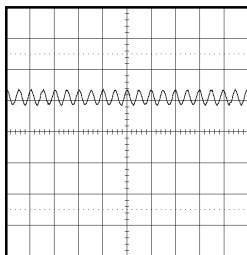


㉙ 2V 5ms/div

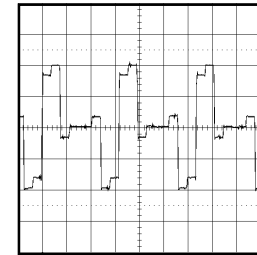


㉚ 200mV 20μs/div


## CRT

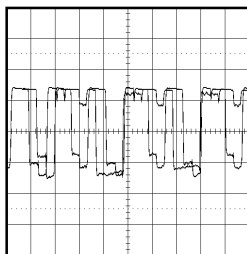

㉛ 50V 20μs/div

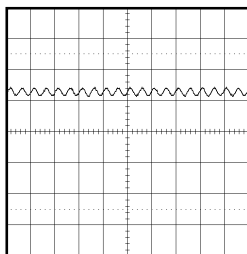


㉜ 2V 5ms/div

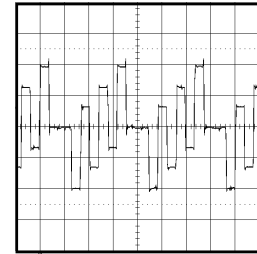


㉝ 200mV 20μs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# MECHANICAL EXPLODED VIEW

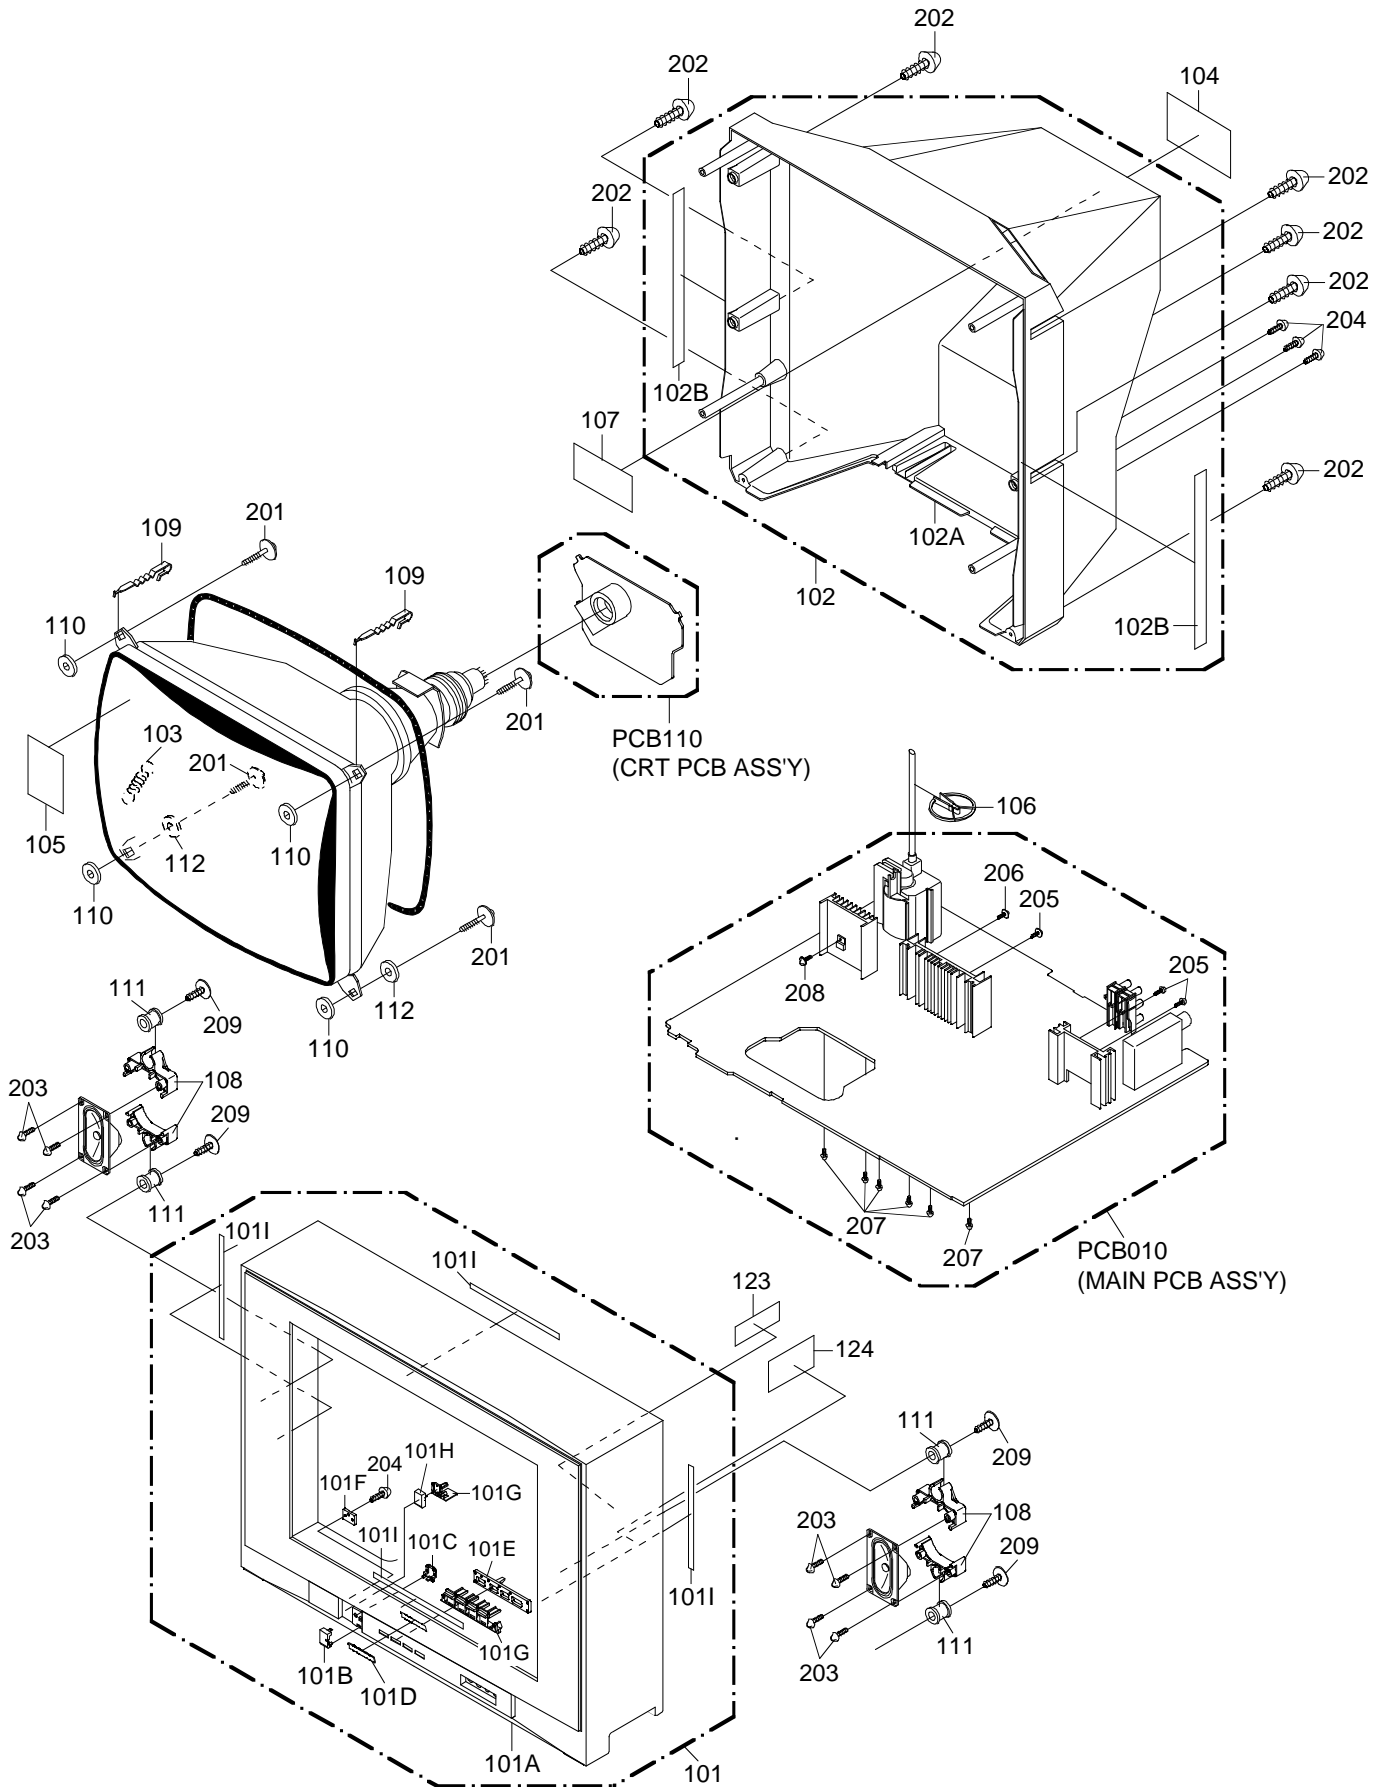

# MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

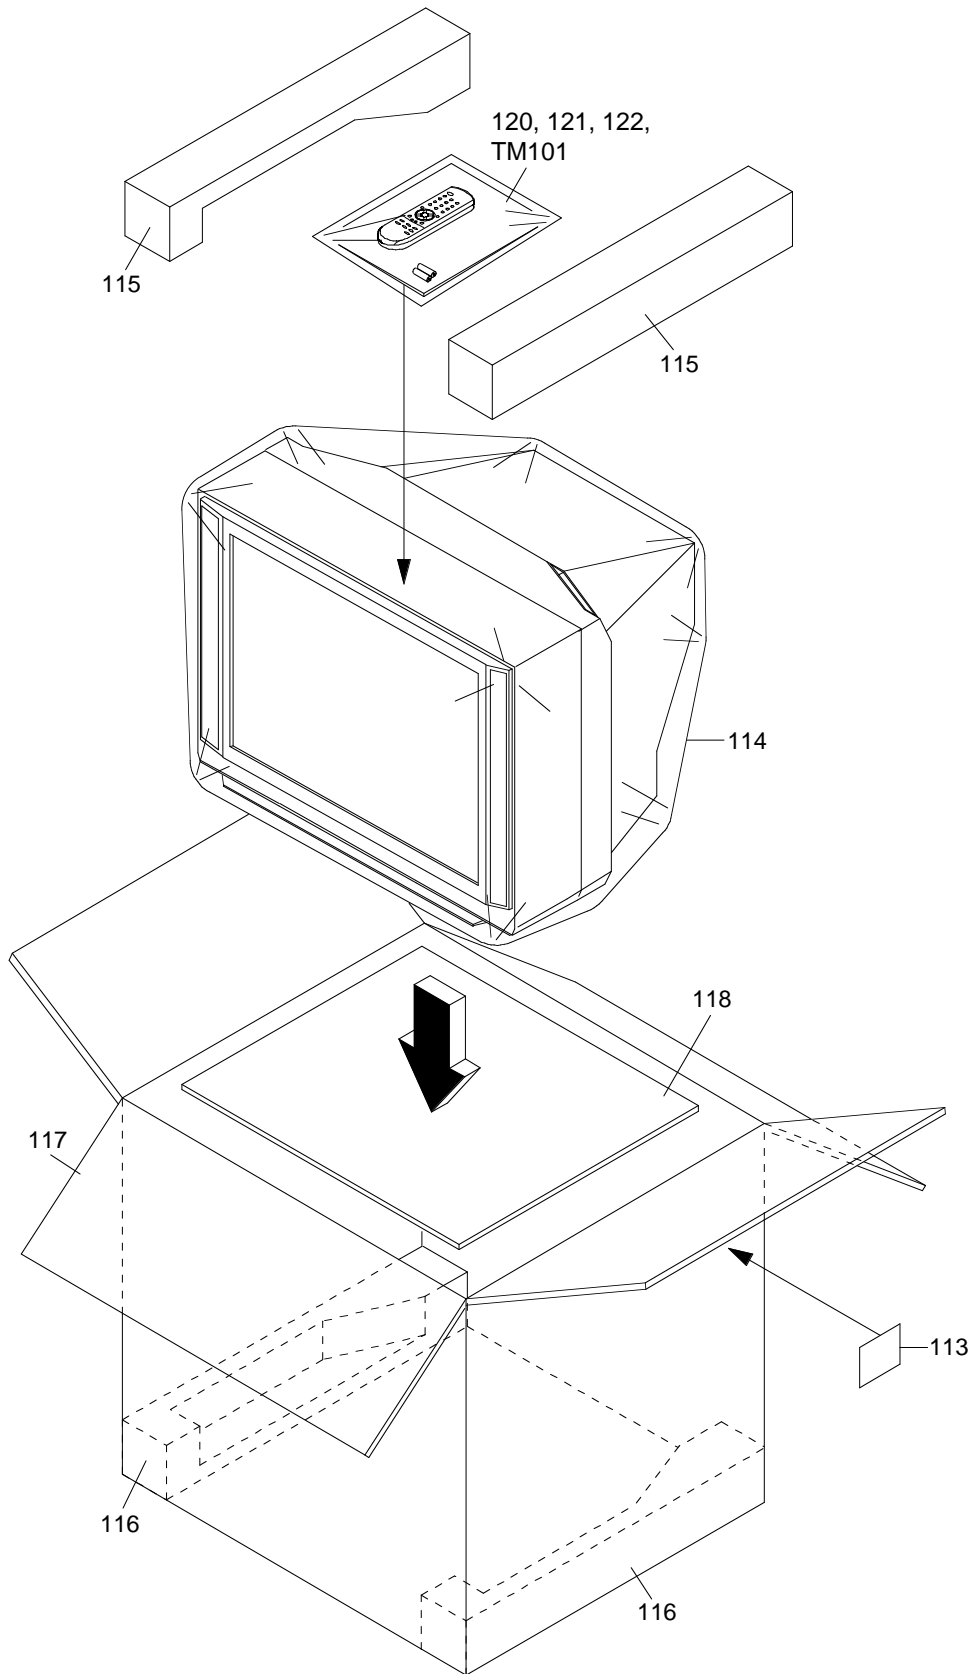

# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE006921	7A701A423A	FRONT CABI ASS'Y	
101A	AE006922	701WPJD026	CABINET,FRONT	
101B	AD302006	711WPA0184	PLATE,FRONT	
101C	AD302007	713WPA0263	GLASS,LED	
101D	AD302008	7235490036	BADGE,BRAND	
101E	AD302009	735WPA0728	STOPPER,BUTTON 1	
101F	AD302010	735WPA0732	STOPPER,BUTTON2	
101G	AE006923	735WPBB393	BUTTON,FRAME	
101H	AE006924	735WPJA853	BUTTON,POWER	
101I	AE003069	800WQ0A070	FELT SHEET	
102	AE005743	7A702A089A	BACK CABI ASS'Y	
102A	AE006225	702WPAA806	CABINET,BACK	
102B	AE003072	800WQ0A045	FELT SHEET	
103	BZ710660	741WUA0021	SPRING,EARTH	
104	AE006227	722549A424	SHEET,RATING	
105	AE006228	723000C818	POP LABEL	
106	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
107	AE006925	726000A105	SHEET,CRT SERVICEMAN	
108	AD302015	761WPA0220	HOLDER,SPEAKER	
109	BZ710259	762WPA0011	HOLDER,CRT WIRE	
110	AD302158	800WR0A002	SHEET,CRT SUPPORT	
111	AD300518	801WR00001	DAMPER,SPEAKER	
112	AE001107	800WR0A026	SHEET,CRT SUPPORT (D)	
113	AE006230	723000C819	SHEET,BAR CODE	
114	AE005914	791WHAA114	FILM BAG	
115	AD302017	792WHA0432	PACKAGE, TOP	
116	AD302018	792WHA0433	PACKAGE,BOTTOM	
117	AE006231	793WCDC598	GIFT BOX	
118	AE006232	795WCDA011	PAD	
119	AE006233	A3S001U975	INSTRUCTION BOOK KIT	
120	AE005582	JA4KD200	POLYBAG,INSTRUCTION(RED CAUTION)	
121	AE004983	J2D60117A	REGISTRATION CARD	
122	AE006234	J3S00121A	INSTRUCTION BOOK(E/S)	
201	AE005916	8141J50C5U	SCREW,TAP TITE(P) GW22	5x35
202	AE004847	8117540A6U	SCREW,TAP TITE(BO) TRUSS	4x16
203	AE006235	8117140A2U	SCREW,TAPPING(BO) PAN	4x12
204	AE003528	8110630A0U	SCREW,TAP TITE(P) BRAZIER	3x10
205	AE003531	810763080U	SCREW,TAP TITE(S) BRAZIER	3x8
206	AE003524	8109I30A0U	SCREW,TAP TITE(B) WH7	3x10
207	AE005917	810963080Q	SCREW,TAP TITE(B) BRAZIER	3x8
208	AE005659	8109I3080U	SCREW,TAP TITE(B) WH7	3x8
209	AE005398	8162540A6U	SCREW,TAPPING (BO) WASHER 18	

# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE006006	7A701A320A	FRONT CABI ASS'Y	
101A	AE005742	701WPJC927	CABINET,FRONT	
101B	AD302006	711WPA0184	PLATE,FRONT	
101C	AD302007	713WPA0263	GLASS,LED	
101D	AD302008	7235490036	BADGE,BRAND	
101E	AD302009	735WPA0728	STOPPER,BUTTON 1	
101F	AD302010	735WPA0732	STOPPER,BUTTON2	
101G	AE006223	735WPBB325	BUTTON,FRAME	
101H	AE006224	735WPJA848	BUTTON,POWER	
101I	AE003069	800WQ0A070	FELT SHEET	
102	AE005743	7A702A089A	BACK CABI ASS'Y	
102A	AE006225	702WPAA806	CABINET,BACK	
102B	AE003072	800WQ0A045	FELT SHEET	
103	BZ710660	741WUA0021	SPRING,EARTH	
104	AE006236	722549A448	SHEET,RATING	
105	AE006237	723000C868	POP LABEL	
106	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
107	AE006925	726000A105	SHEET,CRT SERVICEMAN	
108	AD302015	761WPA0220	HOLDER,SPEAKER	
109	BZ710259	762WPA0011	HOLDER,CRT WIRE	
110	AD302158	800WR0A002	SHEET,CRT SUPPORT	
111	AD300518	801WR00001	DAMPER,SPEAKER	
112	AE001107	800WR0A026	SHEET,CRT SUPPORT (D)	
113	AE006238	723000C869	SHEET,BAR CODE	
114	AE005914	791WHAA114	FILM BAG	
115	AD302017	792WHA0432	PACKAGE, TOP	
116	AD302018	792WHA0433	PACKAGE,BOTTOM	
117	AE006239	793WCDC675	GIFT BOX	
118	AE006232	795WCDA011	PAD	
119	AE006240	A3S002U975	INSTRUCTION BOOK KIT	
120	AE006098	JA4KD100	POLYBAG,INSTRUCTION(RED CAUTION)	
122	AE006241	J3S00221A	INSTRUCTION BOOK	
123	AE006242	722000A266	SHEET,HWC	
124	AE006166	722000A267	SHEET,CSA WARNING	
201	AE005916	8141J50C5U	SCREW,TAP TITE(P) GW22	5x35
202	AE004847	8117540A6U	SCREW,TAP TITE(BO) TRUSS	4x16
203	AE006235	8117140A2U	SCREW,TAPPING(BO) PAN	4x12
204	AE003528	8110630A0U	SCREW,TAP TITE(P) BRAZIER	3x10
205	AE003531	810763080U	SCREW,TAP TITE(S) BRAZIER	3x8
206	AE003524	8109I30A0U	SCREW,TAP TITE(B) WH7	3x10
207	AE005917	810963080Q	SCREW,TAP TITE(B) BRAZIER	3x8
208	AE005659	8109I3080U	SCREW,TAP TITE(B) WH7	3x8
209	AE005398	8162540A6U	SCREW,TAPPING (BO) WASHER 18	

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△R402	AE006221	R638U2680J	R,FUSE 68 OHM 1/2W
△R410	AD301344	R3X18A151J	R,METAL OXIDE 150 OHM 2W
△R416	AD301593	R002T23R3J	RC 3.3 OHM 1/2W
△R420	AD301345	R002T22R7J	RC 2.7 OHM 1/2W
△R426	BZ210030	R4X5T4472F	R,METAL 4.7K OHM 1/4W
R434	AD301972	R5X2CF5R6J	R,CEMENT 5.6 OHM 10W
△R436	BZ210023	R4X5T4183F	R,METAL 18K OHM 1/4W
△R438	AE006222	R655812R7J	R,FUSE 2.7 OHM 1W
△R439	BZ210003	R3K181102J	R,METAL OXIDE 1K OHM 1W
△R441	BZ210231	R4X5T6153F	R,METAL 15K OHM 1/6W
△R452	BZ210279	R3X181181J	R,METAL OXIDE 180 OHM 1W
△R500	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
△R501	AD301596	R5X2AE010J	R,CEMENT 1 OHM 7W
△R502	BZ210249	R3X28A331J	R,METAL OXIDE 330 OHM 2W
△R506	BZ210162	R002T4682J	RC 6.8K OHM 1/4W
△R518	AD301973	R3X28BR22J	R,METAL OXIDE 0.22 OHM 3W
△R520	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
△R527	BZ210149	R3X18AR68J	R,METAL OXIDE 0.68 OHM 2W
△R541	AE005735	R63881R22J	R,FUSE 0.22 OHM 1W
△R542	BZ210248	R3X181R15J	R,METAL OXIDE 0.15 OHM 1W
△R602	AD301975	R3X28B120J	R,METAL OXIDE 12 OHM 3W
△R649	BZ210215	R3X28B100J	R,METAL OXIDE 10 OHM 3W
△R803	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△R805	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△R807	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
<b>CAPACITORS</b>			
△C408	BZ110032	E5EZF3102M	CE 1000 UF 25V
△C413	AD301977	E0ELF4102M	CE 1000 UF 35V
C418	BZ110136	P4J7F3394J	CMPP 0.39 UF 250V PMS
△C420	BZ110058	P4N8FJ123H	CMPP 0.012 UF 1.25KV
C425	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C426	BZ110225	E5EZF0220M	CE 22 UF 250V
△C430	BZ110195	E02LU8220M	CE 22 UF 100V
△C501	BZ210176	E02LF3222M	CE 2200 UF 25V
△C502	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C503	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C504	AD301729	E02LU52R2M	CE 2.2 UF 50V
△C505	BZ110025	P2122B224M	CMP 0.22 UF 275V ECQUL
△C506	BZ110035	P2122B104M	CMP 0.1 UF 275V ECQUL
△C507	BZ110012	E51CGC471M	CE 470 UF 200V
△C508	BZ110222	CD39E0MH3M	CC 0.0022UF 250V
△C513	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△C514	BZ210176	E02LF3222M	CE 2200 UF 25V
C517	AE000874	C0PLRR7E3K	CC 0.0015 UF 2KV R
△C519	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△C521	AE006083	E61DFB221M	CE 220 UF 160V
△C527	BZ110119	E02LF2222M	CE 2200 UF 16V
C535	BZ110201	C0PLRR7H3K	CC 0.0022 UF 2KV R
C802	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
<b>DIODES</b>			
D001	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D104	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D105	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D106	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D109	BZ410054	0021721150	LED SLR-342VCT32
D402	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D403	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
D404	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
△D405	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△D406	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△D407	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D410	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D414	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D415	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D505	AE006082	D28FOPRA60	DIODE,RECTIFIER 30PRA60-FC
△D506	AD300731	D2WXN49370	DIODE,SILICON 1N4937

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D507	BZ410006	D1VT001330	DIODE,SILICON
D508	BZ410064	D97U03R91B	DIODE,ZENER
D509	AD300671	D97U01801B	DIODE,ZENER
△D510	AD301980	D2CF2016L0	DIODE,SILICON
△D511	AD300731	D2WXN49370	DIODE,SILICON
△D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY
D513	BZ410006	D1VT001330	DIODE,SILICON
D514	BZ410006	D1VT001330	DIODE,SILICON
D516	BZ410006	D1VT001330	DIODE,SILICON
D517	BZ410006	D1VT001330	DIODE,SILICON
D520	BZ410006	D1VT001330	DIODE,SILICON
△D523	AD300671	D97U01801B	DIODE,ZENER
D524	BZ410006	D1VT001330	DIODE,SILICON
D525	AD300070	D97U01201B	DIODE,ZENER
D528	BZ410021	D97U05R61B	DIODE,ZENER
D601	BZ410006	D1VT001330	DIODE,SILICON
D602	BZ410058	D97U08R21B	DIODE,ZENER
D604	AD300070	D97U01201B	DIODE,ZENER
D605	BZ410006	D1VT001330	DIODE,SILICON
D606	BZ410006	D1VT001330	DIODE,SILICON
D607	BZ410006	D1VT001330	DIODE,SILICON
D608	BZ410043	D2WT011E10	DIODE,SILICON
D701	AD300070	D97U01201B	DIODE,ZENER
D702	AD300070	D97U01201B	DIODE,ZENER
D703	AD300070	D97U01201B	DIODE,ZENER
D704	AD300070	D97U01201B	DIODE,ZENER
D706	AD300070	D97U01201B	DIODE,ZENER
D709	BZ410066	D97U06R21B	DIODE,ZENER
D801	BZ410006	D1VT001330	DIODE,SILICON
D802	BZ410006	D1VT001330	DIODE,SILICON
D803	BZ410006	D1VT001330	DIODE,SILICON
D810	BZ410006	D1VT001330	DIODE,SILICON
D811	BZ410006	D1VT001330	DIODE,SILICON
D812	BZ410006	D1VT001330	DIODE,SILICON
<b>ICS</b>			
IC101	AE006067	I56F07090B	IC
IC199	AE006217	A3S001U015	INIT DATA
IC302	AD301983	I01FF58910	IC
△IC401	AE002783	I03TD804N0	IC
△IC504	BZ410088	0002E00610	PHOTO COUPLER
IC601	AE003906	I06FC1283B	IC
IC902	BZ611068	I01FF58290	IC
△IC1001	AD302184	I0FSP7522N	IC
IC1501	AE006220	I05FEA45FG	IC
IC1502	AD301988	I0UF015010	IC
IC1503	AD301988	I0UF015010	IC
<b>TRANSISTORS</b>			
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
△Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON
△Q405	AE000656	TC1G058850	TRANSISTOR,SILICON
△Q502	BZ510098	T220033260	FET
△Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON
△Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON
△Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON
△Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON
△Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
△Q801	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q802	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q803	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q804	BZ510009	TC3F042170	TRANSISTOR,SILICON
△Q805	BZ510009	TC3F042170	TRANSISTOR,SILICON
△Q806	BZ510009	TC3F042170	TRANSISTOR,SILICON
Q1501	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
Q1502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
<b>COILS &amp; TRANSFORMERS</b>			
L301	BZ310041	02167F101J	COIL
L401	BZ310004	021679472K	COIL
L402	BZ310063	022100027A	COIL,LINEARITY
△L501	BZ310144	029T000097	COIL,LINE FILTER
△L503	BZ310066	028R200024	COIL,DEGAUSS
L901	BZ310041	02167F101J	COIL
L1501	BZ310041	02167F101J	COIL
L1503	BZ310141	02167F100J	COIL
L1504	AD300613	02167F150J	COIL
L1507	BZ310183	021LA6220J	COIL
T401	BZ310172	045013003J	TRANS,HORIZONTAL DRIVE
△T501	AE006212	048135091S	TRANSFORMER,SWITCHING
<b>JACKS</b>			
J701	AE002759	060J431020	RCA JACK
J702	AE006074	063Q700011	JACK
J704	AE002761	060J411032	RCA JACK
J705	AE004756	060J401104	RCA JACK
J706	AE004758	060J401106	RCA JACK
J707	AE004757	060J401105	RCA JACK
△J801	AD301356	066F130020	SOCKET,CATHODE RAY,TUBE
△J1001	AE003431	060J131016	HEADPHONE JACK
<b>SWITCHES</b>			
SW101	BZ612010	0504101T34	SWITCH,TACT
SW102	BZ612010	0504101T34	SWITCH,TACT
SW103	BZ612010	0504101T34	SWITCH,TACT
SW104	BZ612010	0504101T34	SWITCH,TACT
SW105	BZ612010	0504101T34	SWITCH,TACT
<b>VARIABLE RESISTORS</b>			
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED
<b>P.C.BOARD ASSEMBLIES</b>			
PCB010	AE006216	A3S001U010	PCB ASS'Y
PCB110	AE006218	A3S001U110	PCB ASS'Y
<b>MISCELLANEOUS</b>			
B501	BZ310045	024AT03481	CORE,BEADS
B504	BZ310121	024HT03553	CORE,BEADS
B1502	BZ310121	024HT03553	CORE,BEADS
BT001	AE005640	141R004016	BATTERY,MANGAN
BT002	AE005640	141R004016	BATTERY,MANGAN
△CD501	AE006077	1209615904	CORD,AC BUSH
CD801	BZ614446	WCL6836038	FLAT CABLE
CD802	AE006077	WDL6046038	FLAT CABLE
CD803	AE005894	06C3823005	CORD,CONNECTOR
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE
△CP401	AE006075	069X460109	CONNECTOR PCB SIDE
△CP501	BZ614176	069S320419	CONNECTOR PCB SIDE
△CP502	BZ614283	069S420110	CONNECTOR PCB SIDE
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE
CP803	BZ614269	069S320010	CONNECTOR PCB SIDE
CP806	BZ614058	069W010010	CONNECTOR PCB SIDE
CD1001	AE006213	06C3146903	CORD,CONNECTOR
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE
CP801A	BZ614276	067U005049	WIRE HOLDER
CP801B	BZ614276	067U005049	WIRE HOLDER
CP802A	BZ614333	067U006049	WIRE HOLDER
CP802B	BZ614333	067U006049	WIRE HOLDER
CUS011	BZ710149	800WFAA008	CUSHION C
EL001	BZ614044	124120301A	EYE LET
EL002	BZ614043	124116281A	EYE LET
△F501	BZ614422	081PC6R305	FUSE
△FB401	AE003174	043220060F	TRANSFORMER,FLYBACK
FH501	AE002634	06710T0009	HOLDER,FUSE
FH502	AE002634	06710T0009	HOLDER,FUSE
OS101	AD301048	0773071001	REMOTE RECEIVER
△RY501	AE006070	0560X20118	RELAY
△SP1001	AD301050	070C457003	SPEAKER

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>MISCELLANEOUS</b>			
△SP1002	AD301050	070C457003	SPEAKER SG05K07BRA
△TH501	AD302000	D8EE0B1400	DEGAUSS ELEMENT B59203-S1060-B14
TM101	AE006214	076N0GQ020	TRANSMITTER RC-GQ020
△TU001	AE006069	0163300018	RF UNIT 115-V-KA35ARB
△V801	AE006215	0981210460	CRT W/DY A51LYZ095X81
X101	AD302002	100CT8R005	CRYSTAL HC-49/U-S
X602	AD301653	100DT3R531	CRYSTAL HC-49/U
RESISTOR			
	RC.....	CARBON RESISTOR	
CAPACITORS			
	CC.....	CERAMIC CAPACITOR	
	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
	CP.....	POLYESTER CAPACITOR	
	CPP.....	POLYPROPYLENE CAPACITOR	
	CPL.....	PLASTIC CAPACITOR	
	CMP.....	METAL POLYESTER CAPACITOR	
	CMPL.....	METAL PLASTIC CAPACITOR	
	CMPP.....	METAL POLYPROPYLENE CAPACITOR	

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△R402	AE006221	R638U2680J	R,FUSE 68 OHM 1/2W
△R410	AD301344	R3X18A151J	R,METAL OXIDE 150 OHM 2W
△R416	AD301593	R002T23R3J	RC 3.3 OHM 1/2W
△R420	AD301345	R002T22R7J	RC 2.7 OHM 1/2W
△R426	BZ210030	R4X5T4472F	R,METAL 4.7K OHM 1/4W
R434	AD301972	R5X2CF5R6J	R,CEMENT 5.6 OHM 10W
△R436	BZ210023	R4X5T4183F	R,METAL 18K OHM 1/4W
△R438	AE006222	R655812R7J	R,FUSE 2.7 OHM 1W
△R439	BZ210003	R3K181102J	R,METAL OXIDE 1K OHM 1W
△R441	BZ210231	R4X5T6153F	R,METAL 15K OHM 1/6W
△R452	BZ210279	R3X181181J	R,METAL OXIDE 180 OHM 1W
△R500	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
△R501	AD301596	R5X2AE010J	R,CEMENT 1 OHM 7W
△R502	BZ210249	R3X28A331J	R,METAL OXIDE 330 OHM 2W
△R506	BZ210162	R002T4682J	RC 6.8K OHM 1/4W
△R518	AD301973	R3X28BR22J	R,METAL OXIDE 0.22 OHM 3W
△R520	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
△R527	BZ210149	R3X18AR68J	R,METAL OXIDE 0.68 OHM 2W
△R541	AE005735	R63881R22J	R,FUSE 0.22 OHM 1W
△R542	BZ210248	R3X181R15J	R,METAL OXIDE 0.15 OHM 1W
△R602	AD301975	R3X28B120J	R,METAL OXIDE 12 OHM 3W
△R649	BZ210215	R3X28B100J	R,METAL OXIDE 10 OHM 3W
△R803	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△R805	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△R807	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
<b>CAPACITORS</b>			
△C408	BZ110032	E5EZF3102M	CE 1000 UF 25V
△C413	AD301977	E0ELF4102M	CE 1000 UF 35V
C418	BZ110136	P4J7F3394J	CMPP 0.39 UF 250V PMS
△C420	BZ110058	P4N8FJ123H	CMPP 0.012 UF 1.25KV
C425	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C426	BZ110225	E5EZF0220M	CE 22 UF 250V
△C430	BZ110195	E02LU8220M	CE 22 UF 100V
△C501	BZ210176	E02LF3222M	CE 2200 UF 25V
△C502	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C503	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△C504	AD301729	E02LU52R2M	CE 2.2 UF 50V
△C505	BZ110025	P2122B224M	CMP 0.22 UF 275V ECQUL
△C506	BZ110035	P2122B104M	CMP 0.1 UF 275V ECQUL
△C507	BZ110012	E51CGC471M	CE 470 UF 200V
△C508	BZ110222	CD39E0MH3M	CC 0.0022UF 250V
△C513	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△C514	BZ210176	E02LF3222M	CE 2200 UF 25V
C517	AE000874	C0PLRR7E3K	CC 0.0015 UF 2KV R
△C519	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△C521	AE006083	E61DFB221M	CE 220 UF 160V
△C527	BZ110119	E02LF2222M	CE 2200 UF 16V
C535	BZ110201	C0PLRR7H3K	CC 0.0022 UF 2KV R
C802	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
<b>DIODES</b>			
D001	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D104	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D105	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D106	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D109	BZ410054	0021721150	LED SLR-342VCT32
D402	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D403	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
D404	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
△D405	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△D406	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△D407	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D410	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D414	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D415	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D505	AE006082	D28FOPRA60	DIODE,RECTIFIER 30PRA60-FC
△D506	AD300731	D2WXN49370	DIODE,SILICON 1N4937

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D507	BZ410006	D1VT001330	DIODE,SILICON
D508	BZ410064	D97U03R91B	DIODE,ZENER
D509	AD300671	D97U01801B	DIODE,ZENER
△D510	AD301980	D2CF2016L0	DIODE,SILICON
△D511	AD300731	D2WXN49370	DIODE,SILICON
△D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY
D513	BZ410006	D1VT001330	DIODE,SILICON
D514	BZ410006	D1VT001330	DIODE,SILICON
D516	BZ410006	D1VT001330	DIODE,SILICON
D517	BZ410006	D1VT001330	DIODE,SILICON
D520	BZ410006	D1VT001330	DIODE,SILICON
△D523	AD300671	D97U01801B	DIODE,ZENER
D524	BZ410006	D1VT001330	DIODE,SILICON
D525	AD300070	D97U01201B	DIODE,ZENER
D528	BZ410021	D97U05R61B	DIODE,ZENER
D601	BZ410006	D1VT001330	DIODE,SILICON
D602	BZ410058	D97U08R21B	DIODE,ZENER
D604	AD300070	D97U01201B	DIODE,ZENER
D605	BZ410006	D1VT001330	DIODE,SILICON
D606	BZ410006	D1VT001330	DIODE,SILICON
D607	BZ410006	D1VT001330	DIODE,SILICON
D608	BZ410043	D2WT011E10	DIODE,SILICON
D701	AD300070	D97U01201B	DIODE,ZENER
D702	AD300070	D97U01201B	DIODE,ZENER
D703	AD300070	D97U01201B	DIODE,ZENER
D704	AD300070	D97U01201B	DIODE,ZENER
D706	AD300070	D97U01201B	DIODE,ZENER
D709	BZ410066	D97U06R21B	DIODE,ZENER
D801	BZ410006	D1VT001330	DIODE,SILICON
D802	BZ410006	D1VT001330	DIODE,SILICON
D803	BZ410006	D1VT001330	DIODE,SILICON
D810	BZ410006	D1VT001330	DIODE,SILICON
D811	BZ410006	D1VT001330	DIODE,SILICON
D812	BZ410006	D1VT001330	DIODE,SILICON
<b>ICS</b>			
IC101	AE006067	I56F07090B	IC
IC199	AE006896	A3S002U015	INIT DATA
IC302	AD301983	I01FF58910	IC
△IC401	AE002783	I03TD804N0	IC
△IC504	BZ410088	0002E00610	PHOTO COUPLER
IC601	AE003906	I06FC1283B	IC
IC902	BZ611068	I01FF58290	IC
△IC1001	AD302184	I0FSP7522N	IC
IC1501	AE006220	I05FEA45FG	IC
IC1502	AD301988	I0UF015010	IC
IC1503	AD301988	I0UF015010	IC
<b>TRANSISTORS</b>			
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
△Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON
△Q405	AE000656	TC1G058850	TRANSISTOR,SILICON
△Q502	BZ510098	T220033260	FET
△Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON
△Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON
△Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON
△Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON
△Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
△Q801	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q802	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q803	BZ510100	TCATC3199Y	TRANSISTOR,SILICON
△Q804	BZ510009	TC3F042170	TRANSISTOR,SILICON
△Q805	BZ510009	TC3F042170	TRANSISTOR,SILICON
△Q806	BZ510009	TC3F042170	TRANSISTOR,SILICON
Q1501	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
Q1502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
<b>COILS &amp; TRANSFORMERS</b>			
L301	BZ310041	02167F101J	COIL
L401	BZ310004	021679472K	COIL
L402	BZ310063	022100027A	COIL,LINEARITY
△L501	BZ310144	029T000097	COIL,LINE FILTER
△L503	BZ310066	028R200024	COIL,DEGAUSS
L901	BZ310041	02167F101J	COIL
L1501	BZ310041	02167F101J	COIL
L1503	BZ310141	02167F100J	COIL
L1504	AD300613	02167F150J	COIL
L1507	BZ310183	021LA6220J	COIL
T401	BZ310172	045013003J	TRANS,HORIZONTAL DRIVE
△T501	AE006212	048135091S	TRANSFORMER,SWITCHING
<b>JACKS</b>			
J701	AE002759	060J431020	RCA JACK
J702	AE006074	063Q700011	JACK
J704	AE002761	060J411032	RCA JACK
J705	AE004756	060J401104	RCA JACK
J706	AE004758	060J401106	RCA JACK
J707	AE004757	060J401105	RCA JACK
△J801	AD301356	066F130020	SOCKET,CATHODE RAY,TUBE
△J1001	AE003431	060J131016	HEADPHONE JACK
<b>SWITCHES</b>			
SW101	BZ612010	0504101T34	SWITCH,TACT
SW102	BZ612010	0504101T34	SWITCH,TACT
SW103	BZ612010	0504101T34	SWITCH,TACT
SW104	BZ612010	0504101T34	SWITCH,TACT
SW105	BZ612010	0504101T34	SWITCH,TACT
<b>VARIABLE RESISTORS</b>			
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED
<b>P.C.BOARD ASSEMBLIES</b>			
PCB010	AE006897	A3S002U010	PCB ASS'Y
PCB110	AE006219	A3S002U110	PCB ASS'Y
<b>MISCELLANEOUS</b>			
B501	BZ310045	024AT03481	CORE,BEADS
B504	BZ310121	024HT03553	CORE,BEADS
B1502	BZ310121	024HT03553	CORE,BEADS
BT001	AE005640	141R004016	BATTERY,MANGAN
BT002	AE005640	141R004016	BATTERY,MANGAN
△CD501	AE006077	1209615904	CORD,AC BUSH
CD801	BZ614446	WCL6836038	FLAT CABLE
CD802	AE006077	WDL6046038	FLAT CABLE
CD803	AE005894	06C3823005	CORD,CONNECTOR
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE
△CP401	AE006075	069X460109	CONNECTOR PCB SIDE
△CP501	BZ614176	069S320419	CONNECTOR PCB SIDE
△CP502	BZ614283	069S420110	CONNECTOR PCB SIDE
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE
CP803	BZ614269	069S320010	CONNECTOR PCB SIDE
CP806	BZ614058	069W010010	CONNECTOR PCB SIDE
CD1001	AE006213	06C3146903	CORD CONNECTOR
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE
CP801A	BZ614276	067U005049	WIRE HOLDER
CP801B	BZ614276	067U005049	WIRE HOLDER
CP802A	BZ614333	067U006049	WIRE HOLDER
CP802B	BZ614333	067U006049	WIRE HOLDER
CUS011	BZ710149	800WFAA008	CUSHION C
EL001	BZ614044	124120301A	EYE LET
EL002	BZ614043	124116281A	EYE LET
△F501	BZ614422	081PC6R305	FUSE
△FB401	AE003174	043220060F	TRANSFORMER,FLYBACK
FH501	AE002634	06710T0009	HOLDER,FUSE
FH502	AE002634	06710T0009	HOLDER,FUSE
OS101	AD301048	0773071001	REMOTE RECEIVER
△RY501	AE006070	0560X20118	RELAY
△SP1001	AD301050	070C457003	SPEAKER

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			<b>MISCELLANEOUS</b>	
△SP1002	AD301050	070C457003	SPEAKER	SG05K07BRA
△TH501	AD302000	D8EE0B1400	DEGAUSS ELEMENT	B59203-S1060-B14
TM101	AE006214	076N0GQ020	TRANSMITTER	RC-GQ020
△TU001	AE006069	0163300018	RF UNIT	115-V-KA35ARB
△V801	AE006215	0981210460	CRT W/DY	A51LYZ095X81
X101	AD302002	100CT8R005	CRYSTAL	HC-49/U-S
X602	AD301653	100DT3R531	CRYSTAL	HC-49/U

**RESISTOR**

RC..... CARBON RESISTOR

**CAPACITORS**

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CMP..... METAL POLYESTER CAPACITOR  
 CMPL..... METAL PLASTIC CAPACITOR  
 CMPP..... METAL POLYPROPYLENE CAPACITOR

# **TOSHIBA CORPORATION**

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN