


SERVICE MANUAL

BG3R CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KV-XJ29M31</i>	<i>RM-952</i>	<i>Oceania</i>	<i>SCC-U44E-A</i>	<i>KV-XJ29M81</i>	<i>RM-952</i>	<i>ME</i>	<i>SCC-U53D-A</i>
<i>KV-XJ29M50</i>	<i>RM-952</i>	<i>India</i>	<i>SCC-U60H-A</i>				
<i>KV-XJ29M50</i>	<i>RM-952</i>	<i>Thailand</i>	<i>SCC-U49K-A</i>				
<i>KV-XJ29M60</i>	<i>RM-952</i>	<i>Thailand</i>	<i>SCC-U49J-A</i>				
<i>KV-XJ29M80</i>	<i>RM-952</i>	<i>E</i>	<i>SCC-U53D-A</i>				
<i>KV-XJ29M80</i>	<i>RM-952</i>	<i>ME</i>	<i>SCC-U53D-A</i>				
<i>KV-XJ29M80</i>	<i>RM-952</i>	<i>India</i>	<i>SCC-U60H-A</i>				

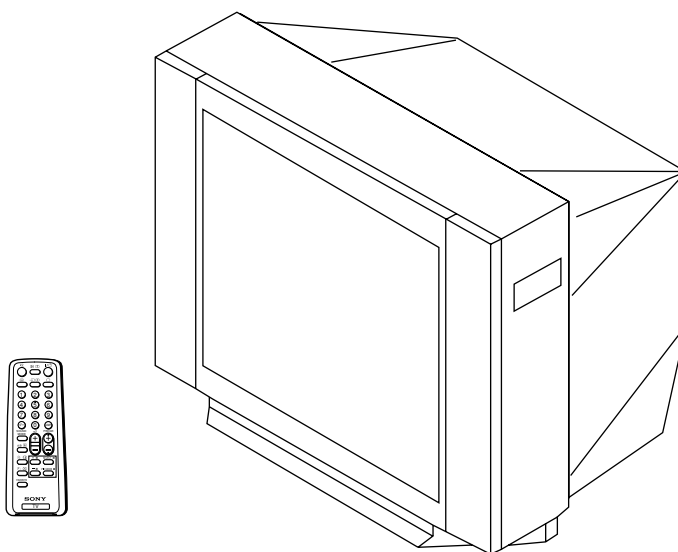

TRINITRON® COLOR TV
SONY®

SPECIFICATIONS

		Note	
Power requirements	110-240 V AC, 50/60 Hz	Except KV-XJ29M31/XJ29M50/ XJ29M60(Thailand)	
	220-240 V AC, 50/60 Hz	KV-XJ29M31/XJ29M50/ XJ29M60(Thailand) only	
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I, D/K; A2 Stereo/Bilingual B/G	KV-XJ29M31/XJ29M60/ XJ29M80/XJ29M81 (ME) only	
Teletext Language	English, Arabic, French	KV-XJ29M31/XJ29M81 only	
Channel coverage	B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S1 to S41	
	I	UHF: B21 to B68 CATV: S01 to S03, S1 to S41	
	D/K	VHF: C1 to C12, R1 to R12 UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39	
	M	VHF: A2 to A13 UHF: A14 to A79 CATV: A-8 to A-2, A to W+4, W+6 to W+84	
⌚ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	5W + 5W		
Number of terminal	📺 Video	Input: 3* Output: 1 Phono jacks; 1 V _{p-p} , 75 ohms	*Two input lines available
	🎵 Audio	Input: 3* Output: 1 Phono jacks; 500 mV _{rms}	*Two input lines available
	📺 (Component Video)	Input: 1 Phono jacks; Y : 1 V _{p-p} , 75 ohms, sync negative C _B : 0.7 V _{p-p} , 75 ohms C _R : 0.7 V _{p-p} , 75 ohms Audio : 500 mV _{rms}	
	🎧 (Headphone)	Output: 1 Stereo minijack	
	Picture tube	29 in.	
Tube size (cm)	72	Measured diagonally	
Screen size (cm)	68	Measured diagonally	
Dimension (w/h/d, mm)	794 x 573 x 517		
Mass (kg)	49		

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK \triangle ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
	SELF DIAGNOSTIC FUNCTION	4	5. DIAGRAMS		
1. GENERAL		7	5-1. Block Diagram		39
2. DISASSEMBLY			5-2. Circuit Boards Location		41
2-1. Rear Cover Removal		24	5-3. Schematic Diagrams		42
2-2. Speaker Removal		24	(1) B9 Board Schematic Diagram		43
2-3. Chassis Assy Removal		24	(2) A Board Schematic Diagram		45
2-4. Service Position		24	(3) C6 Board Schematic Diagram		49
2-5. Replacement of Parts		24	(4) H5 Board Schematic Diagram		51
2-5-1. Replacement of Multi Button		24	(5) V1 Board Schematic Diagram		53
2-5-2. Replacement of Light Guide		24	(6) VM1 Board Schematic Diagram		55
2-6. J4 Board and Terminal Bracket Removal		25	(7) D3 Board Schematic Diagram		56
2-7. D3 Board Removal		25	(8) J4 Board Schematic Diagram		57
2-8. V1 Board Removal		25	5-4. Voltage List Measurements		61
2-9. H5 Board Removal		25	5-5. Waveforms		64
2-10. A and B9 Boards Removal		25	5-6. Printed Wiring Boards and Parts Location		65
2-11. Picture Tube Removal		26	5-7. Semiconductors		71
3. SET-UP ADJUSTMENTS			6. EXPLODED VIEWS		
3-1. Beam Landing		27	6-1. Speaker Bracket		73
3-2. Convergence		28	6-2. Chassis		74
3-3. Focus Adjustment		30	6-3. Picture Tube		76
3-4. G2 (Screen) and White Balance Adjustments		30	7. ELECTRICAL PARTS LIST		78
4. CIRCUIT ADJUSTMENTS					
4-1. Adjustment With Commander		31			
4-2. Adjustment Method		31			
4-3. Picture Quality Adjustment		37			
4-4. Deflection Adjustment		37			
4-5. H-Trapezoid Adjustment		37			
4-6. A Board Adjustment After IC003 (Memory) Replacement		37			
4-7. Picture Distortion Adjustment		38			

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.

The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".


Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	<ul style="list-style-type: none"> • Power cord is not plugged in. • Fuse is burned out F8601 (B9) 	<ul style="list-style-type: none"> • Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
<ul style="list-style-type: none"> • +B overcurrent (OCP) or overvoltage (OVP) • Vertical deflection stopped • Horizontal deflection overdrive 	2 times	002:000 or 002:001~255 003:001~255 004:001~255 at the same time	<ul style="list-style-type: none"> • H.OUT Q511 is shorted. (A board) • IC1800 is shorted. (C6 board) • -13V is not supplied. (A board) • IC 503 faulty (A board) 	<ul style="list-style-type: none"> • Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~225	<ul style="list-style-type: none"> • G2 is improperly adjusted. (Note 2) • CRT problem. • Video OUT is faulty. (C6 board) • IC301 is faulty. (A board) • No connection A board to C6 board. 	<ul style="list-style-type: none"> • No raster is generated. • CRT cathode current detection reference pulse output is small.
• Micro reset	—	101:00 or 101:001~225	<ul style="list-style-type: none"> • Discharge CRT (C6 Board) • Static discharge • External noise 	<ul style="list-style-type: none"> • Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.

The symptom that is diagnosed first by the microcontroller is displayed on the screen.


Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

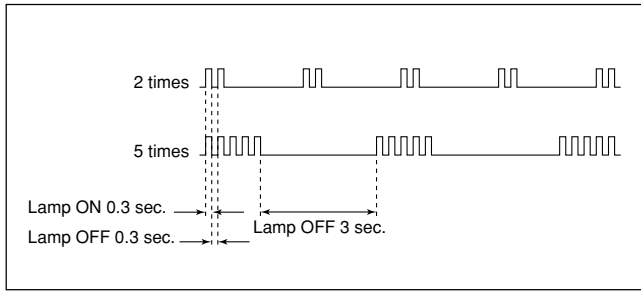

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage Vertical deflection stopped	2 times
White balance failure	5 times

* One flash count is not used for self-diagnostic.

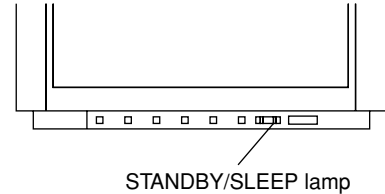

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as "power sometimes shuts off" or "screen sometimes goes out" that cannot be confirmed, it is possible to bring up past occurrences of failure for confirmation on the screen:

[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display → channel [5] → Sound volume [-] → Power ON
↑

Note that this differs from entering the service mode (mode volume [+]).

Self-Diagnosis screen display

```

SELF DIAGNOSTIC
002 : 000 ←
003 : 000
004 : 000
005 : 001 ←
101 : 000
    
```

Numeral "0" means that no fault has been detected.

Numeral "1" means a fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to "0".

Unless the result display is cleared to "0", the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]


To clear the result display to "0", press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel **[8]** → 0

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

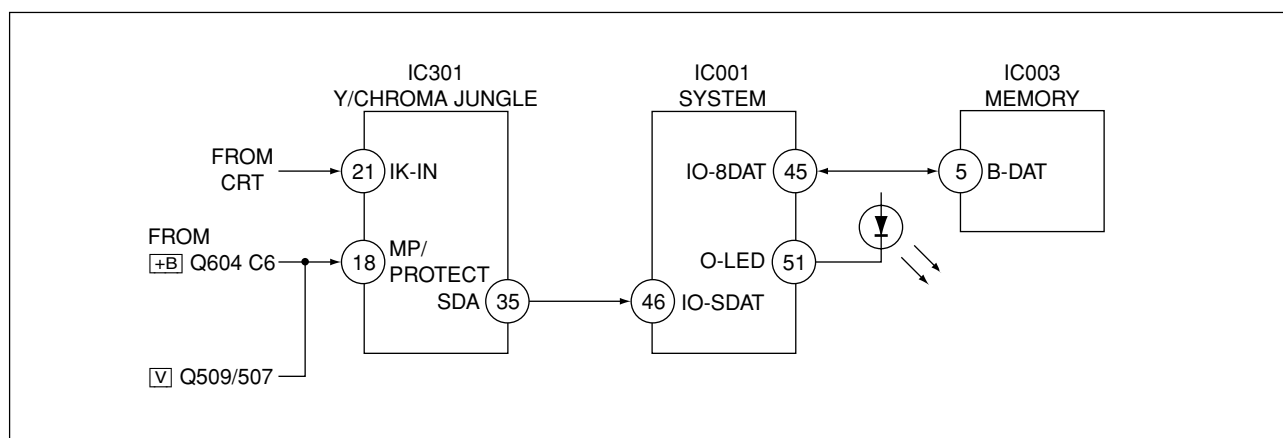

[+B overcurrent (OCP)]

Occurs when an overcurrent on the +B(135) line is detected by Q604. If Q604 goes ON and the voltage to pin 18 of IC301 should go down when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

[Vertical deflection stopped]

Occurs when an absence of the vertical deflection pulse is detected by Q509 and IC001 shut down the power supply.

[Vertical deflection overcurrent]

Occurs when an overcurrent on V drive line is detected by Q507. Power supply will be shut down when detect this by IC001.

[White balance failure]

If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture.






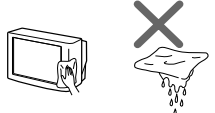
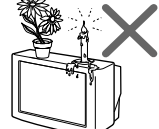
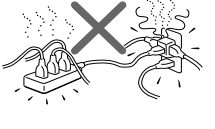

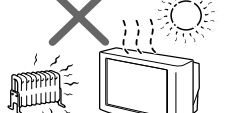
* (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.



SECTION 1 GENERAL

WARNING

- Dangerously high voltages are present inside the TV.
- Operate the TV only between 110 - 240 V AC (KV-XJ29M50/M80 (India)/XJ29M80 (E/ME)/XJ29M81) and 220 - 240 V AC (KV-XJ29M31/XJ29M50/M60 (Thailand)).

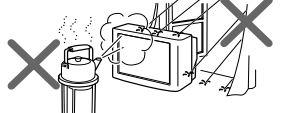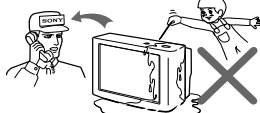 <p>For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.</p>	 <p>For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.</p>
 <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p>	 <p>Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.</p>
 <p>Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.</p>	 <p>Clean the TV with a dry and soft cloth. Do not use benzene, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.</p>
 <p>Do not place any objects on the TV.</p>	 <p>Do not plug in too many appliances to the same power socket. Do not damage the power cord.</p>
 <p>Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.</p>	 <p>Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.</p>

WARNING (continued)

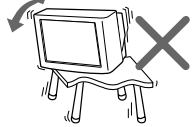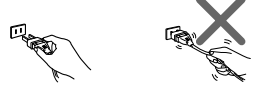
 <p>Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.</p>	 <p>Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.</p>
---	--

Getting Started

Step 1


Connect the antenna

If you wish to connect a VCR, see the **Connecting a VCR** diagram below.

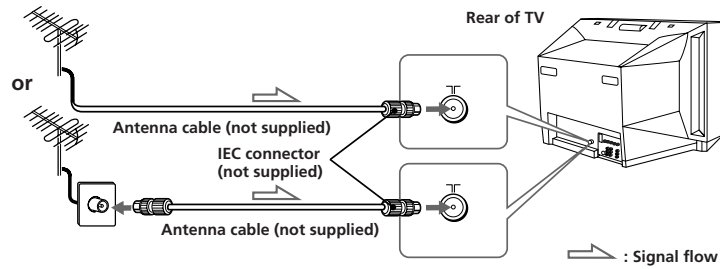

Connecting a VCR

To watch the video input, press **2** (see page 13).

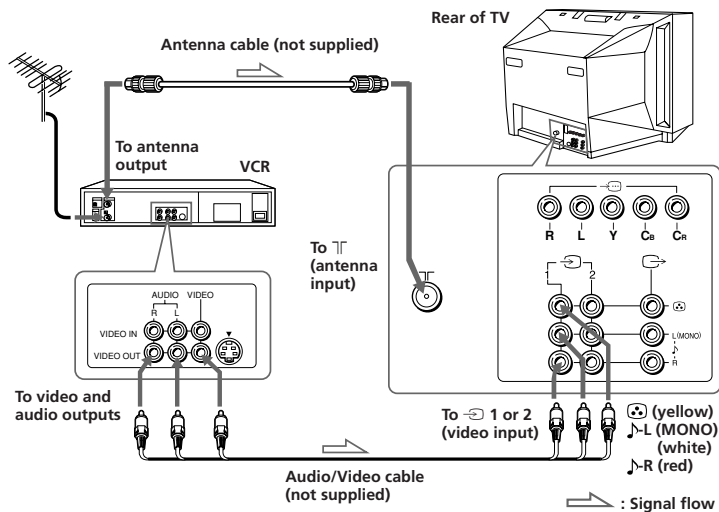

Notes


- If you connect a monaural VCR, connect the yellow plug to **2** (the yellow jack) and the black plug to **L** (MONO) (the white jack).
- If you connect a VCR to the **2** (antenna input) terminal, preset the signal output from the VCR to the program number 0 on the TV.
- Do not connect video equipment to the **2** (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen (KV-XJ29M31/XJ29M80 (E)/XJ29M50/M80 (India)/XJ29M50/M60 (Thailand)).
- When no signal is input from the connected video equipment, the TV screen becomes blue.

CAUTION

- Do not connect the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

Step 2

Insert the batteries into the remote




Note

- Do not use old batteries nor use different types of batteries together.

Step 3

Preset the channels automatically

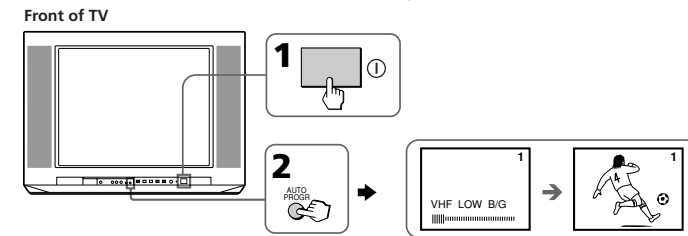

Tips

- If you want to stop automatic channel presetting, press **SELECT** twice.
- If your TV has preset an unwanted channel or cannot preset a particular channel, then preset your TV manually (see page 10).

Note


- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system (KV-XJ29M50/M80 (India)/XJ29M80 (E/ME)/XJ29M50 (Thailand)/XJ29M81).

Connecting optional components

You can connect optional audio/video components, such as a VCR, multi disc player, camcorder, video game or stereo system.

To watch the video input of the connected equipment, press (see page 13).


Connecting a camcorder/video game equipment using the (video input) jacks

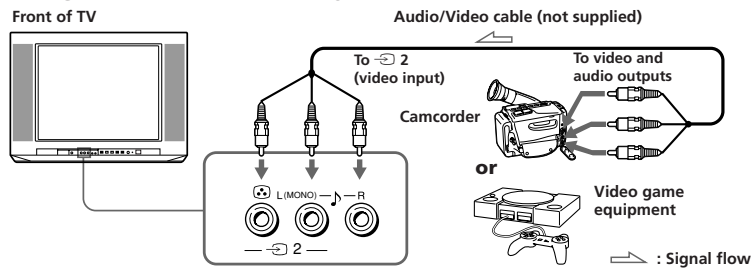

Notes

- You can also connect video equipment to the 1 or 2 (video input) jacks at the rear of your TV.
- Do not connect video equipment to the 2 (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting audio/video equipment using the (monitor output) jacks

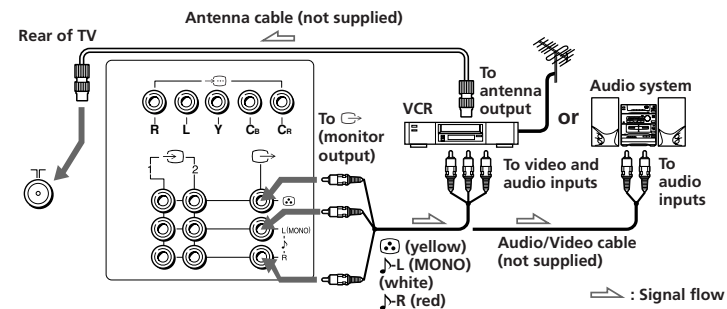


Note

- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Connecting a DVD player using the (component video input) jacks

- Connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.
- Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

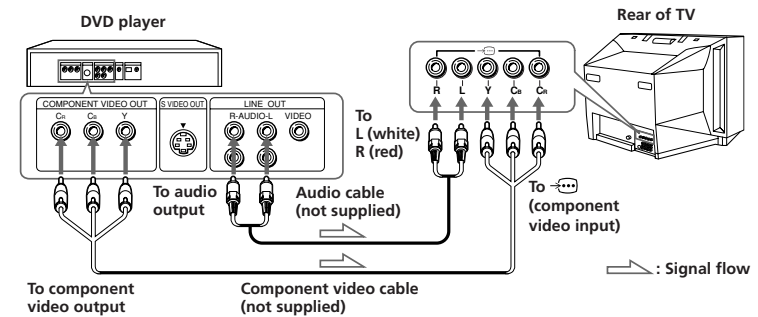

Notes

- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
 - Some DVD player terminals may be labeled differently:
- | Connect | To (on the DVD player) |
|-----------------------|--|
| Y (green) | Y |
| C _B (blue) | C _B , B-Y or P _B |
| C _R (red) | C, R-Y or P _R |
- Since the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, adjust the sharpness ("SHARP") (see page 16).


Securing the TV

To prevent the TV from falling, secure the TV using one of the following methods:

- A** With the supplied screws, attach the band to the TV stand and to the rear of the TV using the provided hole.

or

- B** Put the cord or chain through the clamps to secure the TV against a wall or pillar.

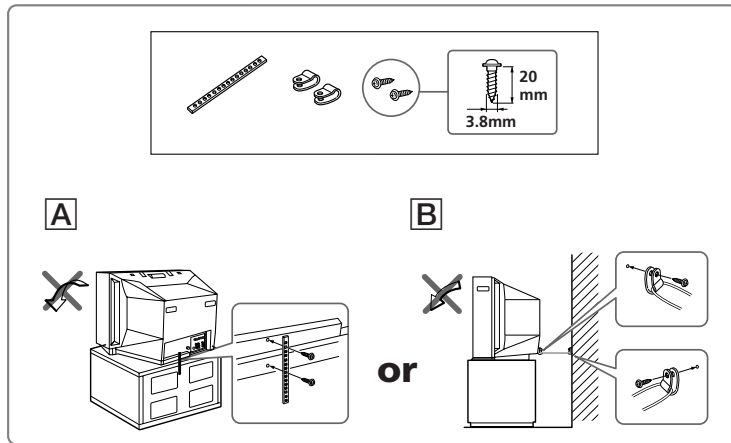


Note

- Use only the supplied screws. Use of other screws may damage the TV.

Presetting channels

(KV-XJ29M50/M80 (India)/
XJ29M80 (ME)/XJ29M81)

You can preset up to 100 TV channels in numerical sequence from program number 1 using the remote and the buttons on your TV as well.

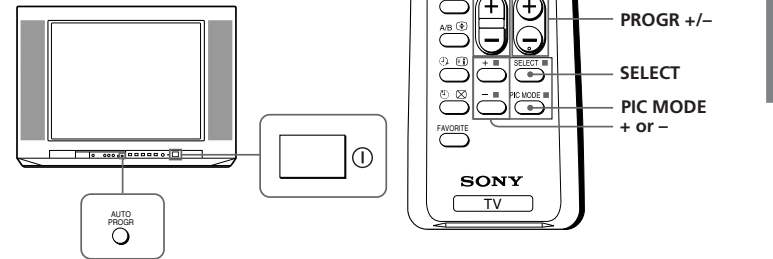


Presetting channels automatically

- 1** Press ① to turn on the TV.



- 2** Press AUTO PROGR.



Note

- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system.

To preset channels automatically from a specified program number


- Press SELECT until "AUTO PROGRAM" appears.
- Press + or - to enter the "AUTO PROGRAM" mode. The on-screen display will start flashing.
- Press PROGR +/- or the number buttons until the desired program number appears.
- Press + or - to start presetting channels automatically.

continued

Presetting channels

(KV-XJ29M31/XJ29M80 (E)/
XJ29M50/M60 (Thailand))

You can preset up to 100 TV channels in numerical sequence from program number 1 using the remote and the buttons on your TV as well.

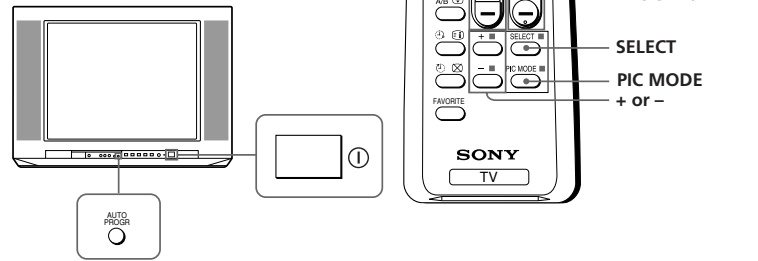

Presetting channels automatically

- 1 Press ① to turn on the TV.



- 2 Press AUTO PROGR.



VHF LOW AUTO

To preset channels automatically from a specified program number


- (1) Press SELECT until "AUTO PROGRAM" appears.
- (2) Press + or - to enter the "AUTO PROGRAM" mode. The on-screen display will start flashing.
- (3) Press PROGR +/- or the number buttons until the desired program number appears.
- (4) Press + or - to start presetting channels automatically.

continued

Presetting channels (continued)

Presetting channels manually


- 1 Press SELECT until "MANUAL PROGRAM" appears.




- 2 Press + or - to enter the "MANUAL PROGRAM" mode.



- 3 Press PROGR +/- or the number buttons until the desired program number appears.

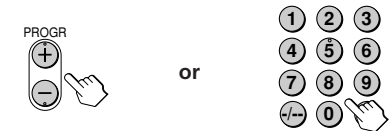

- 4 Press + or - until the desired channel picture appears.



- 5 Press SELECT to exit the "MANUAL PROGRAM" mode.




To change the TV system setting

If the picture or sound is abnormal when receiving programs through the T (antenna input) terminal

- (1) Press SELECT until "TV SYS" appears.

TV SYS: B/G


- (2) Press + or - to select the appropriate TV system until the picture or sound quality is optimal.



To change the color system setting

If the color is abnormal when receiving programs through the Υ (antenna input) terminal or the V (video input) jack.

(1) Press SELECT until "COLOR SYS" appears.

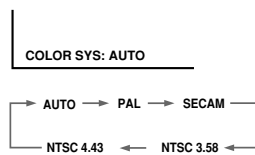

(2) Press + or - to select the appropriate color system until the color is optimal.

Tip

- Normally set "COLOR SYS" to "AUTO".

Skipping program numbers

- 1 Press PROGR +/- or the number buttons until the unused or unwanted program number appears.
- 2 Press SELECT until "MANUAL PROGRAM" appears.
- 3 Press + or - to enter the "MANUAL PROGRAM" mode.
- 4 Press PIC MODE.
- 5 Press SELECT to exit the "MANUAL PROGRAM" mode.

To restore the skipped program number again

Preset the channel automatically or manually.

Tip

- You can also use SELECT and \triangle +/- on the TV to preset channels and skip program numbers.

To use the fine tuning (FINE) function

The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.


You can use the fine tuning function as below:

- (1) Select the program number you want to adjust.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or - on the remote control once.
- (4) Press FINE to display "FINE" on the screen.
- (5) Press + or - continuously until the above problems are minimized. The + or - icon on the screen flashes while tuning.
- (6) Press SELECT to return to normal screen.

Using Your New TV

Watching the TV

This section explains functions used while watching the TV. Most operations can be done using the remote.

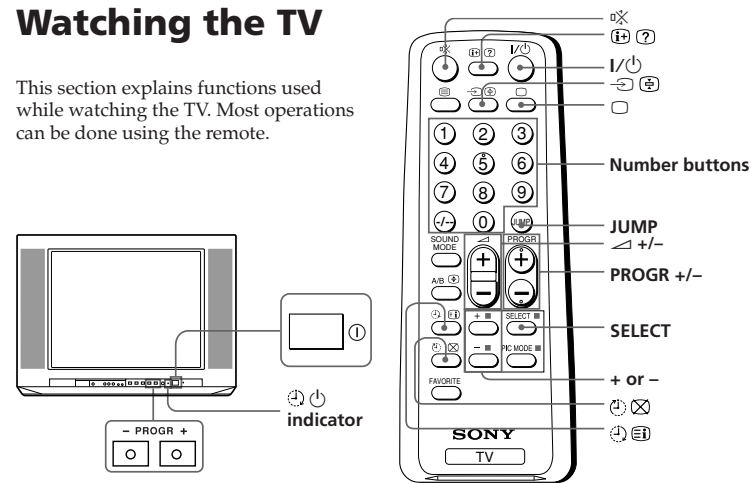


1 Press I to turn on the TV.

When the TV is in the standby mode (the I indicator on the TV is lit red), press I/ I on the remote or PROGR +/- on the TV.



2 Press PROGR +/- or the number buttons to select the program number.

For double digit numbers, press -/-, then the number (e.g., for 25, press -/-, then 2 and 5).

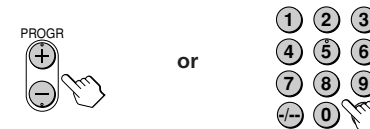


3 Press \triangle +/- to adjust the volume.



Additional tasks (KV-XJ29M50/M60 (Thailand))

To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	⏻ on the TV.
Mute the sound	🔇.
Watch the video input (VCR, camcorder, etc.)	↔ to select "VIDEO 1", "VIDEO 2" or "DVD". To return to the TV program, press □.
Jump back to the previous program number	JUMP.
Display the on-screen information*	ℹ.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or - to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen	SELECT repeatedly until "PIC ROTATION" appears, then press + or - to adjust the alignment of the picture position.


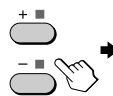


The ↕ or ⇄ icon on the screen flashes while adjusting.

Using Your New TV

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language

- Press SELECT until "LANGUAGE/ ภาษา: ENGLISH" appears on the screen.
  → LANGUAGE / ภาษา : ENGLISH
- Press + or - to select "ไทย".
  → ภาษา / LANGUAGE: ไทย


Tip

- You can also use SELECT and ↵ +/- on the TV to select the on-screen display language.

continued

Additional tasks (KV-XJ29M50/M80 (India)/XJ29M80 (ME)/XJ29M81)

To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	⏻ on the TV.
Mute the sound	🔇.
Watch the video input (VCR, camcorder, etc.)	↔ to select "VIDEO 1", "VIDEO 2" or "DVD". To return to the TV program, press □.
Jump back to the previous program number	JUMP.
Display the on-screen information*	ℹ.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or - to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen	SELECT repeatedly until "PIC ROTATION" appears, then press + or - to adjust the alignment of the picture position.





The ↕ or ⇄ icon on the screen flashes while adjusting.

Using Your New TV

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language

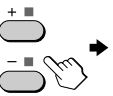- Press SELECT until "LANGUAGE/ اللغة: ENGLISH" appears on the screen.
  → LANGUAGE / اللغة : ENGLISH
- Press + or - to select "عربي".
  → LANGUAGE / اللغة : عربي

Tip

- You can also use SELECT and ↵ +/- on the TV to select the on-screen display language.

continued

Additional tasks (KV-XJ29M31/XJ29M80 (E))



To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	⏻ on the TV.
Mute the sound	⏸.
Watch the video input (VCR, camcorder, etc.)	⏮ to select "VIDEO 1", "VIDEO 2" or "DVD". To return to the TV program, press ⏪.
Jump back to the previous program number	JUMP.
Display the on-screen information*	Ⓜ.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or - to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen	SELECT repeatedly until "PIC ROTATION" appears, then press + or - to adjust the alignment of the picture position.

PIC ROTATION ⏴⏵⏶⏷

The ⏴ or ⏵ icon on the screen flashes while adjusting.

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language

- Press SELECT until "LANGUAGE/ 语言: ENGLISH" appears on the screen.
 
- Press + or - to select "中文".
 


Tip

- You can also use SELECT and ⏴ +/- on the TV to select the on-screen display language.

continued

Watching the TV (continued)

Setting the Wake Up timer

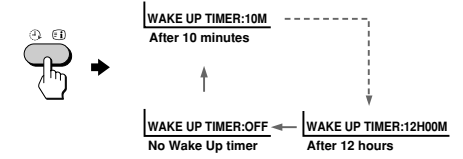- Press ⏻ until the desired period of time appears. The Wake Up timer starts immediately after you have set it.
 
- Select the program number or video input you want to display when you wake up.
- Press I/⏻ or set the Sleep timer if you want the TV to turn off automatically. The ⏻ indicator on the TV lights up orange when the TV goes into standby mode.


To cancel the Wake Up timer

Press ⏻ until "WAKE UP TIMER: OFF" appears or turn off the TV's main power.

Note

- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into the standby mode. To continue watching the TV, press any button or control on the TV or the remote.

Setting the Sleep timer

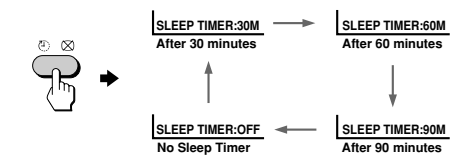- Press ⏻ until the desired period of time appears. The Sleep timer starts immediately after you have set it.
- 

To cancel the Sleep timer


Press ⏻ until "SLEEP TIMER: OFF" appears or turn the TV off.

Advanced Operations

Customizing the picture and sound

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.


You can change the sound effect by selecting the surround mode.

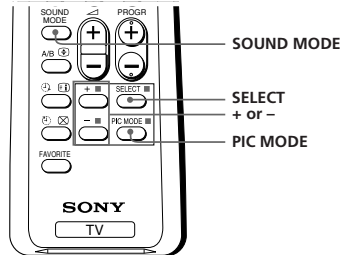

Selecting the picture and sound modes

To select the picture mode


Press PIC MODE repeatedly until you get the desired picture mode.



Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

To select the sound mode

Press SOUND MODE repeatedly until you get the desired sound mode.



Select	To
"DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"DRAMA"	listen to sound that emphasizes vocals and background music.
"SOFT"	listen to soft sound.


Advanced Operations

continued


Customizing the picture and sound (continued)

Adjusting the picture and sound settings


- 1 Press SELECT until the desired setting appears.



Each time you press SELECT, the setting item will change as follows:



- 2 Press + or - to adjust the item.



- 3 To adjust other items, repeat steps 1 to 2.

* "HUE" can be adjusted for the NTSC system only.

Notes


- When you select a picture or sound mode, the adjusted settings will be reset according to the selected mode.
- You can also use SELECT and \triangle +/- on the TV to adjust the picture and sound settings.

Selecting the wide mode

- 1 Press SELECT repeatedly until "WIDE MODE" appears.



- 2 Press + or - to select "ON".



Select	To
"ON"	change the picture size when receiving wide mode (16:9) picture signal.
"OFF"	turn off the wide mode.

Selecting the surround mode

- 1 Press SELECT repeatedly until "SURROUND" appears.




- 2 Press + or - to select the desired surround sound.



Select	To
"MOVIE"	listen to sound that spreads out over a large area, giving the feeling of being at a movie theatre.
"MUSIC"	listen to the sound that gives the feeling of being at a live concert.
"OFF"	turn off the surround sound.

Viewing your favorite channels

You can display six of your favorite channels for quick and easy selection. You can program the favorite channel as well.

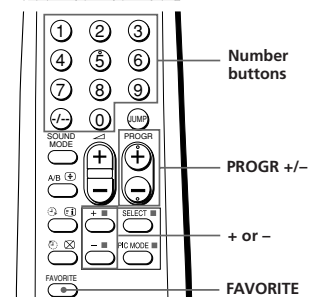


Selecting a favorite channel

- 1 Press FAVORITE.




- 2 Press the number button from 1 to 6 to select the desired favorite channel.




When you use the "FAVORITE CH SETUP" feature for the first time, six preset channels will appear.

Programming the favorite channel


- 1 Press PROGR +/- or number buttons to select the program number you want to program (e.g. program number 8).



- 2 Press SELECT until "FAVORITE CH SETUP" appears.



- 3 Press + or - to select the favorite channel you want to program (e.g. ③).




- 4 Press SELECT. The selected favorite channel (e.g., ③) turns red for about one second.



- 5 To program other favorite channels, repeat steps 1 to 4.

Blocking the channels (CHILD LOCK)

You can lock some program numbers to prevent children from watching certain channels, by using the buttons on the remote control.

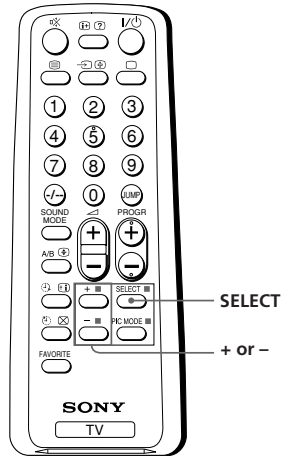

1 Select the program number you want to lock.

2 Press SELECT until "CHILD LOCK" appears on the screen.



3 Press + or - to select "ON".

The **f** symbol appears on the screen.

To cancel, press + or - to select "OFF". The **f** symbol disappears from the screen.




Note

- If you preset a locked program number, that particular program number will be unlocked automatically.


Enjoying stereo or bilingual programs

(KV-XJ29M31/XJ29M60 (Thailand))

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems.

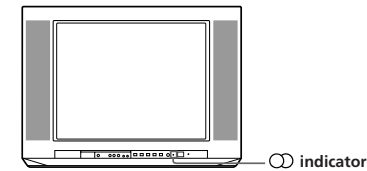


○ indicator

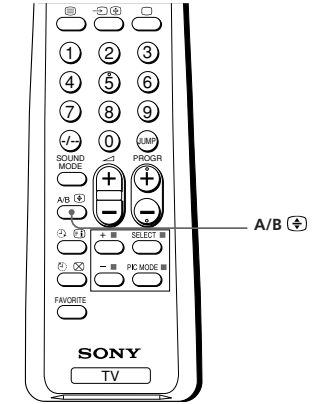

Press A/B repeatedly until you receive the sound you want.

The on-screen display changes to show the selected sound.

The ○ indicator on the TV lights up red when receiving any stereo or bilingual program.




When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	
NICAM bilingual	
NICAM monaural	

Viewing Teletext (KV-XJ29M31/XJ29M81)

TV stations broadcast an information service called Teletext via some TV channels. Teletext allows you to receive various information, such as shares market or news.

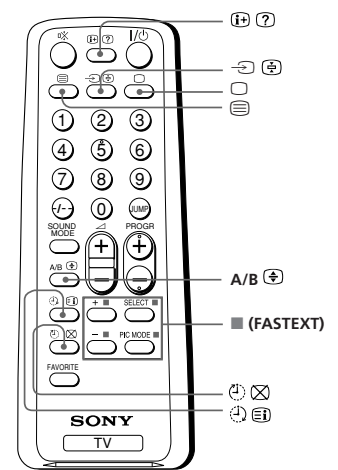


Displaying Teletext

1 Select a TV channel that carries the Teletext broadcast you want to watch.


2 Press **INFO** to display the text.

A Teletext page (normally the index page) is displayed. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.

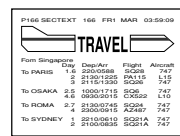

To turn off Teletext
Press **INFO**.

When receiving an A2 program (KV-XJ29M31/XJ29M80 (E)/XJ29M50/M60 (Thailand))

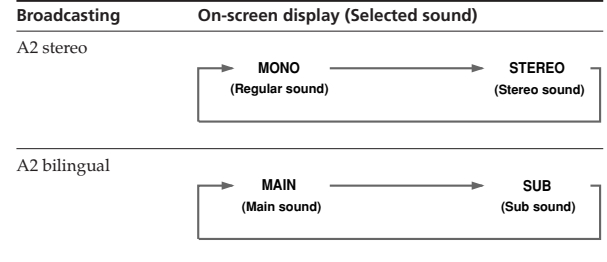

Receiving area for NICAM and A2 programs

System	Receiving area
NICAM	Hong Kong, Singapore, New Zealand, Malaysia, Thailand, etc.
A2	Australia, Malaysia, Thailand, etc.

- Notes**
- If the signal is very weak, the sound becomes monaural automatically.
 - If the stereo sound is noisy when receiving a NICAM program, select "MONO". The sound becomes monaural, but the noise is reduced.












If the sound is distorted when receiving a monaural program through the **ANTENNA** (antenna input) terminal

Press A/B repeatedly until "MONO" appears on the screen.
To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.







- Notes**
- The "MONO" or "AUTO" setting is memorized for each program number.
 - You cannot receive stereo broadcast signal when the TV is in the "MONO" setting. Normally set the TV to "AUTO".

Additional Teletext tasks (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)

To	Do this
display a Teletext page on the TV picture	Press  . Each time you press  , the screen changes as follows: Teletext → Teletext and TV → TV.
check the contents of a Teletext service	Press  . An overview of the Teletext contents and page numbers appear on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. * If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/-.
Hold (pause) a Teletext display	Press  to display the symbol "Ⓜ" at the top left corner of the screen. To resume normal Teletext operation, press  or  .
reveal concealed information (e.g., an answer to a quiz)	Press  . To conceal the information, press the button again.
enlarge the Teletext display	Press  . Each time you press  , the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
wait for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press  . 2 When the page number is displayed, press  to show the text.

* You can also select a Teletext page that appears in the colored column at the bottom of the screen using the corresponding color-coded button on the remote.

Using FASTEXT



This feature allows you to quickly access a Teletext page that uses FASTEXT. When a FASTEXT program is broadcasted, the colored menus appear at the bottom of the screen. The colors of the menus correspond to the red , green , yellow , and blue  color-coded buttons on the remote.


To access a FASTEXT menu





Press the color-coded button on the remote corresponding to the menu you want. The menu page appears on the screen after several seconds.

Additional Information

Self-diagnosis function

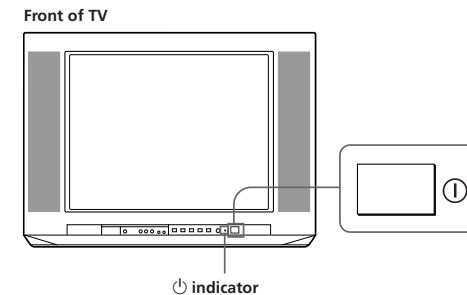Your TV is equipped with a self-diagnosis function. If there is a problem with your TV, the  indicator flashes red. The number of times the  indicator flashes indicates the possible causes.










- 1 Check that the  indicator flashes red several times between three second intervals.
- 2 Count the number of times the  indicator flashes.
- 3 Press  (main power) to turn off your TV.
- 4 Inform your nearest Sony service center about the number of times the  indicator flashes.
Be sure to note the model name and serial number located on the rear of your TV.

Troubleshooting

(KV-XJ29M31/XJ29M50/M80(India)/XJ29M80(E))

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer .








Symptom	Possible cause	Solutions	Page
Snowy picture 	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• Channel presetting is inappropriate or incomplete.	• Press SELECT until "MANUAL PROGRAM" appears on the screen, then preset the channel again.	10
Noisy sound 	• The antenna type is inappropriate.	• Check the antenna type (VHF/UHF). Contact a Sony dealer for advice.	-
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	-
	• Signal transmission is low.	• Try using a booster.	-
Distorted picture 	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	-
Noisy sound 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
Good picture 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
Noisy sound 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
No picture 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and the VCR connections.	4
	• The TV is not turned on.	• Press I/⏻ (power). • Press Ⓞ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	13 12

continued

Additional Information

Troubleshooting (KV-XJ29M80(E/ME)/XJ29M81)

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer .






Symptom	Possible cause	Solutions	Page
Snowy picture 	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• Channel presetting is inappropriate or incomplete.	• Press SELECT until "MANUAL PROGRAM" appears on the screen, then preset the channel again.	10
Noisy sound 	• The antenna type is inappropriate.	• Check the antenna type (VHF/UHF). Contact a Sony dealer for advice.	-
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	-
	• Signal transmission is low.	• Try using a booster.	-
Distorted picture 	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	-
Noisy sound 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
Good picture 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
Noisy sound 	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again.	9
		• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10
No picture 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and the VCR connections.	4
	• The TV is not turned on.	• Press I/⏻ (power). • Press Ⓞ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	13 12

continued

Additional Information







Troubleshooting (KV-XJ29M50/M60 (Thailand))


If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer .

Symptom	Possible cause	Solutions	Page
Snowy picture 	<ul style="list-style-type: none"> Connection is loose or the cable is damaged. 	<ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and on the wall. 	4
	<ul style="list-style-type: none"> Channel presetting is inappropriate or incomplete. 	<ul style="list-style-type: none"> Press SELECT until "MANUAL PROGRAM" appears on the screen, then preset the channel again. 	10
Noisy sound 	<ul style="list-style-type: none"> The antenna type is inappropriate. 	<ul style="list-style-type: none"> Check the antenna type (VHF/UHF). Contact a Sony dealer for advice. 	-
	<ul style="list-style-type: none"> The antenna direction is inappropriate. 	<ul style="list-style-type: none"> Adjust the antenna direction. Contact a Sony dealer for advice. 	-
	<ul style="list-style-type: none"> Signal transmission is low. 	<ul style="list-style-type: none"> Try using a booster. 	-
Distorted picture 	<ul style="list-style-type: none"> Broadcast signals are too strong. 	<ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. 	-
Noisy sound 	<ul style="list-style-type: none"> The TV system setting or channel presetting is inappropriate or incomplete. 	<ul style="list-style-type: none"> If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again. If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS). 	9 10
	<ul style="list-style-type: none"> The selected sound is inappropriate. 	<ul style="list-style-type: none"> If the sound of some channels are noisy, select the channel, then press A/B to select the main sound (KV-XJ29M60 only). 	20
No picture 	<ul style="list-style-type: none"> The power cord, antenna or VCR is not connected. 	<ul style="list-style-type: none"> Check the power cord, antenna and the VCR connections. 	4
	<ul style="list-style-type: none"> The TV is not turned on. 	<ul style="list-style-type: none"> Press I/O (power). Press (main power) on the TV to turn off the TV for about five seconds, then turn it on again. 	13 12

continued


Troubleshooting (continued)

Symptom	Possible cause	Solutions	Page
Good picture 	<ul style="list-style-type: none"> The volume level is too low. 	<ul style="list-style-type: none"> Press \triangleleft + to increase the volume level. 	12
	<ul style="list-style-type: none"> The sound is muted. 	<ul style="list-style-type: none"> Press MUTE to cancel the muting. 	13
	<ul style="list-style-type: none"> Broadcast signal has a transmission problem. 	<ul style="list-style-type: none"> Press A/B until the sound is optimal. (KV-XJ29M31/XJ29M60 (Thailand) only) 	20
No sound 			
Dotted lines or stripes 	<ul style="list-style-type: none"> There is local interference from cars, neon signs, hair dryers, power generators, etc. 	<ul style="list-style-type: none"> Do not use a hair dryer or other equipment near the TV. Adjust the antenna direction for minimum interference. Contact a Sony dealer for advice. 	- -
	Double images or "ghosts" 	<ul style="list-style-type: none"> Broadcast signals are reflected by nearby mountains or buildings. The antenna direction is inappropriate. Use of a booster is inappropriate. 	<ul style="list-style-type: none"> Use a highly directional antenna. Use the fine tuning (FINE) function. Adjust the antenna direction. Contact a Sony dealer for advice. Turn off or disconnect the booster if it is in use.
No color 	<ul style="list-style-type: none"> The color level setting is too low. 	<ul style="list-style-type: none"> Press SELECT until "COLOR" appears on the screen, then press + or - to adjust the color level. 	16
	<ul style="list-style-type: none"> The color system setting is inappropriate. 	<ul style="list-style-type: none"> Press SELECT until "COLOR SYS " appears on the screen, then check the color system setting (usually set this to "AUTO"). 	11
	<ul style="list-style-type: none"> The antenna direction is inappropriate. 	<ul style="list-style-type: none"> Adjust the antenna direction. Contact a Sony dealer for advice. 	-
Abnormal color patches 	<ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. 	<ul style="list-style-type: none"> Keep external speakers or other electrical equipment away from the TV. Do not move the TV while the TV is turned on. Press (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again. 	-
TV cannot receive stereo broadcast signal (KV-XJ29M31/XJ29M60 (Thailand) only)	<ul style="list-style-type: none"> The stereo reception setting is inappropriate. 	<ul style="list-style-type: none"> Press A/B until "AUTO" appears on the screen. 	20

Symptom	Possible cause	Solutions	Page
Stere broadcast sound switches on and off or is distorted. OR The sound switches between monaural and stereo, frequently. (KV-XJ29M31/XJ29M60 (Thailand) only)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	-
	• Broadcast signal has a transmission problem.	• Press A/B until a better sound is heard.	20
"100" appears on the top of the screen and there is no Teletext display. (KV-XJ29M31/XJ29M81)	• The channel carries no Teletext broadcast.	—	22
Teletext display is incomplete (snowy picture or double images). (KV-XJ29M31 / XJ29M81)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	4
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	-
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning (FINE) function.	- 11
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV.	-
		• Press SELECT until "PIC ROTATION" appears on the screen, then press + or - to adjust the picture position until it is optimal.	13
Lines moving across the TV screen.	• There is interference from external sources, e.g., heavy machineries, nearby broadcast station.	• Use the fine tuning (FINE) function.	11
The indicator on your TV flashes red several times between three second intervals.	• Your TV may need service.	• Contact your nearest Sony service center.	24
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.	—	-
A "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	-


Overview of controls

TV front panel

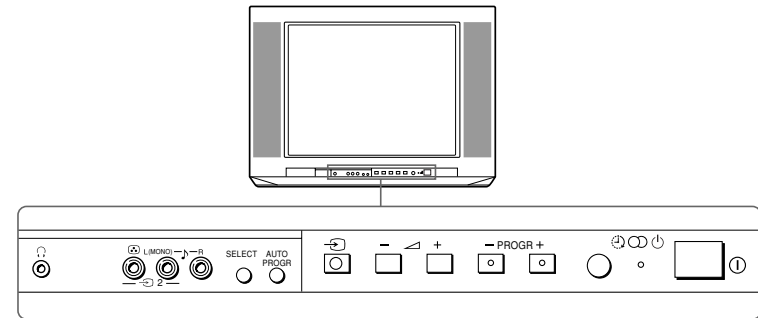

Button	Function	Page
AUTO PROGR	Preset channels automatically.	5
SELECT	Select the desired item.	11
PROGR +/-	Select program number.	12
⓪	Turn off or turn on the TV.	12
△ +/-	Adjust volume.	12
ⓧ	Standby indicator.	12
ⓧ	Select TV or video input.	13
ⓧ	Wake Up indicator.	14
ⓧ (KV-XJ29M60 only)	Stereo/bilingual indicator.	20
ⓧ	Headphone jack.	-

Remote Control

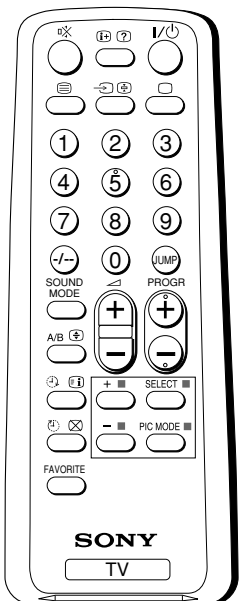


The names/symbols of buttons on the remote are indicated in different colors to represent the available functions.

Label color	Button function
White	For general TV operations
Green	For Teletext operations


Button	Function	Page
SELECT	Select the desired item.	10
+/-	Adjust value.	10
PROGR +/-	Select program number.	12
0 - 9, -/--	Input numbers.	12
∟ +/-	Adjust volume.	12
I/O	Turn off temporarily or turn on the TV.	12
↔	Select TV or video input.	13
□	Display the TV program.	13
⊗	Mute the sound.	13
Ⓜ	Display on-screen information.	13
JUMP	Jump to previous program number.	13
Timer operations		
⌚	Set TV to turn on automatically.	14
⌚	Set TV to turn off automatically.	14
PIC MODE	Select picture mode.	15
SOUND MODE	Select sound mode.	15
FAVORITE	Display favorite channels.	18
Stereo/bilingual operations (KV-XJ29M31/XJ29M60 (Thailand))		
A/B	Select stereo/bilingual mode.	20
Teletext operations (KV-XJ29M31/XJ29M81)		
☰	Display Teletext broadcast.	22
☰	Display Teletext service contents.	23
☰	Stop Teletext page from scrolling.	23
?	Reveal concealed information.	23
⊕	Enlarge the Teletext display.	23
⊗	Show TV screen while waiting for Teletext page.	23
■ (red, green, yellow, blue)	Access a FASTEXT menu	23

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

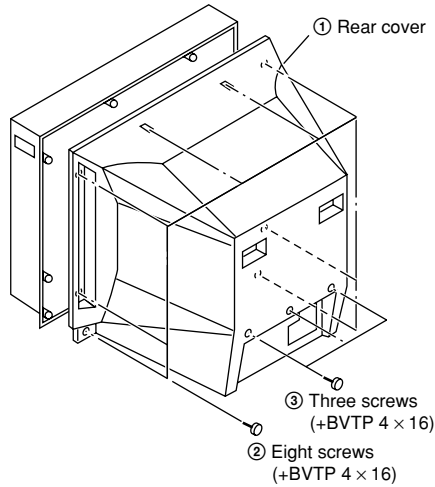


2-2. SPEAKER REMOVAL

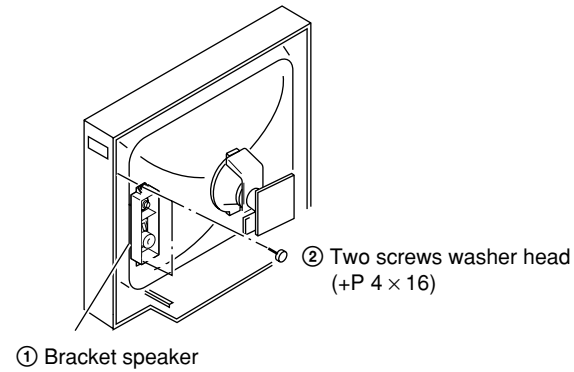

2-3. CHASSIS ASSY REMOVAL

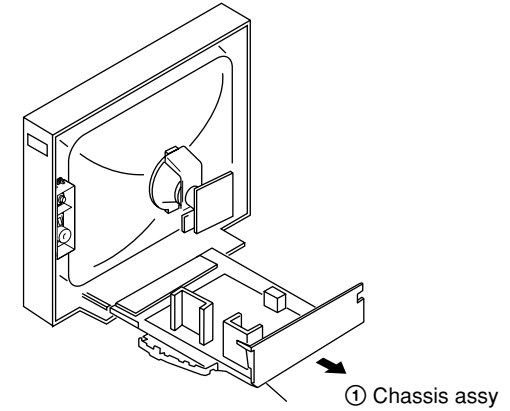


2-4. SERVICE POSITION

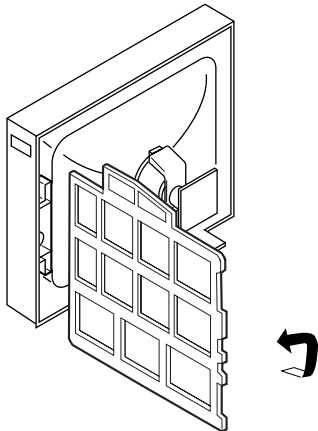


2-5. REPLACEMENT OF PARTS

For replacement of the Multi Button and Light Guide, unscrew them, exchange with the new parts, and fix them with screws (+BVTP) respectively.


2-5-1. REPLACEMENT OF MULTI BUTTON

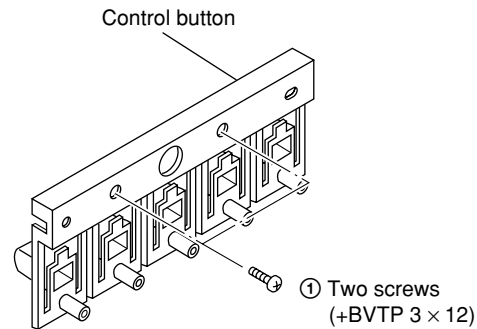


2-5-2. REPLACEMENT OF LIGHT GUIDE

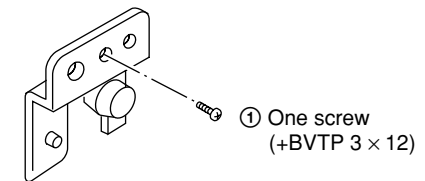


2-6. J4 BOARD AND TERMINAL BRACKET REMOVAL

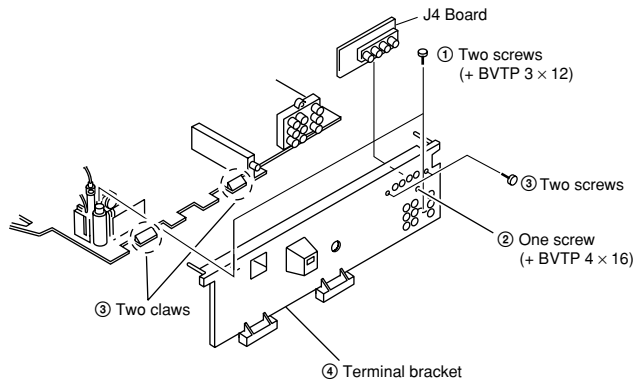


2-7. D3 BOARD REMOVAL

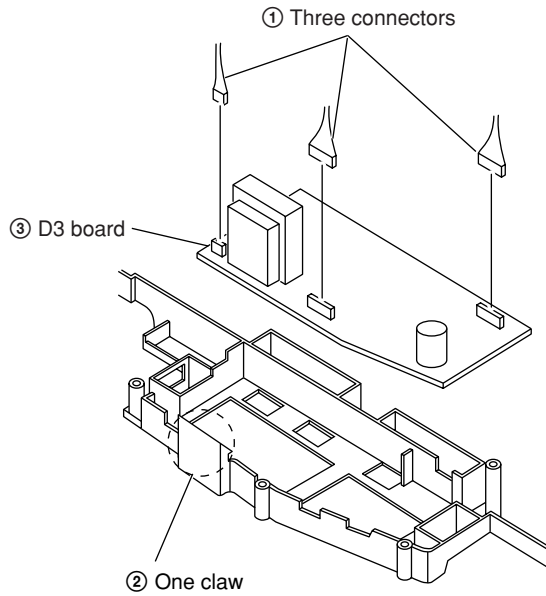


2-8. V1 BOARD REMOVAL

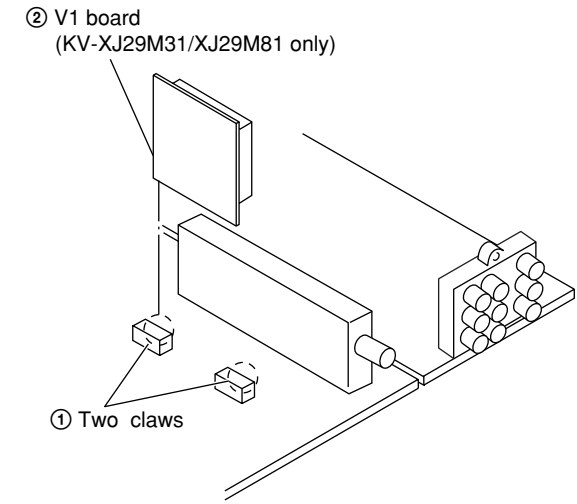


2-9. H5 BOARD REMOVAL

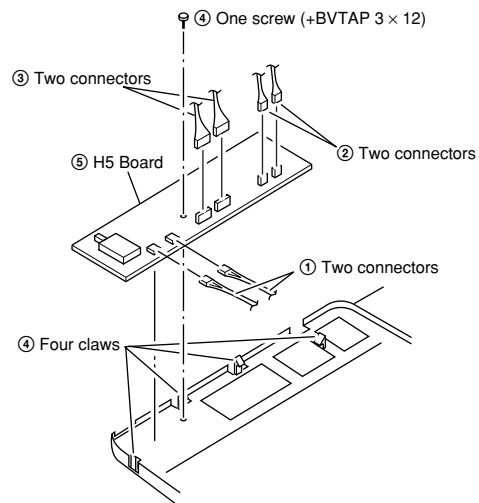

2-10. A AND B9 BOARDS REMOVAL

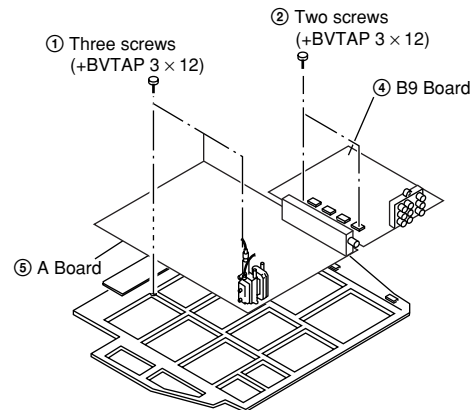


2-11. PICTURE TUBE REMOVAL

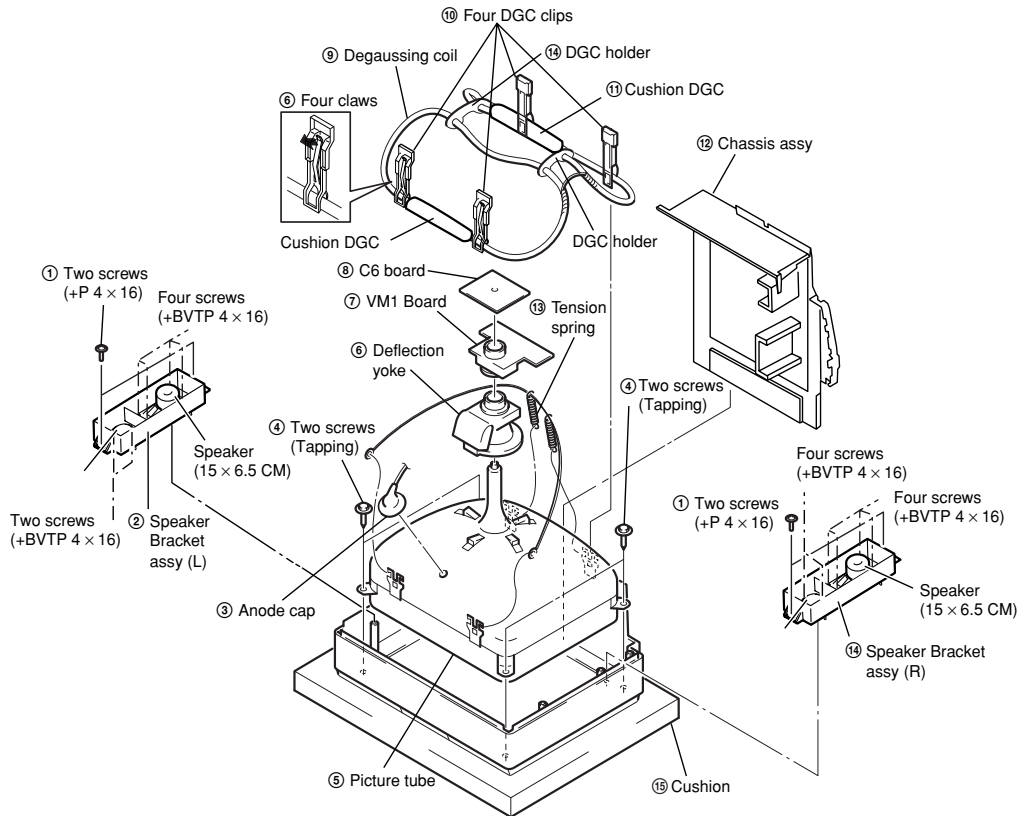


• REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.


• REMOVING PROCEDURES

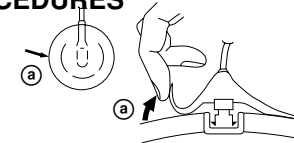

① Turn up one side of the rubber cap in the direction indicated by the arrow (a).

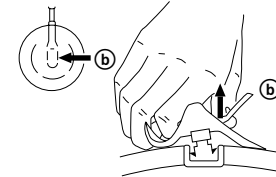


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b).

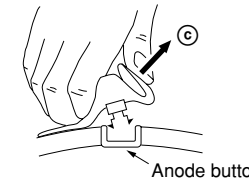

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow (c).

• HOW TO HANDLE AN ANODE-CAP

- ① Do not damage the surface of anode-caps with sharp shaped objects.
- ② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
- ③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

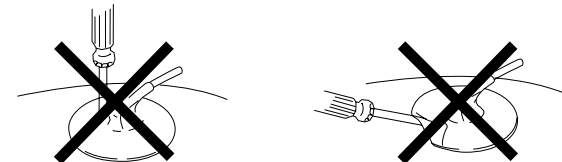

SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control normal
BRIGHTNESS control normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.

Contrast	}	normal
Brightness		
2. Position neck assy as shown in Fig3-2.
3. Set the pattern generator raster signal to a green raster.
4. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
(See Figures 3-1 through 3-4.)
5. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-2.)
6. Switch the raster signal to blue, then to red and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-5.)

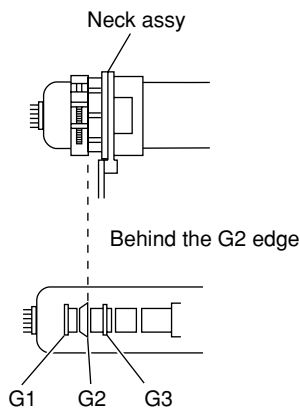


Fig. 3-1

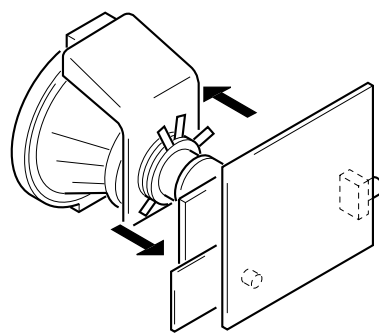


Fig. 3-2

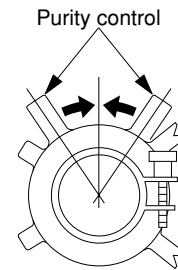


Fig. 3-3

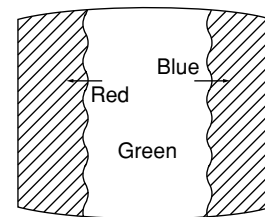


Fig. 3-4

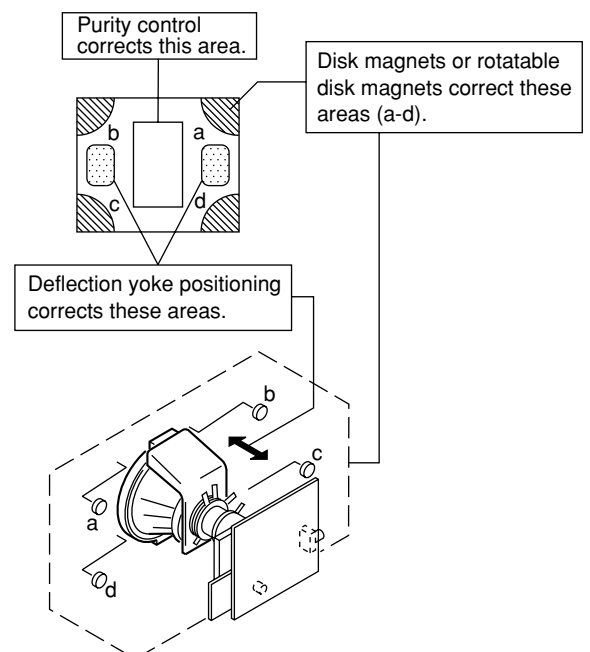



Fig. 3-5

3-2. CONVERGENCE


Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Personal (Pic 90%, Brightness 50%, Col 50%, Hue 50%, Shp 50%)

(1) Horizontal and Vertical Static Convergence

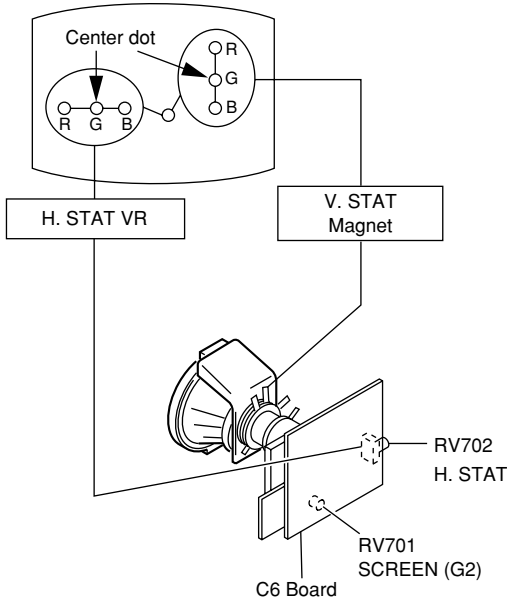


1. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below. (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

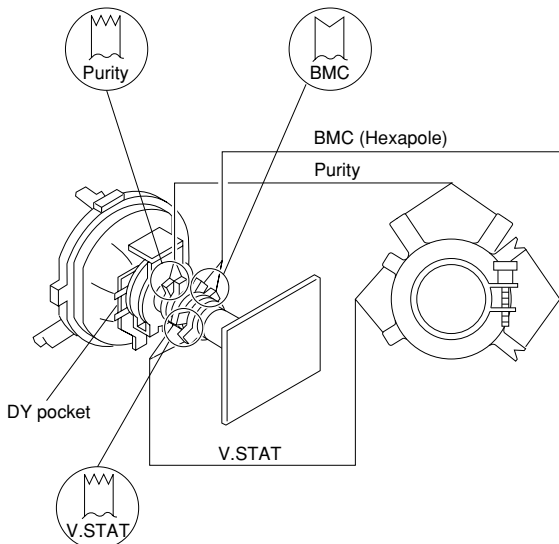


- Operation of V.STAT magnet


① V. STAT

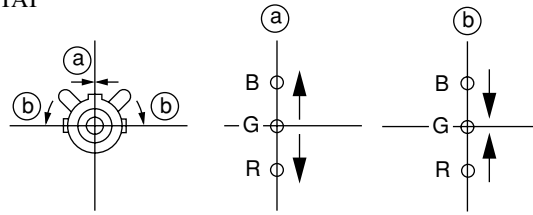

② H. STAT VR

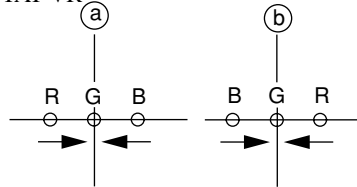


③

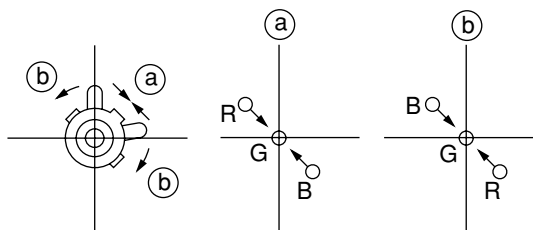


④ BMC (Hexapole) Magnet.

If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

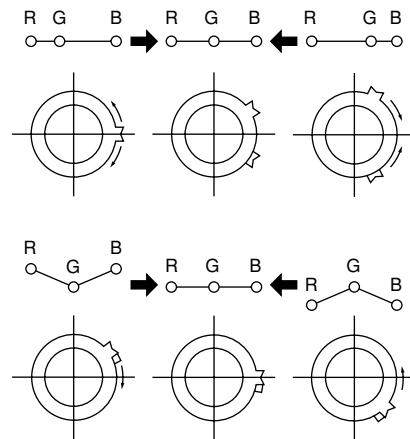


⑤ Y separation axis correction magnet adjustment.

1. Receive the cross-hatch signal and adjust [PICTURE] to [MIN] and [BRIGHTNESS] to [STANDARD] .
2. Adjust the Y separation axis correction magnet on the neck assembly so that the horizontal lines at the top and bottom of the screen are straight.

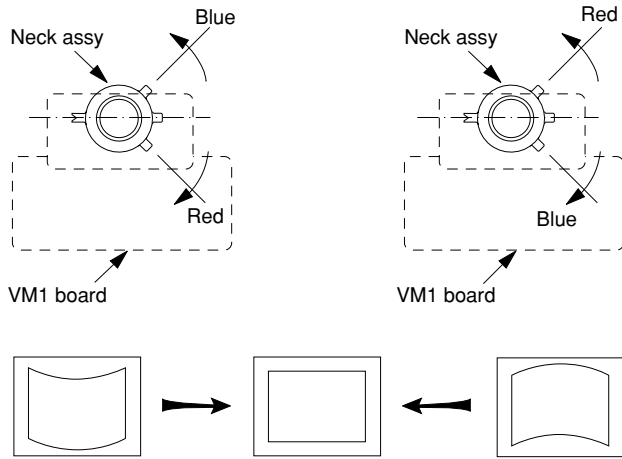

TLV	Rotate	TLV-2	VOL (29", 34") on DY
XCV	Rotate	XCV	Adj core on DY
YCH	Rotate	YCH	VOL on DY
TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)

ON DY:

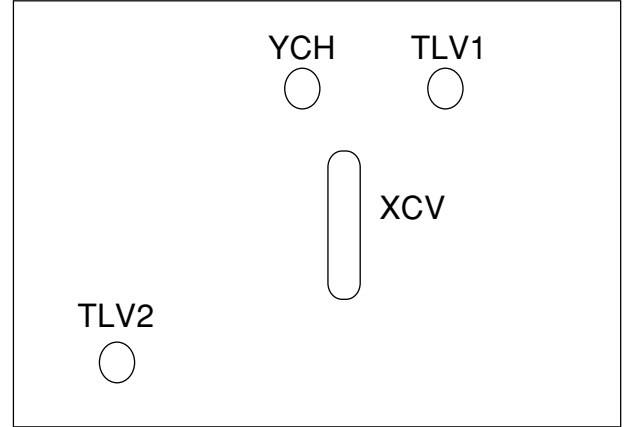


Note

1. The Red and Blue magnets should be equally far from the horizontal center line.
2. Do not separate the Red and Blue magnets too far. (Less than 8 mm)



(2) Dynamic Convergence Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

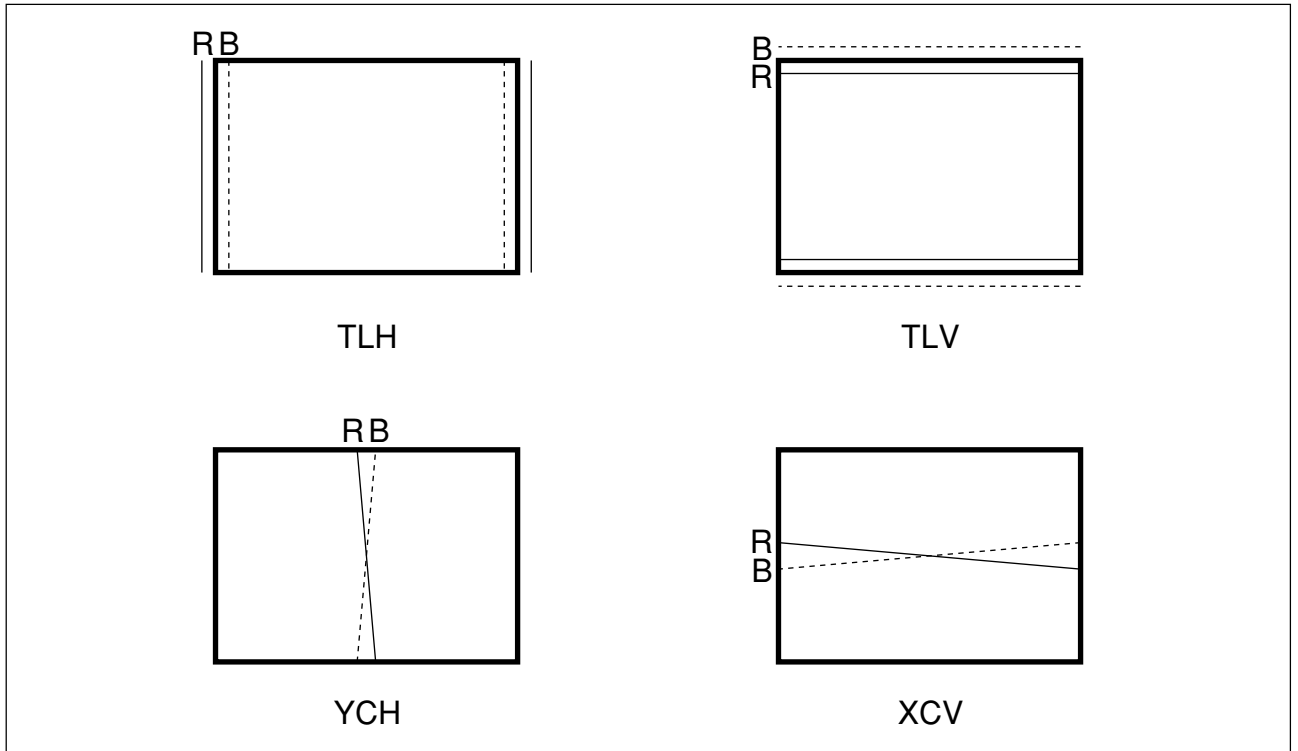


(3) Screen-corner Convergence

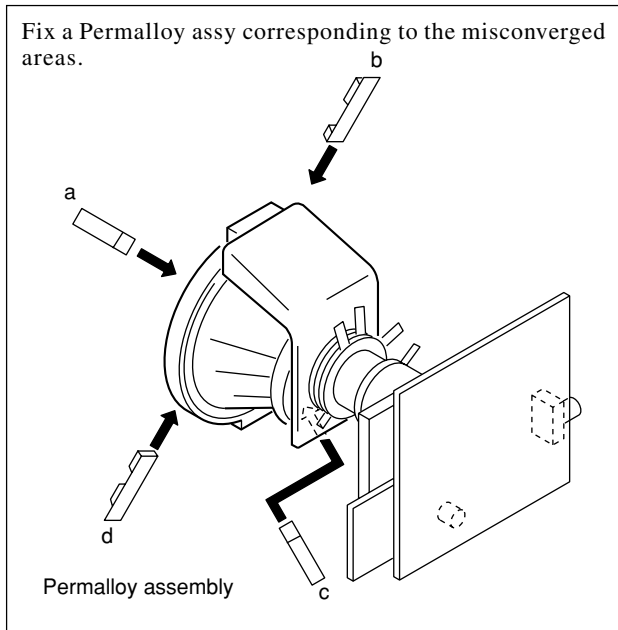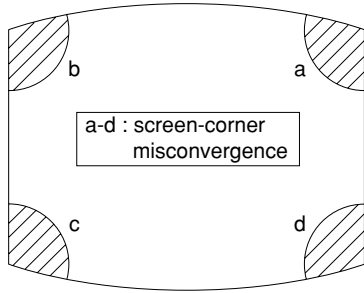

3-3. FOCUS ADJUSTMENT

Focus adjustment should be completed before W/B adjustment.

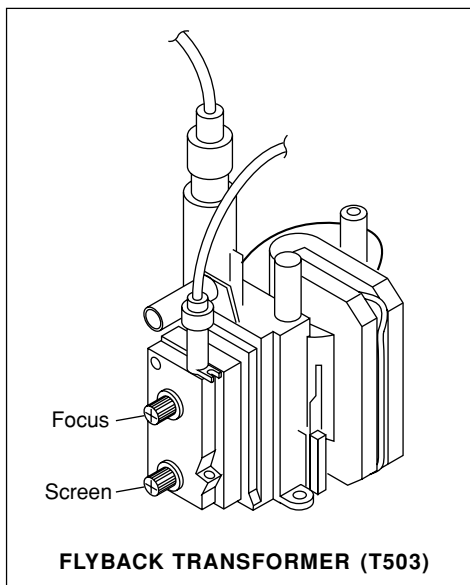


FOCUS ADJUSTMENT

- 1) Receive digital monoscope pattern.
- 2) Set "AV CONTROL" to "DYNAMIC"
- 3) a) Adjust FOCUS VR so that center of the screen becomes just focus.
- 4) Change the receiving signal to white pattern and blue back.
- 5) Confirm MAGENTA RING is not noticeable, In case magenta is very obvious, adjust a FOCUS VR to take balance between MAGENTA RING and FOCUS.

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

- 1) Set the PICTURE to normal.
- 2) Put to VIDEO input mode without signals.
- 3) Connect R, G and B of the C6 board cathode to the oscilloscope.
- 4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
- 5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

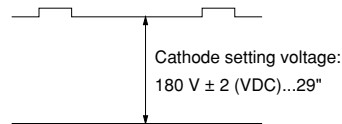


2. WHITE BALANCE ADJUSTMENT

- 1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
- 2) Input white raster signal.
- 3) Set the PICTURE to minimum.
- 4) Select GCT (WHB 4) and BCT (WHB 5) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 5) Set the PICTURE to maximum.
- 6) Select GDR (WHB 1) and BDR (WHB 2) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 7) Write into the memory by pressing [MUTING] then [0].

3. SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Input a staircase signal of black to white from the pattern generator.
- 3) BRIGHTNESS 50%.
PICTURE MINIMUM
- 4) Select SBR (WHB7) with [1] and [4], and adjust SBR (WHB7) level with [3] and [6] so that the second stripe from the right is dimly lit.

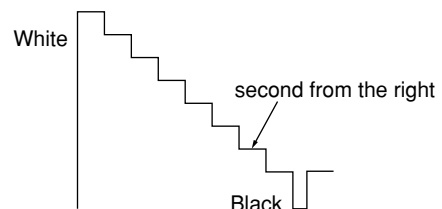


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-952.


a. ENTERING SERVICE MODE

With the unit on standby



This operation sequence puts the unit into service mode.

The screen display is :

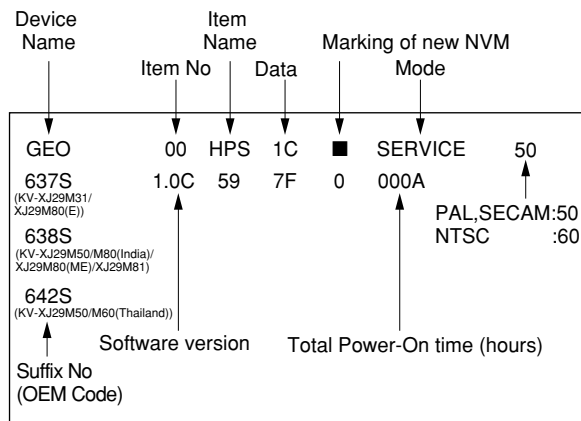

b. METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press **[POWER]** button on the commander), then press **[POWER]** button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

- 1) Set to Service Mode.
- 2) Press **[1]** (UP) and **[4]** (DOWN), to select the adjustment.
- 4) Press **[MUTING]** button to indicate WRITE on the screen.
- 5) Press **[0]** button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again to confirm adjustments were made.

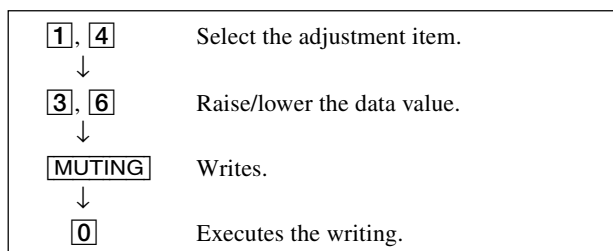

- [7], [0]** All the data becomes the values in memory.
- [8], [0]** All user control goes to the standard state.
- [5], [0]** Service data initialization (Be sure not to use usually.)
- [MUTING] + [0]** Write 50Hz adjustment data to 60Hz, or vice versa.
- [2], [0]** Copy the data.




4-2. ADJUSTMENT METHOD

Item Number 00 of device GEO

This explanation uses H-Position as an example.

1. Select "GEO 00 HPS" with the **[1]** and **[4]** buttons.
2. Raise/lower the data with the **[3]** and **[6]** buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the **[MUTING]** button. (The display changes to WRITE.)
5. Execute the writing with the **[0]** button. (The WRITE display will be changed to red color while executing, and back to SERVICE.)

Example on screen display :-

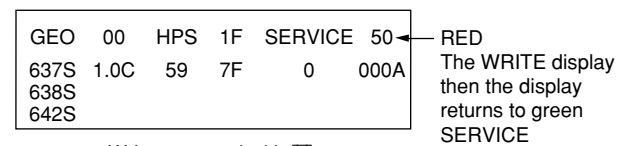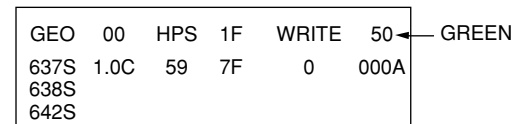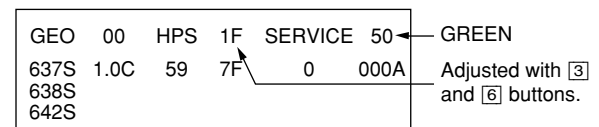

Use the same method for all Items. Use **[1]** and **[4]** to select the adjustment item, use **[3]** and **[6]** to adjust, write with **[MUTING]**, then execute the write with **[0]**.

- Note :**
1. In **[WRITE]**, the data for all items are written into memory together.
 2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

TVG	Functionality		Initial	Range	Function	Table & Note
	Category	No.				
GEO	00	HPS	7	3F	H Position	Normal (50/60)/Wide (50/60)
	01	HSZ	1F	3F	H Size	Normal (50/60)/Wide (50/60)
	02	PAP	1F	3F	Pin Amp	Normal (50/60)/Wide (50/60)
	03	TLT	7	0F	Trapezium	Normal (50/60)/Wide (50/60)
	04	VPS	1F	3F	V Position	Normal (50/60)/Wide (50/60)
	05	VSZ	1F	3F	V size	Normal (50/60)/Wide (50/60)
	06	SCO	7	0F	S Correction	Normal (50/60)/Wide (50/60)
	07	VLN	7	0F	V Linearity	Normal (50/60)/Wide (50/60)
	08	BOW	7	0F	AFC Bow	Normal (50/60)/Wide (50/60)
	09	AGL	7	0F	AFC Angle	Normal (50/60)/Wide (50/60)
	0A	UPN	1F	3F	Upper Pin	Normal (50/60)/Wide (50/60)
	0B	LPN	1F	3F	Lower Pin	Normal (50/60)/Wide (50/60)
	0C	HBL	0	1	H Blanking on/off	
	0D	LBL	2	0F	Left H Blanking	Normal (50/60)/Wide (50/60)
	0E	RBL	0B	0F	Right H Blanking	Normal (50/60)/Wide (50/60)
WHB	00	RDR	25	3F	R Drive	DYNAMIC/others
	01	GDR	25	3F	G Drive	DYNAMIC/others
	02	BDR	25	3F	B Drive	DYNAMIC/others
	03	RCT	0A	0F	R Cutoff	SECAM/others
	04	GCT	7	0F	G Cutoff	SECAM/others
	05	BCT	7	0F	B Cutoff	SECAM/others
	06	BMN	15	1F	Brightness Minimum Data	
	07	SBR	1F	3F	Sub Brightness Control	
08	APB	2	3	Sub Bright Ctl SW for PNC #3		
SAJ	00	PMX	33	3F	Picture Maximum Data	Non-Wide/Wide
	01	SHU	8	0F	Sub Hue Control	TV/Video
	02	SSH	3	0F	Sub Sharpness Control	TV/Video
	03	SCL	1F	3F	Sub Color Control	(NTSC/others)/Wide (NTSC/others)
VP	00	EHT	4	0F	EHT Comp	50/60Hz
	01	GMA	2	03	Gamma Correction	Refer NVM Map A4
	02	APG	0	1	Gamma Ctl SW for PNC #3	
	03	YDL	6	0F	Y Delay	PAL/SECAM/NTSC
	04	SST	1	03	SECAM ID Start Position	SECAM/PAL
	05	SSP	1	03	SECAM ID Stop Position	SECAM/PAL
	06	RLM	0	3	RGB Limit	
	07	SLV	2	03	SECAM ID Level	SECAM/PAL
	08	SBF	22	3F	SECAM BELL f0	SECAM/PAL
	09	DYC	1	1	Dynamic Color on/off	
	0A	ABL	1	1	ABL Mode Switching	STANDARD Always 0
	0B	VTH	1	1	ABL Detection Vth Switching	
	0C	SFO	1	1	FO Switching for Sharpness	NTSC/others
	0D	DCX	1	1	DC Trans. Ratio Switching	

Adjustment Item Table

TVG Category	Functionality		Initial	Range	Function	Table & Note
	No.	Name				
VP	0E	SHT	1	1	Pre-/Overshoot ratio Switch	NTSC/others
	0F	HDW	0	1	H Drive Pulse Width Switch	
	10	AFC	1	03	AFC Gain Control	TV/Video/Text
	11	HOS	7	0F	H Oscillation	
	12	HSS	0	1	Slice Level of H Sync Sep.	
	13	VSS	0	1	Slice Level of V Sync Sep.	
	14	HMS	1	1	Macro Vision C/m off/on	50/60Hz
	15	YUV	0	1	YUV Switch Control	
	16	CDV	1	3	CD mode for Video	Video only
	17	RON	1	1	R ON	not memorized
	18	GON	1	1	G ON	not memorized
	19	BON	1	1	B ON	not memorized
	1A	PON	1	1	P ON	not memorized
	1B	AXN	1	1	AXIS SW	NTSC/others (only for Dyna)
	1C	RSL	0	1	RGB SEL	
	1D	VBW	1	3	VBLKW	
	1E	RFP	0	1	REFP	
	1F	JMP	0	1	Jump	
	20	VMC	2	3	VM Off	
	AP	00	INF	5	3F	Input Attenuation When surround off
01		INS	0A	3F	Input Attenuation When surround on (XG-ONLY)	
02		SEF	0	0F	Surround Effect Control (XA-ONLY)	
03		PH1	3	3	Phase 1 Register Selection	
04		PH2	0	3	Phase 2 Register Selection (XG-ONLY)	
05		PH3	0	3	Phase 3 Register Selection (XG-ONLY)	
06		PH4	0	3	Phase 4 Register Selection (XG-ONLY)	
07		BCS	2	3	Bass Center Shift	
08		TCS	2	3	Treble Center Shift	
09		TRF	2	3	RF Treble Offset	
MSP	00	WST	15	FF	W/G Stereo Threshold	
	01	WBT	EA	FF	W/G Bilingual Threshold	
	02	WLL	5	FF	W/G Monaural Threshold	
	03	WAC	0	0F	W/G Agreement Count	
	04	WDL	30	FF	W/G Search Delay	
	05	NDL	20	FF	NICAM Search Delay	
	06	SDL	10	FF	Stereo Status Read Delay	
	07	AGC	1	1	AGC Switch Auto/Constant	
	08	REL	28	3F	AGC Gain at Constant Mode	
	09	CRM	0	1	Carrier muting on/off	
	0A	ACO	1	1	Audio Clock out on/off	

Adjustment Item Table

TVG	Functionality		Init.	Range	Function	Table & Note
Category	No.	Name				
MSP	0B	FP	1B	7F	FM Prescale for non-M system	
	0C	FPM	32	7F	FM Prescale for M system	
	0D	FH	36	7F	FM Prescale for HDEV	
	0E	FHM	65	7F	FM Prescale for HDEV and M	
	0F	WGP	2A	7F	W/G Prescale	
	10	NIP	6D	7F	NICAM Prescale	
	11	ERR	50	FF	Auto FM Switch Threshold	
	12	VOL	6D	FF	Speaker Gain 7000h to 7ff0h	
TXT	00	TXH	0	3	Teletext Horizontal Position	
	01	TXV	0	3	Teletext Vertical Position	
OPM	00	OSH	0A	3F	OSD H Position	Option-Misc
	01	COM	1	03	Comb Selection	
	02	APC	1	1	APC Switch	
	03	TSY	0	03	TV Sys at Auto TV Sys	
	04	MUT	0	1	No Signal Mute	
	05	AFM	0	1	Auto FM Switch	
	06	RFB	0	3	C-BPF Control	
	07	TVO	0	7	Tilt to V-Angle Offset	
	08	DBL	0	1	Disable Blueback Function	
	09	SCH	1	7F	CH Selection for Shipping Condition	NTSC Models only
	0A	SCA	1	1	Cable / Air selection for shipping condition	NTSC Models only
OPB	00	OP1	FF	FF	Optional Bits 1 (see below)	Option-Bits
	01	OP2	62	FF	Optional Bits 2 (see below)	
	02	OP3	B1	FF	Optional Bits 3 (see below)	
	03	OP4	02	FF	Optional Bits 4 (see below)	

NOTE

- ■ shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

OPTION NOTE

OP1

Item	XTAL 4.43	XTAL 3.58	SECAM	2nd. Lang	B/G	I	D/K	M
KV-XJ29M31	1	1	1	1	1	1	1	1
KV-XJ29M50 (THAILAND)	1	11	11	1	1	1	1	1
KV-XJ29M50 (INDIA)	1	1	1	1	1	1	1	1
KV-XJ29M60 (THAILAND)	1	1	1	1	1	1	1	1
KV-XJ29M80 (E)	1	1	1	1	1	1	1	1
KV-XJ29M80 (ME)	1	1	1	1	1	1	1	1
KV-XJ29M80 (INDIA)	1	1	1	1	1	1	1	1
KV-XJ29M81 (ME)	1	1	1	1	1	1	1	1

NOTE: When Bit 7, 6 & 5 = 000, Only PAL color system is selected.
When Bit 7 is selected, Auto, PAL & NTSC 4.43 Color system is enable.
When Option is single color system, Color system cannot be changed & "AUTO" will not be displayed.

OP2

Item	TOP	NICAM	HDEV	Thai Bil	Dis Fav.	DVD Input	AV Input	
KV-XJ29M31	0	1	1	0	0	1	1	0
KV-XJ29M50 (THAILAND)	0	0	0	0	0	1	1	0
KV-XJ29M50 (INDIA)	0	1	1	0	0	1	1	0
KV-XJ29M60 (THAILAND)	0	1	1	0	0	1	1	0
KV-XJ29M80 (E)	0	1	1	0	0	1	1	0
KV-XJ29M80 (ME)	0	1	1	0	0	1	1	0
KV-XJ29M80 (INDIA)	0	1	1	0	0	1	1	0
KV-XJ29M81 (ME)	0	1	1	0	0	1	1	0

AV Input 00 = no AV Input 01 = 1 AV Input
 10/11 = 2 AV Input
DVD Input Effective only when "AV Input" is set to 2 AV Input
Dis Fav. Disable Favorite Channel (Only Effective For 21" & 14" Models Only)

OP3

Item	PIC Rot ^{*1}	2199 Curve ^{*1}	Auto PIC	A-TV sys	US ST	AV Mono ^{*1}	11 KEY	Color SW ^{*2&*1}
KV-XJ29M31	1	0	1	1	0	0	0	1
KV-XJ29M50 (THAILAND)	1	0	1	0	0	0	0	1
KV-XJ29M50 (INDIA)	1	0	1	1	0	0	0	1
KV-XJ29M60 (THAILAND)	1	0	1	1	0	0	0	1
KV-XJ29M80 (E)	1	0	1	1	0	0	0	1
KV-XJ29M80 (ME)	1	0	1	1	0	0	0	1
KV-XJ29M80 (INDIA)	1	0	1	1	0	0	0	1
KV-XJ29M81 (ME)	1	0	1	1	0	0	0	1

PIC Rot^{*1} PIC Rotation Feature Switch 0 = disabled, 1 = enabled
2199 Curve^{*1} 2199 Volume Curve Selection 0 = Others, 1 = 2199 Volume Curve.
Auto PIC Auto Picture Improvement 0 = inactive, 1 = active
A-TV sys Auto TV System in Auto Program 0 = disabled, 1 = enabled
US ST USA Stereo 0 = disabled, 1 = enabled
AV MONO^{*1} AV Mono models 0 = Stereo, 1 = Mono
 (No Balance & Surround selection)
11 Key Front Key Selection 0 = 7 key model, 1 = 11 key model
Color SW^{*2&*1} Color Data Selection in Dynamic Mode 0 = 65 (No PIP), 1 = 57 (PIP)

Note: *1 - For XA-21/XG25 Models Only
 *2 - For XA-34/29/25 Models Only

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952**

OP4

Item	(unused)	(unused)	(unused)	(unused)	(unused)	Vid NTSC 3.58	AP_XG ^{*1}	(unused)
KV-XJ29M31	0	0	0	0	0	0	1	0
KV-XJ29M50 (THAILAND)	0	0	0	0	0	0	1	0
KV-XJ29M50 (INDIA)	0	0	0	0	0	0	1	0
KV-XJ29M60 (THAILAND)	0	0	0	0	0	0	1	0
KV-XJ29M80 (E)	0	0	0	0	0	0	1	0
KV-XJ29M80 (ME)	0	0	0	0	0	0	1	0
KV-XJ29M80 (INDIA)	0	0	0	0	0	0	1	0
KV-XJ29M81 (ME)	0	0	0	0	0	0	1	0


AP_XG^{*1} To select the XG AP (board B6) 0: No; 1 = Yes

Note: *1 - For XA-21/XG25 Models Only

4-3. PICTURE QUALITY ADJUSTMENTS

SUB COLOR ADJUSTMENT


1. Input a PAL color-bar.
2. Set to the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
3. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
4. Set to Service Mode and select SAJ 3 'SCL' with **[1]** and **[4]** of the commander then adjust to VB2=VB3=VB4 with **[3]** and **[6]**.
5. Press **[MUTING]** → **[0]** of the commander to write the data.
6. Adjust SAJ 3 'SCL' as step 2 to 5 when receiving NTSC color-bar.

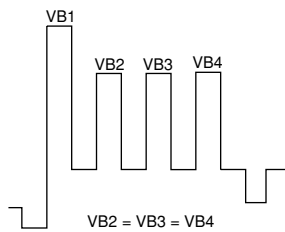

VB2 = VB3 = VB4 (Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video 3.58.
2. Input a NTSC, color-bar, video into Video.
3. Set the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Select SAJ 1 'SHU' with **[1]** and **[4]** of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with **[3]** and **[6]**.

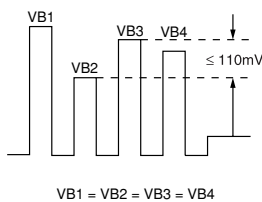

The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line. Ideal difference level between VB2 and VB3 should be within $\pm 110\text{mV}$.

6. Press **[MUTING]** → **[0]** of the commander to write the data.

4-4. DEFLECTION ADJUSTMENT

1. Set to Service Mode.
2. Input PAL color bar.
3. Using the **[1]** and **[4]** button, select category GEO (Service Mode).
4. Raise/lower the data using the **[3]** and **[6]** buttons. Select and adjust the following items to obtain optimum image.

Service Item

GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMP
03	TLT	TILT
04	VPS	V POSITION
05	VSZ	V SIZE
06	SCO	S CORRECTION
07	VLN	V LINEARITY
08	BOW	AFC BOW
09	AGL	AFC ANGLE
0A	UPN	UPPER CORNER PIN
0B	LPN	LOWER CORNER PIN

5. Input 525/60Hz signal.
6. Using the **[1]** and **[4]** button select category GEO (Service Mode).
7. Select and adjust the following items to obtain optimum image. Raise/lower the data with the **[3]** and **[6]** buttons.

Service Item

GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMP
03	TLT	TILT
04	VPS	V POSITION
05	VSZ	V SIZE
06	SCO	S CORRECTION
07	VLN	V LINEARITY
08	BOW	AFC BOW
09	AGL	AFC ANGLE
0A	UPN	UPPER CORNER PIN
0B	LPN	LOWER CORNER PIN

4-5. H-TRAPEZOID ADJUSTMENT


1. Receive cross hatch/dot signal.
2. Adjust RV1801 on C6 board to make H-trapezoid distortion best.

4-6. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons **[5]** and **[0]** (Data Initialize), and **[2]** and **[0]** (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
In cases where items are not well adjusted, rectify the items with fine adjustment.
Write the data per each item number (**[MUTING]** + **[0]**).
4. Select item numbers "OPB0" (OP1), "OPB1" (OP2), "OPB2" (OP3), "OPB3" (OP4) and respectively set the bit per model with command buttons **[3]** and **[6]**.
5. Press commander buttons **[8]** and **[0]** (Test Normal) to return to the data that was set on the shipment from the factory. (This will also cancel Service Mode.)


4-7. PICTURE DISTORTION ADJUSTMENT (1)

Item Number 00 – 0B

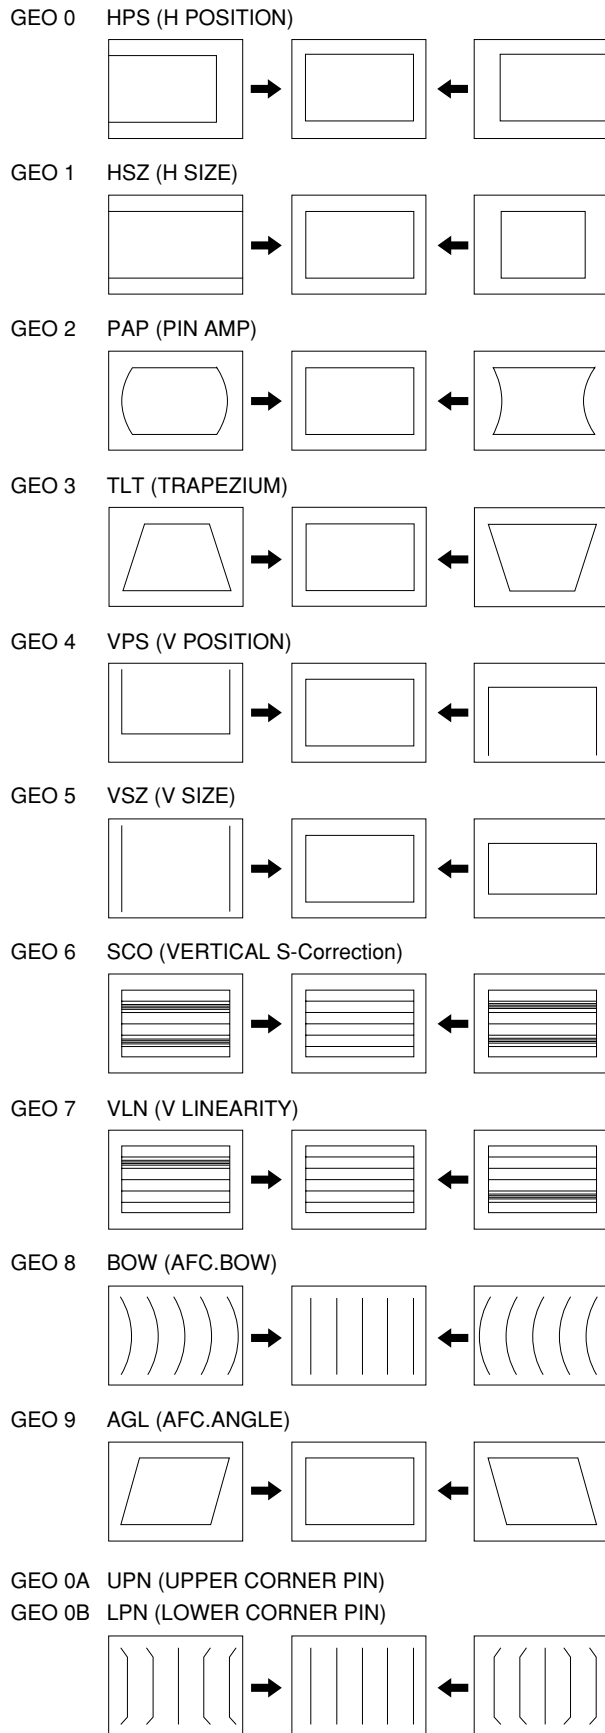


PICTURE DISTORTION ADJUSTMENT (2)

H-TRAPEZOID (Rotate RV1801)




SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

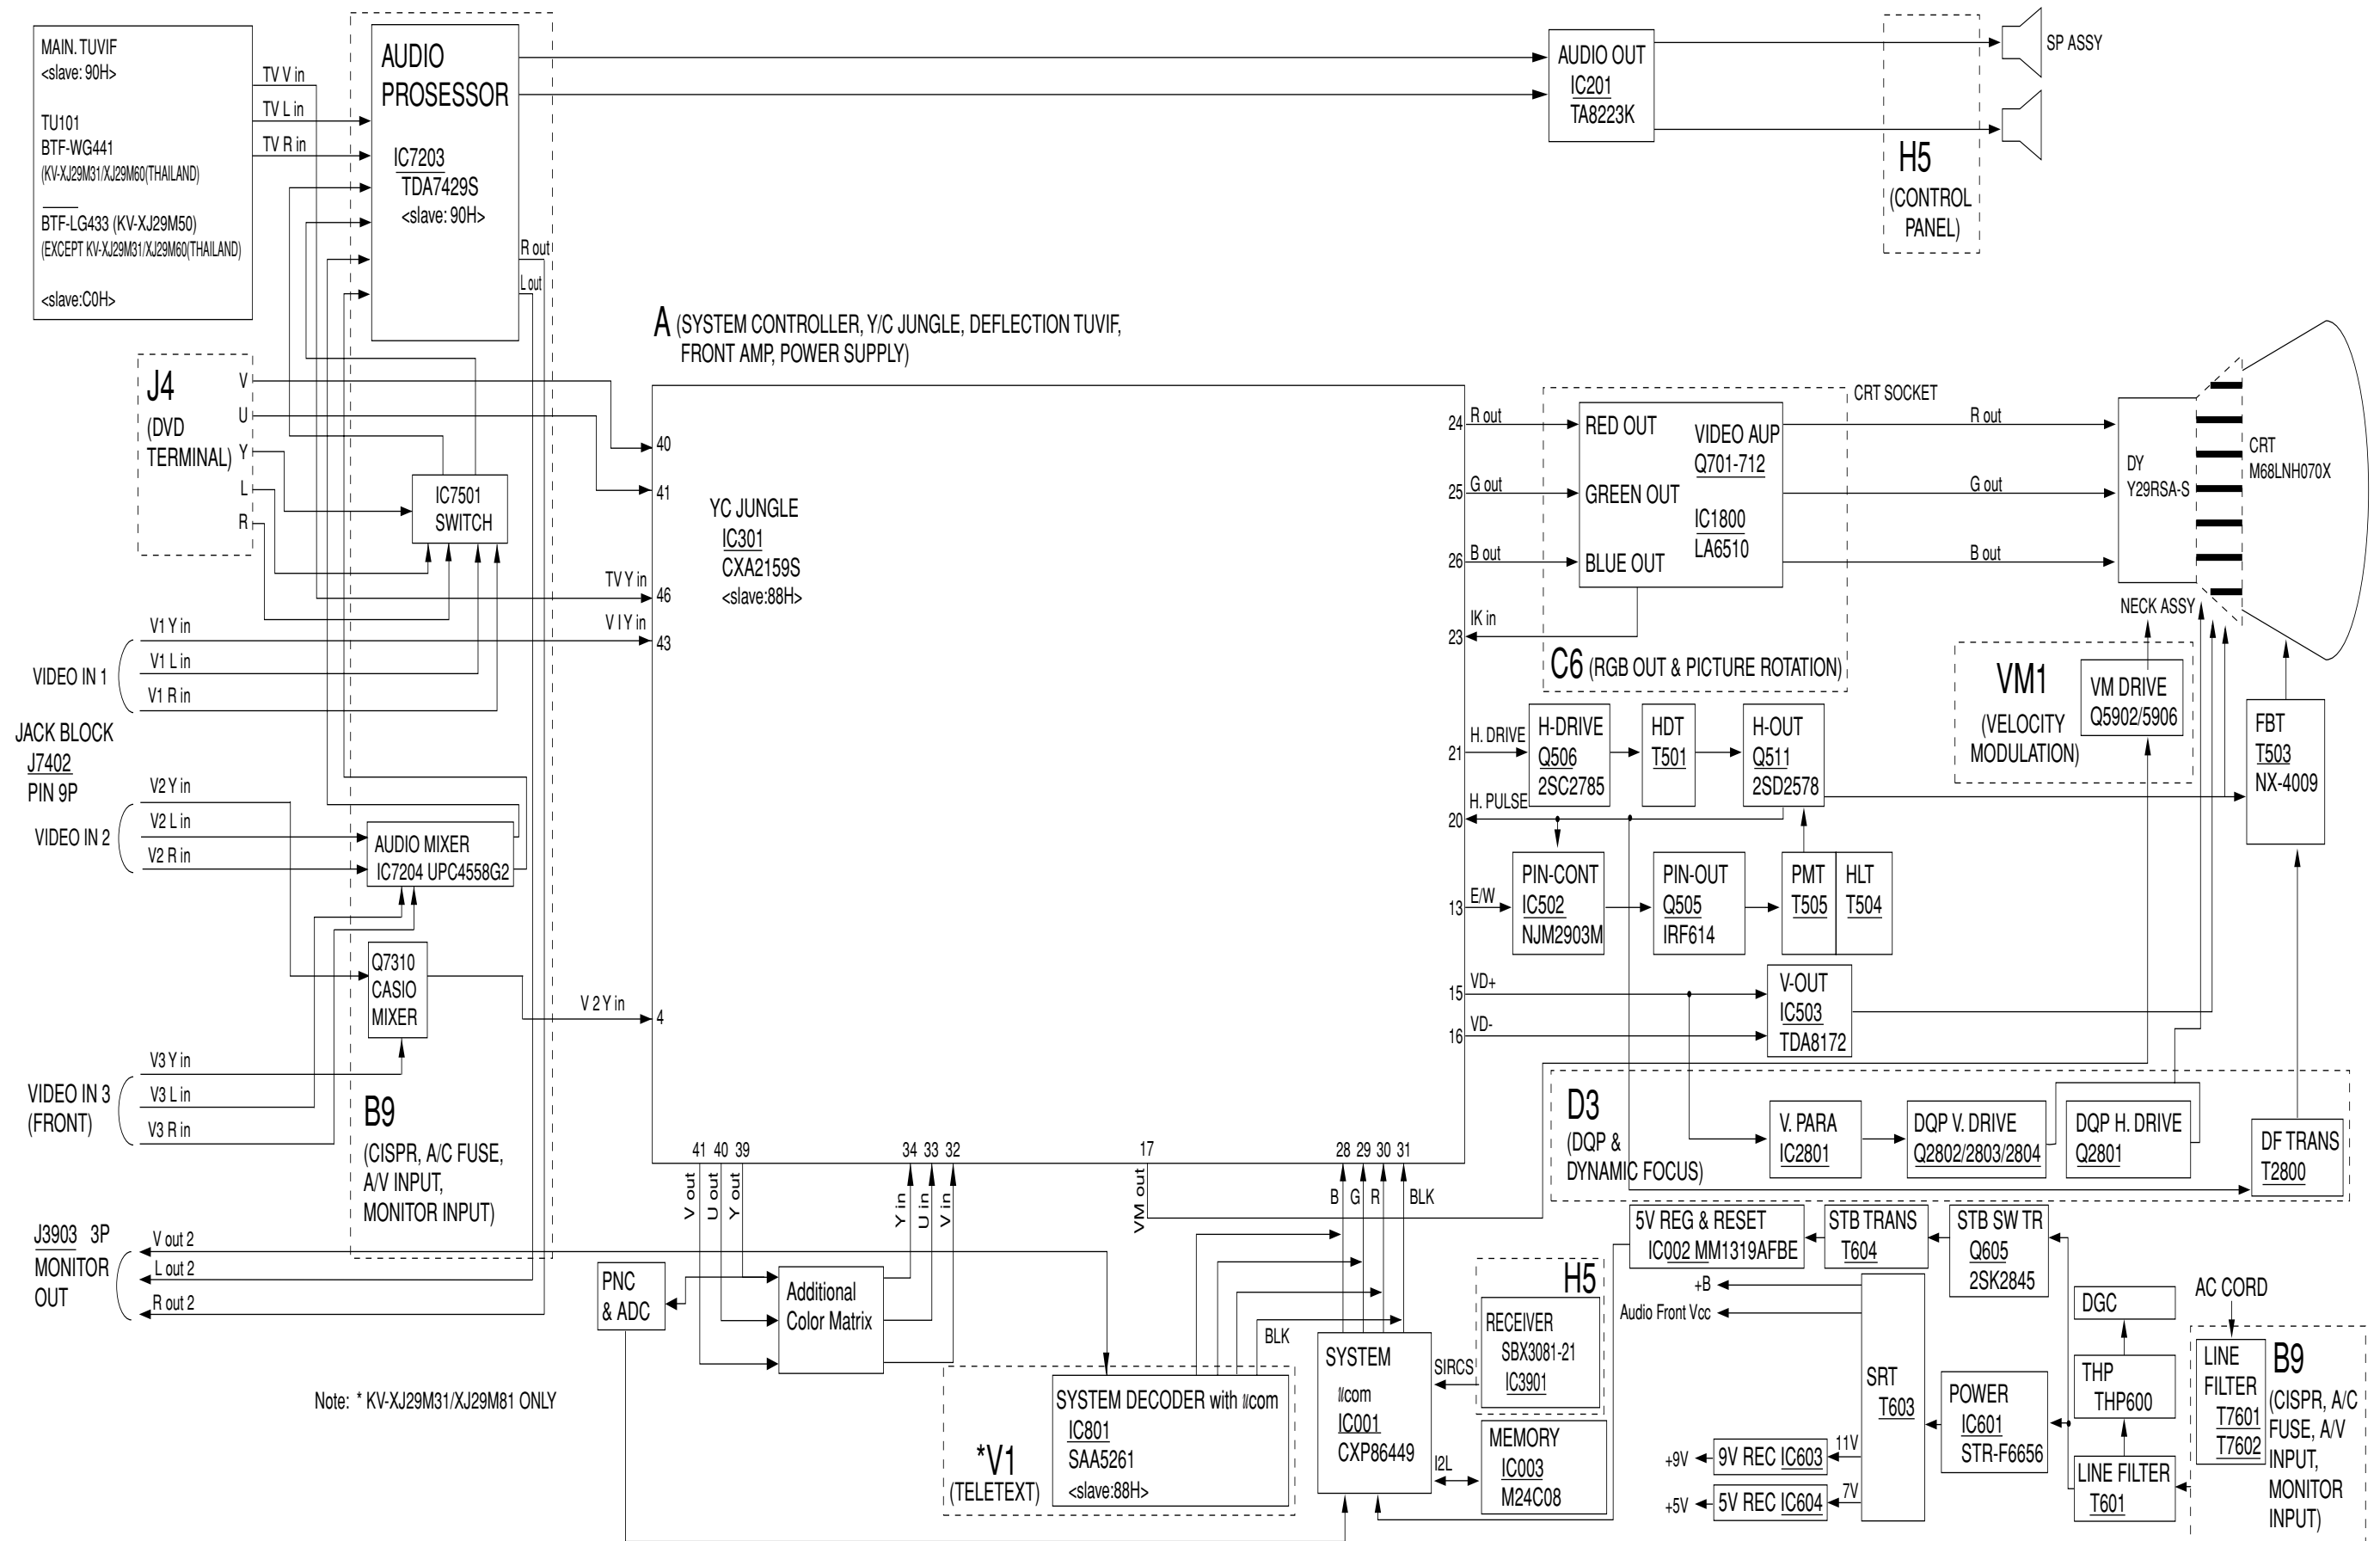

5-2. CIRCUIT BOARDS LOCATION

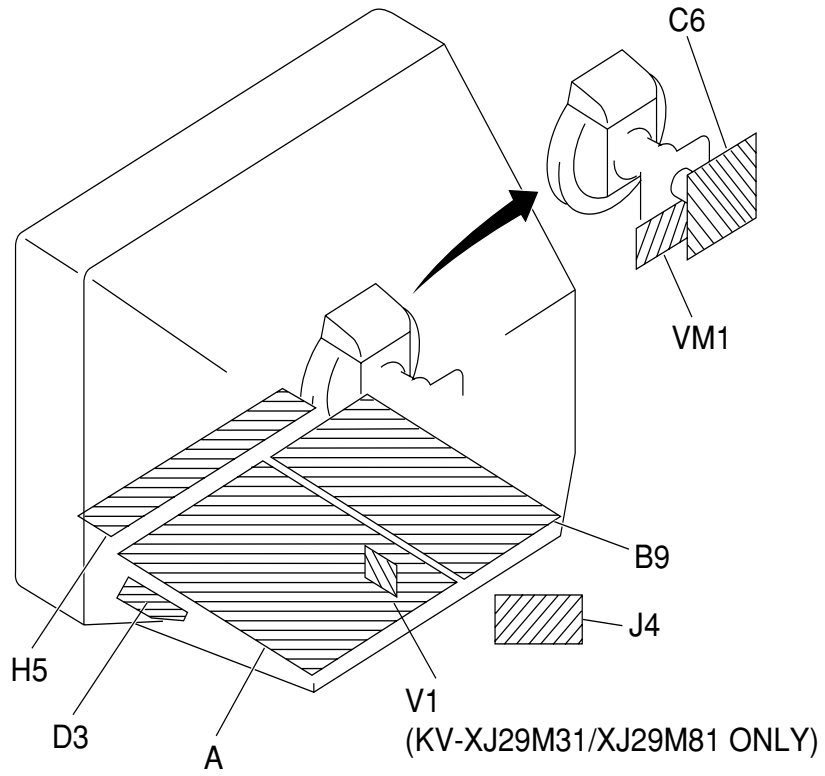






5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in μF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
- Indication of resistance which does not have rating electrical power is as follows.

Pitch: 5 mm
Rating electrical power 1/4W (CHIP: 1/10W)


-  : nonflammable resistor.
- Δ : internal component.
-  : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
no mark : Common
() : PAL
[] : NTSC 3.58
- **Readings are taken with a 10 Ω digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in V.**
- * : Cannot be measured.
- **Circled numbers are waveform references.**
-  : B +bus.
-  : B -bus.
-  : signal path.

Reference information


RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


Note: The component identified by shading and mark Δ are critical for safety. Replace only with part number specified.

(1) B9 Board Schematic Diagram

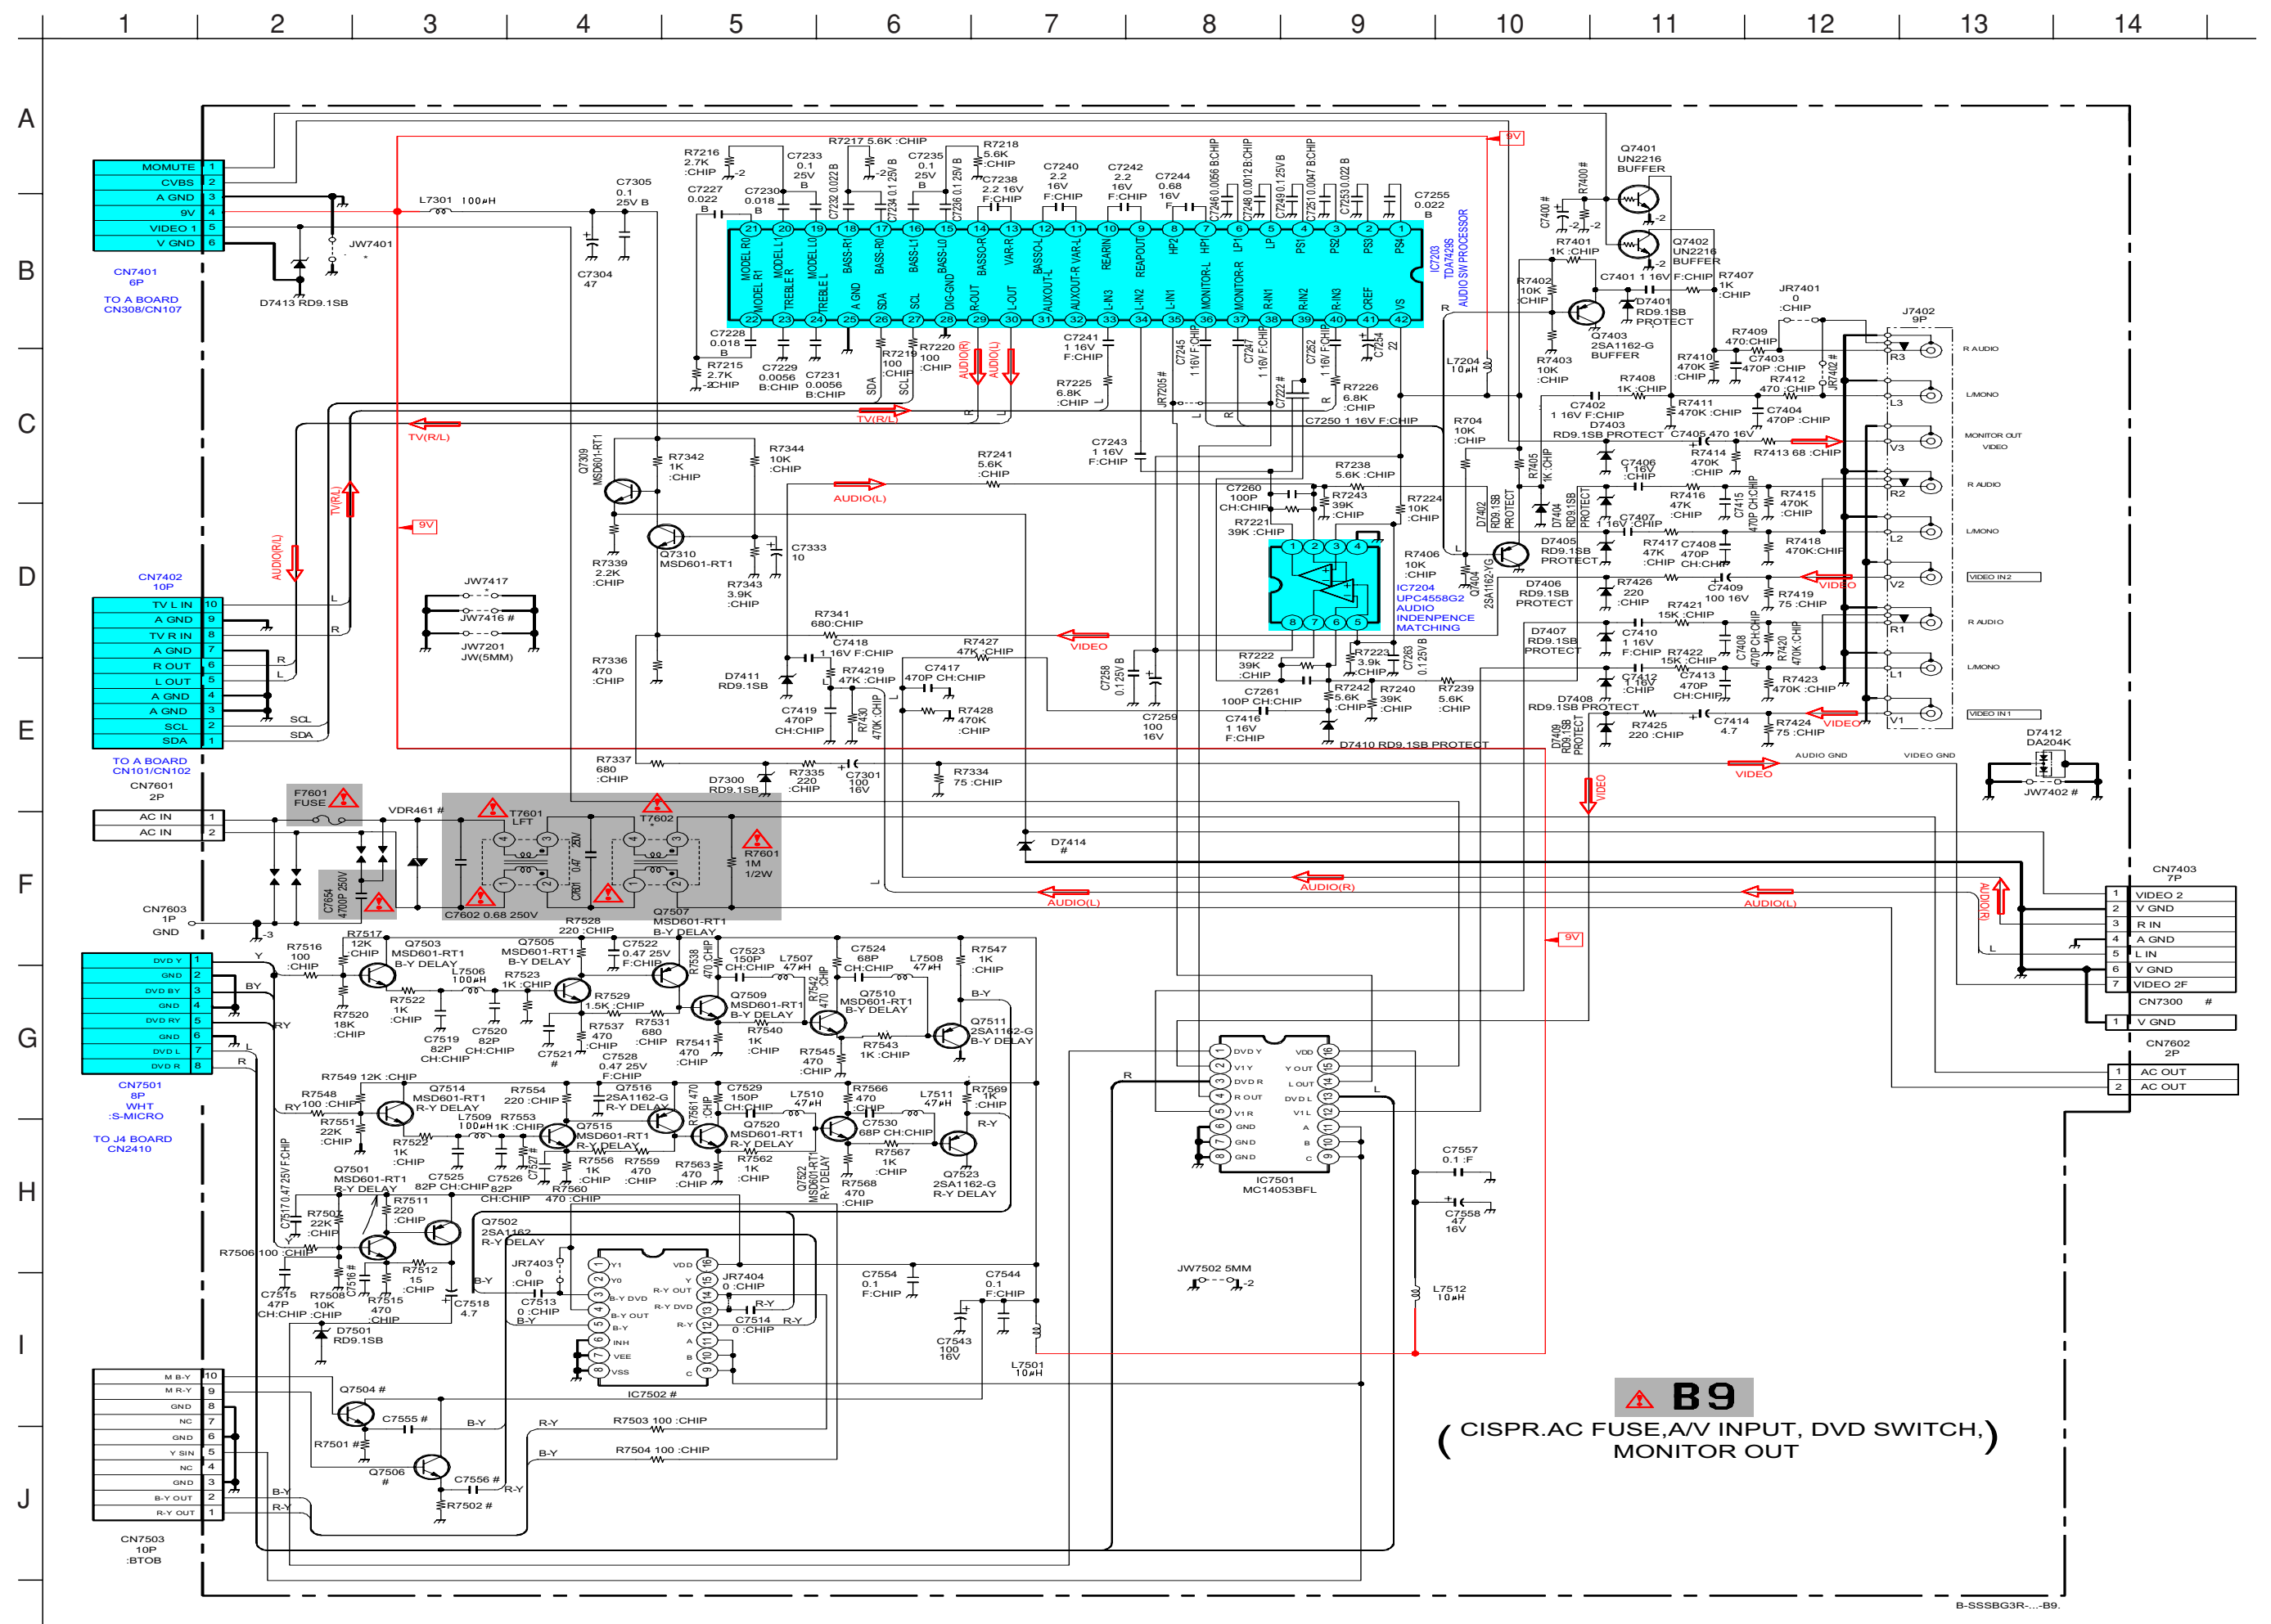

(2) A Board Schematic Diagrams

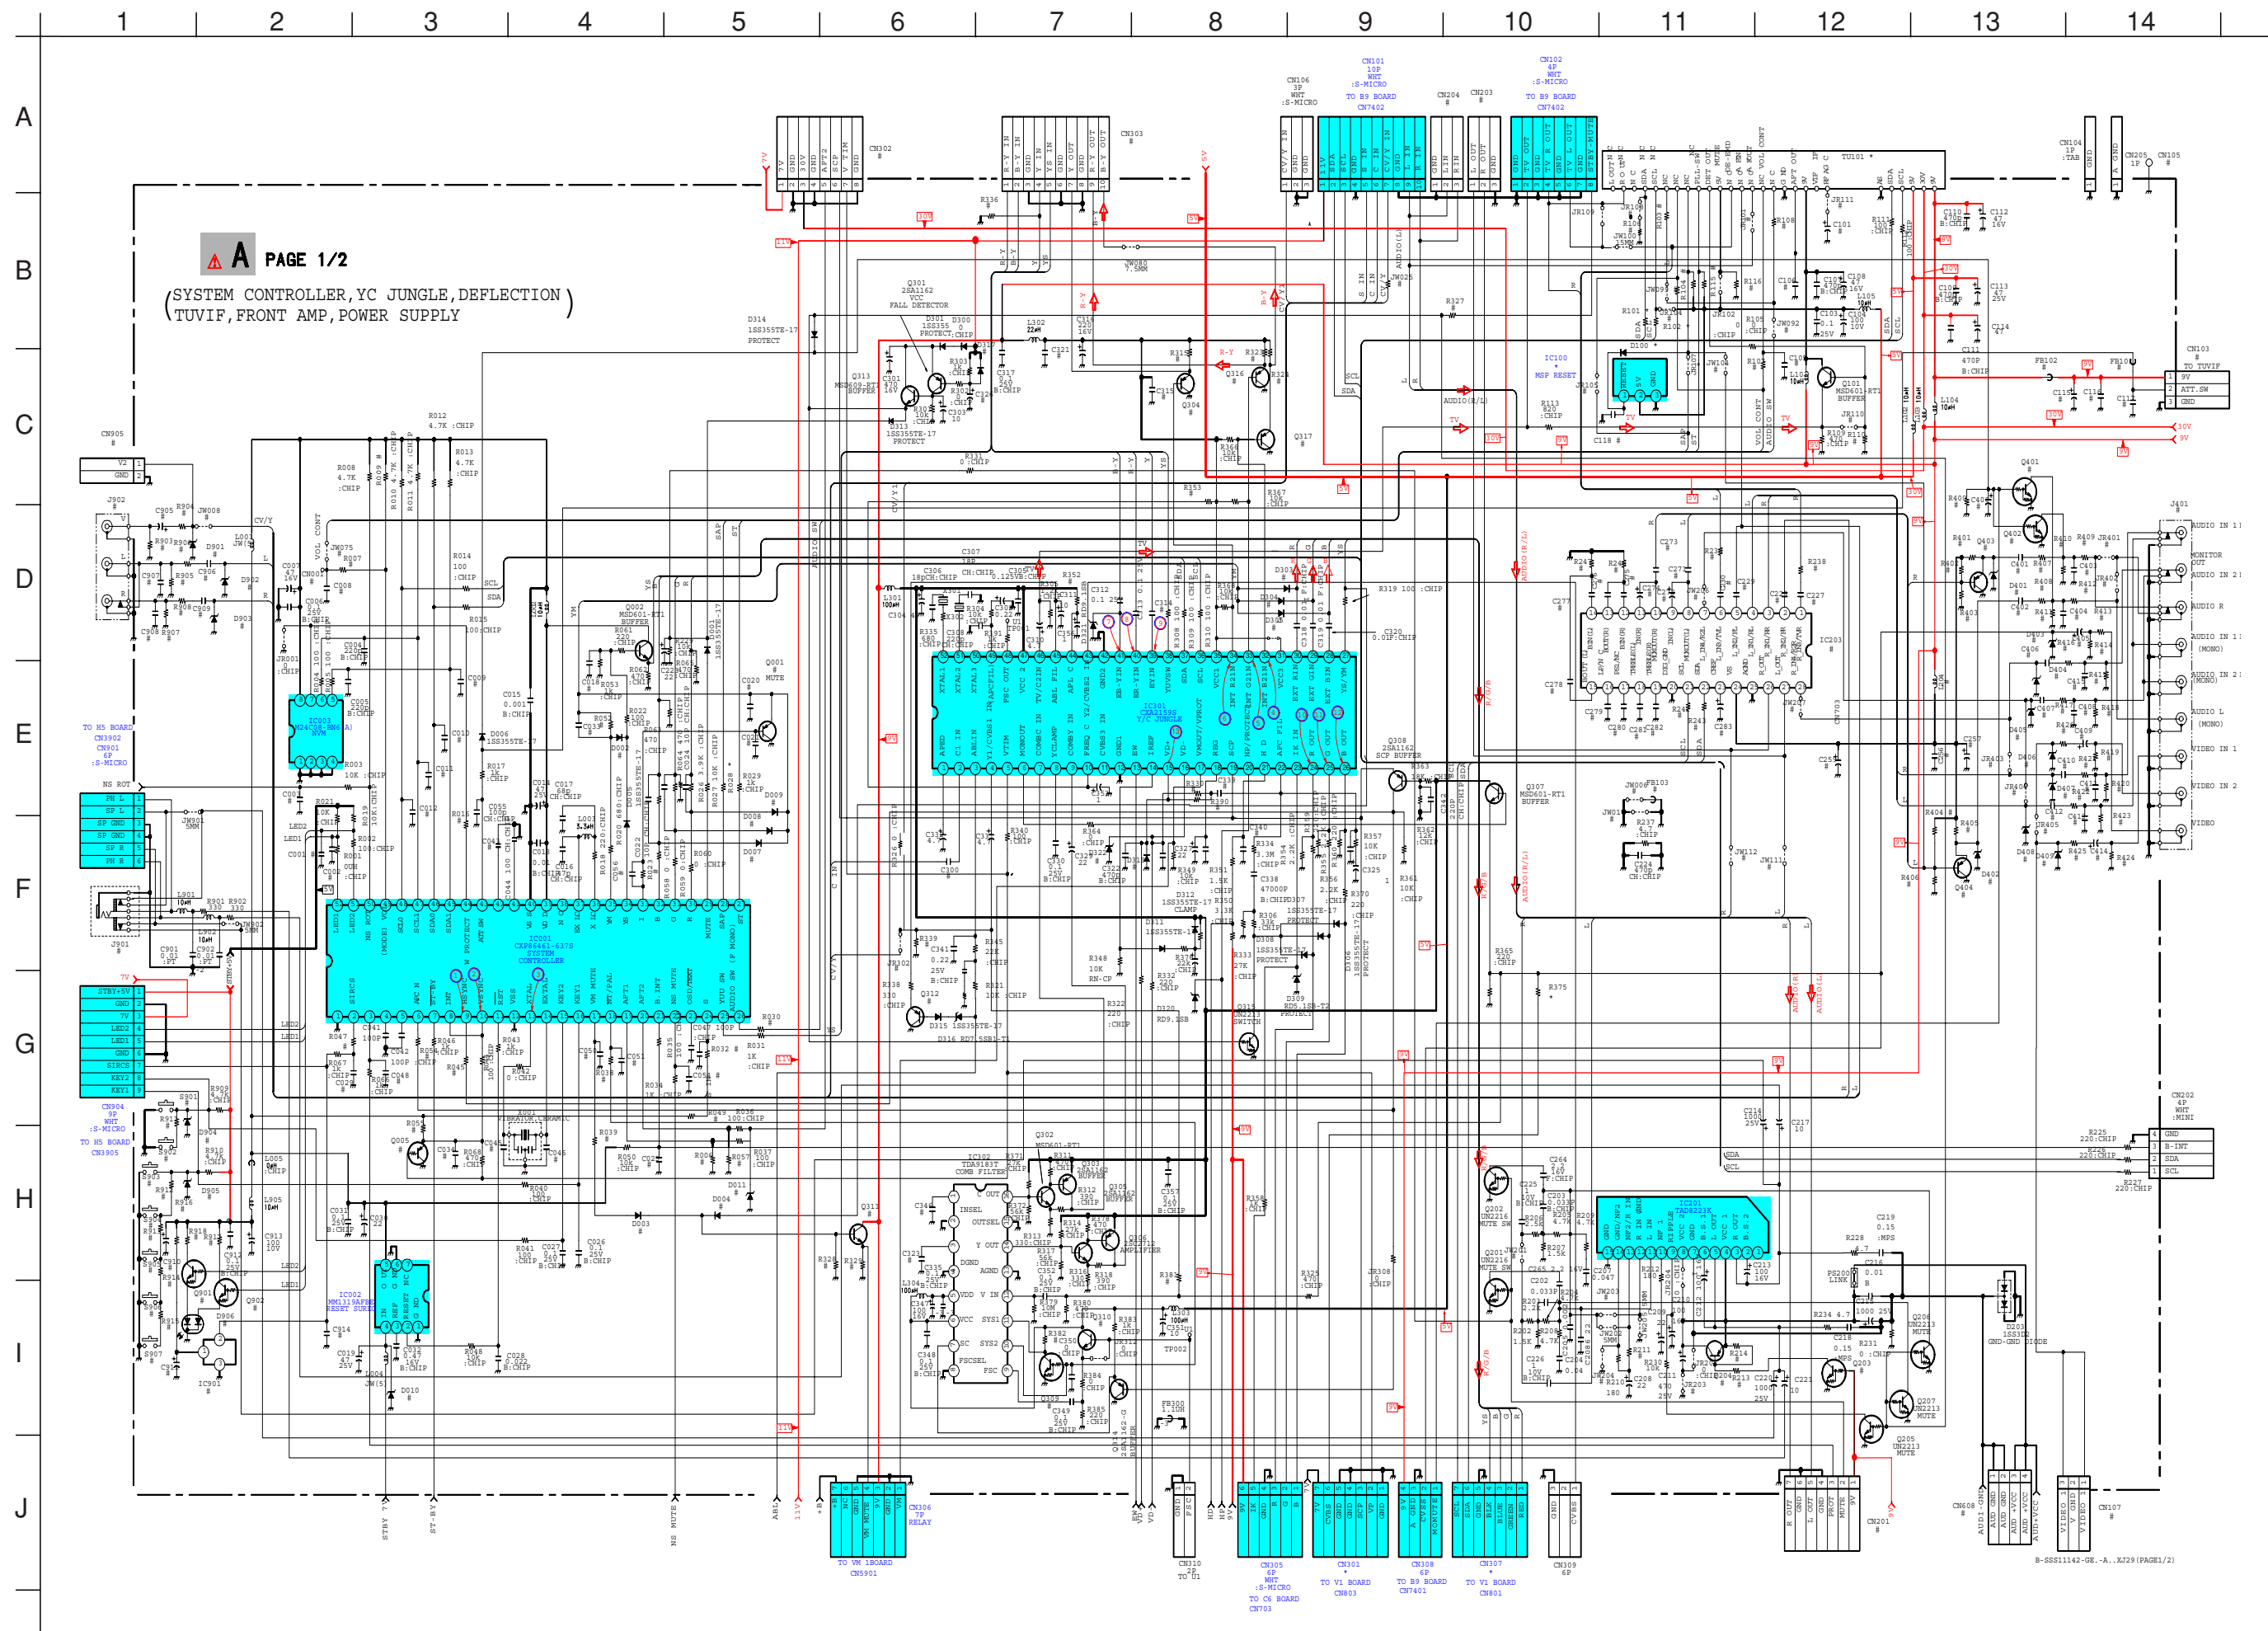


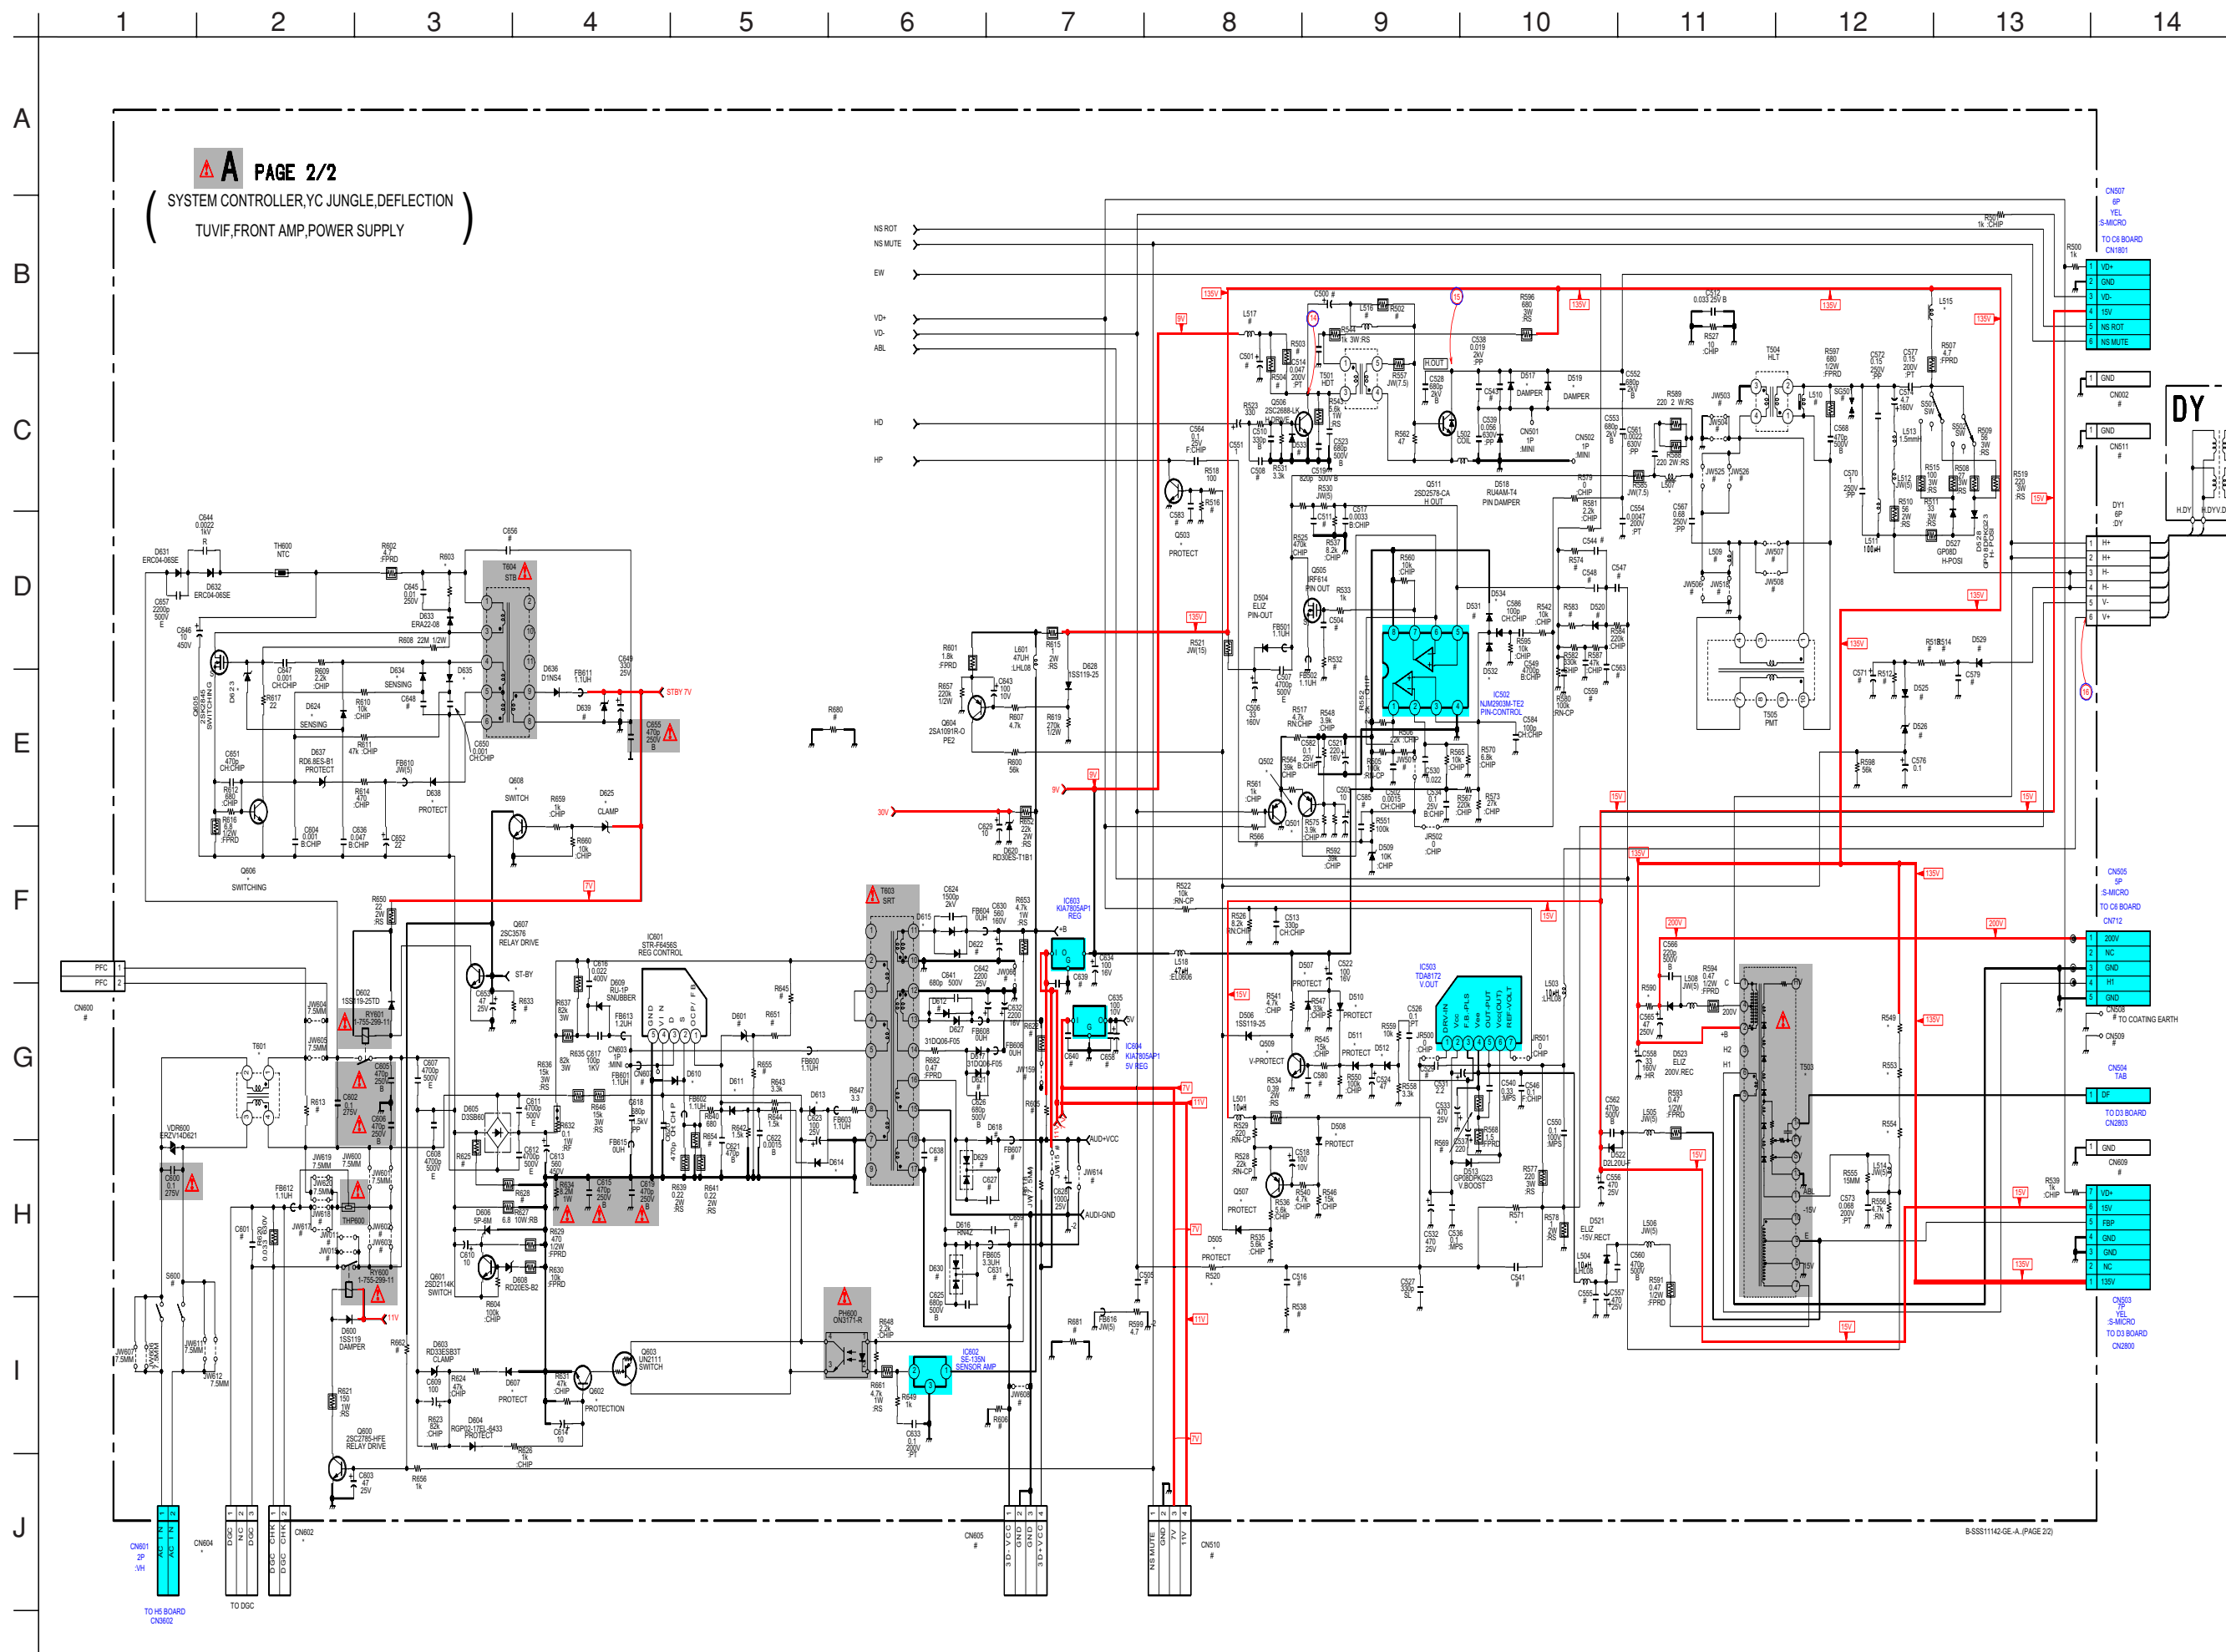


A PAGE 2/2
(SYSTEM CONTROLLER, YC JUNGLE, DEFLECTION)
TUV, FRONT AMP, POWER SUPPLY

8-SS11142-GE-A (PAGE 2)


(3) C6 Board Schematic Dia gram

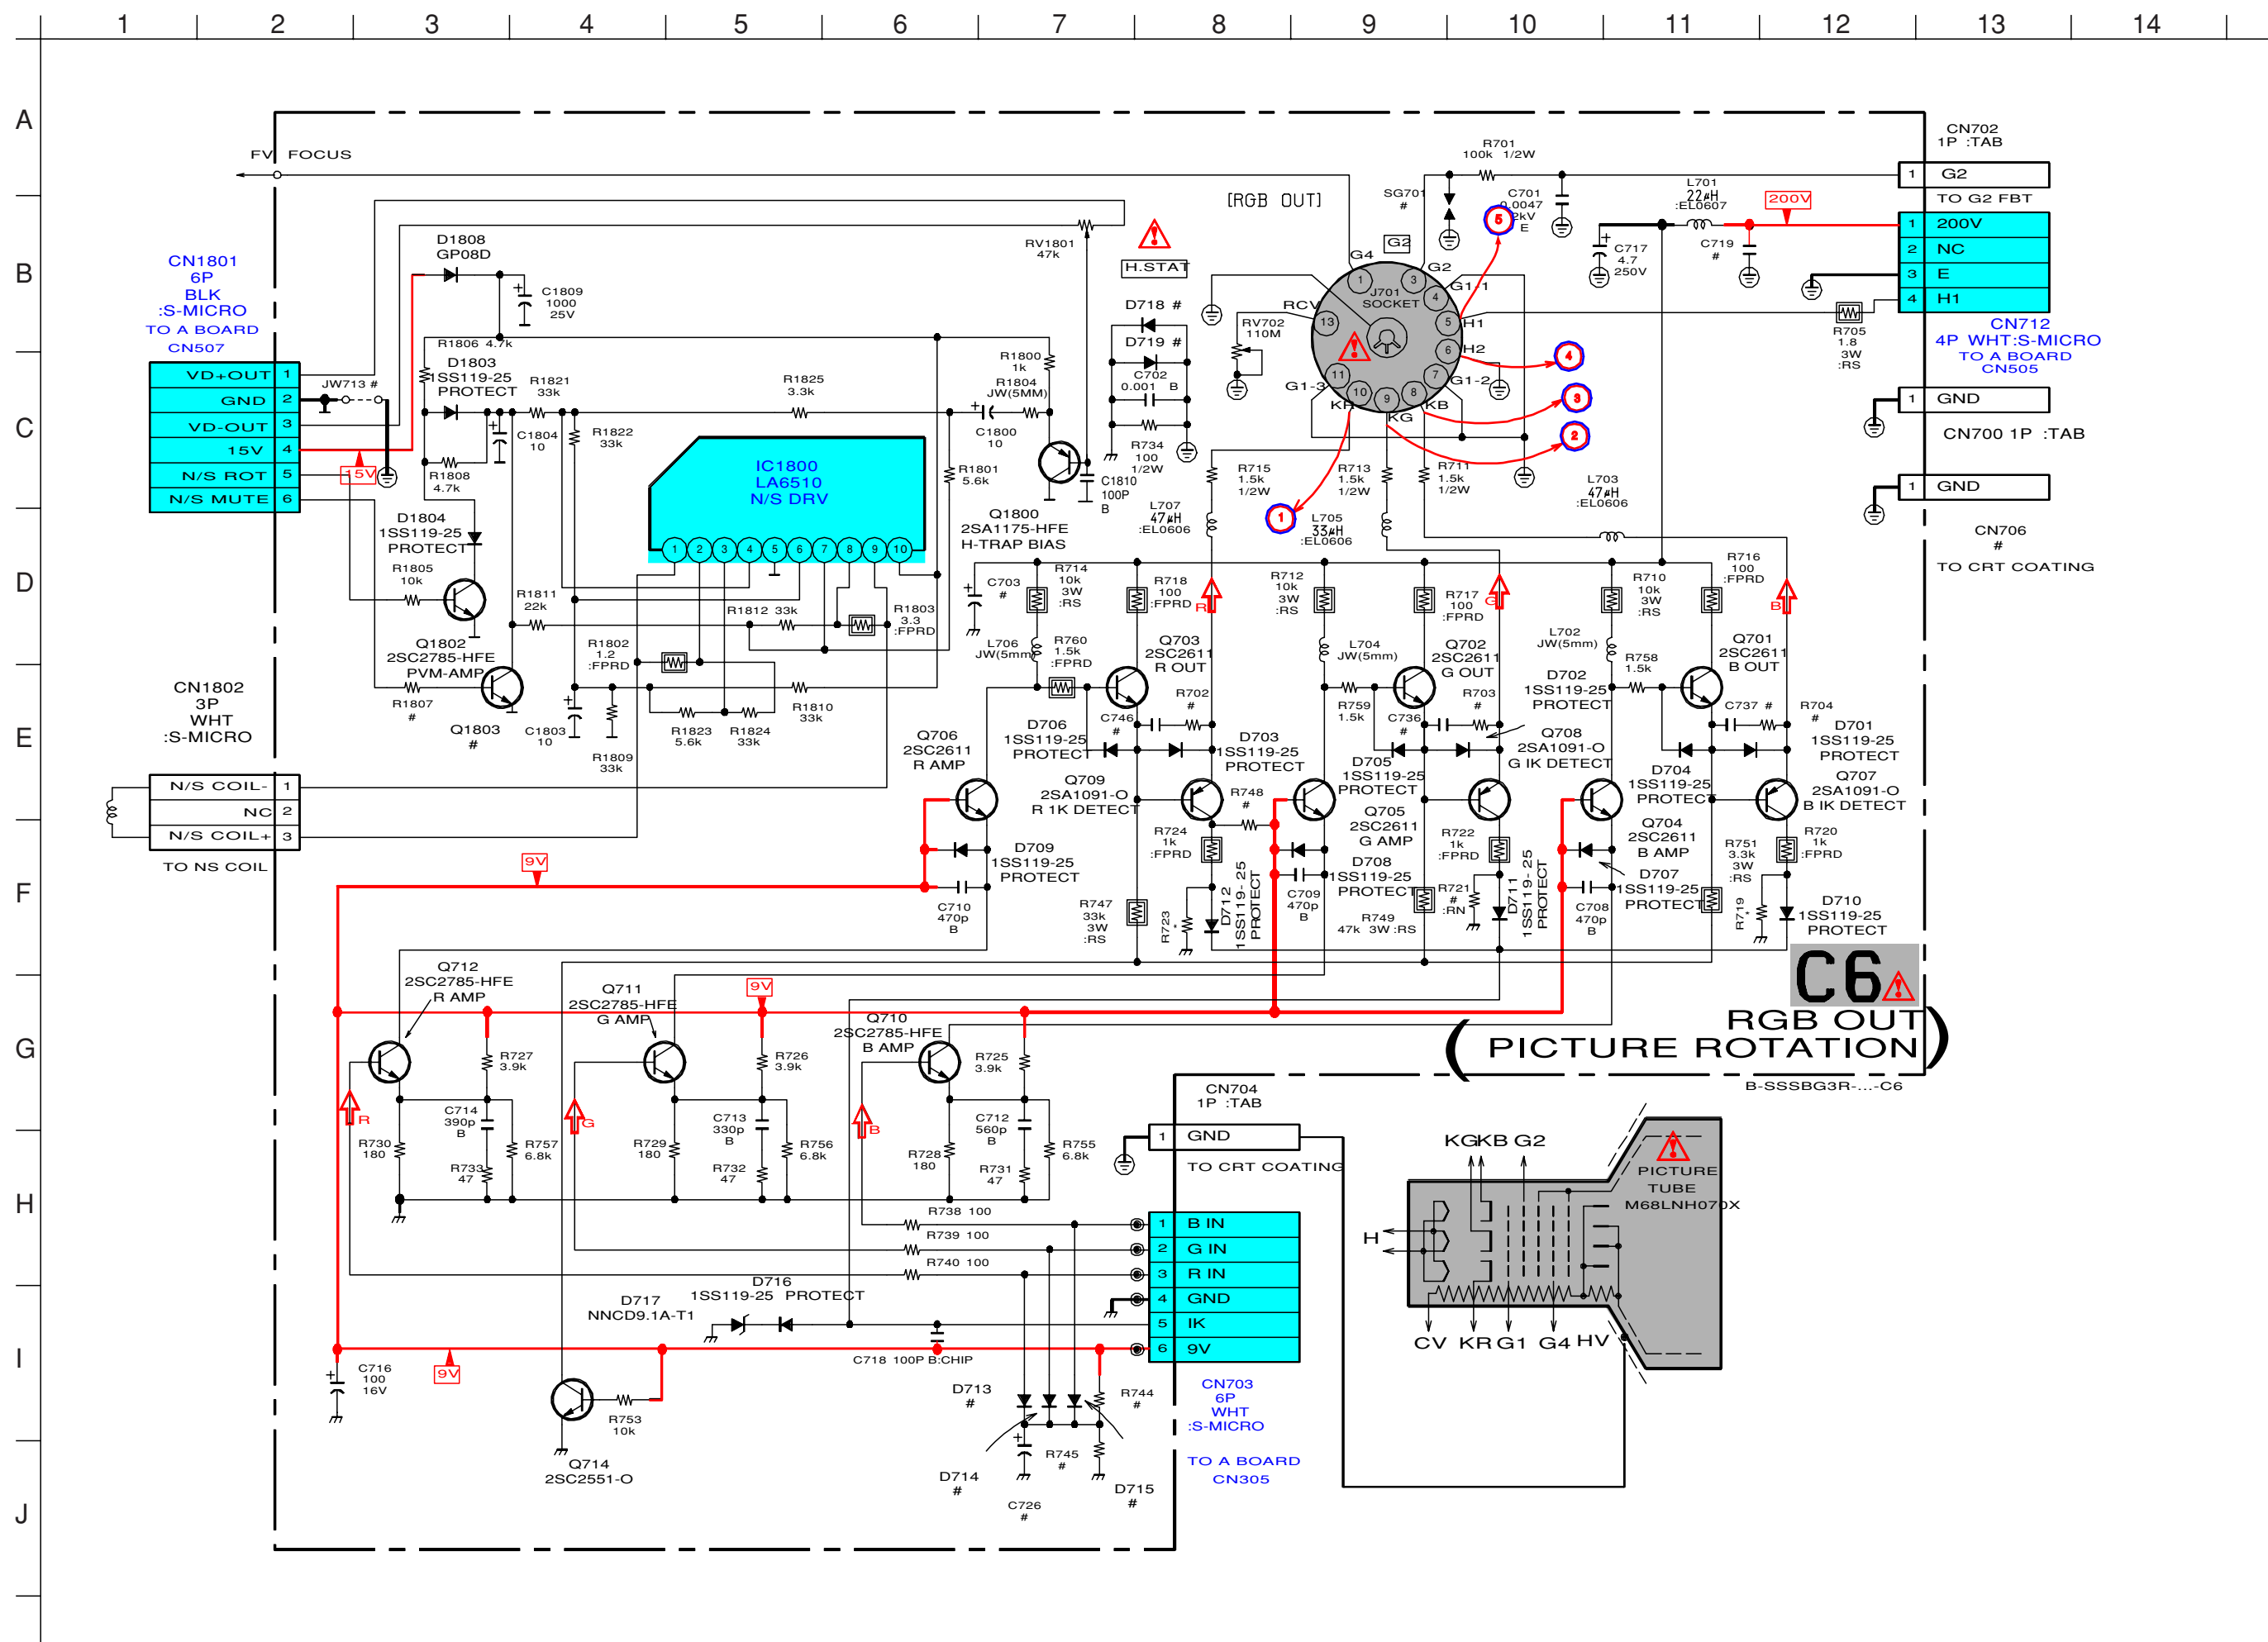


(4) H5 Board Schematic Dia gram

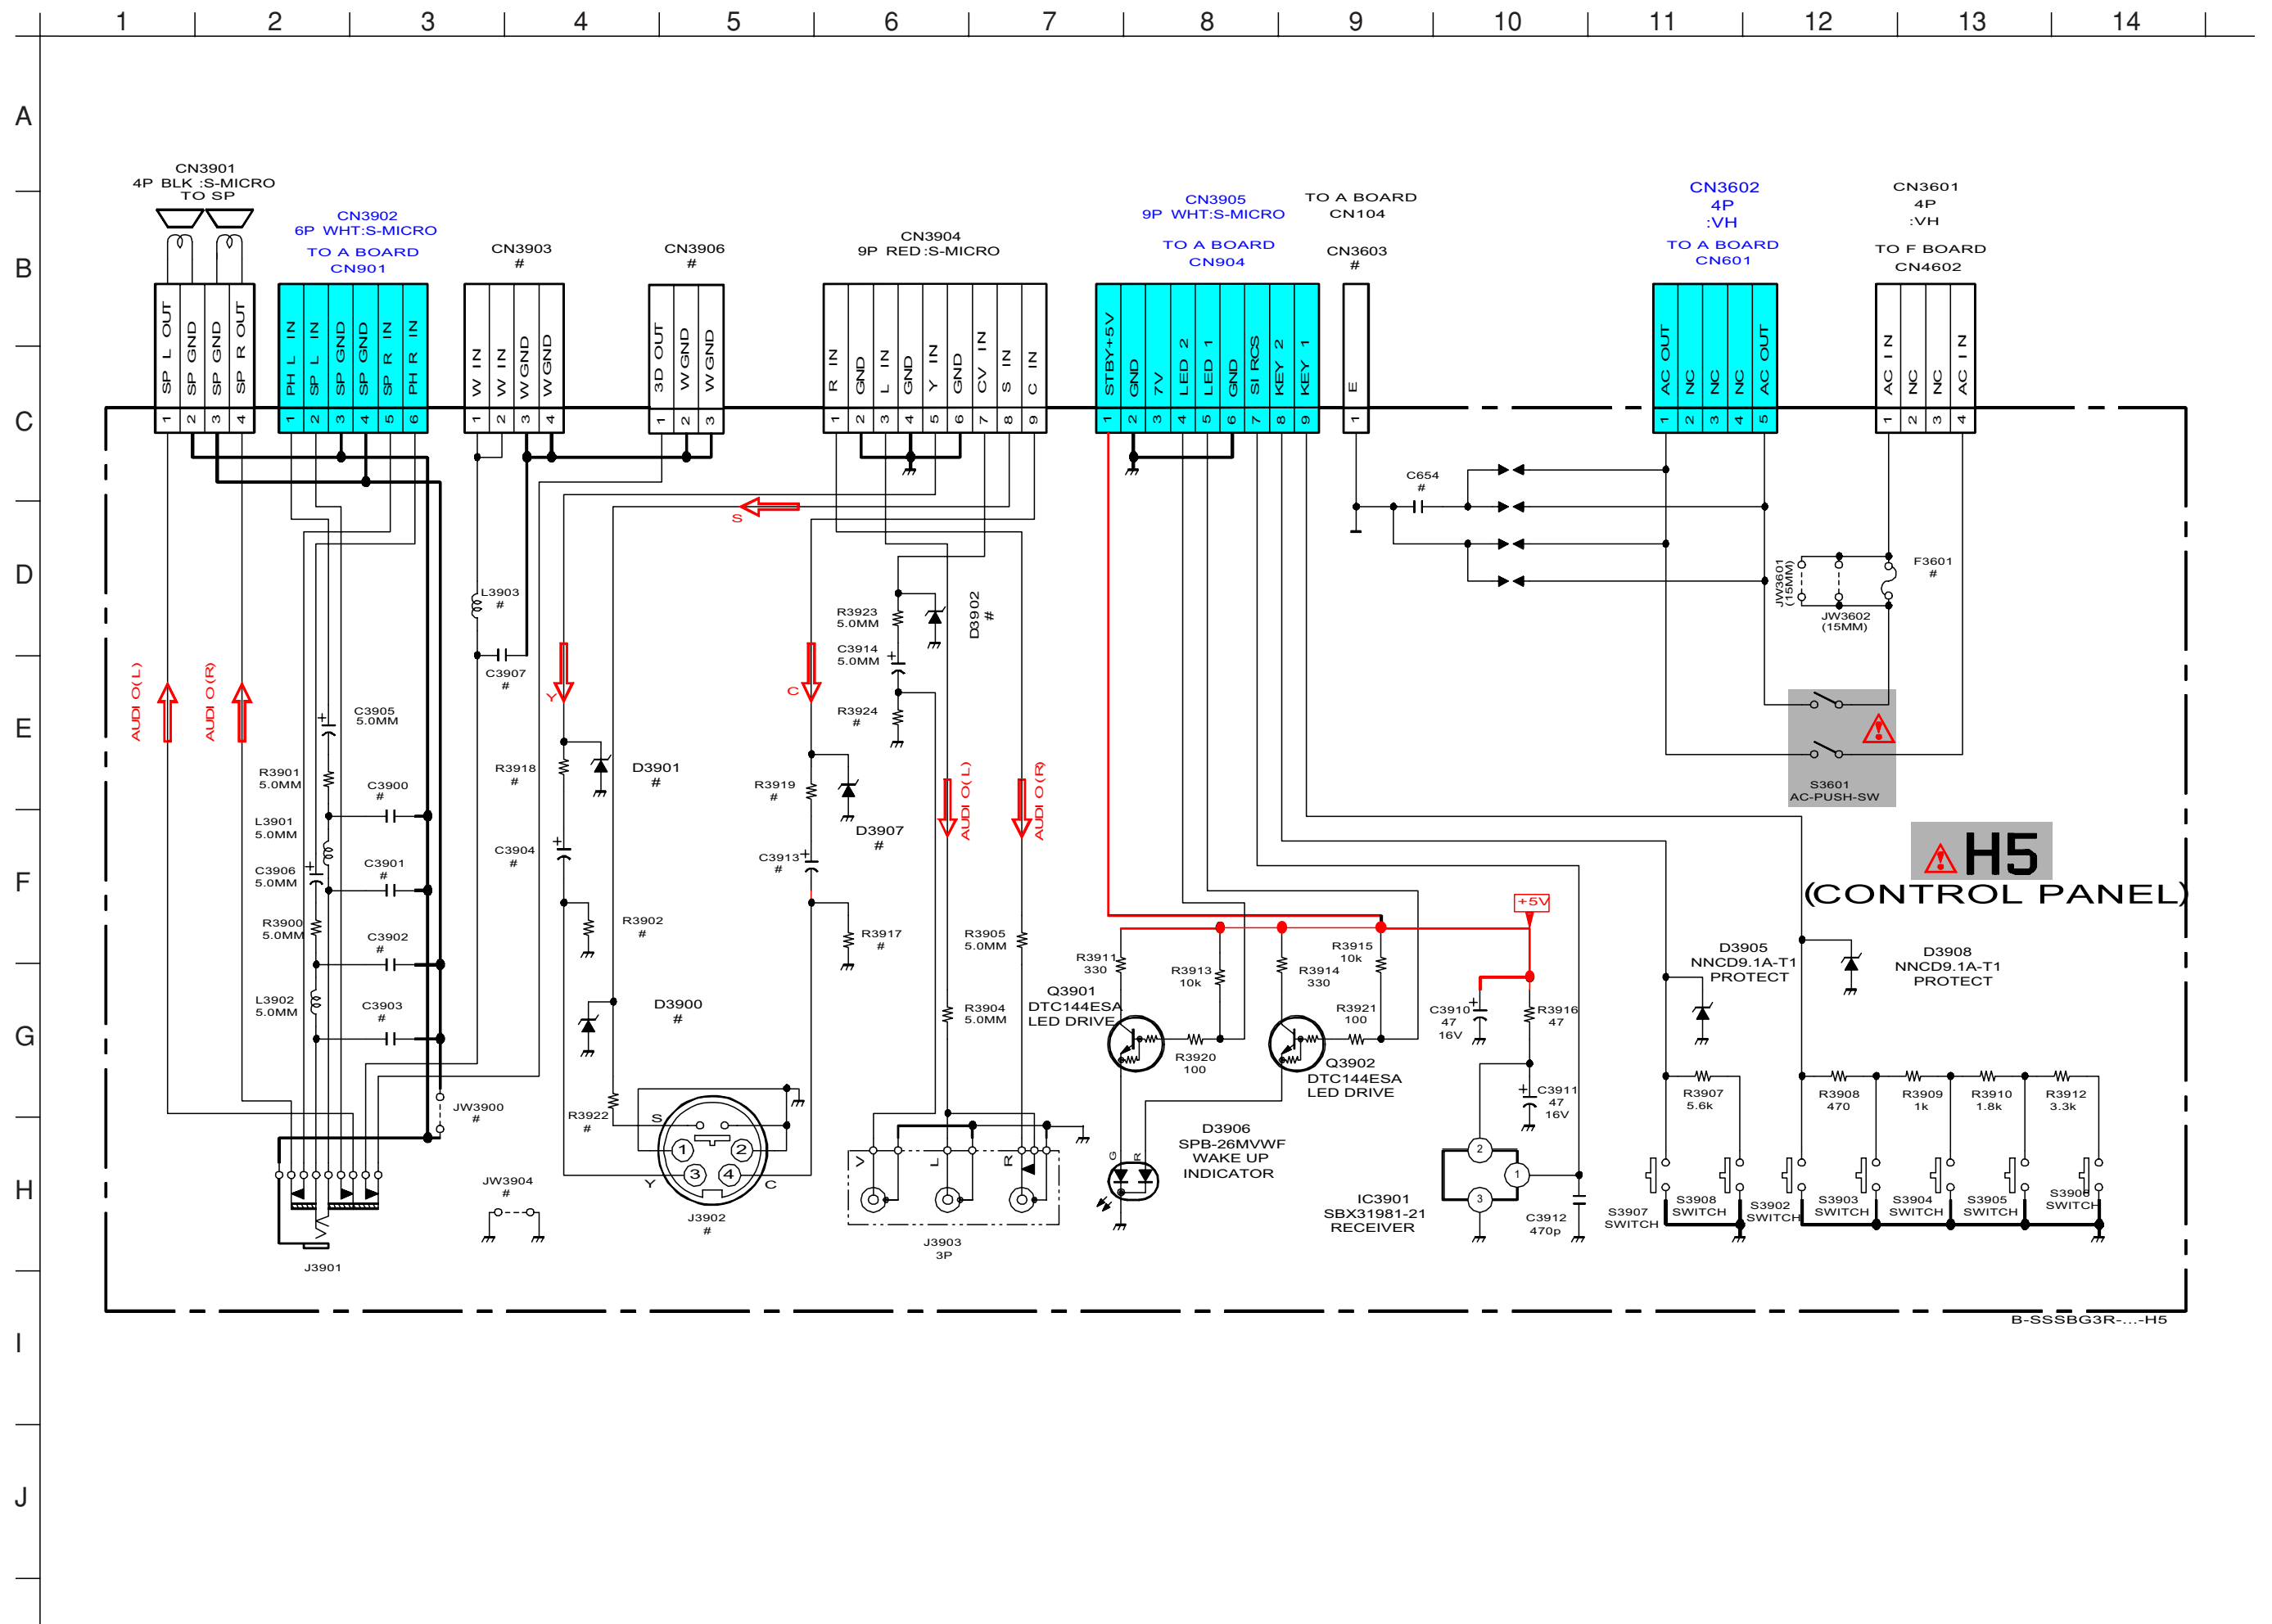


(5) V1 Board Schematic Diagram

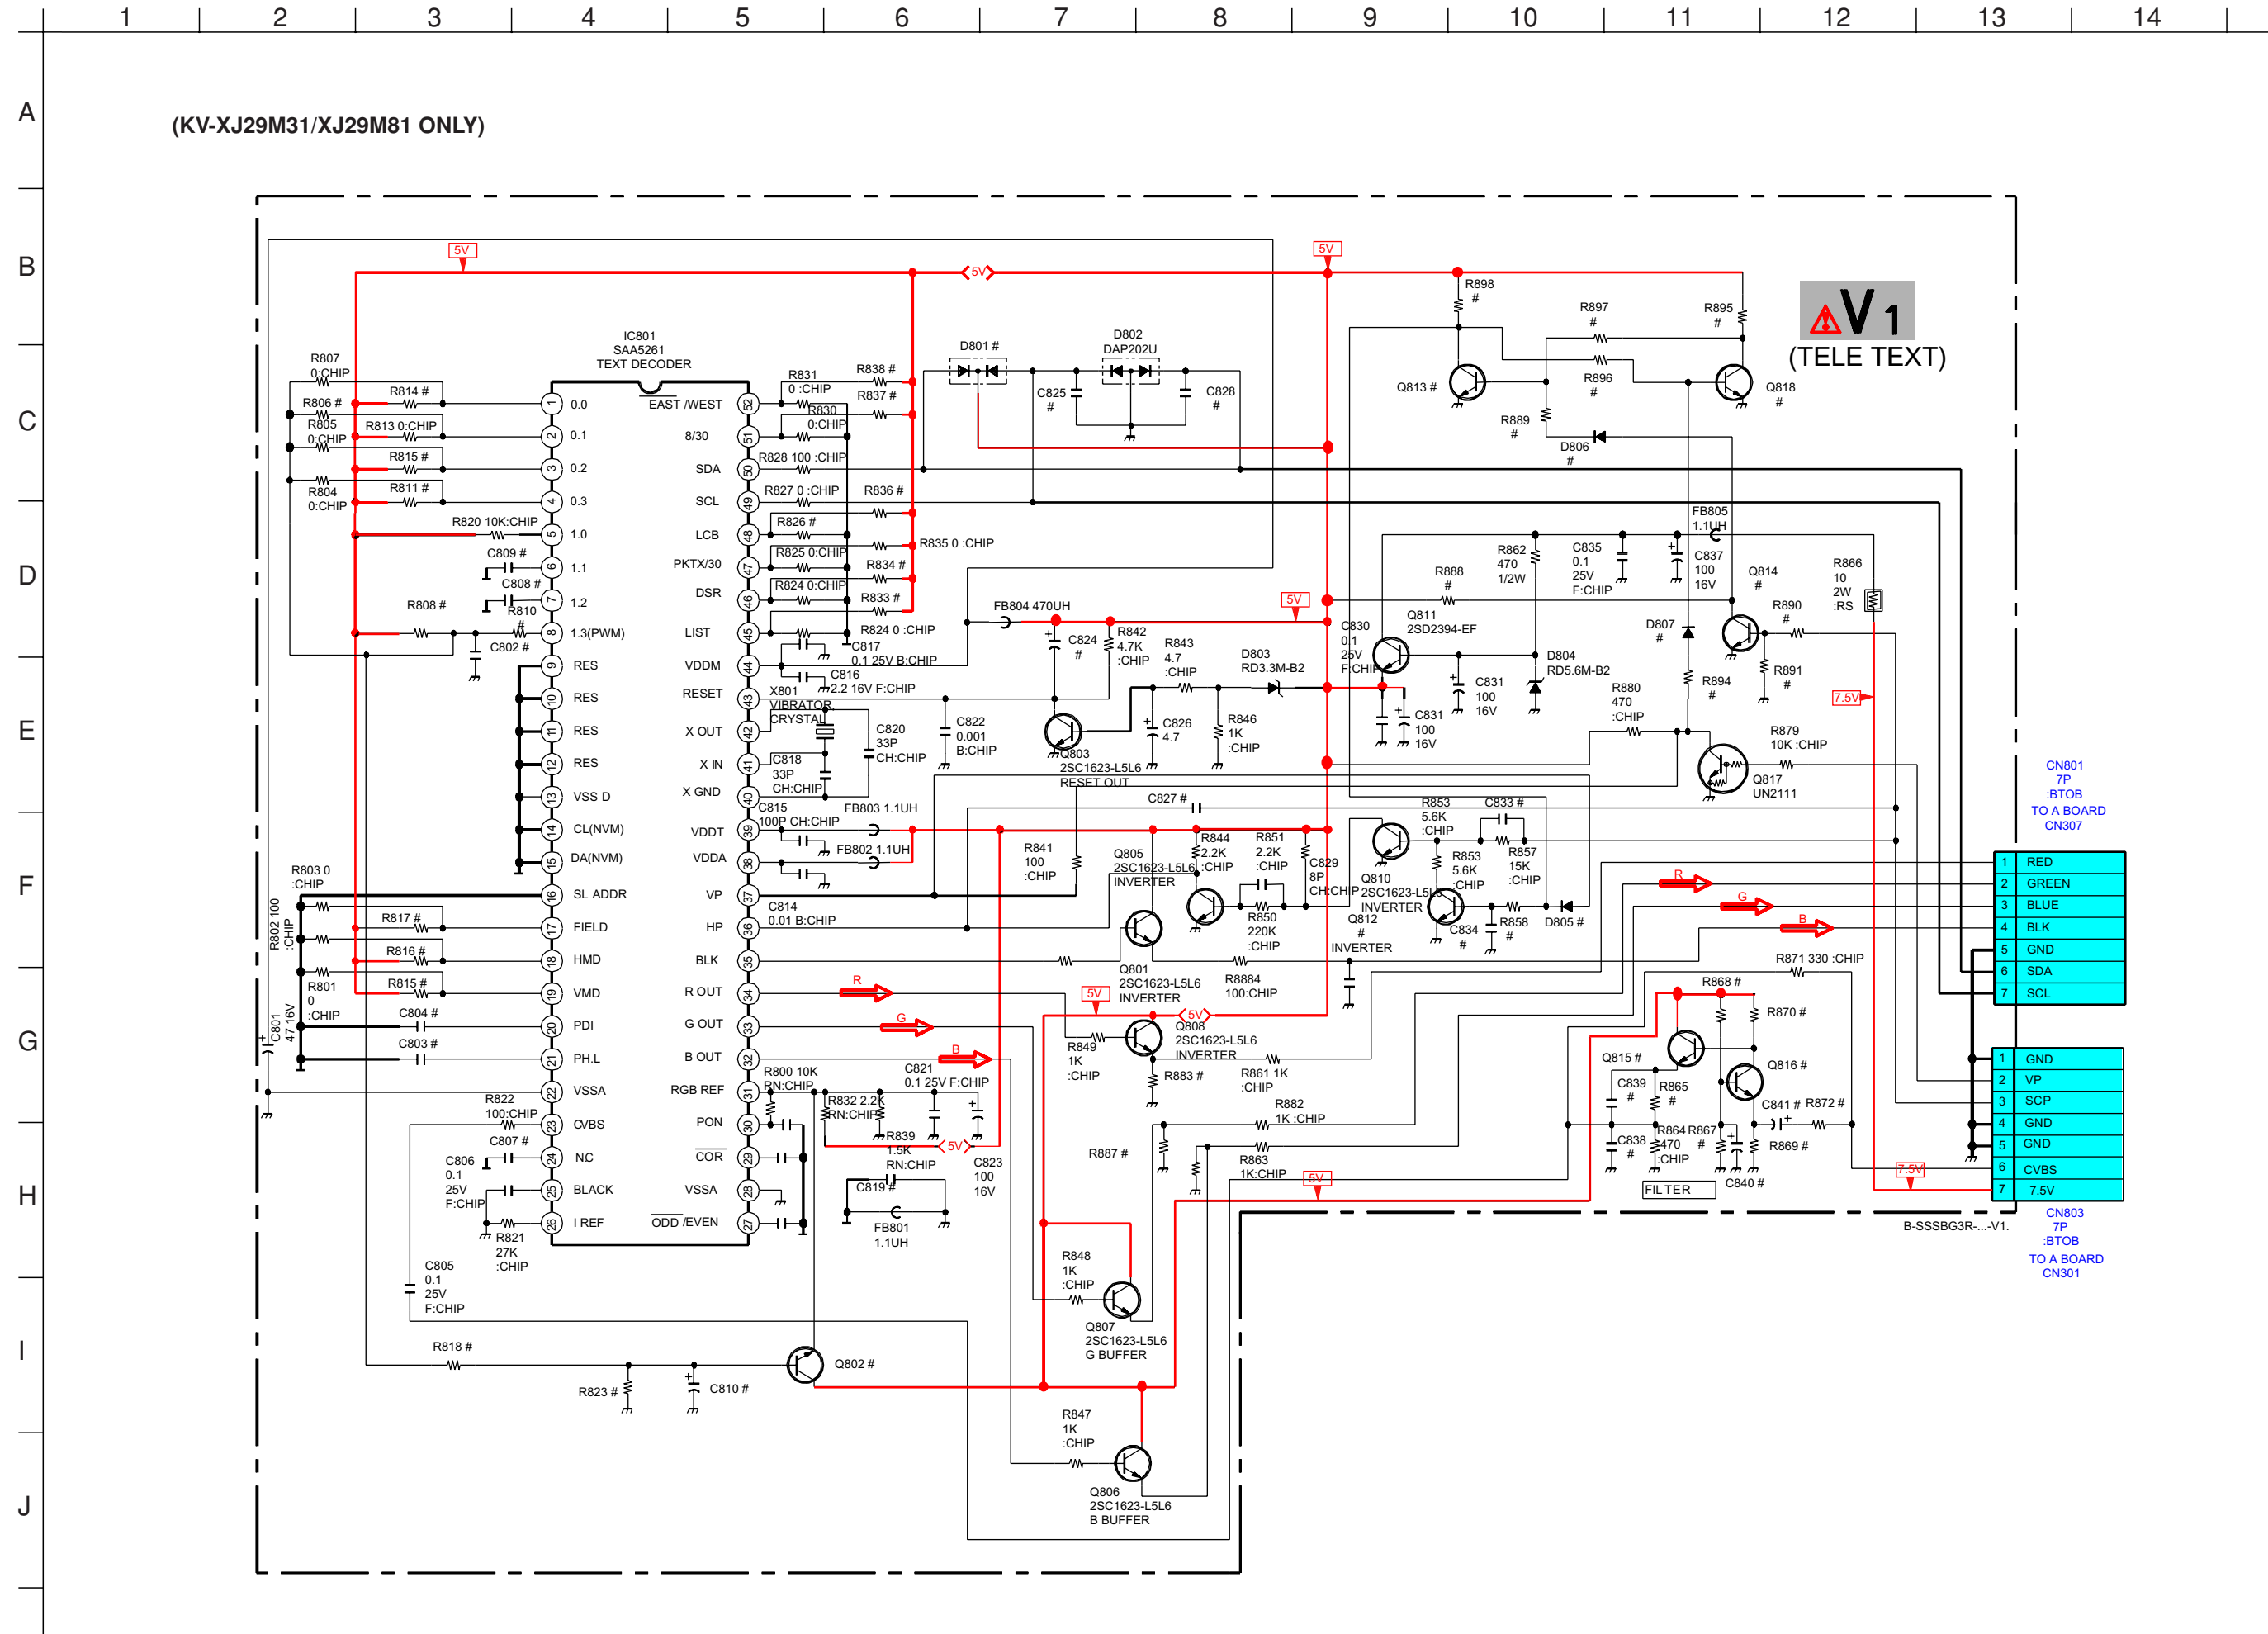


(6) VM1 Board Schematic Diagram

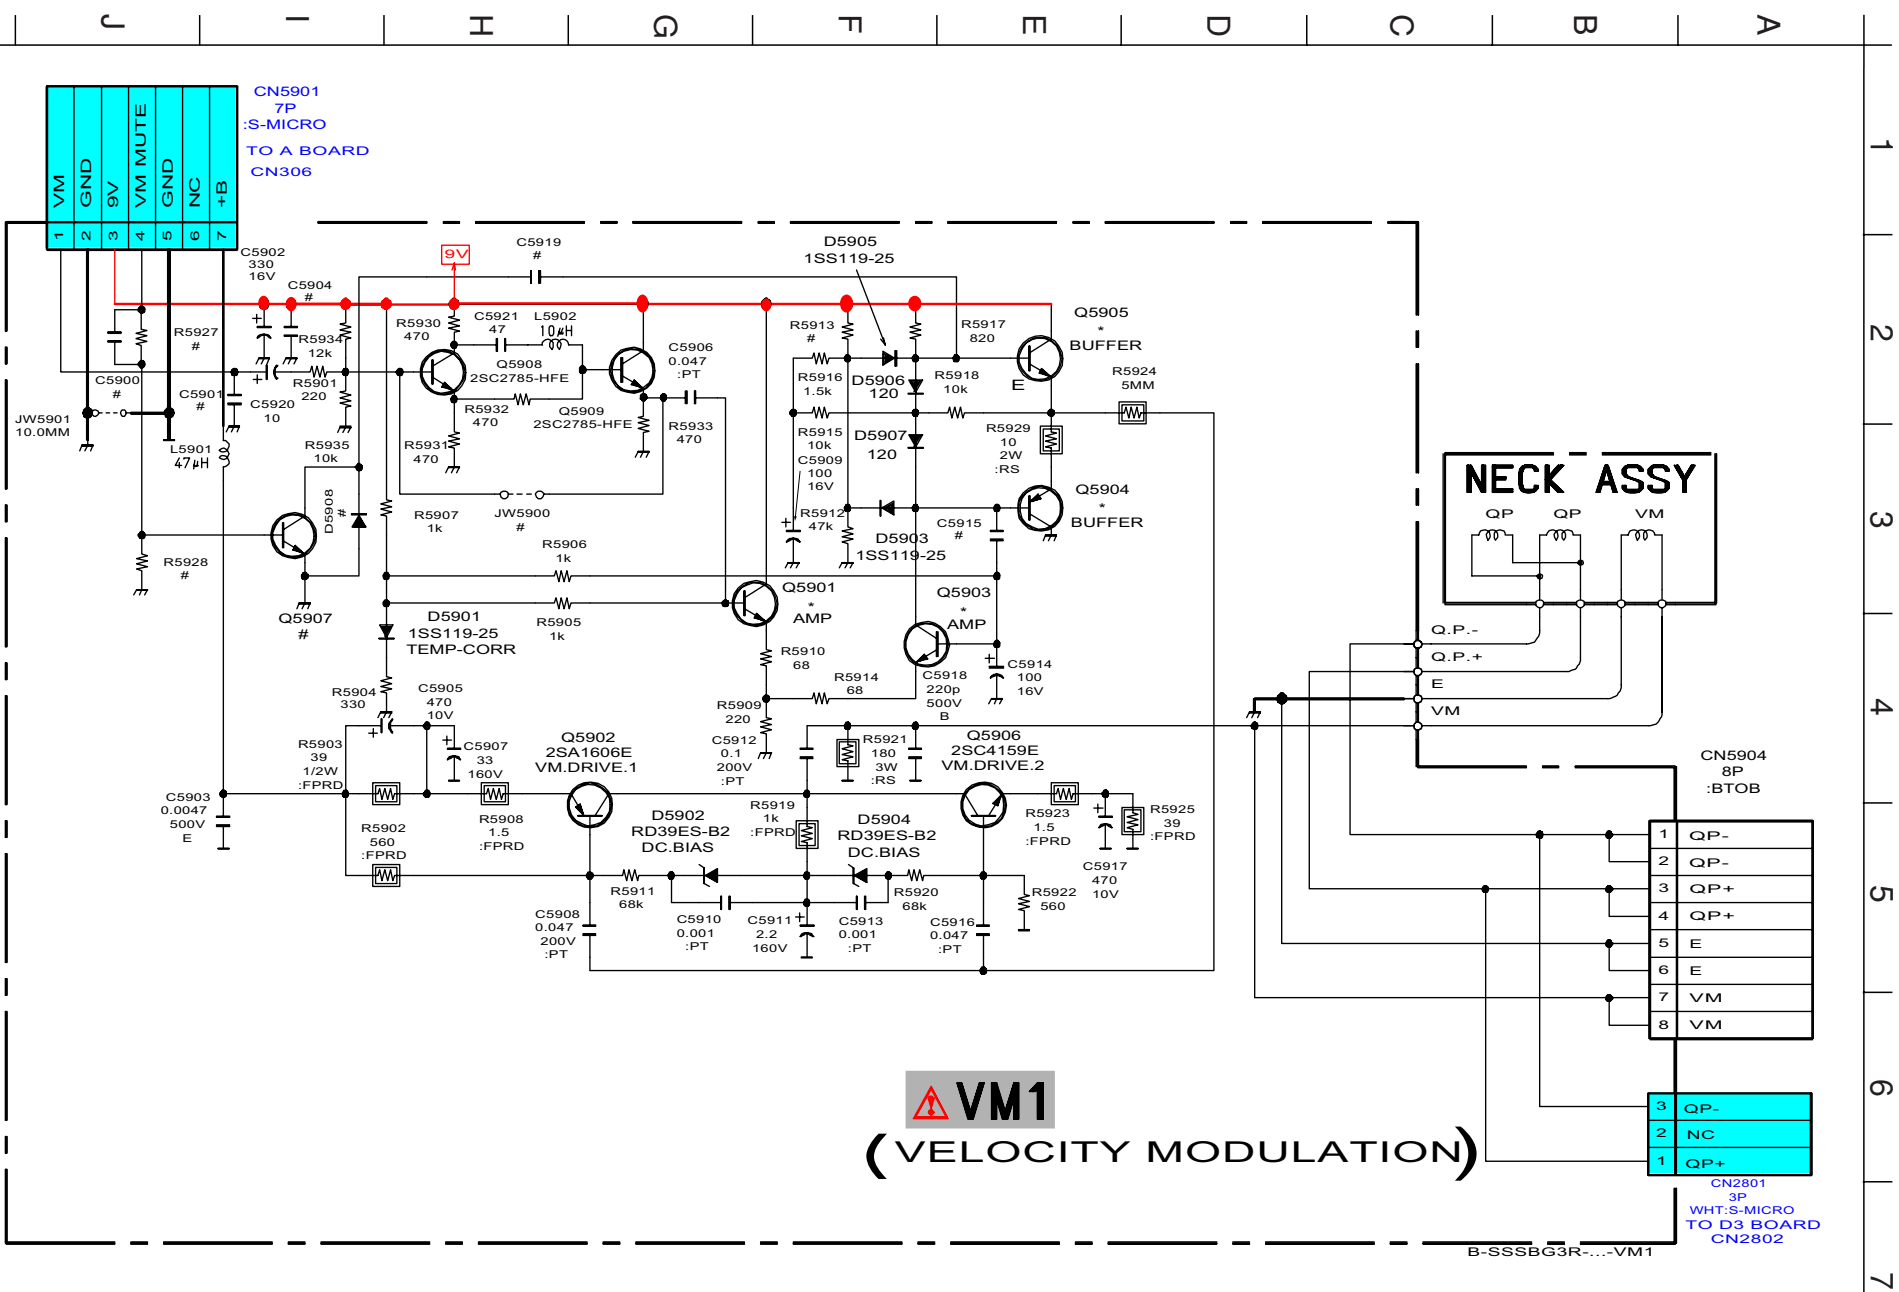

(7) D3 Board Schematic Diagram

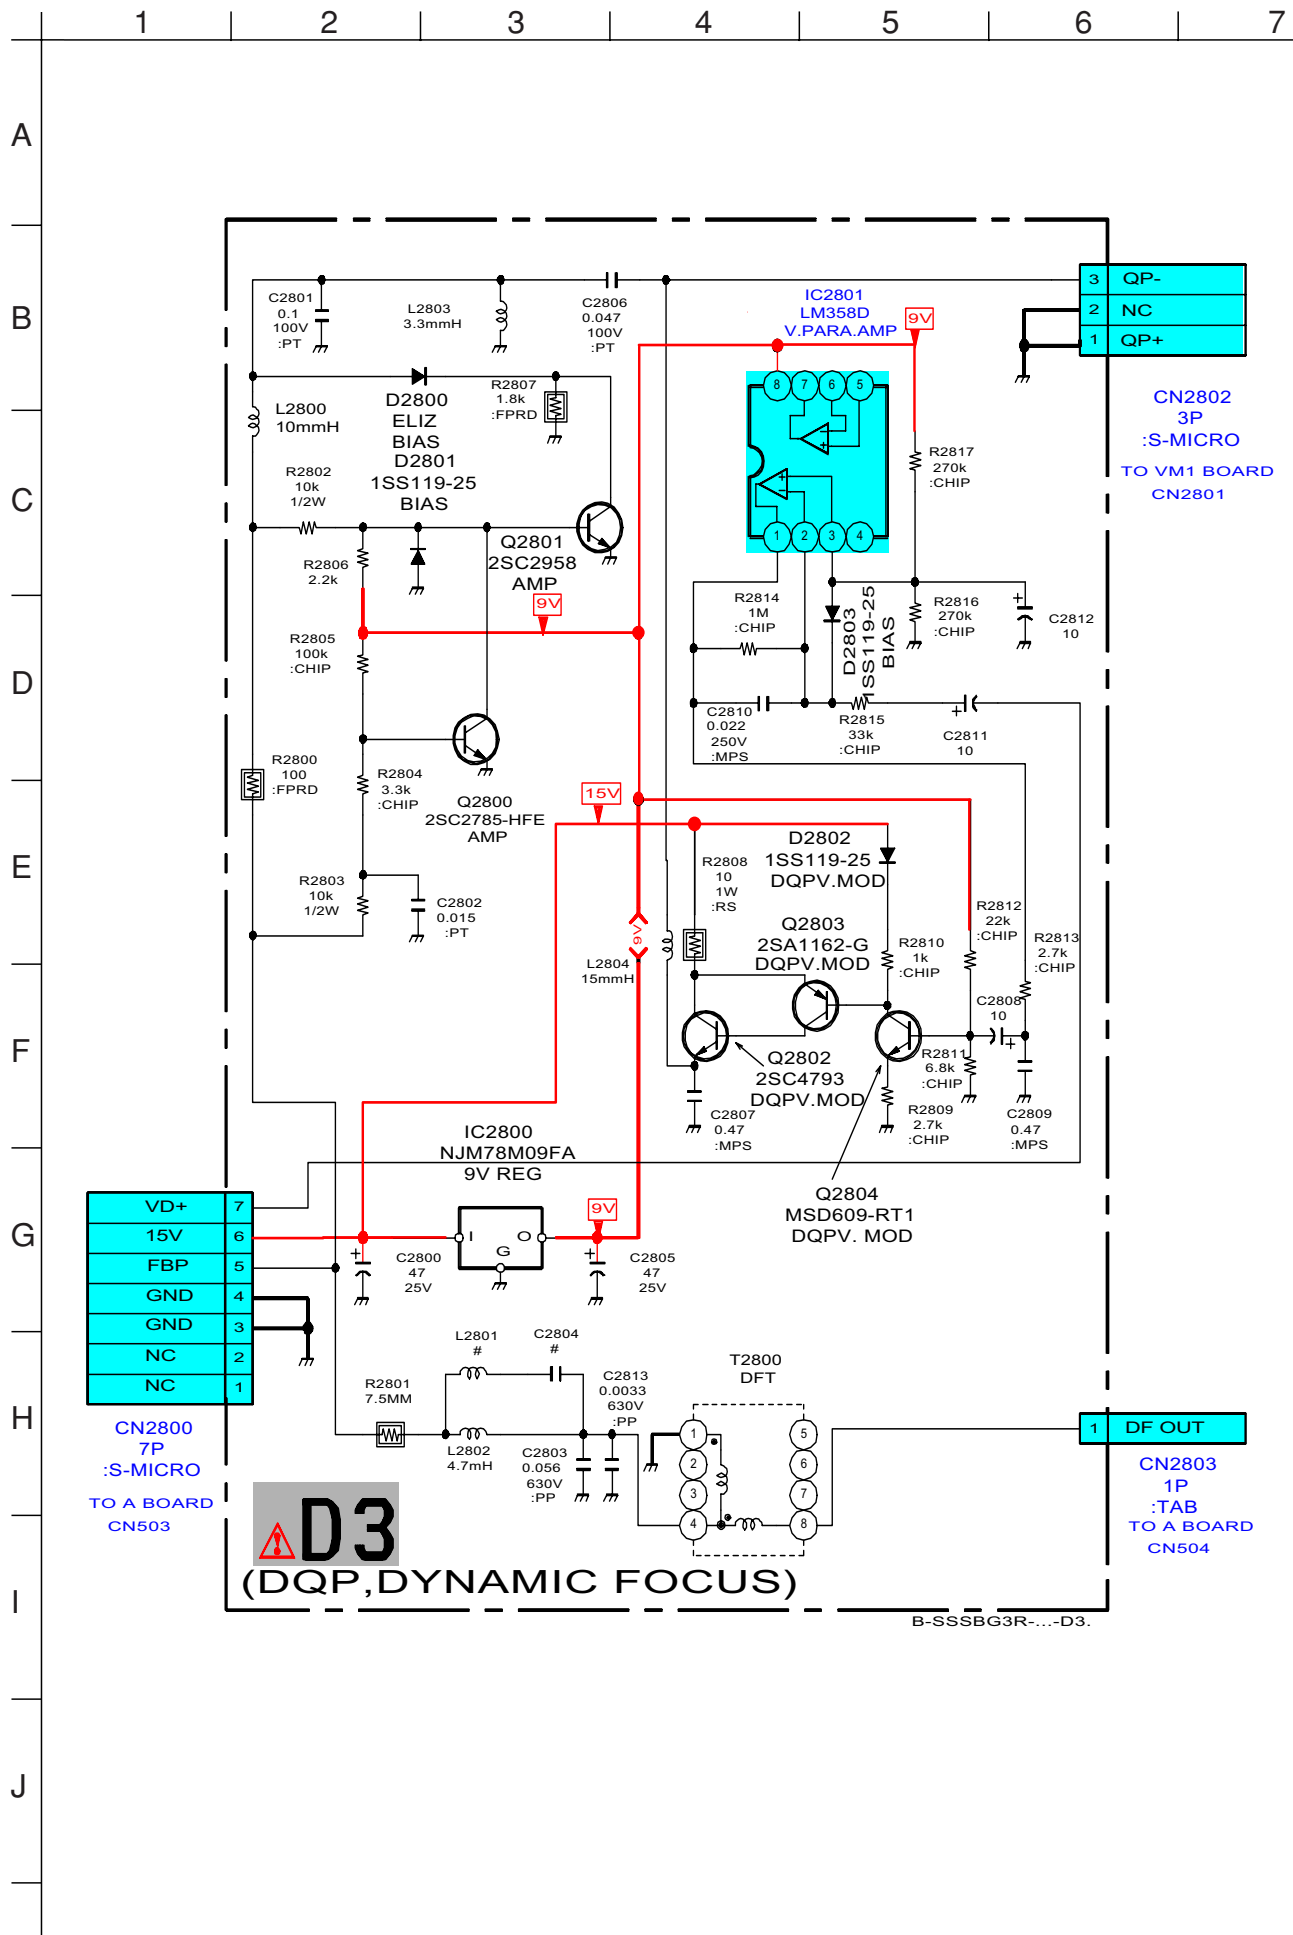

(8) J4 Board Schematic Diagram

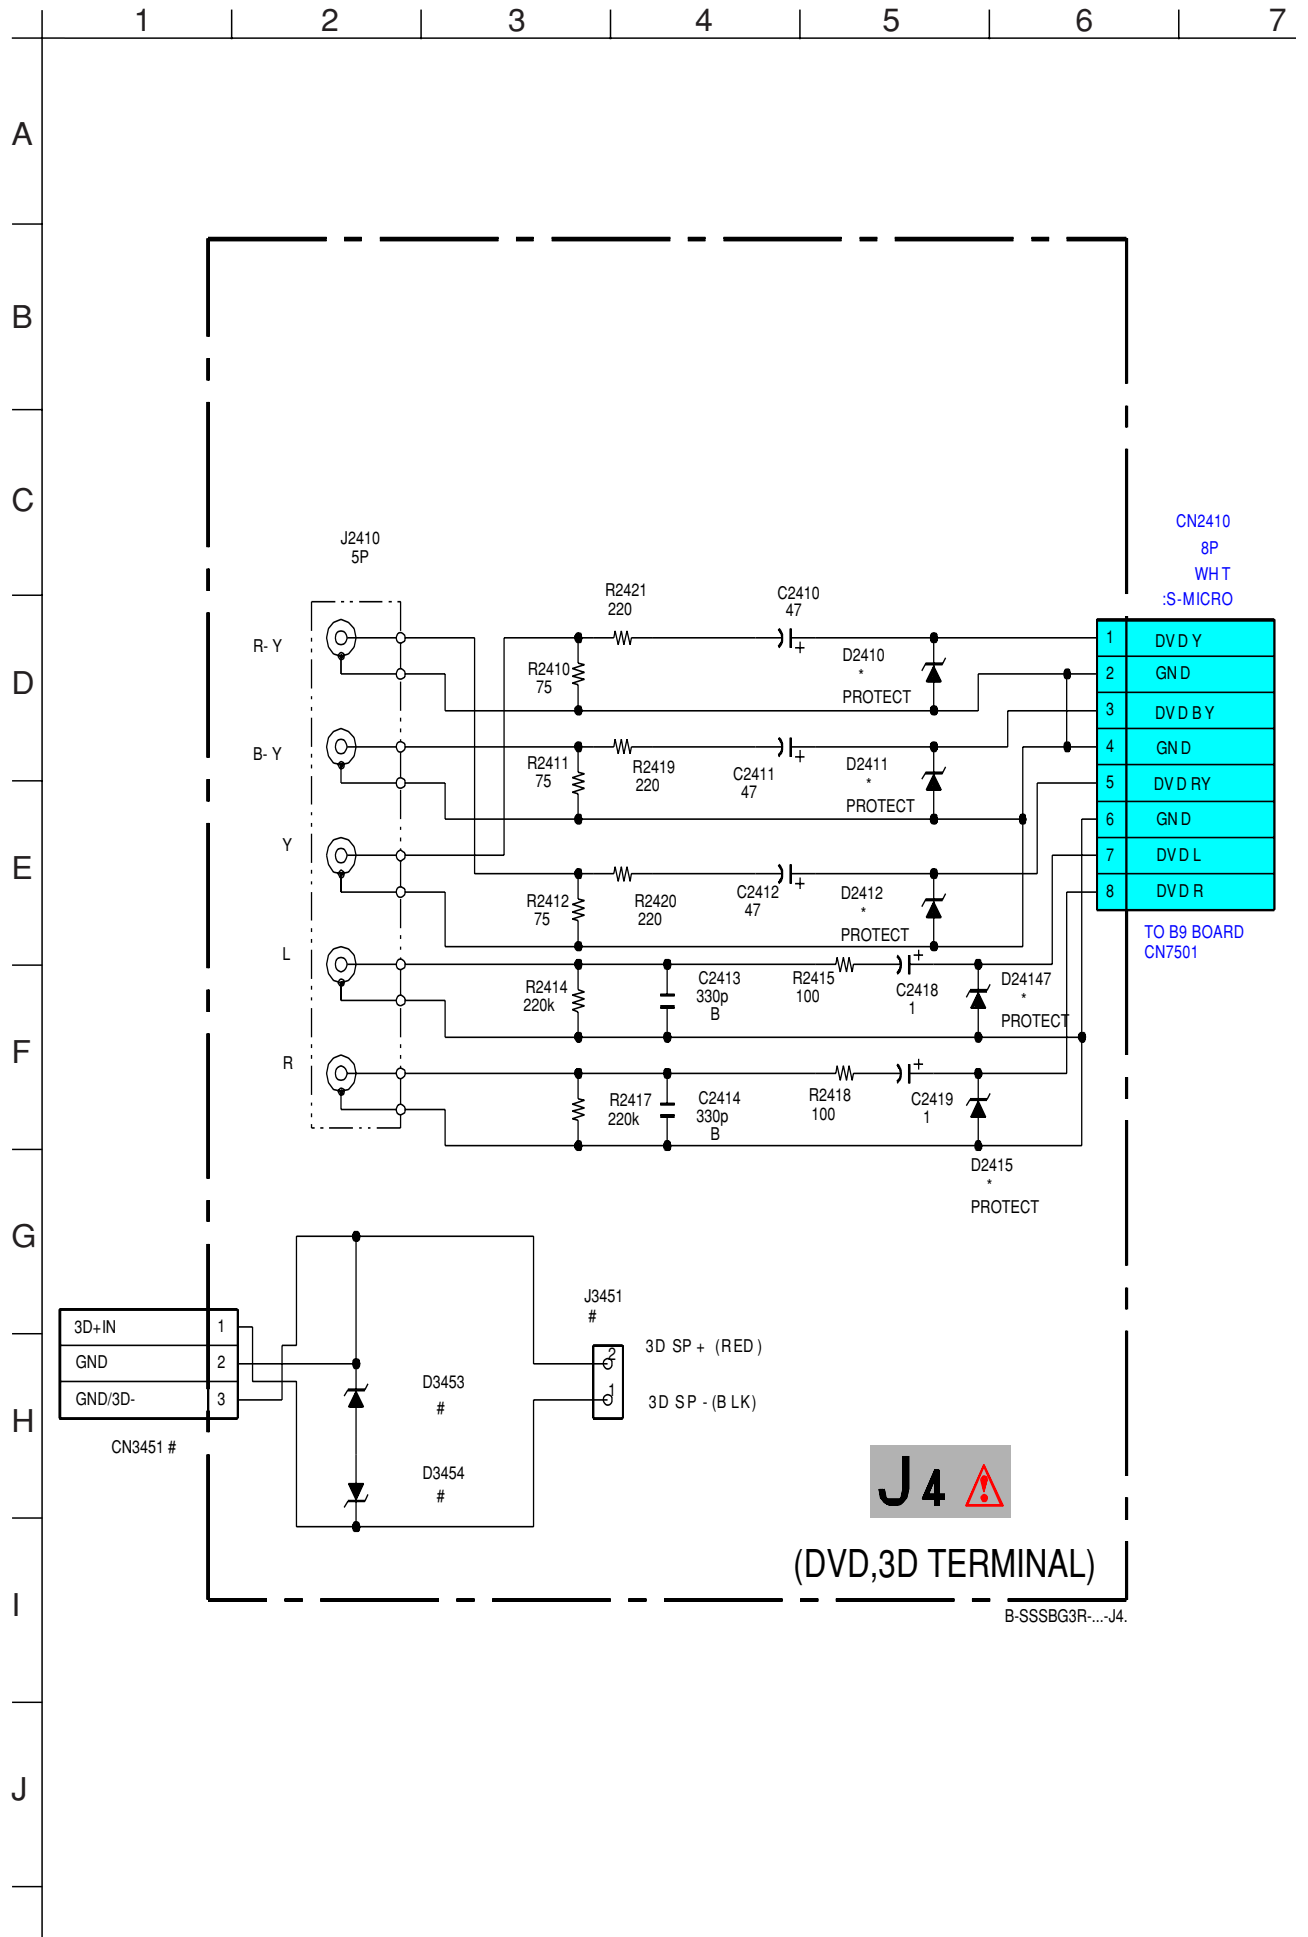

A Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50 (THAILAND)	KV-XJ29M60 (THAILAND)	KV-XJ29M80 (E)	KV-XJ29M80 (ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
C301	470 16V	470 25V	470 25V	470 16V	470 16V	470 16V	470 16V
C337	2.2	2.2	2.2	2.2	2.2	2.2 63V	2.2
CN205	1P	1P	1P	1P	1P	#	1P
CN301	7P	#	#	#	#	#	7P
CN307	7P	#	#	#	#	#	7P
CN602	2P	#	#	2P	2P	#	2P
CN604	2P	#	#	3P	3P	3P	3P
D001	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D005	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D006	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D100	MA111-TX	#	#	#	#	#	#
D203	1SS302	DA204K	DA204K	1SS302	DA204K	1SS302	1SS302
D301	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D306	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D307	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D308	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D309	UDZSTE-175-1B	UDZSTE-175-1B	UDZSTE-175-1B	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2
D311	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D312	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D313	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D314	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D315	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D320	UDZSTE-179-1B	UDZSTE-179-1B	UDZSTE-179-1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D321	UDZSTE-179-1B	UDZSTE-179-1B	UDZSTE-179-1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D505	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D507	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D508	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D510	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D511	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D512	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D517	RS3FS	ERCO6-15S	ERCO6-15S	RS3FS	RS3FS	RS3FS	RS3FS
D519	RS3FS	ERCO6-15S	ERCO6-15S	RS3FS	RS3FS	RS3FS	RS3FS
D532	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D534	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D607	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D610	AK04V0	11EQS04	11EQS04	AK04V0	AK04V0	AK04V0	AK04V0
D611	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D613	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D614	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D615	RU4AM-T3	RU4AM-T3	RU4AM-T3	RU4AM-T4	RU4AM-T4	RU4AM-T4	RU4AM-T4

A Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50 (THAILAND)	KV-XJ29M60 (THAILAND)	KV-XJ29M80 (E)	KV-XJ29M80 (ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
D623	MM3Z15VT1	DTZ-TT1-15B	DTZ-TT1-15B	MM3Z15VT1	MM3Z15VT1	MM3Z15VT1	MM3Z15VT1
D624	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	#
D625	RD10S-B	DTZ10B	DTZ10B	RD10S-B	RD10S-B	RD10S-B	RD10S-B
D634	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D635	1SS355TE-17	MMDL914-T1	MMDL914-T1	1SS355TE-17	1SS355TE-17	1SS355TE-17	1SS355TE-17
D638	D1N20R	11ES2	11ES2	D1N20R	D1N20R	D1N20R	D1N20R
IC001	CXP86461-637S	CXP86461-642S	CXP86461-642S	CXP86461-637S	CXP86461-638S	CXP86461-638S	CXP86461-638S
IC100	S-80743AL-A7-T1	#	#	#	#	#	#
JR107	0 :CHIP	#	#	#	#	#	#
JR109	#	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
L511	0UH	100UH	100UH	0UH	0UH	0UH	0UH
L515	"Coil, With Core"	"Coil, With Core"	"Coil, With Core"	"Coil, With Core"	"Coil, With Core"	10MMH	"Coil, With Core"
Q002	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q101	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q301	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q302	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q303	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q305	2SA1162-G 2	SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q306	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q307	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q308	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q313	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q314	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q501	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q502	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q503	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q507	2SA1162-G	2SA1037AK-T-146	2SA1037AK-T-146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q509	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q602	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q606	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q608	MSD601-RT1	2SC1623-L5L6	2SC1623-L5L6	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
R028	10K :CHIP	#	#	#	#	#	#
R032	#	0 :CHIP	0 :CHIP	#	0 :CHIP	0 :CHIP	0 :CHIP
R101	100 :CHIP	#	#	#	#	#	#
R102	100 :CHIP	#	#	#	#	#	#
R375	100 :CHIP	#	#	#	#	#	100 :CHIP
T601	Transformer Line Filter	Coil Line Filter	Coil Line Filter	Transformer Line Filter	Transformer Line Filter	Coil Line Filter	Transformer Line Filter
TU101	BTF-WG441	BTF-LG433	BTF-WG441	BTF-LG433	BTF-LG433	BTF-LG433	BTF-LG433

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81**

RM-952

B9 Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50/XJ29M60 (THAILAND)	KV-XJ29M80 (E)	KV-XJ29M80 (ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
C7561	#	4.7	#	4.7	4.7	4.7
C7562	#	100 16V	#	100 16V	100 16V	100 16V
CN7502	#	2P	#	2P	2P	2P
JR7505	0 : CHIP	#	0 : CHIP	#	#	#
JR7506	#	0 : CHIP	#	0 :CHIP	0 : CHIP	0 :CHIP
JR7507	#	0 :CHIP	#	0 :CHIP	0 : CHIP	0 :CHIP
JR7508	0 : CHIP	#	0 : CHIP	#	#	#
L7513	#	10UH	#	10UH	10UH	10UH
R7577	#	4.7K :CHIP	#	4.7K :CHIP	4.7K :CHIP	4.7K :CHIP
R7583	#	10K :CHIP	#	10K :CHIP	10K :CHIP	10K :CHIP
R7584	#	3.3K :CHIP	#	3.3K :CHIP	3.3K :CHIP	3.3K :CHIP
T7601	Transformer Line Filter	Coil Line Filter	Transformer Line Filter	Transformer Line Filter	Coil Line Filter	Transformer Line Filter
T7602	Transformer Line Filter	Coil Line Filter	Transformer Line Filter	Transformer Line Filter	Transformer Line Filter	Transformer Line Filter

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

H5 Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50/XJ29M60 (THAILAND)	KV-XJ29M80 (E/ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
D3906	SPB-26MVWF	SPB-25MVWF	SPB-26MVWF	SPB-26MVWF	SPB-26MVWF

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

VM1 Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50/XJ29M60 (THAILAND)	KV-XJ29M80 (E/ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
Q5901	2SC2458-YGR	2SC2785-HFE	2SC2458-YGR	2SC2458-YGR	2SC2458-YGR
Q5903	2SC2458-YGR	2SC2785-HFE	2SC2458-YGR	2SC2458-YGR	2SC2458-YGR
Q5904	2SA1175-HFE	2SA933AS-QT	2SA1175-HFE	2SA1175-HFE	2SA1175-HFE
Q5905	2SC2458-YGR	2SC2785-HFE	2SC2458-YGR	2SC2458-YGR	2SC2458-YGR

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

J4 Board * Mark List

	KV-XJ29M31 (OCENIA)	KV-XJ29M50/XJ29M60 (THAILAND)	KV-XJ29M80 (E/ME)	KV-XJ29M50/XJ29M80 (INDIA)	KV-XJ29M81 (ME)
D2410	HZS9.1NB2	NNCD9.1A-T1	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2
D2411	HZS9.1NB2	NNCD9.1A-T1	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2
D2412	HZS9.1NB2	NNCD9.1A-T1	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2
D2414	HZS9.1NB2	NNCD9.1A-T1	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2
D2415	HZS9.1NB2	NNCD9.1A-T1	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

5-4. VOLTAGE LIST MEASUREMENT

A (1/2) BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]		
IC001	1	0	IC100	1	4.9		50	0		
	2	4.9			2	5.0		51	0	
	3	*			3	0		52	2.7	
	4	5.0	IC201	1	1.3	IC502	1	0.9		
	5	5.0			2		22.2		2	3.6
	6	0			3		11.7		3	1.6
	7	3.9			4		22.6		4	0
	8	4.9			5		11.7		5	2.9
	9	0.4			6		22.2		6	2.4
	10	4.9			7		0		7	6.9
	11	5.0			8		22.5		8	8.9
	12	0			9	11.6	IC503	1	1.6	
	13	2.2			10	0.6			2	12.9
	14	2.1			11	0			3	13.14
	15	5.0			12	0			4	14.6
	16	(5.0)[0.2]			13	0			5	*
	17	0			14	0.6			6	13.0
	18	0			15	0			7	1.6
	19	2.8		IC301	1	3.3	IC602	1	121.2	
	20	*			2	(3.4)[5.0]			2	127.7
	21	5.0			3	2.3			3	121.2
	22	0			4	5.0	IC603	I	12.7	
	23	5.0			5	4.8			G	0
	24	*			6	4.3			O	8.9
	25	*			7	5.4	IC604	I	8.2	
	26	5.0			8	4.5			G	5.0
	27	(3.9)[4.9]			9	4.9			O	0
	28	5.0			10	*	Q001	B	0.8	
	29	4.9			11	*			C	0
	30	0			12	0			E	0
	31	0			13	8.2	Q002	B	0	
	32	0			14	2.4			C	5.0
	33	5.0			15	3.5			E	0
	34	(*)[0]			16	3.5	Q003	B	5.0	
	35	0		17	5.7			C	0	
	36	2.6		18	7.7			E	4.8	
	37	2.5		19	1.0	Q004	B	0		
	38	4.9		20	3.6			C	4.9	
	39	5.0		21	3.2			E	0	
	40	0		22	3.9	Q101	B	2.9		
	41	1.0		23	3.3			C	8.8	
	42	1.0		24	2.5			E	2.2	
	43	0		25	2.5	Q201	B	1.1		
	44	5.0		26	2.6			C	0	
	45	5.0		27	*			E	0	
	46	4.6		28	4.5	Q202	B	1.1		
	47	5.0		29	4.5			C	0	
	48	4.6		30	4.5			E	0	
	49	4.6		31	4.5	Q205	B	11.7		
	50	0		32	4.5			C	0	
	51	0		33	4.0			E	0	
	52	0		34	3.6	Q206	B	0		
IC002	1	0	35	*			C	0		
	2	5.0	36	*			E	0		
	3	4.9	37	*	Q207	B	11.7			
	4	7.3	38	4.6			C	0		
	5	5.9	39	*			E	0		
	6	0	40	5.1	Q301	B	12.6			
	7	*	41	5.0			C	12.7		
IC003	1	0	42	0			E	12.7		
	2	0	43	4.9	Q302	B	4.7			
	3	0	44	*			C	8.1		
	4	0	45	7.4			E	4.1		
	5	5.0	46	5.0						
	6	5.0	47	8.6						
	7	5.0	48	*						
	8	5.0	49	4.3						

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952**

A (2/2) BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
Q303	B	7.9	Q501	B	3.5	Q601	B	*
	C	3.2		C	0		C	*
	E	3.4		E	0		E	*
Q304	B	3.4	Q502	B	4.2	Q602	B	1.1
	C	0		C	2.4		C	1.2
	E	4.0		E	4.0		E	1.0
Q305	B	4.1	Q503	B	0	Q603	B	1.2
	C	0		C	3.6		C	1.0
	E	4.7		E	0		E	1.2
Q306	B	4.1	Q505	B	6.9	Q604	B	*
	C	0		C	15.7		C	0
	E	(0.4)[0]		E	0		E	133.9
Q307	B	4.3	Q507	B	*	Q605	B	0
	C	4.3		C	0.1		C	0
	E	8.6		E	12.8		E	0
Q308	B	(4.1)[3.5]	Q509	B	0.6	Q606	B	0
	C	0.4		C	0		C	0
	E	(4.7)[1.0]		E	0		E	0
Q313	B	0	Q511	B	0	Q607	B	0.7
	C	12.5		C	*		C	0
	E	0		E	*		E	0
Q315	B	0	Q600	B	0	Q608	B	0
	C	2.5		C	*		C	0
	E	0		E	0		E	0.7

B9 BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC7203	1	4.5	IC7204	26	*	Q7309	B	5.7
	2	4.5		27	*		C	8.8
	3	4.5		28	0		E	5.0
	4	4.5		29	3.8	Q7310	B	5.7
	5	4.5		30	3.8		C	8.8
	6	4.5		31	3.8		E	1.8
	7	4.5		32	3.8	Q7401	B	0
	8	4.5		33	4.5		C	0
	9	4.5		34	4.5		E	0
	10	4.5		35	4.5	Q7402	B	*
	11	4.5		36	4.5		C	0
	12	4.5		37	4.5		E	0
	13	4.5		38	4.5	Q7403	B	5.2
	14	4.5		39	4.5		C	0
	15	4.5		40	4.5		E	4.6
	16	4.5		41	4.5	Q7404	B	5.2
	17	4.5		42	8.9		C	0
	18	4.5		1	5.0		E	4.5
	19	4.5		2	2.5			
	20	4.5		3	2.5			
	21	4.5		4	0			
	22	4.5		5	2.5			
	23	4.5		6	2.5			
	24	0		7	5.0			
	25	*		8	*			

H5 BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
IC3901	1	4.8
	2	4.8
	3	0
Q3901	B	0.1
	C	4.9
	E	0.1
Q3902	B	*
	C	1.2
	E	1.3

C6 BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC1800	1	10.5	Q705	B	8.8
	2	10.8		C	148
	3	8.2		E	8.2
	4	(0)[8.3]	Q706	B	8.8
	5	0		C	149
	6	7.7		E	8.3
	7	7.7	Q707	B	(146.7)[171.1]
	8	2.4		C	5
	9	2.6		E	142.4
	10	12.2	Q710	B	2.5
J701	G2	(1.7)[295]		C	8.3
	H1	0.7		E	2.5
	KB	142.8	Q712	B	2.4
	KG	(143.3)[146]		C	8.3
KR	145.5	E		2.4	
Q701	B	(146.6)[*]	Q714	B	0
	C	198.9		C	0
	E	(146.2)[173]		E	0
Q702	B	148.1	Q1800	B	3.8
	C	198.9		C	0
	E	(148.5)[177]		E	4.5
Q703	B	149.1			
	C	198.8			
	E	(149.2)[180]			
Q704	B	8.8			
	C	*			
	E	8.2			

VM1 BOARD VOLTAGE LIST


Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
Q5901	B	2.6	Q5904	B	4.6
	C	8.7		C	5.0
	E	1.9		E	0
Q5902	B	134.9	Q5905	B	5.5
	C	(69.9)[73.9]		C	8.7
	E	134.9		E	5.1
Q5903	B	2.6	Q5906	B	0.2
	C	4.6		C	70
	E	1.9		E	72.3

D3 BOARD VOLTAGE LIST


Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC2801	1	0.1	Q2801	B	1.6
	2	6.3		C	2.3
	3	0.1		E	0
	4	0	Q2802	B	3.3
	5	6.4		C	12.1
	6	0.1		E	0
	7	0.1	Q2803	B	11.5
	8	12.8		C	3.3
		E		12.1	
Q2800	B	1.6	Q2804	B	2.3
	C	2.0		C	12.0
	E	0		E	0

5-5. WAVEFORMS

A BOARD WAVEFORMS

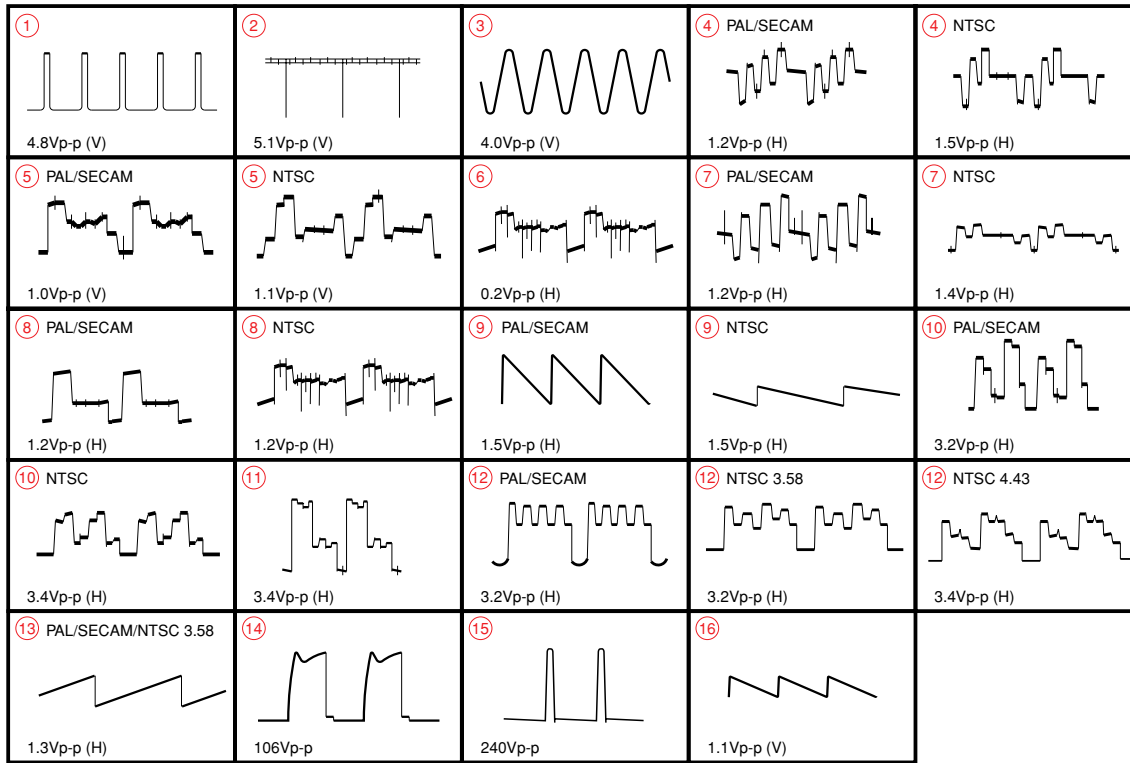

C6 BOARD WAVEFORMS

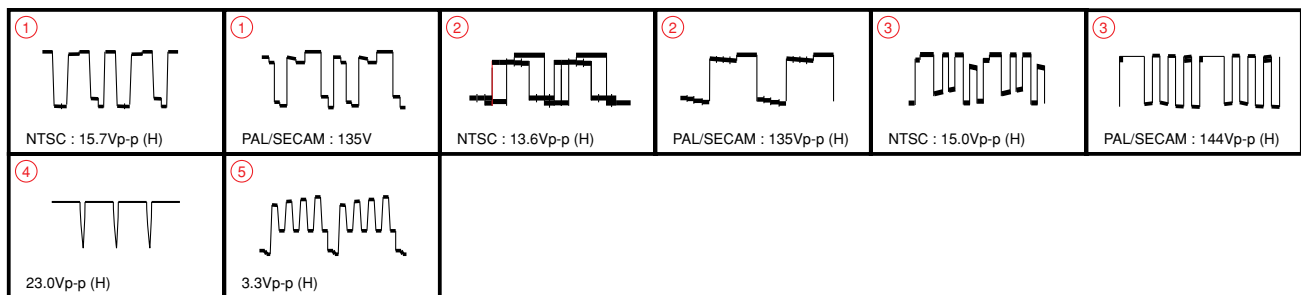


5-6. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS


B9 [CISPR, AC FUSE, A/V INPUT, DVD SWITCH, MONITOR OUT]

D3 [DQP, DYNAMIC FOCUS]

– B9 Board –

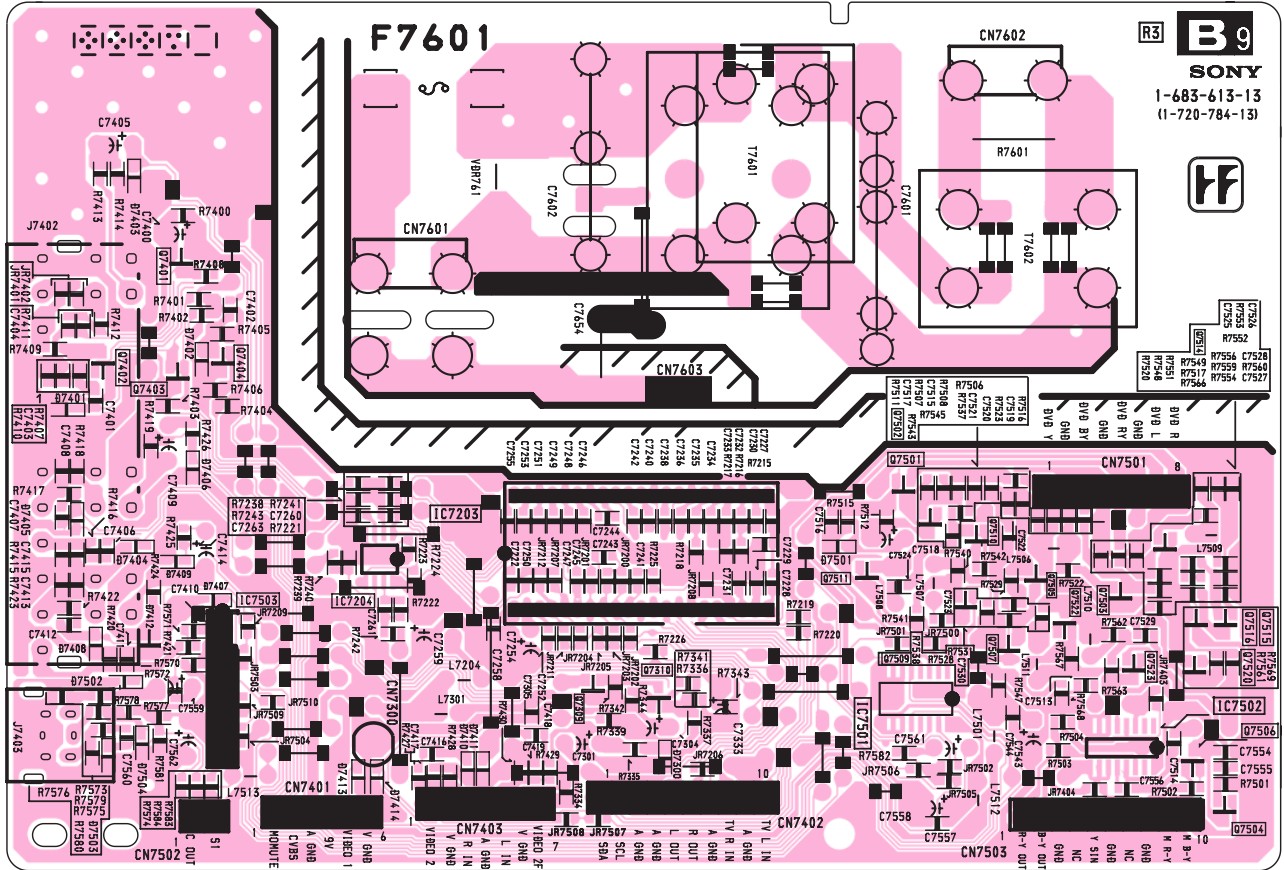



– D3 Board –

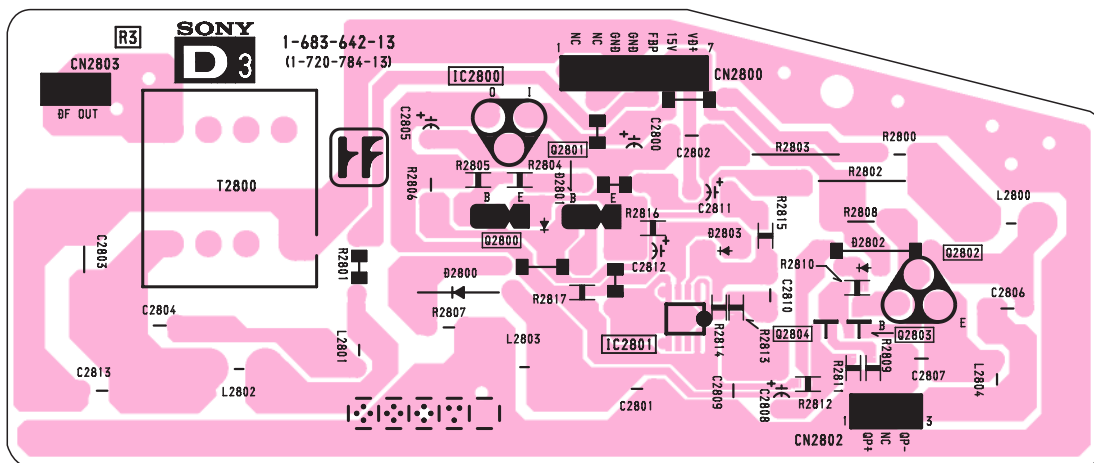

PRINTED WIRING BOARDS

A [SYSTEM CONTROLLER, Y/C JUNGLE,
DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY]

- A Board -

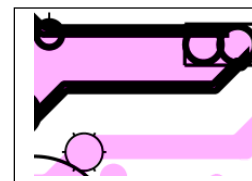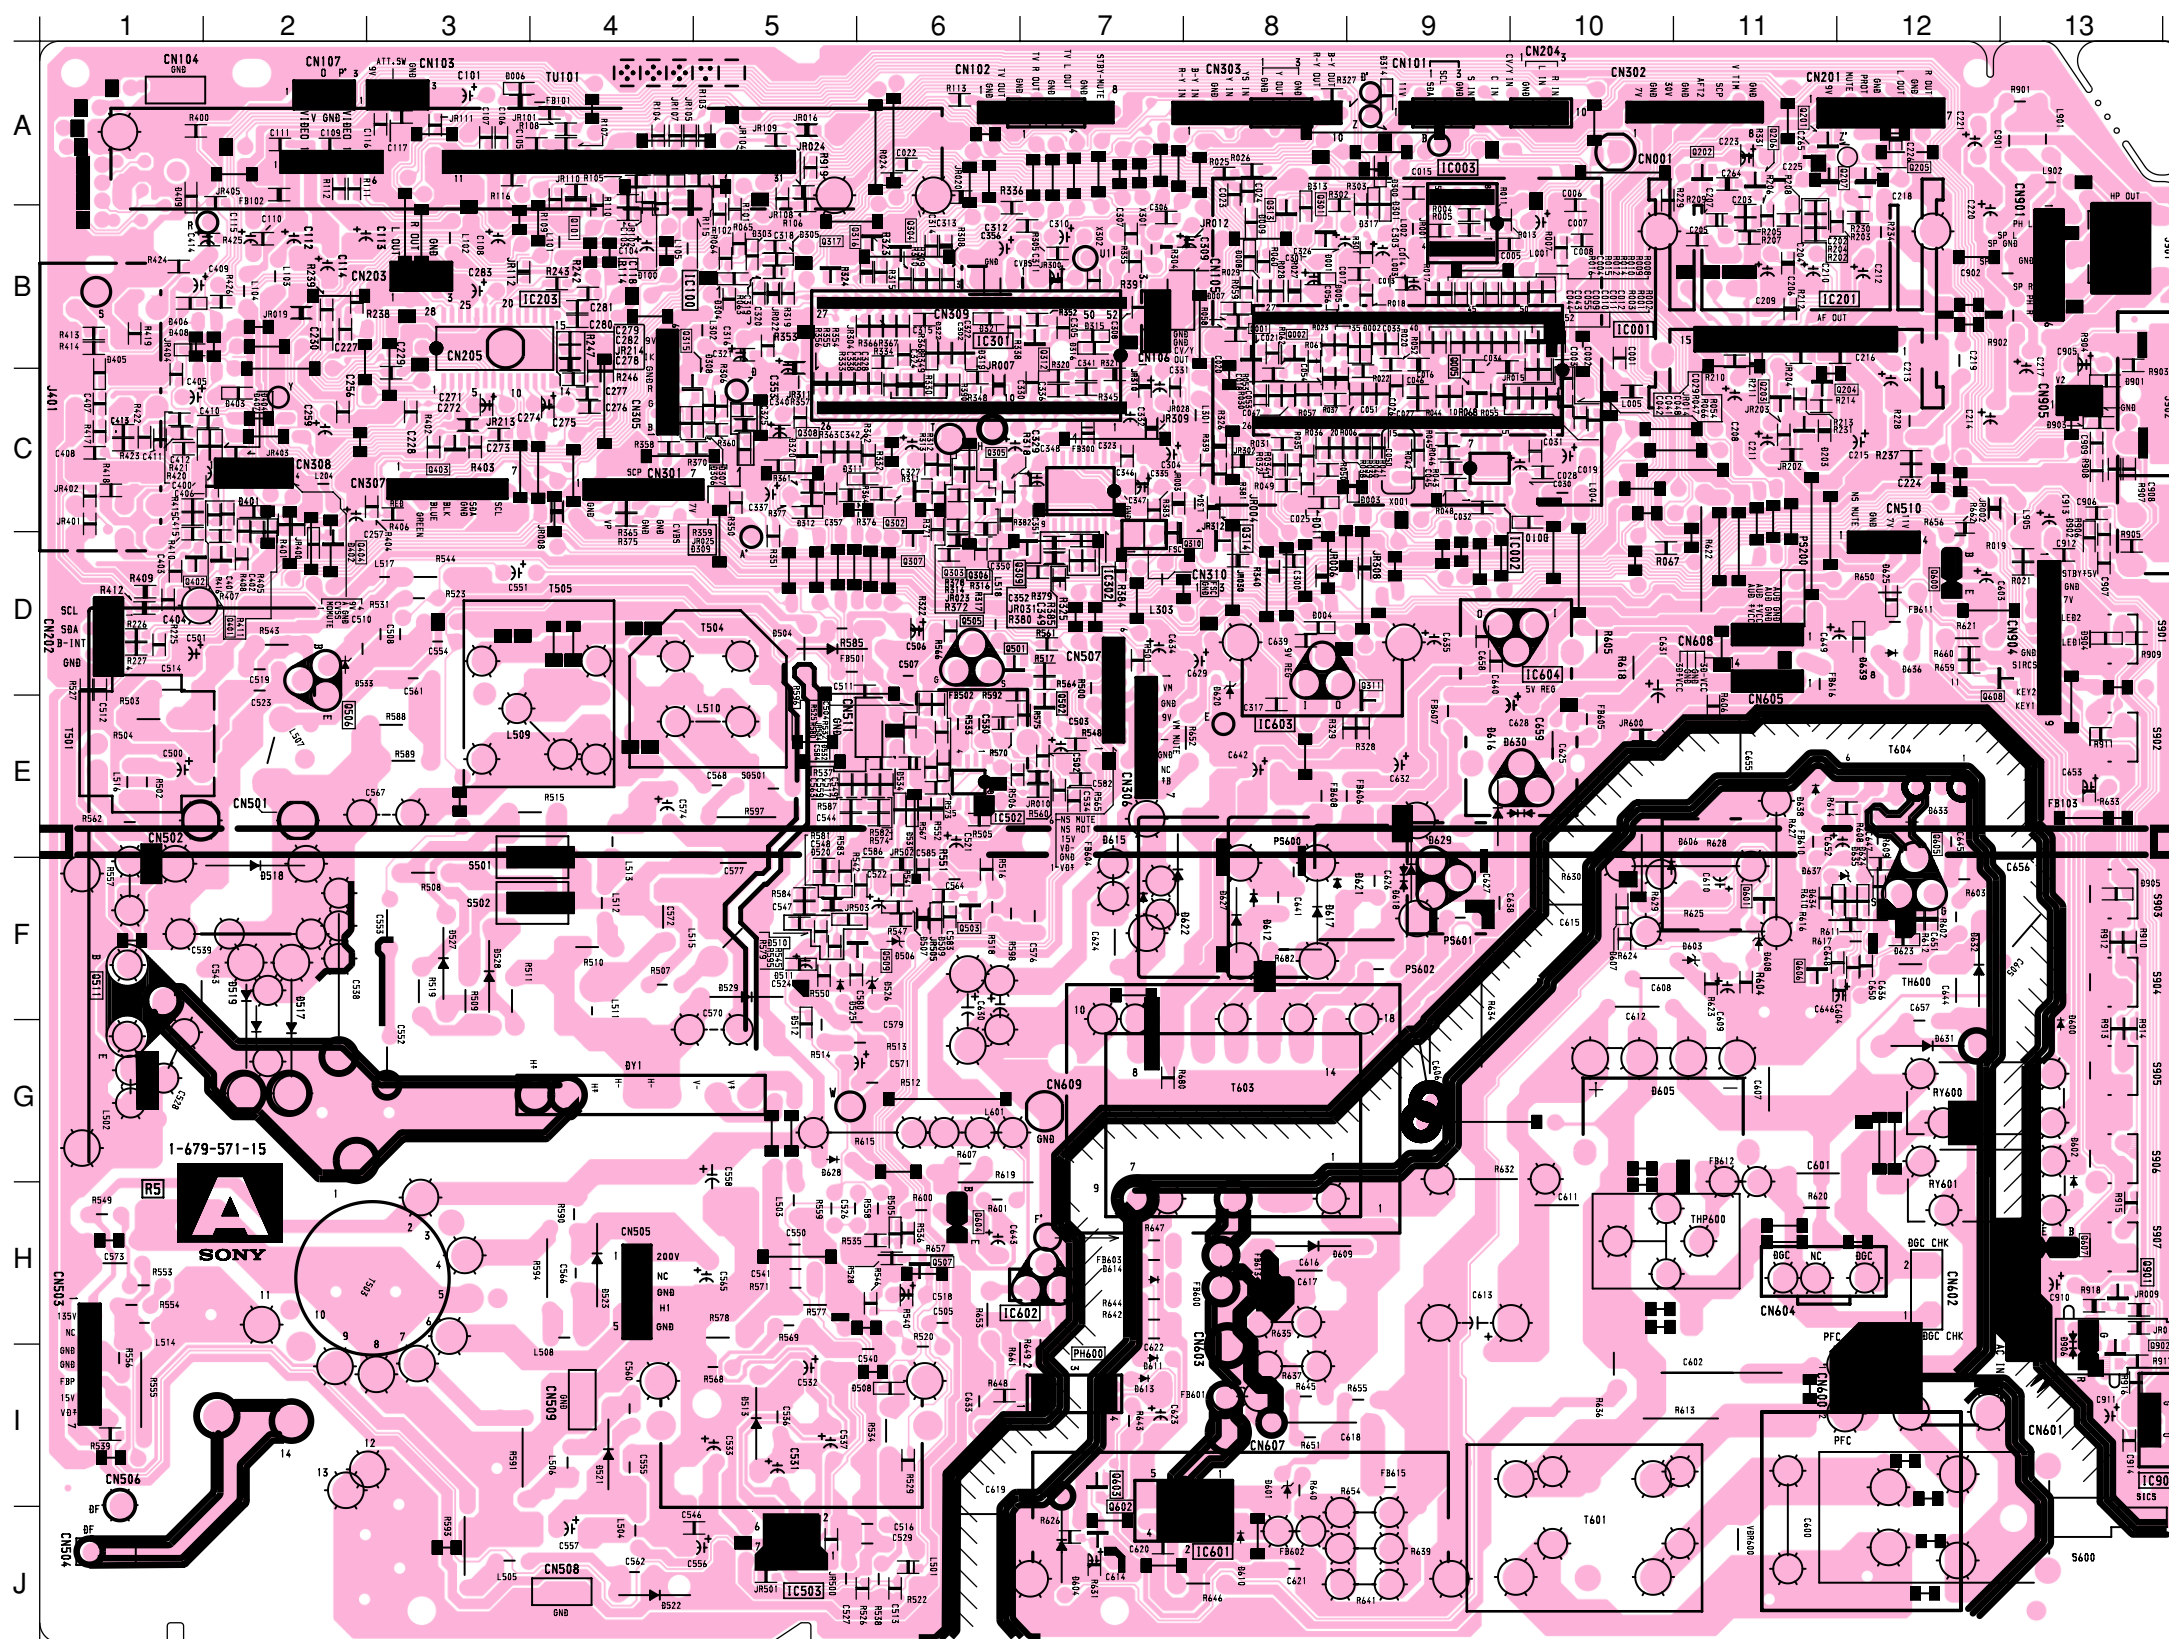

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

A BOARD

IC		DIODE		TRANSISTOR	
IC001	B-10	D001	B-8	Q001	B-8
IC002	D-10	D002	B-9	Q002	B-8
IC003	A-9	D003	C-9	Q005	B-9
IC100	B-4	D004	D-8	Q101	B-4
IC201	B-11	D005	B-8	Q201	A-11
IC203	B-4	D006	A-3	Q202	A-11
IC301	B-6	D007	B-8	Q203	C-11
IC302	D-7	D008	B-8	Q204	C-12
IC502	E-6	D009	B-8	Q205	A-12
IC503	J-5	D010	C-10	Q206	A-11
IC601	J-8	D011	C-8	Q207	A-12
IC602	H-7	D012	B-4	Q301	A-8
		D013	C-11	Q302	C-6
		D014	A-9	Q303	D-6
		D015	B-5	Q304	B-6
		D016	B-5	Q305	C-6
		D017	C-5	Q306	D-6
		D018	C-5	Q307	D-6
		D019	A-8	Q308	C-5
		D020	A-9	Q310	D-8
		D021	B-7	Q311	D-9
		D022	B-7	Q312	B-7
		D023	B-9	Q313	A-8
		D024	B-6	Q314	C-8
		D025	C-5	Q315	B-4
		D026	B-6	Q316	B-5
		D027	B-6	Q317	B-5
		D028	C-2	Q401	D-2
		D029	C-2	Q402	D-1
		D030	C-2	Q403	C-3
		D031	B-1	Q404	D-2
		D032	B-1	Q501	D-5
		D033	C-2	Q502	E-7
		D034	B-1	Q503	F-6
		D035	A-1	Q505	D-5
		D036	D-5	Q506	E-2
		D037	H-6	Q507	H-6
		D038	F-6	Q509	F-6
		D039	F-6	Q511	F-1
		D040	I-6	Q600	D-12
		D041	F-5	Q601	F-11
		D042	F-5	Q602	J-7
		D043	F-5		
		D044	F-5		
		D045	F-5		
		D046	F-5		
		D047	F-5		
		D048	F-5		
		D049	F-5		
		D050	F-5		
		D051	F-5		
		D052	F-5		
		D053	F-5		
		D054	F-5		
		D055	F-5		
		D056	F-5		
		D057	F-5		
		D058	F-5		
		D059	F-5		
		D060	F-5		
		D061	F-5		
		D062	F-5		
		D063	F-5		
		D064	F-5		
		D065	F-5		
		D066	F-5		
		D067	F-5		
		D068	F-5		
		D069	F-5		
		D070	F-5		
		D071	F-5		
		D072	F-5		
		D073	F-5		
		D074	F-5		
		D075	F-5		
		D076	F-5		
		D077	F-5		
		D078	F-5		
		D079	F-5		
		D080	F-5		
		D081	F-5		
		D082	F-5		
		D083	F-5		
		D084	F-5		
		D085	F-5		
		D086	F-5		
		D087	F-5		
		D088	F-5		
		D089	F-5		
		D090	F-5		
		D091	F-5		
		D092	F-5		
		D093	F-5		
		D094	F-5		
		D095	F-5		
		D096	F-5		


PRINTED WIRING BOARDS

C6 [RGB OUT, PICTURE ROTATION]


H5 [CONTROL PANEL]

VM1 [VELOCITY MODULATION]


– C6 Board –

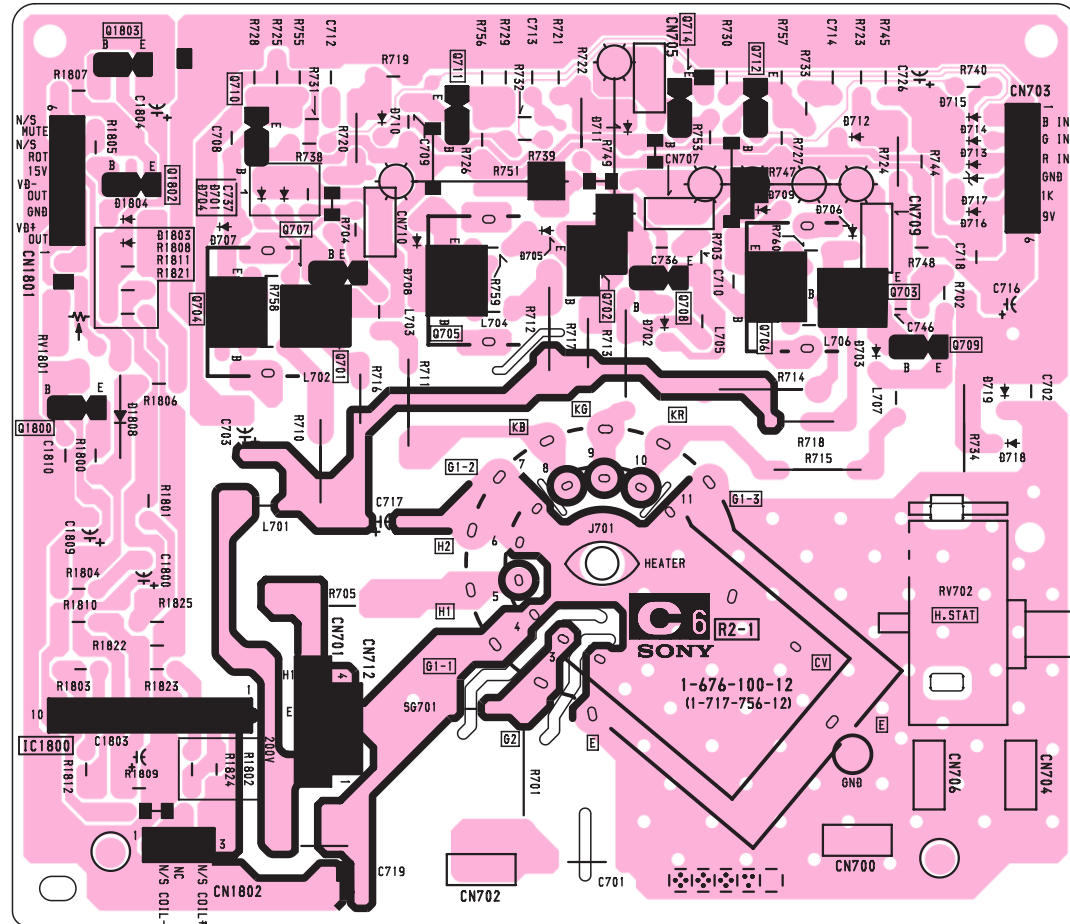

– VM1 Board –





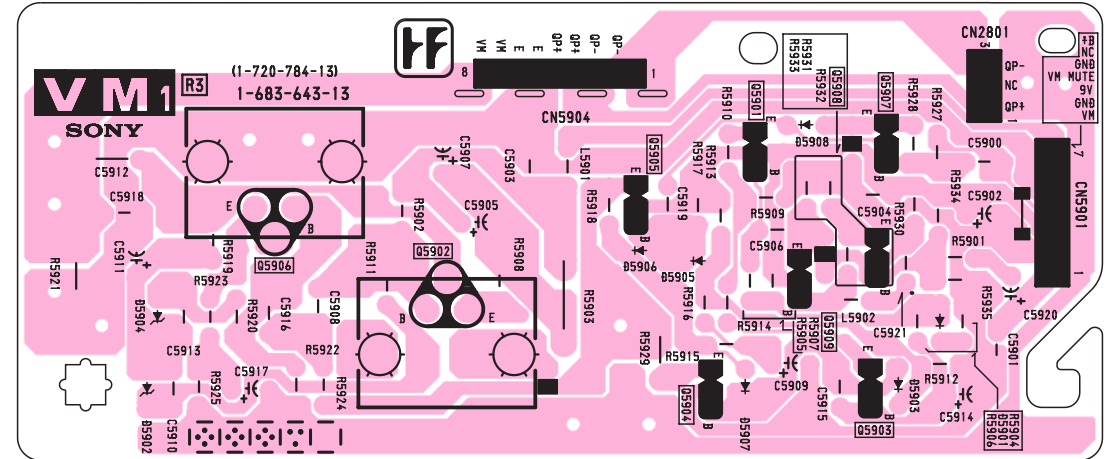


– H5 Board –

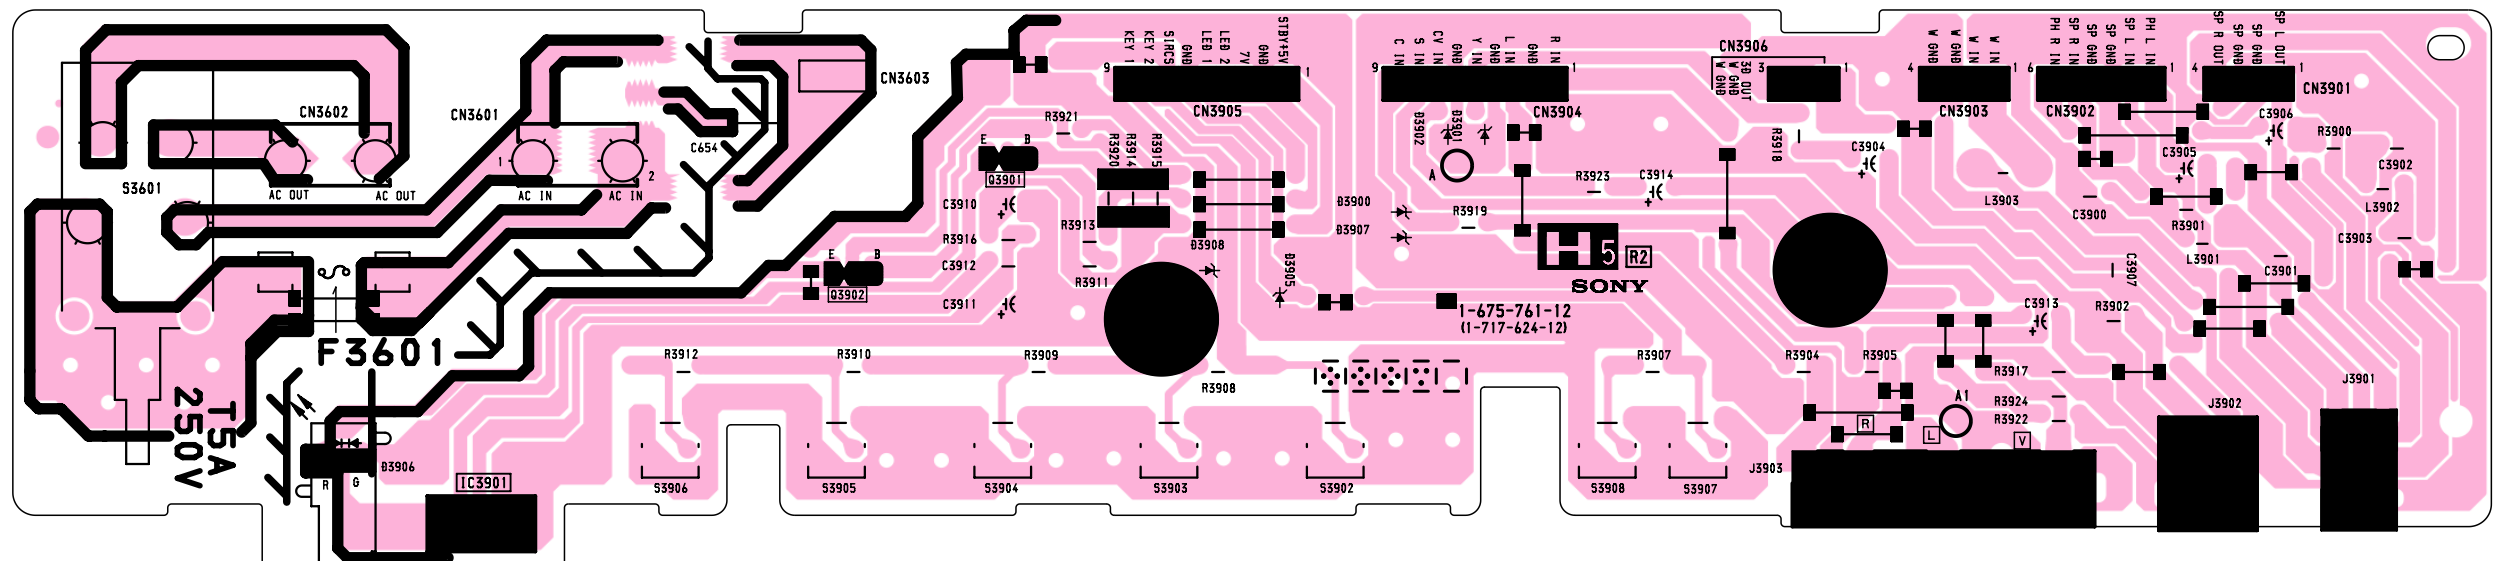





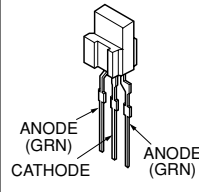
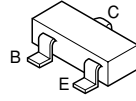
5-7. SEMICONDUCTORS







DIODE

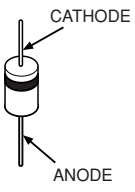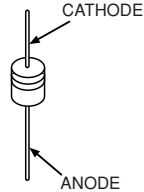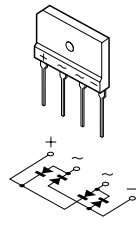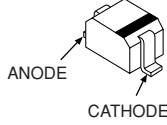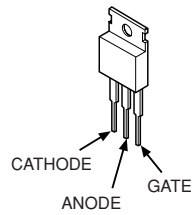					
AK04V0 AU-01Z-V1 DTZ-TT11-15B D2L20U EL1Z ERA22-08 ERC04-06SE ERC06-15S ER4AM-T3	GP08D HZS9-1NB2 NNCD9.1A-T1 RD33EB3T RU4AM-T3 RU4AM-T4 RGP02-17EL-6433 RS3FS 31DQ06-FC5	D1NS4 D1N20R RD6.8ES-B1 RD20ES-B2 RD30ESB2 RD39ES-B2 1SS119-25 11EQS04 11ES2	D3SB60	DTZ10B MA111-TX RD5.1SB-T2 RD7.5SB1-T1 RD9.1S-B RD10S-B UDZSTE-175.1B UDZSTE-179.1B 1SS355TE-17	5P6M





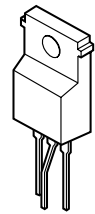
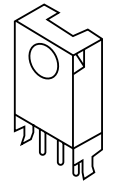
LED

TRANSISTOR

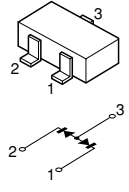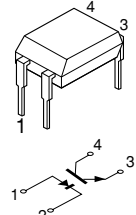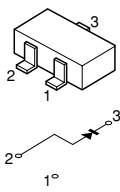					
DA204K DAP202U 1SS302	ON3171-R	RD3.3M-B2 RD5.6M-B2	RN4Z	SPB-26MVWF	MSD601-RT1 UN2111 UN2211 UN2213 UN2216 2SA1037AK-T146 2SA1162-G 2SC1623-L5L6 2SD2114K



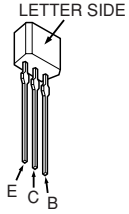
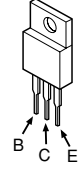
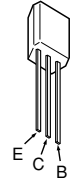
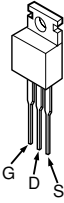
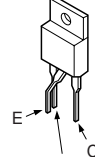
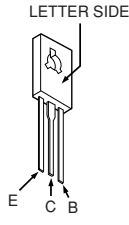
					
DTC144ESA DTC144EKA 2SA1175-HFE 2SA933AS-QT 2SC2785-HFE	2SA1606-E 2SC4159-E 2SD2394-EF	2SC2458-YGR 2SC3576	IRF614	2SK2845-LB102	2SC2611 2SC2688-LK

IC

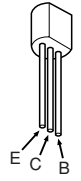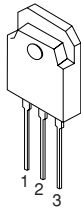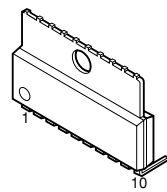					
2SA1091-0 2SC2551-0	KIA7805API KIA7809API 2SD2578-CA	LA6510	2SC2958	SE-135N	SBX3081-21

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952**

IC

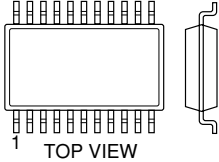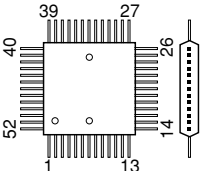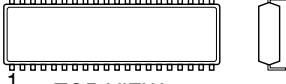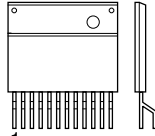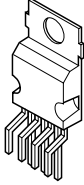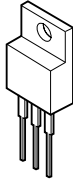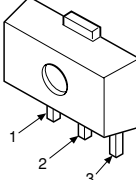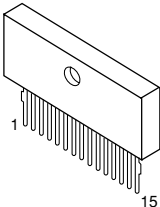 <p>TOP VIEW</p> <p>Small outline L-leaded Pin 8~98</p>	<p>MARKING SIDE VIEW</p> 		 <p>TOP VIEW</p> <p>Dual In-line Package Pin 6~98</p>	
<p>LM358D (8PIN) MC145053BF MM1319AFBE (7PIN) NJM2903M (8PIN) UPC4558G2 (8PIN)</p>	<p>RU-1P</p>	<p>CXA2159S CXP86461-637S (64PIN) CXP86461-638S M24C08-BN6 (8PIN) SAA5261 TDA7429S (15PIN) TDA9183T</p>		
<p>MARKING SIDE VIEW</p>  <p>Zig-zag In-line Package Pin 6~99</p>				
<p>STR-F6456S</p>	<p>TDA8172</p>	<p>NJM78M09FA</p>	<p>S-80743AL-A7-S</p>	<p>TA8223K</p>

SECTION 6 EXPLODED VIEWS


NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

6-1. SPEAKER BRACKET


■: 7-685-663-71 SCREW +BVTP 4 × 16

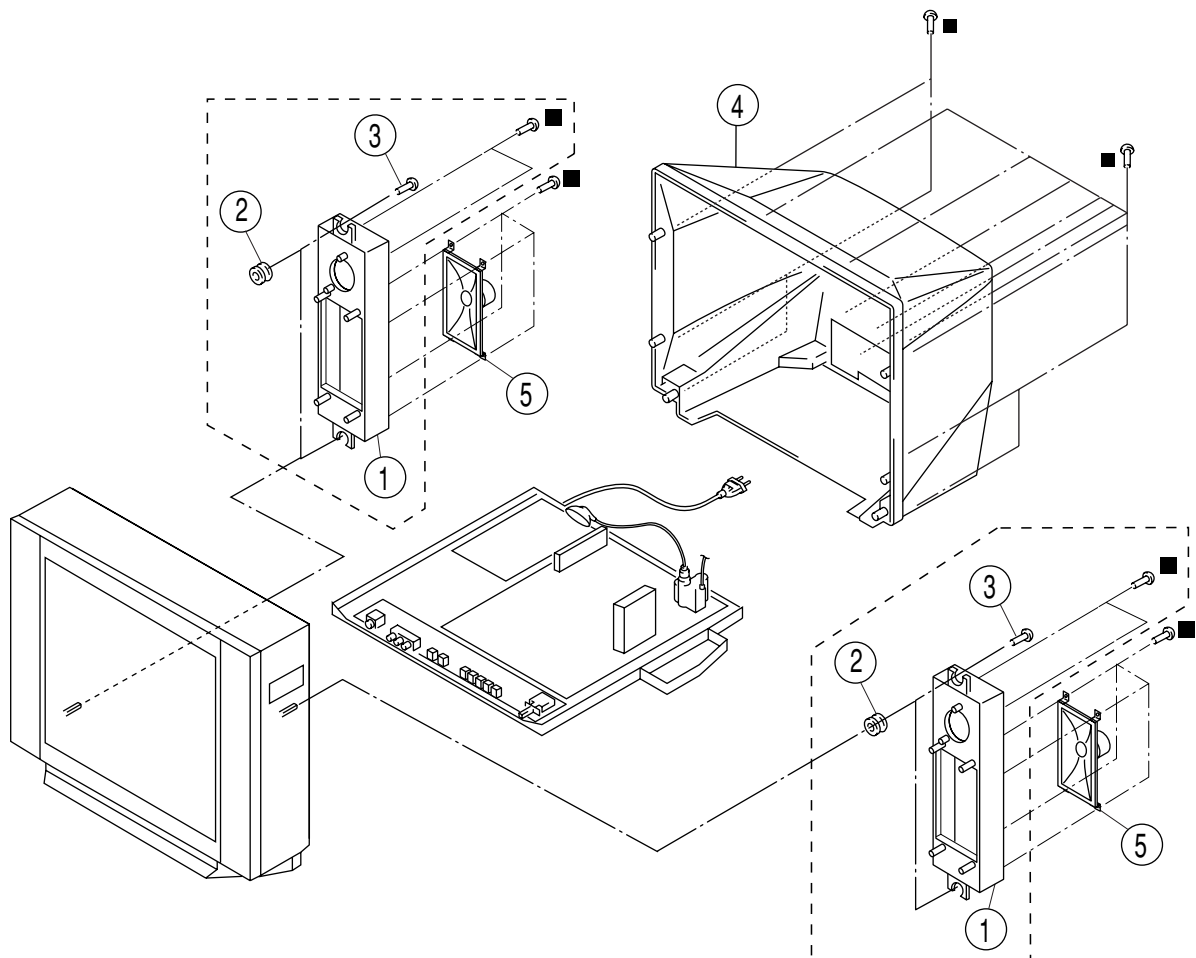

REF. NO.	PART NO.	DESCRIPTION	REMARK
1	* 4-070-757-01	BRACKET SPEAKER	REFER PAGE 77 NO 101
	* 4-070-757-11	BRACKET SPEAKER (KV-XJ29M50/M60(THAILAND))	
2	4-374-745-21	CUSHION A	REFER PAGE 77 NO 101
3	4-058-870-01	SCREW (4X16) W (+) P TAPPING	REFER PAGE 77 NO 101 (KV-XJ29M31/KV-XJ29M50/M60(THAILAND))
4	4-065-506-12	COVER REAR	
5	1-529-563-11	SPEAKER (15 X 6.5 CM)	(EXCEPT KV-XJ29M50/M80(INDIA))
	1-544-995-11	SPEAKER (15 X 6.5 CM)	(KV-XJ29M50/M80(INDIA))

6-2. CHASSIS


- : 7-685-648-79 SCREW BVTP 3 × 12
- : 7-685-663-71 SCREW BVTP 4 × 16

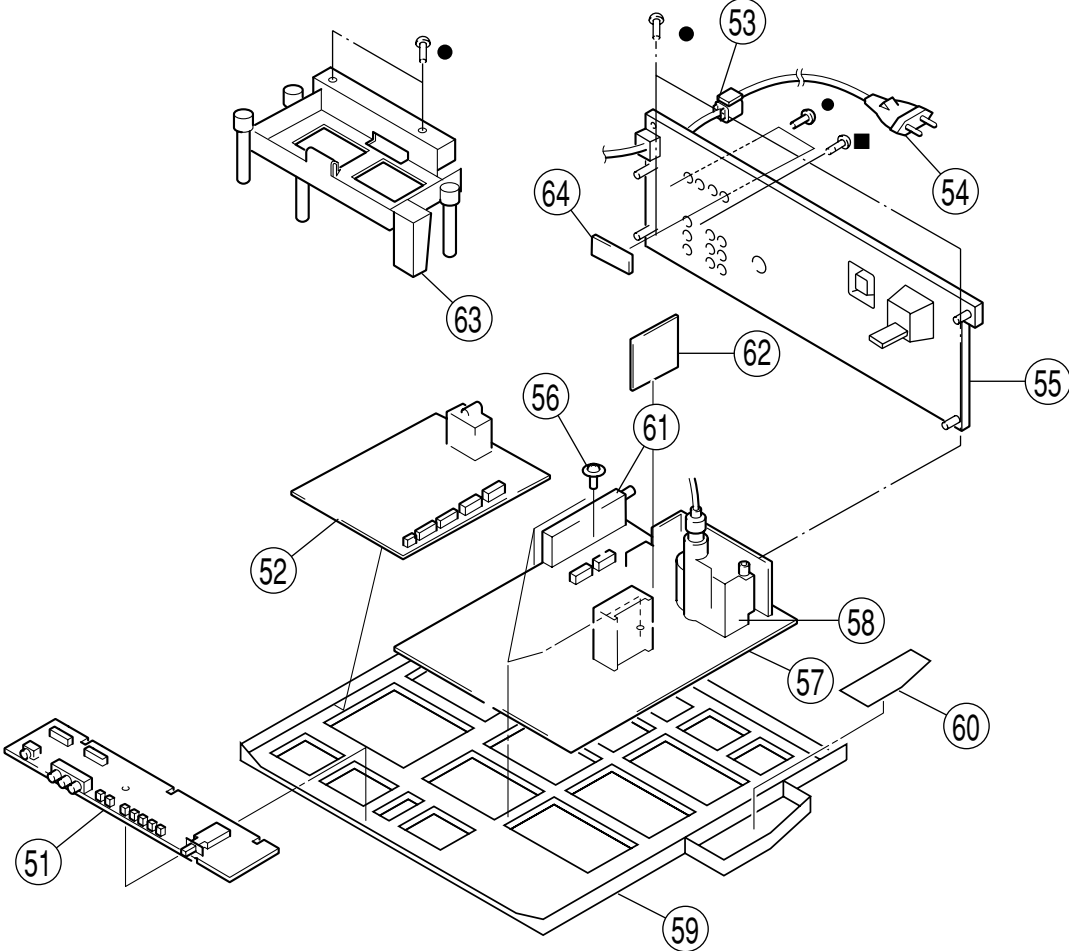

<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>	<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
51	* A-1377-085-A	H5 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)		57	* A-1300-464-A	A BOARD COMPLETE (KV-XJ29M31)	
	* A-1400-762-A	H5 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))			* A-1300-468-A	A BOARD COMPLETE (KV-XJ29M50(THAILAND))	
	* A-1400-645-A	H5 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))			* A-1300-368-A	A BOARD COMPLETE (KV-XJ29M50/M80(INDIA))	
52	* A-1300-463-A	B9 BOARD COMPLETE (KV-XJ29M31)			* A-1300-413-A	A BOARD COMPLETE (KV-XJ29M60(THAILAND))	
	* A-1300-412-A	B9 BOARD COMPLETE (KV-XJ29M50/M60(THAILAND))			* A-1299-665-A	A BOARD COMPLETE (KV-XJ29M80(E))	
	* A-1300-367-A	B9 BOARD COMPLETE (KV-XJ29M50/M80(INDIA))			* A-1300-492-A	A BOARD COMPLETE (KV-XJ29M80(ME))	
	* A-1136-282-A	B9 BOARD COMPLETE (KV-XJ29M80(E))			* A-1300-489-A	A BOARD COMPLETE (KV-XJ29M81)	
	* A-1300-488-A	B9 BOARD COMPLETE (KV-XJ29M80(ME)/XJ29M81)		58	△ 1-453-284-11	TRANSFORMER ASSY, FLYBACK (NX-4009/M315)	
53	4-022-115-00	HOLDER, AC CORD (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)		59	* 4-066-681-05	BRACKET, MAIN (SIX SCREWS (3X12), (+) BVTAP)	
	4-022-115-21	HOLDER, AC CORD (KV-XJ29M50/M60(THAILAND)/ XJ29M50/M80(INDIA))		60	* A-1400-167-A	D3 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
54	△ 1-823-480-11	CORD, AC POWER (WITH CONNECTOR) (KV-XJ29M80(E/ME)/XJ29M81)			* A-1400-763-A	D3 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))	
	△ 1-823-550-11	CORD, AC POWER (WITH CONNECTOR) (KV-XJ29M31)			* A-1400-646-A	D3 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))	
	△ 1-575-023-41	CORD, POWER (WITH CONNECTOR) (KV-XJ29M50/M60(THAILAND))		61	8-598-451-20	TUNER BTF-WG441 (KV-XJ29M31/XJ29M60(THAILAND))	
	△ 1-782-452-11	CORD, POWER (WITH CONNECTOR) (KV-XJ29M50/M80(INDIA))			8-598-449-20	TUNER BTF-LG433 (KV-XJ29M50/M80(INDIA))	
55	* 4-081-023-03	BRACKET, TERMINAL (KV-XJ29M31/ XJ29M50/M80(INDIA)/XJ29M80(E/ME)/ XJ29M81)			8-598-449-10	TUNER BTF-LG433 (KV-XJ29M50(THAILAND)/XJ29M80(E/ME) /XJ29M81)	
	* 4-081-023-02	BRACKET, TERMINAL (KV-XJ29M50/M60(THAILAND))		62	* A-1347-164-A	V1 BOARD COMPLETE (KV-XJ29M31/XJ29M81)	
56	4-046-797-01	SCREW (3X12), (+)BVTAP (KV-XJ29M31/XJ29M50/M80(INDIA)/ XJ29M80(E/ME)/XJ29M81)		63	* 4-070-963-01	HOLDER, PWB (KV-XJ29M31/ KV-XJ29M50/M60(THAILAND)/ XJ29M50/M80(INDIA)/XJ29M81)	
	4-046-797-21	SCREW (3X12), (+)BVTAP (KV-XJ29M50/M60(THAILAND))		64	* A-1388-338-A	J4 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
					* A-1400-764-A	J4 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))	
					* A-1400-647-A	J4 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))	

6-3. PICTURE TUBE

●: 7-685-648-79 SCREW BVTP 3 × 12

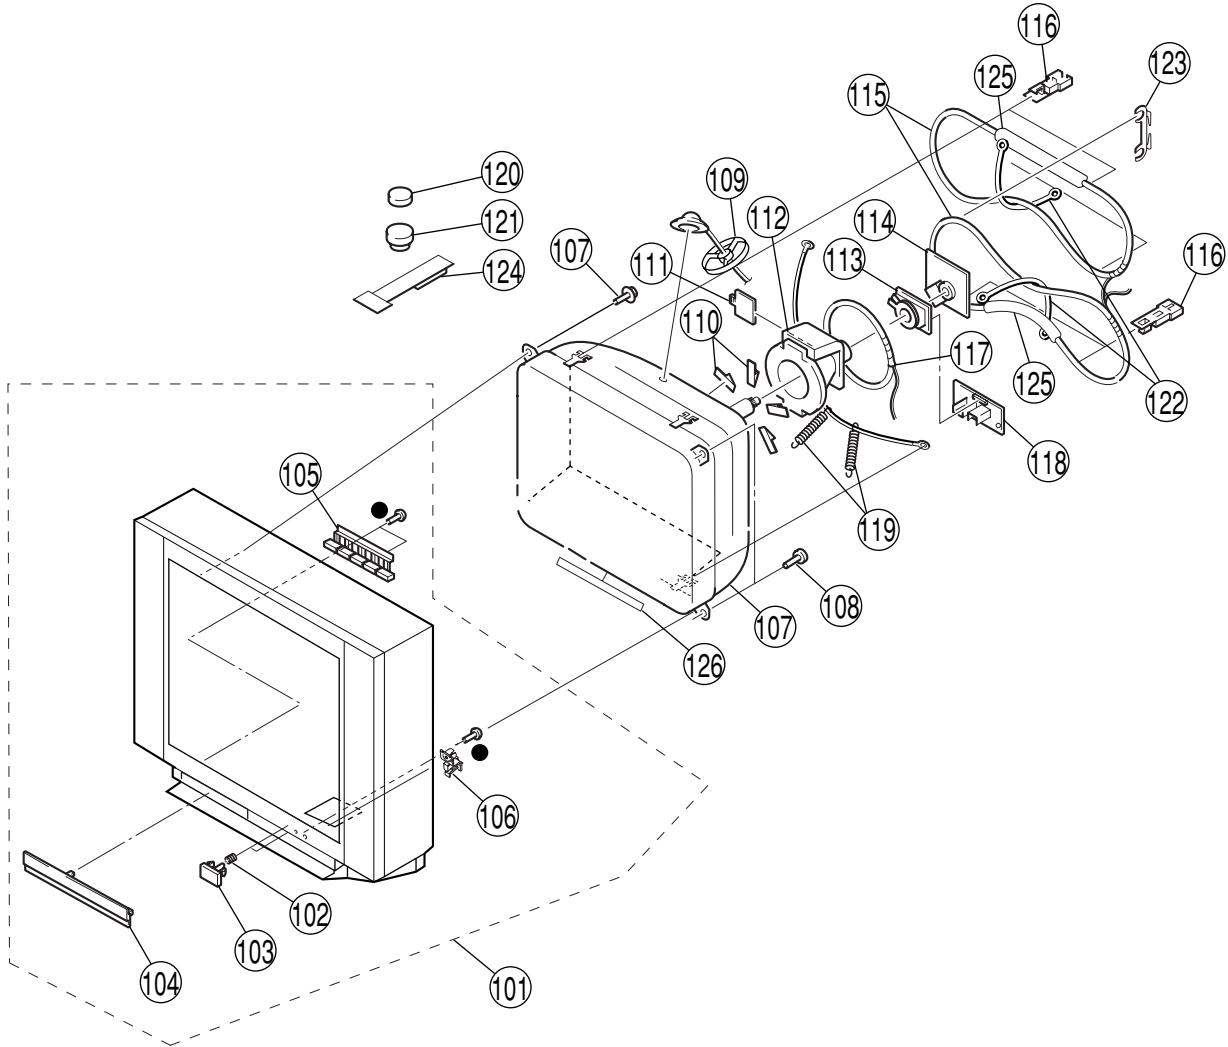

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	X-4039-675-2	BEZNET ASSY (KV-XJ29M31)	102 - 106	115	△ 1-419-323-11	COIL, DEGAUSING (KV-XJ29M31)	
	X-4040-257-1	BEZNET ASSY (KV-XJ29M50(THAILAND))			△ 1-419-323-31	COIL, DEGAUSING (KV-XJ29M50/M60(THAILAND))	
	X-4039-674-2	BEZNET ASSY (KV-XJ29M50/M80(INDIA)/XJ29M80(E/ME))			△ 1-424-742-11	COIL, DEGAUSING (KV-XJ29M50/M80(INDIA))	
	X-4040-225-2	BEZNET ASSY (KV-XJ29M60 (THAILAND))			△ 1-419-294-11	COIL, DEGAUSING (KV-XJ29M80(E/ME)/XJ29M81)	
	X-4040-297-1	BEZNET ASSY (KV-XJ29M81)		116	* 4-062-970-12	CLIP (29RSN), DGC	
102	4-036-405-11	SPRING, COMPRESSION		117	1-452-896-11	COIL, NA ROTATION (RT200) (KX-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
103	4-070-752-02	BUTTON, POWER			1-452-896-91	COIL, NA ROTATION (KV-XJ29M50/M60(THAILAND))	
104	4-070-754-61	DOOR, CONTROL (KV-XJ29M31)			1-452-896-61	COIL, ROTATION (KX-XJ29M50/M80(INDIA))	
	4-070-754-31	DOOR, CONTROL (KV-XJ29M50 (THAILAND)/ XJ29M50/M80(INDIA)/XJ29M80(E/ME))		118	* A-1400-168-A	VM1 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
	4-088-849-01	DOOR, CONTROL (KV-XJ29M81)			* A-1400-765-A	VM1 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))	
	4-070-754-91	DOOR, CONTROL (KV-XJ29M60 (THAILAND))			* A-1400-648-A	VM1 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))	
105	4-070-753-12	BUTTON MULTI		119	4-369-318-61	SPRING, TENSION (KV-XJ29M31/XJ29M50/M80(INDIA)/ XJ29M80(E/ME)/XJ29M81)	
106	* 4-070-755-01	BAR OPTICAL			4-369-318-41	SPRING, TENSION (KV-XJ29M50/M60(THAILAND))	
107	△ 8-735-056-05	PICTURE TUBE (M68LNH070X) (KV-XJ29M80(INDIA)/ XJ29M50/M60(THAILAND))		120	1-452-032-00	MAGNET,DISC	
	△ 8-735-057-05	PICTURE TUBE (M68LNH070X) (KV-XJ29M31/XJ29M50(INDIA)/ XJ29M80(E/ME)/XJ29M81)		121	1-452-094-00	CIRCULAR DISC MAGNET B	
108	4-046-765-12	SCREW, TAPPING 7+CROWN WASHER		122	4-079-376-01	BAND, DGC	
109	* 3-704-372-11	HOLDER, HV CABLE (KV-XJ29M31/XJ29M50/M60(THAILAND)/ XJ29M80(E/ME)/XJ29M81)		123	4-064-883-03	HOLDER, DGC	
	* 3-704-372-41	HOLDER, HV CABLE (KV-XJ29M50/M80(INDIA))		124	X-4387-214-3	PERMALOY ASSY, CORRECTION (KV-XJ29M31/XJ29M50/M80(INDIA)/ XJ29M80(E/ME)/XJ29M81)	
110	4-046-600-11	SPACER, DY (KV-XJ29M31/XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)			4-051-734-42	PIECE B(120) CONV, CORRECT (KV-XJ29M50/M60(THAILAND))	
	4-064-818-01	SPACER, DY (KV-XJ29M50/M60(THAILAND))		125	4-063-935-21	CUSHION (50 X 550) DGC	
111	4-077-228-02	PIECE, TLH CONVENGENCE		126	4-072-569-11	SHEET BLOTTING (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
112	△ 8-451-494-31	DEFLECTION YOKE (Y29RSA-S)					
113	8-453-011-41	NA299-C					
114	* A-1332-152-A	C6 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)					
	* A-1332-209-A	C6 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))					
	* A-1400-644-A	C6 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))					

SECTION 7 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

• All resistors are in ohms
• F : nonflammable

CAPACITORS

• MF : μ F, PF : $\mu\mu$ F

COILS

• MMH : mH, UH : μ H

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
* A-1300-464-A	A BOARD COMPLETE	(KV-XJ29M31)		C109	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
* A-1300-468-A	A BOARD COMPLETE	(KV-XJ29M50(THAILAND))		C110	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
* A-1300-413-A	A BOARD COMPLETE	(KV-XJ29M60(THAILAND))		C111	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
* A-1299-665-A	A BOARD COMPLETE	(KV-XJ29M80(E))		C112	1-126-947-11	ELECT 47UF	20.00% 16V
* A-1300-492-A	A BOARD COMPLETE	(KV-XJ29M80(ME))		C113	1-126-947-11	ELECT 47UF	20.00% 25V
* A-1300-368-A	A BOARD COMPLETE	(KV-XJ29M50/M80(INDIA))		C114	1-126-967-11	ELECT 47UF	20.00% 50V
* A-1300-489-A	A BOARD COMPLETE	(KV-XJ29M81)	*****	C202	1-115-185-11	CERAMIC CHIP 0.033UF	10.00% 50V
* 4-374-846-01	COVER, CAPACITOR, CAP TYPE	(Except KV-XJ29M50/M60(THAILAND))		C203	1-115-185-11	CERAMIC CHIP 0.033UF	10.00% 50V
4-044-778-11	COVER, CAP TYPE CONDENSER	(KV-XJ29M50/M60(THAILAND))		C204	1-136-161-00	FILM 0.047UF	5.00% 50V
* 1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P	(KV-XJ29M50 (THAILAND))		C205	1-164-161-11	CERAMIC CHIP 0.0022UF	10.00% 50V
* 4-040-983-41	TERMINAL BOARD (D)	(KV-XJ29M50/M80(INDIA))		C206	1-164-161-11	CERAMIC CHIP 0.0022UF	10.00% 50V
4-382-854-11	SCREW (M3X10), P, SW (+)			C207	1-136-161-00	FILM 0.047UF	5.00% 50V
4-382-854-21	SCREW (M3X14), P, SW (+)			C208	1-126-965-91	ELECT 22UF	20.00% 50V
	<CAPACITOR>			C209	1-126-965-91	ELECT 22UF	20.00% 50V
C004	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V	C210	1-126-933-11	ELECT 100UF	20.00% 16V
C005	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V	C211	1-126-941-11	ELECT 470UF	20.00% 25V
C006	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C212	1-126-933-11	ELECT 100UF	20.00% 16V
C007	1-126-947-11	ELECT 47UF	20.00% 16V	C213	1-126-933-11	ELECT 100UF	20.00% 16V
C013	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C214	1-126-942-61	ELECT 1000UF	20.00% 25V
C014	1-126-947-11	ELECT 47UF	20.00% 25V	C215	1-126-942-61	ELECT 1000UF	20.00% 25V
C015	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C216	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C016	1-163-243-11	CERAMIC CHIP 47PF	5.00% 50V	C217	1-126-964-11	ELECT 10UF	20.00% 50V
C017	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V	C218	1-136-167-00	FILM 0.15UF	5.00% 50V
C019	1-126-947-11	ELECT 47UF	20.00% 25V	C219	1-136-167-00	FILM 0.15UF	5.00% 50V
C022	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V	C220	1-126-942-61	ELECT 1000UF	20.00% 25V
C023	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V	C221	1-126-964-11	ELECT 10UF	20.00% 50V
C024	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V	C222	1-126-965-91	ELECT 22UF	20.00% 50V
C026	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C224	1-163-133-00	CERAMIC CHIP 470PF	5.00% 50V
C027	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C225	1-109-982-11	CERAMIC CHIP 1UF	10.00% 10V
C028	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	C226	1-109-982-11	CERAMIC CHIP 1UF	10.00% 10V
C030	1-126-965-91	ELECT 22UF	20.00% 50V	C264	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C031	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C265	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C032	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C301	1-126-935-11	ELECT 470UF	20.00% 16V
C041	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C301	1-126-941-11	ELECT 470UF	20.00% 25V
C042	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V			(KV-XJ29M50/M60(THAILAND))	
C044	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C302	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
C047	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C303	1-126-964-11	ELECT 10UF	20.00% 50V
C055	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C304	1-126-967-11	ELECT 47UF	20.00% 50V
C103	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C305	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C104	1-104-665-11	ELECT 100UF	20.00% 10V	C306	1-162-918-11	CERAMIC CHIP 18PF	5.00% 50V
C107	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V	C307	1-162-918-11	CERAMIC CHIP 18PF	5.00% 50V
C108	1-126-947-11	ELECT 47UF	20.00% 16V	C308	1-163-259-91	CERAMIC CHIP 220PF	5.00% 50V
				C309	1-137-378-11	MYLAR 0.22UF	5.00% 50V
				C310	1-126-963-11	ELECT 4.7UF	20.00% 50V
				C311	1-126-964-11	ELECT 10UF	20.00% 50V
				C312	1-163-038-91	CERAMIC CHIP 0.1UF	25V
				C313	1-163-038-91	CERAMIC CHIP 0.1UF	25V
				C316	1-126-934-11	ELECT 220UF	20.00% 16V
				C317	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
				C318	1-162-974-11	CERAMIC CHIP 0.01UF	50V

The components identified by shading
and mark \triangle are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C319	1-162-974-11	CERAMIC CHIP	0.01UF 50V	C554	1-137-417-11	MYLAR	0.0047UF 10.00% 200V
C320	1-162-974-11	CERAMIC CHIP	0.01UF 50V	C556	1-126-941-11	ELECT	470UF 20.00% 25V
C322	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V	C557	1-126-941-11	ELECT	470UF 20.00% 25V
C324	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V	C558	1-123-024-21	ELECT	33UF 160V
C325	1-126-960-11	ELECT	1UF 20.00% 50V	C560	1-102-228-00	CERAMIC	470PF 10.00% 500V
C327	1-126-965-91	ELECT	22UF 20.00% 50V	C561	1-129-898-00	FILM	0.0022UF 5.00% 630V
C328	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C562	1-102-228-00	CERAMIC	470PF 10.00% 500V
C329	1-126-965-91	ELECT	22UF 20.00% 50V	C564	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C330	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C565	1-107-655-11	ELECT	47UF 20.00% 250V
C331	1-126-963-11	ELECT	4.7UF 20.00% 50V	C566	1-102-244-00	CERAMIC	220PF 10.00% 500V
C332	1-126-963-11	ELECT	4.7UF 20.00% 50V	C567	1-115-520-11	FILM	0.68UF 5.00% 250V
C335	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C568	1-102-228-00	CERAMIC	470PF 10.00% 500V
C336	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C570	1-115-522-11	FILM	1UF 5.00% 250V
C337	1-126-961-11	ELECT (Except KV-XJ29M50/M80(INDIA))	2.2UF 20.00% 50V	C572	1-117-661-21	FILM	0.15UF 5.00% 250V
C337	1-125-800-91	ELECT (KV-XJ29M50/M80(INDIA))	2.2UF 20.00% 63V	C573	1-106-387-00	MYLAR	0.068UF 10.00% 200V
C341	1-115-340-11	CERAMIC CHIP	0.22UF 10.00% 25V	C574	1-104-709-11	ELECT	4.7UF 160V
C342	1-163-259-91	CERAMIC CHIP	220PF 5.00% 50V	C576	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C347	1-126-933-11	ELECT	100UF 20.00% 16V	C577	1-106-395-00	MYLAR	0.15UF 10.00% 200V
C348	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C582	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C349	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C584	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C350	1-216-295-91	SHORT CHIP	0	C586	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C351	1-126-964-11	ELECT	10UF 20.00% 50V	C600	\triangle 1-115-165-11	MYLAR	0.1UF 20.00% 250V
C352	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C602	\triangle 1-115-165-11	MYLAR	0.1UF 20.00% 250V
C353	1-126-960-11	ELECT	1UF 20.00% 50V	C603	1-126-947-11	ELECT	47UF 20.00% 25V
C356	1-126-960-11	ELECT	1UF 20.00% 50V	C604	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C357	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C605	\triangle 1-119-886-51	CERAMIC	470PF 10.00% 250V
C502	1-163-145-00	CERAMIC CHIP	0.0015UF 5.00% 50V	C606	\triangle 1-119-886-51	CERAMIC	470PF 10.00% 250V
C503	1-126-964-11	ELECT	10UF 20.00% 50V	C607	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C506	1-107-638-11	ELECT	33UF 20.00% 160V	C608	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C507	1-161-830-00	CERAMIC	0.0047UF 500V	C609	1-126-968-11	ELECT	100UF 20.00% 50V
C510	1-102-112-00	CERAMIC	330PF 10.00% 50V	C610	1-126-964-11	ELECT	10UF 20.00% 50V
C512	1-163-989-11	CERAMIC CHIP	0.033UF 10.00% 25V	C611	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C513	1-163-263-11	CERAMIC CHIP	330PF 5.00% 50V	C612	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C514	1-106-383-00	MYLAR	0.047UF 10.00% 200V	C613	1-125-906-11	ELECT	560UF 20.00% 450V
C517	1-162-967-11	CERAMIC CHIP	0.0033UF 10.00% 50V	C614	1-126-964-11	ELECT	10UF 20.00% 50V
C518	1-104-665-11	ELECT	100UF 20.00% 10V	C615	\triangle 1-119-886-51	CERAMIC	470PF 10.00% 250V
C519	1-102-212-00	CERAMIC	820PF 10.00% 500V	C616	1-130-202-00	FILM	0.022UF 5.00% 400V
C521	1-126-934-11	ELECT	220UF 20.00% 16V	C617	1-107-792-11	CERAMIC	100PF 5.00% 1KV
C522	1-126-933-11	ELECT	100UF 20.00% 16V	C618	1-125-893-11	FILM	680PF 3.00% 1.5KV
C523	1-102-002-00	CERAMIC	680PF 10.00% 500V	C619	\triangle 1-119-886-51	CERAMIC	470PF 10.00% 250V
C524	1-126-967-11	ELECT	47UF 20.00% 50V	C620	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C526	1-130-495-00	MYLAR	0.1UF 5.00% 50V	C621	1-102-114-00	CERAMIC	470PF 10.00% 50V
C527	1-102-820-00	CERAMIC	330PF 5.00% 50V	C622	1-102-074-00	CERAMIC	0.001UF 10.00% 50V
C528	1-162-116-00	CERAMIC	680PF 10.00% 2KV	C623	1-104-665-11	ELECT	100UF 20.00% 25V
C530	1-137-372-11	MYLAR	0.022UF 5.00% 50V	C624	1-125-772-91	CERAMIC	1500PF 10.00% 2KV
C531	1-107-903-11	ELECT	2.2UF 20.00% 50V	C625	1-102-002-00	CERAMIC	680PF 10.00% 500V
C532	1-126-941-11	ELECT	470UF 20.00% 25V	C626	1-102-002-00	CERAMIC	680PF 10.00% 500V
C533	1-126-941-11	ELECT	470UF 20.00% 25V	C628	1-126-942-61	ELECT	1000UF 20.00% 25V
C534	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V	C629	1-126-964-11	ELECT	10UF 20.00% 50V
C536	1-130-495-00	MYLAR	0.1UF 5.00% 50V	C630	1-125-494-11	ELECT(BLOCK)	560UF 20.00% 160V
C537	1-126-969-11	ELECT	220UF 20.00% 50V	C632	1-128-339-11	ELECT	2200UF 20.00% 16V
C538	1-127-717-11	FILM	19000PF 3% 1.2KV	C633	1-104-999-11	MYLAR	0.1UF 10.00% 200V
C539	1-129-723-00	FILM	0.056UF 5.00% 630V	C634	1-126-933-11	ELECT	100UF 20.00% 16V
C540	1-136-171-00	FILM	0.33UF 5.00% 50V	C635	1-104-665-11	ELECT	100UF 20.00% 10V
C546	1-165-319-11	CERAMIC CHIP	0.1UF 50V	C636	1-104-760-11	CERAMIC CHIP	0.047UF 10.00% 50V
C549	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V	C641	1-102-002-00	CERAMIC	680PF 10.00% 500V
C550	1-106-220-00	MYLAR	0.1UF 10.00% 100V	C642	1-126-943-11	ELECT	2200UF 20.00% 25V
C551	1-126-960-11	ELECT	1UF 20.00% 50V	C643	1-104-665-11	ELECT	100UF 20.00% 10V
C552	1-162-116-00	CERAMIC	680PF 10.00% 2KV	C644	1-104-331-11	CERAMIC	0.0022UF 10.00% 1KV
C553	1-162-116-00	CERAMIC	680PF 10.00% 2KV	C645	1-137-605-11	MYLAR	0.01UF 10.00% 250V

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81**

RM-952

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
C646	1-107-679-91	ELECT	10UF 20.00% 450V
C647	1-163-275-11	CERAMIC CHIP	0.001UF 5.00% 50V
C649	1-126-940-11	ELECT	330UF 20.00% 25V
C650	1-163-275-11	CERAMIC CHIP	0.001UF 5.00% 50V
C651	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C652	1-126-965-91	ELECT	22UF 20.00% 50V
C653	1-126-947-11	ELECT	47UF 20.00% 25V
C655	Δ 1-119-886-51	CERAMIC	470PF 10.00% 250V
C657	1-101-821-00	CERAMIC	0.0022UF 500V
C901	1-136-153-00	FILM	0.01UF 5.00% 50V
C902	1-136-153-00	FILM	0.01UF 5.00% 50V
C912	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C913	1-104-665-11	ELECT	100UF 20.00% 10V
<CONNECTOR>			
CN101	* 1-764-333-11	PLUG, CONNECTOR 10P	
CN102	* 1-564-507-11	PLUG, CONNECTOR 4P	
CN104	1-695-915-11	TAB (CONTACT)	
CN106	* 1-564-506-11	PLUG, CONNECTOR 3P	
CN202	* 1-508-847-00	PIN, CONNECTOR 4P	
CN205	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P (Except KV-XJ29M50/M80(INDIA))	
CN301	* 1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-XJ29M31/XJ29M81)	
CN305	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN306	* 1-564-510-11	PLUG, CONNECTOR 7P	
CN307	* 1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-XJ29M31/XJ29M81)	
CN501	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN502	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN503	* 1-564-510-11	PLUG, CONNECTOR 7P	
CN504	1-695-915-11	TAB (CONTACT)	
CN505	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN507	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN601	1-580-843-11	PIN, CONNECTOR (POWER)	
CN602	* 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
CN603	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN604	* 1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P (KV-XJ29M31)	
CN604	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P (KV-XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)	
CN901	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN904	* 1-564-512-11	PLUG, CONNECTOR 9P	
<DIODE>			
D001	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D001	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D005	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D005	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D006	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D006	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D100	8-719-404-50	MA111-TX (KV-XJ29M31 ONLY)	
D203	8-719-820-41	1SS302 (KV-XJ29M31/XJ29M80(E)/ XJ29M50/M80(INDIA)/XJ29M81)	
D203	8-719-914-42	DA204K (KV-XJ29M50/M60(THAILAND)/XJ29M80(ME))	
D300	1-216-295-91	SHORT CHIP 0	

REF NO.	PART NO.	DESCRIPTION	REMARK
D301	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D301	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D306	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D306	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D307	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D307	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D308	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D308	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D309	8-719-069-54	UDZSTE-175.1B (KV-XJ29M31/XJ29M50/M60(THAILAND))	
D309	8-719-159-10	RD5.1SB-T2 (KV-XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)	
D311	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D311	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D312	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D312	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D313	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D313	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D314	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D314	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D315	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D315	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D316	8-719-037-06	RD7.5SB1-T1	
D320	8-719-069-60	UDZSTE-179.1B (KV-XJ29M31/XJ29M50/M60(THAILAND))	
D320	8-719-158-35	RD9.1S-B (KV-XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)	
D321	8-719-069-60	UDZSTE-179.1B (KV-XJ29M31/XJ29M50/M60(THAILAND))	
D321	8-719-158-35	RD9.1S-B (KV-XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)	
D504	8-719-302-06	EU2A	
D505	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D505	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D506	8-719-911-19	1SS119-25	
D507	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D507	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D508	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D508	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D509	1-216-073-91	RES-CHIP 10K 5% 1/10W	
D510	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D510	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D511	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D511	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D512	8-719-988-61	1SS355TE-17 (Except KV-XJ29M50/M60(THAILAND))	
D512	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))	
D513	8-719-908-03	GP08D	
D517	8-719-312-71	RS3FS (Except KV-XJ29M50/M60(THAILAND))	
D517	8-719-945-80	ERC06-15S (KV-XJ29M50/M60(THAILAND))	
D518	8-719-312-10	RU4AM-T3	
D519	8-719-312-71	RS3FS (Except KV-XJ29M50/M60(THAILAND))	



REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
D519	8-719-945-80	ERC06-15S (KV-XJ29M50/M60(THAILAND))		D634	8-719-081-97	MMDL914T1	
D521	8-719-302-06	EU2A				(Except KV-XJ29M50/M60(THAILAND))	
D522	8-719-028-45	D2L20U		D635	8-719-988-61	1SS355TE-17	
D523	8-719-302-06	EU2A				(Except KV-XJ29M50/M60(THAILAND))	
D527	8-719-908-03	GP08D		D635	8-719-081-97	MMDL914T1	
						(KV-XJ29M50/M60(THAILAND))	
D528	8-719-908-03	GP08D		D636	8-719-510-02	D1NS4	
D532	8-719-988-61	1SS355TE-17		D637	8-719-109-96	RD6.8ES-B1	
		(Except KV-XJ29M50/M60(THAILAND))					
D532	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))		D638	8-719-510-48	D1N20R	
D534	8-719-988-61	1SS355TE-17				(Except KV-XJ29M50/M60(THAILAND))	
		(Except KV-XJ29M50/M60(THAILAND))		D638	8-719-200-82	11ES2 (KV-XJ29M50/M60(THAILAND))	
D534	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))					
D600	8-719-911-19	1SS119-25				<CONNECTOR>	
D602	8-719-911-19	1SS119-25		DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	
D603	8-719-150-92	RD33EB3T				<FERRITE BEAD>	
D604	8-719-028-72	RGPO2-17EL-6433		FB300	1-410-397-21	FERRITE	1.1UH
D605	8-719-510-22	D3SB60		FB501	1-410-397-21	FERRITE	1.1UH
				FB502	1-410-397-21	FERRITE	1.1UH
D606	8-719-108-18	5P-6M		FB600	1-410-397-21	FERRITE	1.1UH
D607	8-719-988-61	1SS355TE-17		FB601	1-410-397-21	FERRITE	1.1UH
		(Except KV-XJ29M50/M60(THAILAND))		FB602	1-410-397-21	FERRITE	1.1UH
D607	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))		FB603	1-410-397-21	FERRITE	1.1UH
D608	8-719-110-53	RD20ES-B2		FB604	1-412-911-31	FERRITE	0UH
D609	8-719-311-31	RU-1P		FB605	1-406-656-21	INDUCTOR	3.3UH
				FB606	1-412-911-31	FERRITE	0UH
D610	8-719-043-76	AK04V0		FB608	1-412-911-31	FERRITE	0UH
		(Except KV-XJ29M50/M60(THAILAND))		FB611	1-410-397-21	FERRITE	1.1UH
D610	8-719-210-21	11EQS04 (KV-XJ29M50/M60(THAILAND))		FB612	1-410-397-21	FERRITE	1.1UH
D611	8-719-046-74	AU-01Z-V1		FB613	1-410-397-21	FERRITE	1.1UH
		(Except KV-XJ29M50/M60(THAILAND))		FB615	1-412-911-31	FERRITE	0UH
D611	8-719-075-73	10ELS2N-TB5				<IC>	
		(KV-XJ29M50/M60(THAILAND))		IC001	8-752-928-96	IC CXP86461-637S (KV-XJ29M31/XJ29M80(E))	
D613	8-719-046-74	AU-01Z-V1		IC001	8-752-929-29	IC CXP86461-638S (KV-XJ29M80(ME)/XJ29M50/M80(INDIA)/XJ29M81)	
		(Except KV-XJ29M50/M60(THAILAND))		IC001	8-752-931-44	IC CXP86461-642S (KV-XJ29M50/M60(THAILAND))	
D613	8-719-075-73	10ELS2N-TB5		IC002	8-759-371-21	MM1319AFBE	
		(KV-XJ29M50/M60(THAILAND))		IC003	8-759-672-78	M24C08-BN6(A)	
D614	8-719-046-74	AU-01Z-V1		IC100	8-759-042-02	S-80743AL-A7-S (KV-XJ29M31)	
		(Except KV-XJ29M50/M60(THAILAND))		IC201	8-759-336-30	TA8223K	
D614	8-719-075-73	10ELS2N-TB5		IC301	8-752-095-72	CXA2159S	
		(KV-XJ29M50/M60(THAILAND))		IC302	8-759-672-27	TDA9183T	
D615	8-719-312-10	RU4AM-T3		IC502	8-759-700-07	NJM2903M	
		(KV-XJ29M31/XJ29M50/M60(THAILAND))		IC503	8-759-980-58	TDA8172	
D615	8-719-074-35	RU4AM-T4 (KV-XJ29M80(E)/XJ29M50/M80(INDIA)/XJ29M81)		IC601	8-749-019-09	IC STR-F6456S	
				IC602	8-749-920-61	SE-135N	
D616	8-719-067-18	RN4Z		IC603	8-759-347-18	KIA7809PI	
D617	8-719-073-84	31DQ06-FC5		IC604	8-759-646-52	KIA7805API	
D620	8-719-110-72	RD30ESB2				<CHIP CONDUCTOR>	
D623	8-719-082-03	DIODE MM3Z15VT1		JR001	1-216-295-91	SHORT CHIP	0
		(Except KV-XJ29M50/M60(THAILAND))		JR002	1-216-295-91	SHORT CHIP	0
D623	8-719-978-65	DTZ-TT11-15B		JR003	1-216-295-91	SHORT CHIP	0
		(KV-XJ29M50/M60(THAILAND))		JR004	1-216-295-91	SHORT CHIP	0
D624	8-719-988-61	1SS355TE-17		JR006	1-216-295-91	SHORT CHIP	0
		(Except KV-XJ29M50/M60(THAILAND))		JR007	1-216-295-91	SHORT CHIP	0
D624	8-719-081-97	MMDL914T1 (KV-XJ29M50/M60(THAILAND))		JR008	1-216-295-91	SHORT CHIP	0
D625	8-719-158-39	RD10S-B					
		(Except KV-XJ29M50/M60(THAILAND))					
D625	8-719-977-28	DTZ10B (KV-XJ29M50/M60(THAILAND))					
D627	8-719-073-84	31DQ06-FC5					
D628	8-719-911-19	1SS119-25					
D631	8-719-068-00	ERC04-06SE					
D632	8-719-068-00	ERC04-06SE					
D633	8-719-948-45	ERA22-08					
D634	8-719-988-61	1SS355TE-17					
		(Except KV-XJ29M50/M60(THAILAND))					

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81**

RM-952

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
JR010	1-216-295-91	SHORT CHIP	0
JR012	1-216-295-91	SHORT CHIP	0
JR014	1-216-295-91	SHORT CHIP	0
JR015	1-216-295-91	SHORT CHIP	0
JR016	1-216-295-91	SHORT CHIP	0
JR019	1-216-295-91	SHORT CHIP	0
JR020	1-216-295-91	SHORT CHIP	0
JR022	1-216-295-91	SHORT CHIP	0
JR023	1-216-295-91	SHORT CHIP	0
JR024	1-216-295-91	SHORT CHIP	0
JR025	1-216-295-91	SHORT CHIP	0
JR028	1-216-295-91	SHORT CHIP	0
JR102	1-216-295-91	SHORT CHIP	0
JR107	1-216-295-91	SHORT CHIP	0 (KV-XJ29M31)
JR109	1-216-295-91	SHORT CHIP	0 (EXCEPT KV-XJ29M31)
JR202	1-216-295-91	SHORT CHIP	0
JR204	1-216-295-91	SHORT CHIP	0
JR214	1-216-295-91	SHORT CHIP	0
JR300	1-216-295-91	SHORT CHIP	0
JR304	1-216-295-91	SHORT CHIP	0
JR308	1-216-295-91	SHORT CHIP	0
JR311	1-216-295-91	SHORT CHIP	0
JR312	1-216-295-91	SHORT CHIP	0
JR400	1-216-295-91	SHORT CHIP	0
JR500	1-216-295-91	SHORT CHIP	0
JR501	1-216-295-91	SHORT CHIP	0
JR502	1-216-295-91	SHORT CHIP	0
JR503	1-216-295-91	SHORT CHIP	0
JR505	1-216-295-91	SHORT CHIP	0
JR600	1-216-295-91	SHORT CHIP	0
		<COIL>	
L002	1-414-856-11	INDUCTOR	10UH
L003	1-414-180-11	INDUCTOR	3.3UH
L005	1-414-233-22	FERRITE	0UH
L101	1-414-856-11	INDUCTOR	10UH
L102	1-414-856-11	INDUCTOR	10UH
L103	1-414-856-11	INDUCTOR	10UH
L104	1-414-856-11	INDUCTOR	10UH
L105	1-414-856-11	INDUCTOR	10UH
L301	1-414-189-31	INDUCTOR	100UH
L302	1-414-185-41	INDUCTOR	22UH
L303	1-414-189-31	INDUCTOR	100UH
L304	1-414-189-31	INDUCTOR	100UH
L501	1-412-525-31	INDUCTOR	10UH
L502	1-422-613-11	COIL, AIR CORE	
L503	1-412-525-31	INDUCTOR	10UH
L504	1-412-525-31	INDUCTOR	10UH
L507	1-459-111-00	INDUCTOR	10MH
L511	1-406-977-71	INDUCTOR	0UH (Except KV-XJ29M50/M60(THAILAND))
L511	1-406-977-21	INDUCTOR	100UH (KV-XJ29M50/M60(THAILAND))
L513	1-412-551-31	INDUCTOR	1.5MH
L515	1-459-104-00	COIL, WITH CORE	 (Except KV-XJ29M50/M80(INDIA))
L515	1-459-104-00	INDUCTOR	10MH (KV-XJ29M50/M80(INDIA))
L518	1-414-187-11	INDUCTOR	47UH
L601	1-406-663-21	INDUCTOR	47UH
L901	1-408-603-31	INDUCTOR	10UH
L902	1-408-603-31	INDUCTOR	10UH

REF NO.	PART NO.	DESCRIPTION	REMARK
L905	1-414-856-11	INDUCTOR	10UH
		<PHOTO COUPLER>	
PH600	Δ 8-749-924-35	ON3171-R	
		<IC LINK>	
PS200	1-532-686-21	LINK, IC 2.7A/150V	
PS600	1-533-597-41	LINK, IC	
PS601	1-533-597-41	LINK, IC	
		<TRANSISTOR>	
Q002	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))	
Q002	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q101	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))	
Q101	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q201	8-729-424-67	UN2216	
Q202	8-729-424-67	UN2216	
Q205	8-729-421-19	UN2213	
Q206	8-729-421-19	UN2213	
Q207	8-729-421-19	UN2213	
Q301	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))	
Q301	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))	
Q302	8-729-010-25	MSD601-RT (Except KV-XJ29M50/M60(THAILAND))	
Q302	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q303	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))	
Q303	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))	
Q305	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))	
Q305	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))	
Q306	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))	
Q306	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q307	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))	
Q307	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q308	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))	
Q308	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))	
Q312	8-729-216-22	2SA1162-G	
Q313	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))	
Q313	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))	
Q314	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))	
Q314	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))	



REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
Q315	8-729-421-19	UN2213		R026	1-216-063-91	RES-CHIP 3.9K	5% 1/10W
Q501	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))		R027	1-216-073-91	RES-CHIP 10K	5% 1/10W
Q501	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))		R028	1-216-073-91	RES-CHIP 10K (KV-XJ29M31 ONLY)	5% 1/10W
Q502	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))		R029	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q502	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))		R031	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q503	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))		R032	1-216-295-91	SHORT CHIP 0 (Except KV-XJ29M31/XJ29M80(E))	
Q503	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))		R034	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q505	8-729-931-45	IRF614		R035	1-216-025-11	RES-CHIP 100	5% 1/10W
Q506	8-729-119-80	2SC2688-LK		R036	1-216-025-11	RES-CHIP 100	5% 1/10W
Q507	8-729-216-22	2SA1162-G (Except KV-XJ29M50/M60(THAILAND))		R037	1-216-025-11	RES-CHIP 100	5% 1/10W
Q507	8-729-026-49	2SA1037AK-T146-R (KV-XJ29M50/M60(THAILAND))		R040	1-216-025-11	RES-CHIP 100	5% 1/10W
Q509	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))		R041	1-216-025-11	RES-CHIP 100	5% 1/10W
Q509	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))		R042	1-216-295-91	SHORT CHIP 0	
Q511	8-729-048-07	2SD2578-CA		R043	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q600	8-729-119-78	2SC2785-HFE		R044	1-216-025-11	RES-CHIP 100	5% 1/10W
Q601	8-729-023-22	2SD2114K		R045	1-414-233-22	FERRITE 0UH	
Q602	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))		R046	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q602	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))		R047	1-414-233-22	FERRITE 0UH	
Q603	8-729-424-08	UN2111		R048	1-216-073-91	RES-CHIP 10K	5% 1/10W
Q604	8-729-200-17	2SA1091-O		R050	1-216-073-91	RES-CHIP 10K	5% 1/10W
Q605	8-729-044-30	2SK2845-LB102		R053	1-216-049-11	RES-CHIP 1K	5% 1/10W
Q606	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))		R058	1-216-295-91	SHORT CHIP 0	
Q606	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))		R059	1-216-295-91	SHORT CHIP 0	
Q607	8-729-823-22	2SC3576		R060	1-216-295-91	SHORT CHIP 0	
Q608	8-729-010-25	MSD601-RT1 (Except KV-XJ29M50/M60(THAILAND))		R061	1-216-033-00	RES-CHIP 220	5% 1/10W
Q608	8-729-120-28	2SC1623-L5L6 (KV-XJ29M50/M60(THAILAND))		R062	1-216-041-00	RES-CHIP 470	5% 1/10W
		<RESISTOR>		R063	1-216-041-00	RES-CHIP 470	5% 1/10W
R001	1-414-233-22	FERRITE	0UH	R064	1-216-041-00	RES-CHIP 470	5% 1/10W
R002	1-216-025-11	RES-CHIP	100 5%	R065	1-216-041-00	RES-CHIP 470	5% 1/10W
R003	1-216-073-91	RES-CHIP	10K 5%	R066	1-216-049-11	RES-CHIP 1K	5% 1/10W
R004	1-216-025-11	RES-CHIP	100 5%	R067	1-216-049-11	RES-CHIP 1K	5% 1/10W
R005	1-216-025-11	RES-CHIP	100 5%	R068	1-216-041-00	RES-CHIP 470	5% 1/10W
R008	1-216-065-91	RES-CHIP	4.7K 5%	R101	1-216-025-11	RES-CHIP 100 (KV-XJ29M31 ONLY)	5% 1/10W
R010	1-216-065-91	RES-CHIP	4.7K 5%	R102	1-216-025-11	RES-CHIP 100 (KV-XJ29M31 ONLY)	5% 1/10W
R011	1-216-065-91	RES-CHIP	4.7K 5%	R105	1-216-295-91	SHORT CHIP 0	
R012	1-216-065-91	RES-CHIP	4.7K 5%	R109	1-216-041-00	RES-CHIP 470	5% 1/10W
R013	1-216-065-91	RES-CHIP	4.7K 5%	R111	1-216-025-11	RES-CHIP 100	5% 1/10W
R014	1-216-025-11	RES-CHIP	100 5%	R112	1-216-025-11	RES-CHIP 100	5% 1/10W
R015	1-216-025-11	RES-CHIP	100 5%	R113	1-216-047-91	RES-CHIP 820	5% 1/10W
R017	1-216-049-11	RES-CHIP	1K 5%	R202	1-216-053-00	RES-CHIP 1.5K	5% 1/10W
R018	1-216-033-00	RES-CHIP	220 5%	R203	1-216-057-00	RES-CHIP 2.2K	5% 1/10W
R019	1-216-073-91	RES-CHIP	10K 5%	R204	1-216-065-91	RES-CHIP 4.7K	5% 1/10W
R020	1-216-045-00	RES-CHIP	680 5%	R205	1-216-065-91	RES-CHIP 4.7K	5% 1/10W
R021	1-216-073-91	RES-CHIP	10K 5%	R206	1-216-057-00	RES-CHIP 2.2K	5% 1/10W
R022	1-216-025-11	RES-CHIP	100 5%	R207	1-216-053-00	RES-CHIP 1.5K	5% 1/10W
R024	1-216-063-91	RES-CHIP	3.9K 5%	R208	1-216-065-91	RES-CHIP 4.7K	5% 1/10W
R025	1-216-063-91	RES-CHIP	3.9K 5%	R209	1-216-065-91	RES-CHIP 4.7K	5% 1/10W
				R210	1-216-031-00	RES-CHIP 180	5% 1/10W
				R212	1-216-031-00	RES-CHIP 180	5% 1/10W
				R225	1-216-033-00	RES-CHIP 220	5% 1/10W
				R226	1-216-033-00	RES-CHIP 220	5% 1/10W
				R227	1-216-033-00	RES-CHIP 220	5% 1/10W
				R228	1-249-389-11	CARBON 4.7	5% 1/4W
				R229	1-216-073-91	RES-CHIP 10K	5% 1/10W
				R230	1-216-073-91	RES-CHIP 10K	5% 1/10W
				R231	1-216-295-91	SHORT CHIP 0	
				R234	1-249-389-11	CARBON 4.7	5% 1/4W
				R237	1-216-308-00	RES-CHIP 4.7	5% 1/10W

**KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952**

A

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R301	1-216-073-91	RES-CHIP	10K 5% 1/10W	R501	1-216-049-11	RES-CHIP	1K 5% 1/10W
R302	1-216-295-91	SHORT CHIP	0	R505	1-216-699-91	METAL CHIP	100K 0.5% 1/10W
R303	1-216-049-11	RES-CHIP	1K 5% 1/10W	R506	1-216-081-00	RES-CHIP	22K 5% 1/10W
R304	1-216-073-91	RES-CHIP	10K 5% 1/10W	R507	1-249-389-11	CARBON	4.7 5% 1/4W
R305	1-216-051-00	RES-CHIP	1.2K 5% 1/10W	R508	1-216-471-11	METAL OXIDE	27 5% 3W
R308	1-216-025-11	RES-CHIP	100 5% 1/10W	R509	1-216-473-11	METAL OXIDE	56 5% 3W
R309	1-216-025-11	RES-CHIP	100 5% 1/10W	R510	1-216-449-11	METAL OXIDE	56 5% 2W
R310	1-216-025-11	RES-CHIP	100 5% 1/10W	R511	1-215-908-00	METAL OXIDE	33 5% 3W
R311	1-216-041-00	RES-CHIP	470 5% 1/10W	R515	1-215-911-11	METAL OXIDE	100 5% 3W
R312	1-216-039-00	RES-CHIP	390 5% 1/10W	R517	1-208-798-11	METAL CHIP	4.7K 0.5% 1/10W
R313	1-216-037-00	RES-CHIP	330 5% 1/10W	R518	1-247-807-31	CARBON	100 5% 1/4W
R314	1-216-083-00	RES-CHIP	27K 5% 1/10W	R519	1-215-913-11	METAL OXIDE	220 5% 3W
R316	1-216-037-00	RES-CHIP	330 5% 1/10W	R520	1-215-445-00	METAL	10K 1% 1/4W
R317	1-216-091-00	RES-CHIP	56K 5% 1/10W	R522	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R318	1-216-039-00	RES-CHIP	390 5% 1/10W	R523	1-249-411-11	CARBON	330 5% 1/4W
R319	1-216-025-11	RES-CHIP	100 5% 1/10W	R525	1-208-846-11	METAL CHIP	470K 0.5% 1/10W
R320	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R526	1-208-804-11	METAL CHIP	8.2K 0.5% 1/10W
R321	1-216-073-91	RES-CHIP	10K 5% 1/10W	R527	1-216-001-00	RES-CHIP	10 5% 1/10W
R322	1-216-033-00	RES-CHIP	220 5% 1/10W	R528	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
R325	1-216-041-00	RES-CHIP	470 5% 1/10W	R529	1-216-635-11	METAL CHIP	220 0.5% 1/10W
R326	1-216-295-91	SHORT CHIP	0	R531	1-247-843-11	CARBON	3.3K 5% 1/4W
R331	1-216-295-91	SHORT CHIP	0	R533	1-249-417-11	CARBON	1K 5% 1/4W
R332	1-216-033-00	RES-CHIP	220 5% 1/10W	R534	1-216-364-11	METAL OXIDE	0.39 5% 2W
R335	1-216-045-00	RES-CHIP	680 5% 1/10W	R535	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R338	1-216-037-00	RES-CHIP	330 5% 1/10W	R536	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R340	1-216-025-11	RES-CHIP	100 5% 1/10W	R537	1-208-804-11	METAL CHIP	8.2K 0.5% 1/10W
R345	1-216-081-00	RES-CHIP	22K 5% 1/10W	R539	1-216-049-11	RES-CHIP	1K 5% 1/10W
R348	1-208-806-11	METAL CHIP	10K 0.5% 1/10W	R540	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R349	1-216-073-91	RES-CHIP	10K 5% 1/10W	R541	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R350	1-216-061-91	RES-CHIP	3.3K 5% 1/10W	R542	1-216-073-91	RES-CHIP	10K 5% 1/10W
R351	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R543	1-216-437-00	METAL OXIDE	5.6K 5% 1W
R354	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R544	1-215-917-11	METAL OXIDE	1K 5% 3W
R355	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R545	1-216-077-91	RES-CHIP	15K 5% 1/10W
R356	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R546	1-216-077-91	RES-CHIP	15K 5% 1/10W
R357	1-216-079-00	RES-CHIP	18K 5% 1/10W	R547	1-216-085-91	RES-CHIP	33K 5% 1/10W
R358	1-216-049-11	RES-CHIP	1K 5% 1/10W	R548	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W
R359	1-216-033-00	RES-CHIP	220 5% 1/10W	R549	1-215-452-00	METAL	20K 1% 1/4W
R360	1-216-033-00	RES-CHIP	220 5% 1/10W	R550	1-216-097-11	RES-CHIP	100K 5% 1/10W
R361	1-216-073-91	RES-CHIP	10K 5% 1/10W	R551	1-249-441-11	CARBON	100K 5% 1/4W
R362	1-216-075-00	RES-CHIP	12K 5% 1/10W	R552	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R363	1-216-079-00	RES-CHIP	18K 5% 1/10W	R553	1-215-453-00	METAL	22K 1% 1/4W
R364	1-216-295-91	SHORT CHIP	0	R554	1-215-453-00	METAL	22K 1% 1/4W
R365	1-216-033-00	RES-CHIP	220 5% 1/10W	R556	1-215-437-00	METAL	4.7K 1% 1/4W
R366	1-216-073-91	RES-CHIP	10K 5% 1/10W	R558	1-247-843-11	CARBON	3.3K 5% 1/4W
R367	1-216-073-91	RES-CHIP	10K 5% 1/10W	R559	1-249-429-11	CARBON	10K 5% 1/4W
R368	1-216-073-91	RES-CHIP	10K 5% 1/10W	R560	1-216-073-91	RES-CHIP	10K 5% 1/10W
R370	1-216-033-00	RES-CHIP	220 5% 1/10W	R561	1-216-049-11	RES-CHIP	1K 5% 1/10W
R371	1-216-083-00	RES-CHIP	27K 5% 1/10W	R562	1-249-401-11	CARBON	47 5% 1/4W
R372	1-216-091-00	RES-CHIP	56K 5% 1/10W	R564	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R375	1-216-025-11	RES-CHIP	100 5% 1/10W	R565	1-216-073-91	RES-CHIP	10K 5% 1/10W
R376	1-216-081-00	RES-CHIP	22K 5% 1/10W	R567	1-216-105-91	RES-CHIP	220K 5% 1/10W
R377	1-216-121-11	RES-CHIP	1M 5% 1/10W	R568	1-249-383-11	CARBON	1.5 5% 1/4W
R378	1-216-041-00	RES-CHIP	470 5% 1/10W	R570	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
R379	1-218-179-11	RES-CHIP	10M 5% 1/10W	R571	1-215-443-00	METAL	8.2K 1% 1/4W
R380	1-216-041-00	RES-CHIP	470 5% 1/10W	R573	1-216-083-00	RES-CHIP	27K 5% 1/10W
R383	1-216-049-11	RES-CHIP	1K 5% 1/10W	R575	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W
R384	1-216-295-91	SHORT CHIP	0	R577	1-215-913-11	METAL OXIDE	220 5% 3W
R385	1-216-033-00	RES-CHIP	220 5% 1/10W	R578	1-216-369-00	METAL OXIDE	1 5% 2W
R391	1-216-049-11	RES-CHIP	1K 5% 1/10W	R579	1-216-295-91	SHORT CHIP	0
R500	1-249-417-11	CARBON	1K 5% 1/4W	R580	1-208-830-11	METAL CHIP	100K 0.5% 1/10W
				R581	1-208-790-11	METAL CHIP	2.2K 0.5% 1/10W
				R582	1-208-842-11	METAL CHIP	330K 0.5% 1/10W

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK			
R584	1-218-760-11	METAL CHIP	220K	0.5%	1/10W	
R587	1-208-822-11	METAL CHIP	47K	0.5%	1/10W	
R588	1-215-888-00	METAL OXIDE	220	5%	2W	
R589	1-215-888-00	METAL OXIDE	220	5%	2W	
R590	1-215-465-00	METAL	68K	1%	1/4W	
R591	1-260-288-11	CARBON	0.47	5%	1/2W	
R592	1-208-820-11	METAL CHIP	39K	0.5%	1/10W	
R593	1-260-288-11	CARBON	0.47	5%	1/2W	
R594	1-260-288-11	CARBON	0.47	5%	1/2W	
R595	1-216-073-91	RES-CHIP	10K	5%	1/10W	
R596	1-215-916-00	METAL OXIDE	680	5%	3W	
R597	1-247-750-11	CARBON	680	5%	1/2W	
R598	1-249-438-11	CARBON	56K	5%	1/4W	
R599	1-249-389-11	CARBON	4.7	5%	1/4W	
R600	1-249-438-11	CARBON	56K	5%	1/4W	
R601	1-249-420-11	CARBON	1.8K	5%	1/4W	
R602	1-249-389-11	CARBON	4.7	5%	1/4W	
R603	1-215-485-00	METAL	470K	1%	1/4W	
R604	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R607	1-249-425-11	CARBON	4.7K	5%	1/4W	
R608	1-240-205-91	CARBON	22M	5%	1/2W	
R609	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R610	1-216-073-91	RES-CHIP	10K	5%	1/10W	
R611	1-216-089-91	RES-CHIP	47K	5%	1/10W	
R612	1-216-045-00	RES-CHIP	680	5%	1/10W	
R614	1-216-041-00	RES-CHIP	470	5%	1/10W	
R615	1-216-369-00	METAL OXIDE	1	5%	2W	
R616	1-260-302-51	CARBON	6.8	5%	1/2W	
R617	1-247-791-91	CARBON	22	5%	1/4W	
R619	1-260-128-11	CARBON	270K	5%	1/2W	
R620	1-129-720-00	FILM	0.033UF	5.00%	630V	
R621	1-215-864-00	METAL OXIDE	150	5%	1W	
R623	1-216-095-00	RES-CHIP	82K	5%	1/10W	
R624	1-216-089-91	RES-CHIP	47K	5%	1/10W	
R626	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R627	1-240-251-11	CEMENTED	6.8	5%	10W	
R629	1-247-747-11	CARBON	470	5%	1/2W	
R630	1-249-429-11	CARBON	10K	5%	1/4W	
R631	1-216-089-91	RES-CHIP	47K	5%	1/10W	
R632	1-220-886-11	FUSIBLE	0.1	10%	1W	
R634	Δ 1-240-917-91	METAL	8.2M	5%	1W	
R635	1-216-492-21	METAL OXIDE	82K	5%	3W	
R636	1-215-924-00	METAL OXIDE	15K	5%	3W	
R637	1-216-492-21	METAL OXIDE	82K	5%	3W	
R639	1-216-361-21	METAL OXIDE	0.22	5%	2W	
R640	1-249-415-11	CARBON	680	5%	1/4W	
R641	1-216-361-21	METAL OXIDE	0.22	5%	2W	
R642	1-249-419-11	CARBON	1.5K	5%	1/4W	
R643	1-247-843-11	CARBON	3.3K	5%	1/4W	
R644	1-249-419-11	CARBON	1.5K	5%	1/4W	
R646	1-215-924-00	METAL OXIDE	15K	5%	3W	
R647	1-249-387-11	CARBON	3.3	5%	1/4W	
R648	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R649	1-249-417-11	CARBON	1K	5%	1/4W	
R650	1-215-882-00	METAL OXIDE	22	5%	2W	
R652	1-215-900-11	METAL OXIDE	22K	5%	2W	
R653	1-215-873-00	METAL OXIDE	4.7K	5%	1W	
R656	1-249-417-11	CARBON	1K	5%	1/4W	
R657	1-260-127-11	CARBON	220K	5%	1/2W	
R659	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R660	1-216-073-91	RES-CHIP	10K	5%	1/10W	
R661	1-215-873-00	METAL OXIDE	4.7K	5%	1W	

REF NO.	PART NO.	DESCRIPTION	REMARK			
R682	1-249-377-11	CARBON	0.47	5%	1/4W	
R901	1-249-411-11	CARBON	330	5%	1/4W	
R902	1-249-411-11	CARBON	330	5%	1/4W	
R909	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R910	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
		<RELAY>				
RY600	Δ 1-755-299-11	RELAY, AC POWER				
RY601	Δ 1-755-299-11	RELAY, AC POWER				
		<SWITCH>				
S501	1-572-707-11	SWITCH, LEVER				
S502	1-572-707-11	SWITCH, LEVER				
		<TRANSFORMER>				
T501	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE				
T503	Δ 1-453-284-11	TRANSFORMER ASSY FLYBACK (NX-4009/M315)				
T504	1-431-693-11	TRANSFORMER, HORIZONTAL LINEAR				
T505	1-426-981-11	TRANSFORMER, FERRITE (PMT)				
T601	1-424-505-11	TRANSFORMER, LINE FILTER (Except KV-XJ29M50/M60(THAILAND))/ XJ29M50/M80(INDIA))				
T601	1-429-505-11	COIL, LINE FILTER (KV-XJ29M50/M60(THAILAND))/ XJ29M50/M80(INDIA))				
T603	Δ 1-435-147-11	TRANSFORMER, CONVERTER (SRT)				
T604	Δ 1-431-852-11	TRANSFORMER, CONVERTER (SRT)				
		<THERMISTOR>				
TH600	1-803-586-11	THERMISTOR, NTC				
		<THERMISTOR>				
THP600	Δ 1-803-541-11	THERMISTOR				
		<TUNER>				
TU101	8-598-451-00	TUNER, FSS BTF-WG441 (KV-XJ29M31/XJ29M60(THAILAND))				
TU101	8-598-449-10	TUNER, FSS BTF-LG433 (Except KV-XJ29M31/XJ29M60(THAILAND))				
		<VARISTOR>				
VDR600	1-803-830-31	VARISTOR (ERZV14D621)				
		<CRYSTAL>				
X001	1-579-125-11	VIBRATOR, CERAMIC				
X301	1-781-134-21	VIBRATOR, CRYSTAL				
X302	1-781-132-21	VIBRATOR, CRYSTAL				

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

B9

REF NO.	PART NO.	DESCRIPTION	REMARK
* A-1300-463-A	B9 BOARD COMPLETE (KV-XJ29M31)		
* A-1300-412-A	B9 BOARD COMPLETE (KV-XJ29M50/M60(THAILAND))		
* A-1136-282-A	B9 BOARD COMPLETE (KV-XJ29M80(E))		
* A-1300-367-A	B9 BOARD COMPLETE (KV-XJ29M50/M80(INDIA))		
* A-1300-488-A	B9 BOARD COMPLETE (KV-XJ29M80(ME)/XJ29M81) *****		
1-533-223-11	CLIP, FUSE		
	<CAPACITOR>		
C7227	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V
C7228	1-163-024-00	CERAMIC CHIP	0.018UF 10.00% 50V
C7229	1-163-018-00	CERAMIC CHIP	0.0056UF 10.00% 50V
C7230	1-163-024-00	CERAMIC CHIP	0.018UF 10.00% 50V
C7231	1-163-018-00	CERAMIC CHIP	0.0056UF 10.00% 50V
C7232	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V
C7233	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7234	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7235	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7236	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7238	1-164-505-11	CERAMIC CHIP	2.2UF 16V
C7240	1-164-505-11	CERAMIC CHIP	2.2UF 16V
C7241	1-164-346-11	CERAMIC CHIP	1UF 16V
C7242	1-164-505-11	CERAMIC CHIP	2.2UF 16V
C7243	1-164-346-11	CERAMIC CHIP	1UF 16V
C7244	1-164-700-11	CERAMIC CHIP	0.68UF 16V
C7245	1-164-346-11	CERAMIC CHIP	1UF 16V
C7246	1-163-018-00	CERAMIC CHIP	0.0056UF 10.00% 50V
C7247	1-164-346-11	CERAMIC CHIP	1UF 16V
C7248	1-163-010-11	CERAMIC CHIP	0.0012UF 10.00% 50V
C7249	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7250	1-164-346-11	CERAMIC CHIP	1UF 16V
C7251	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V
C7252	1-164-346-11	CERAMIC CHIP	1UF 16V
C7253	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V
C7254	1-126-965-91	ELECT	22UF 20.00% 50V
C7255	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V
C7258	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7259	1-126-933-11	ELECT	100UF 20.00% 16V
C7260	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C7261	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C7263	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7301	1-126-933-11	ELECT	100UF 20.00% 16V
C7304	1-126-967-11	ELECT	47UF 20.00% 50V
C7305	1-164-004-11	CERAMIC CHIP	0.1UF 10.00% 25V
C7333	1-126-964-11	ELECT	10UF 20.00% 50V
C7401	1-164-346-11	CERAMIC CHIP	1UF 16V
C7402	1-164-346-11	CERAMIC CHIP	1UF 16V
C7403	1-163-005-91	CERAMIC CHIP	470PF 10.00% 50V
C7404	1-163-005-91	CERAMIC CHIP	470PF 10.00% 50V
C7405	1-126-935-11	ELECT	470UF 20.00% 16V
C7406	1-164-346-11	CERAMIC CHIP	1UF 16V
C7407	1-164-346-11	CERAMIC CHIP	1UF 16V
C7408	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7409	1-126-933-11	ELECT	100UF 20.00% 16V
C7410	1-164-346-11	CERAMIC CHIP	1UF 16V
C7411	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7412	1-164-346-11	CERAMIC CHIP	1UF 16V
C7413	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7414	1-126-963-11	ELECT	4.7UF 20.00% 50V

REF NO.	PART NO.	DESCRIPTION	REMARK
C7415	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7416	1-164-346-11	CERAMIC CHIP	1UF 16V
C7417	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7418	1-164-346-11	CERAMIC CHIP	1UF 16V
C7419	1-163-133-00	CERAMIC CHIP	470PF 5.00% 50V
C7513	1-216-295-91	SHORT CHIP	0
C7514	1-216-295-91	SHORT CHIP	0
C7515	1-163-243-11	CERAMIC CHIP	47PF 5.00% 50V
C7517	1-164-005-11	CERAMIC CHIP	0.47UF 25V
C7518	1-126-963-11	ELECT	4.7UF 20.00% 50V
C7519	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C7520	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C7522	1-164-005-11	CERAMIC CHIP	0.47UF 25V
C7523	1-163-255-11	CERAMIC CHIP	150PF 5.00% 50V
C7524	1-163-247-91	CERAMIC CHIP	68PF 5.00% 50V
C7525	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C7526	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C7528	1-164-005-11	CERAMIC CHIP	0.47UF 25V
C7529	1-163-255-11	CERAMIC CHIP	150PF 5.00% 50V
C7530	1-163-247-91	CERAMIC CHIP	68PF 5.00% 50V
C7543	1-126-933-11	ELECT	100UF 20.00% 16V
C7544	1-165-319-11	CERAMIC CHIP	0.1UF 50V
C7554	1-165-319-11	CERAMIC CHIP	0.1UF 50V
C7557	1-165-319-11	CERAMIC CHIP	0.1UF 50V
C7558	1-126-947-11	ELECT	47UF 20.00% 16V
C7561	1-126-963-11	ELECT	4.7UF 20.00% 50V (Except KV-XJ29M31/XJ29M80(E))
C7562	1-126-933-11	ELECT	100UF 20.00% 16V (Except KV-XJ29M31/XJ29M80(E))
C7601	Δ 1-104-708-51	MYLAR	0.47UF 20.00% 250V
C7602	Δ 1-109-835-51	MYLAR	0.68UF 20.00% 250V
C7654	Δ 1-117-703-51	CERAMIC	0.0047UF 99% 250V

<CONNECTOR>

CN7401	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN7402	* 1-764-333-11	PLUG, CONNECTOR 10P	
CN7403	* 1-564-510-11	PLUG, CONNECTOR 7P	
CN7501	* 1-564-511-11	PLUG, CONNECTOR 8P	
CN7502	1-564-505-11	PLUG, CONNECTOR 2P (Except KV-XJ29M31/XJ29M80(E))	

CN7503	* 1-764-333-11	PLUG, CONNECTOR 10P	
CN7601	1-580-843-11	PIN, CONNECTOR (POWER)	
CN7602	1-580-843-11	PIN, CONNECTOR (POWER)	
CN7603	1-695-915-11	TAB (CONTACT)	

<DIODE>

D7300	8-719-158-35	RD9.1S-B	
D7401	8-719-158-35	RD9.1S-B	
D7402	8-719-158-35	RD9.1S-B	
D7403	8-719-158-35	RD9.1S-B	
D7404	8-719-158-35	RD9.1S-B	

D7405	8-719-158-35	RD9.1S-B	
D7406	8-719-158-35	RD9.1S-B	
D7407	8-719-158-35	RD9.1S-B	
D7408	8-719-158-35	RD9.1S-B	
D7409	8-719-158-35	RD9.1S-B	

D7410	8-719-158-35	RD9.1S-B	
D7411	8-719-158-35	RD9.1S-B	
D7412	8-719-914-42	DA204K	
D7413	8-719-158-35	RD9.1S-B	
D7501	8-719-158-35	RD9.1S-B	

The components identified by shading
and mark \triangle are critical for safety.
Replace only with part number specified.

B9

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
		<FUSE>					
F7601	\triangle 1-533-223-41	FUSE, TIME-LAG 5A/250V		Q7503	8-729-010-25	MSD601-RT1	
		<IC>		Q7505	8-729-010-25	MSD601-RT1	
IC7203	8-759-553-40	TDA7429S		Q7507	8-729-216-22	2SA1162-G	
IC7204	8-759-100-96	UPC4558G2		Q7509	8-729-010-25	MSD601-RT1	
IC7501	8-759-009-07	MC14053BF		Q7510	8-729-010-25	MSD601-RT1	
		<JACK>		Q7511	8-729-216-22	2SA1162-G	
J7402	1-778-388-11	JACK BLOCK, PIN 9P		Q7514	8-729-010-25	MSD601-RT1	
		<CHIP CONDUCTOR>		Q7515	8-729-010-25	MSD601-RT1	
JR7200	1-216-295-91	SHORT CHIP	0	Q7516	8-729-216-22	2SA1162-G	
JR7203	1-216-295-91	SHORT CHIP	0	Q7520	8-729-010-25	MSD601-RT1	
JR7204	1-216-295-91	SHORT CHIP	0	Q7522	8-729-010-25	MSD601-RT1	
JR7206	1-216-295-91	SHORT CHIP	0	Q7523	8-729-216-22	2SA1162-G	
JR7208	1-216-295-91	SHORT CHIP	0			<RESISTOR>	
JR7212	1-216-295-91	SHORT CHIP	0	R7215	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
JR7401	1-216-295-91	SHORT CHIP	0	R7216	1-216-059-00	RES-CHIP	2.7K 5% 1/10W
JR7403	1-216-295-91	SHORT CHIP	0	R7217	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
JR7404	1-216-295-91	SHORT CHIP	0	R7218	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
JR7500	1-216-295-91	SHORT CHIP	0	R7219	1-216-025-11	RES-CHIP	100 5% 1/10W
JR7501	1-216-295-91	SHORT CHIP	0	R7220	1-216-025-11	RES-CHIP	100 5% 1/10W
JR7502	1-216-295-91	SHORT CHIP	0	R7221	1-216-689-11	RES-CHIP	39K 5% 1/10W
JR7505	1-216-295-91	SHORT CHIP	0	R7222	1-216-689-11	RES-CHIP	39K 5% 1/10W
JR7506	1-216-295-91	SHORT CHIP	0	R7223	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
JR7507	1-216-295-91	SHORT CHIP	0	R7224	1-216-073-91	RES-CHIP	10K 5% 1/10W
JR7508	1-216-295-91	SHORT CHIP	0	R7225	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
		(KV-XJ29M31/XJ29M80(E))		R7226	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7238	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7239	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
		(KV-XJ29M31/XJ29M80(E))		R7240	1-216-689-11	RES-CHIP	39K 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7241	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
		(KV-XJ29M31/XJ29M80(E))		R7242	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7243	1-216-689-11	RES-CHIP	39K 5% 1/10W
		(KV-XJ29M31/XJ29M80(E))		R7334	1-216-022-00	RES-CHIP	75 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7335	1-216-033-00	RES-CHIP	220 5% 1/10W
		<COIL>		R7336	1-216-041-00	RES-CHIP	470 5% 1/10W
L7204	1-414-856-11	INDUCTOR	10UH	R7337	1-216-045-00	RES-CHIP	680 5% 1/10W
L7301	1-414-189-31	INDUCTOR	100UH	R7339	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
L7501	1-414-856-11	INDUCTOR	10UH	R7341	1-216-045-00	RES-CHIP	680 5% 1/10W
L7506	1-414-857-11	INDUCTOR	100UH	R7342	1-216-049-11	RES-CHIP	1K 5% 1/10W
L7507	1-414-187-11	INDUCTOR	47UH	R7343	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
L7508	1-414-187-11	INDUCTOR	47UH	R7344	1-216-073-91	RES-CHIP	10K 5% 1/10W
L7509	1-414-857-11	INDUCTOR	100UH	R7401	1-216-049-11	RES-CHIP	1K 5% 1/10W
L7510	1-414-187-11	INDUCTOR	47UH	R7402	1-216-073-91	RES-CHIP	10K 5% 1/10W
L7511	1-414-187-11	INDUCTOR	47UH	R7403	1-216-073-91	RES-CHIP	10K 5% 1/10W
L7512	1-414-856-11	INDUCTOR	10UH	R7404	1-216-073-91	RES-CHIP	10K 5% 1/10W
L7513	1-414-856-11	INDUCTOR	10UH	R7405	1-216-049-11	RES-CHIP	1K 5% 1/10W
		(Except KV-XJ29M31/XJ29M80(E))		R7406	1-216-073-91	RES-CHIP	10K 5% 1/10W
		<TRANSISTOR>		R7407	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q7309	8-729-010-25	MSD601-RT1		R7408	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q7310	8-729-010-25	MSD601-RT1		R7409	1-216-041-00	RES-CHIP	470 5% 1/10W
Q7401	8-729-424-67	UN2216		R7410	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q7402	8-729-424-67	UN2216		R7411	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q7403	8-729-216-22	2SA1162-G		R7412	1-216-041-00	RES-CHIP	470 5% 1/10W
Q7404	8-729-216-22	2SA1162-G		R7413	1-216-021-00	RES-CHIP	68 5% 1/10W
Q7501	8-729-010-25	MSD601-RT1		R7414	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q7502	8-729-216-22	2SA1162-G		R7415	1-216-113-00	RES-CHIP	470K 5% 1/10W
				R7416	1-216-089-91	RES-CHIP	47K 5% 1/10W
				R7417	1-216-089-91	RES-CHIP	47K 5% 1/10W
				R7418	1-216-113-00	RES-CHIP	470K 5% 1/10W
				R7419	1-216-022-00	RES-CHIP	75 5% 1/10W
				R7420	1-216-113-00	RES-CHIP	470K 5% 1/10W

B9**C6**

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK		
R7421	1-216-077-91	RES-CHIP	15K	5%	1/10W
R7422	1-216-077-91	RES-CHIP	15K	5%	1/10W
R7423	1-216-113-00	RES-CHIP	470K	5%	1/10W
R7424	1-216-022-00	RES-CHIP	75	5%	1/10W
R7425	1-216-033-00	RES-CHIP	220	5%	1/10W
R7426	1-216-033-00	RES-CHIP	220	5%	1/10W
R7427	1-216-089-91	RES-CHIP	47K	5%	1/10W
R7428	1-216-113-00	RES-CHIP	470K	5%	1/10W
R7429	1-216-089-91	RES-CHIP	47K	5%	1/10W
R7430	1-216-113-00	RES-CHIP	470K	5%	1/10W
R7503	1-216-025-11	RES-CHIP	100	5%	1/10W
R7504	1-216-025-11	RES-CHIP	100	5%	1/10W
R7506	1-216-025-11	RES-CHIP	100	5%	1/10W
R7507	1-216-081-00	RES-CHIP	22K	5%	1/10W
R7508	1-216-073-91	RES-CHIP	10K	5%	1/10W
R7511	1-216-033-00	RES-CHIP	220	5%	1/10W
R7512	1-216-005-00	RES-CHIP	15	5%	1/10W
R7515	1-216-041-00	RES-CHIP	470	5%	1/10W
R7516	1-216-025-11	RES-CHIP	100	5%	1/10W
R7517	1-216-075-00	RES-CHIP	12K	5%	1/10W
R7520	1-216-079-00	RES-CHIP	18K	5%	1/10W
R7522	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7523	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7528	1-216-033-00	RES-CHIP	220	5%	1/10W
R7529	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R7531	1-216-045-00	RES-CHIP	680	5%	1/10W
R7537	1-216-041-00	RES-CHIP	470	5%	1/10W
R7538	1-216-041-00	RES-CHIP	470	5%	1/10W
R7540	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7541	1-216-041-00	RES-CHIP	470	5%	1/10W
R7542	1-216-041-00	RES-CHIP	470	5%	1/10W
R7543	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7545	1-216-041-00	RES-CHIP	470	5%	1/10W
R7547	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7548	1-216-025-11	RES-CHIP	100	5%	1/10W
R7549	1-216-075-00	RES-CHIP	12K	5%	1/10W
R7551	1-216-081-00	RES-CHIP	22K	5%	1/10W
R7552	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7553	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7554	1-216-033-00	RES-CHIP	220	5%	1/10W
R7556	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7559	1-216-041-00	RES-CHIP	470	5%	1/10W
R7560	1-216-041-00	RES-CHIP	470	5%	1/10W
R7561	1-216-041-00	RES-CHIP	470	5%	1/10W
R7562	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7563	1-216-041-00	RES-CHIP	470	5%	1/10W
R7566	1-216-041-00	RES-CHIP	470	5%	1/10W
R7567	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7568	1-216-041-00	RES-CHIP	470	5%	1/10W
R7569	1-216-049-11	RES-CHIP	1K	5%	1/10W
R7577	1-216-065-91	RES-CHIP (Except KV-XJ29M31/XJ29M80(E))	4.7K	5%	1/10W
R7582	1-216-295-91	SHORT CHIP	0		
R7583	1-216-073-91	RES-CHIP (Except KV-XJ29M31/XJ29M80(E))	10K	5%	1/10W
R7584	1-216-061-91	RES-CHIP (Except KV-XJ29M31/XJ29M80(E))	3.3K	5%	1/10W
R7601	Δ 1-202-885-91	SOLID	1M	10%	1/2W

REF NO.	PART NO.	DESCRIPTION	REMARK		
		<TRANSFORMER>			
T7601	Δ 1-419-819-11	TRANSFORMER, LINE FILTER (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)			
T7601	Δ 1-419-819-11	COIL, LINE FILTER (KV-XJ29M50/M60(THAILAND)/ XJ29M50/M80(INDIA))			
T7602	Δ 1-435-214-11	TRANSFORMER, LINE FILTER (KV-XJ29M31/XJ29M80(E/ME)/ XJ29M50/M80(INDIA)/XJ29M81)			
T7602	Δ 1-435-214-11	COIL, LINE FILTER (KV-XJ29M50/M60(THAILAND))			

	* A-1332-152-A	C6 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)			
	* A-1332-209-A	C6 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))			
	* A-1400-644-A	C6 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))			
	* A-1332-152-A	C6 BOARD MOUNTED (KV-XJ29M31) *****			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C701	1-115-350-51	CERAMIC	0.0047UF		2KV
C702	1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C708	1-102-114-00	CERAMIC	470PF	10.00%	50V
C709	1-102-114-00	CERAMIC	470PF	10.00%	50V
C710	1-102-114-00	CERAMIC	470PF	10.00%	50V
C712	1-102-115-00	CERAMIC	560PF	10.00%	50V
C713	1-102-112-00	CERAMIC	330PF	10.00%	50V
C714	1-102-112-00	CERAMIC	330PF	10.00%	50V
C716	1-126-933-11	ELECT	100UF	20.00%	16V
C717	1-107-651-11	ELECT	4.7UF	20.00%	250V
C718	1-102-106-00	CERAMIC	100PF	10.00%	50V
C1800	1-126-964-11	ELECT	10UF	20.00%	50V
C1803	1-126-964-11	ELECT	10UF	20.00%	50V
C1804	1-126-964-11	ELECT	10UF	20.00%	50V
C1809	1-126-942-61	ELECT	1000UF	20.00%	25V
C1810	1-102-106-00	CERAMIC	100PF	10.00%	50V
		<CONNECTOR>			
CN700	1-695-915-11	TAB (CONTACT)			
CN702	1-695-915-11	TAB (CONTACT)			
CN703	* 1-564-509-11	PLUG, CONNECTOR 6P			
CN704	1-695-915-11	TAB (CONTACT)			
CN712	1-564-507-11	PLUG, CONNECTOR 4P			
CN1801	* 1-564-509-11	PLUG, CONNECTOR 6P			
CN1802	* 1-564-506-11	PLUG, CONNECTOR 3P			
		<DIODE>			
D701	8-719-911-19	ISS119-25			
D702	8-719-911-19	ISS119-25			
D703	8-719-911-19	ISS119-25			
D704	8-719-911-19	ISS119-25			
D705	8-719-911-19	ISS119-25			

KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952

D3 **H5**

REF NO.	PART NO.	DESCRIPTION	REMARK		
C2806	1-106-383-00	MYLAR	0.047UF	5.00%	100V
C2807	1-137-194-81	FILM	0.47UF	5.00%	50V
C2808	1-126-964-11	ELECT	10UF	20.00%	50V
C2809	1-137-194-81	FILM	0.47UF	5.00%	50V
C2810	1-106-375-12	MYLAR	0.022UF	10.00%	250V
C2811	1-126-964-11	ELECT	10UF	20.00%	50V
C2812	1-126-964-11	ELECT	10UF	20.00%	50V
C2813	1-129-708-91	FILM	0.0033UF	5.00%	630V
<CONNECTOR>					
CN2800	* 1-564-510-11	PLUG, CONNECTOR 7P			
CN2802	* 1-564-506-11	PLUG, CONNECTOR 3P			
CN2803	1-695-915-11	TAB (CONTACT)			
<DIODE>					
D2800	8-719-302-43	ELIZ			
D2801	8-719-911-19	1SS119-25			
D2802	8-719-911-19	1SS119-25			
D2803	8-719-911-19	1SS119-25			
<IC>					
IC2800	8-759-701-59	NJM78M09FA			
IC2801	8-759-998-98	LM358D			
<COIL>					
L2800	1-406-989-71	INDUCTOR	0UH		
L2802	1-406-987-21	INDUCTOR	4.7MH		
L2803	1-406-986-21	INDUCTOR	3.3UH		
L2804	1-406-678-11	INDUCTOR	15MH		
<TRANSISTOR>					
Q2800	8-729-119-78	2SC2785-HFE			
Q2801	8-729-195-82	2SC2958			
Q2802	8-729-017-06	2SC4793			
Q2803	8-729-216-22	2SA1162-G			
Q2804	8-729-010-25	MSD601-RT1			
<RESISTOR>					
R2800	1-249-405-11	CARBON	100	5%	1/4W
R2802	1-260-111-11	CARBON	10K	5%	1/2W
R2803	1-260-111-11	CARBON	10K	5%	1/2W
R2804	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R2805	1-216-097-11	RES-CHIP	100K	5%	1/10W
R2806	1-249-421-11	CARBON	2.2K	5%	1/4W
R2807	1-249-420-11	CARBON	1.8K	5%	1/4W
R2808	1-215-857-71	METAL OXIDE	10	5%	1W
R2809	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R2810	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2811	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R2812	1-216-081-00	RES-CHIP	22K	5%	1/10W
R2813	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R2814	1-216-121-11	RES-CHIP	1M	5%	1/10W
R2815	1-216-085-91	RES-CHIP	33K	5%	1/10W
R2816	1-216-107-00	RES-CHIP	270K	5%	1/10W
R2817	1-216-107-00	RES-CHIP	270K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION	REMARK		
<TRANSFORMER>					
T2800	1-413-059-00	TRANSFORMER, FERRITE (DFT)			

	* A-1377-085-A	H5 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)			
	* A-1400-762-A	H5 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))			
	* A-1400-645-A	H5 BOARD MOUNTED (KV-XJ29M50/M80(INDIA)) *****			
	* 4-055-304-01	HOLDER, LED			
<CAPACITOR>					
C3910	1-126-947-11	ELECT	47UF	20.00%	16V
C3911	1-126-947-11	ELECT	47UF	20.00%	16V
C3912	1-102-114-00	CERAMIC	470PF	10.00%	50V
<CONNECTOR>					
CN3601	* 1-580-844-11	PIN, CONNECTOR (POWER)			
CN3602	* 1-580-844-11	PIN, CONNECTOR (POWER)			
CN3901	* 1-564-507-11	PLUG, CONNECTOR 4P			
CN3902	1-564-509-11	PLUG, CONNECTOR 6P			
CN3904	* 1-564-512-11	PLUG, CONNECTOR 9P			
CN3905	* 1-564-512-11	PLUG, CONNECTOR 9P			
<DIODE>					
D3905	8-719-070-16	NNCD9.1A-T1			
D3906	8-719-045-19	SPB-26MVWF (Except KV-XJ29M50/M60(THAILAND))			
D3906	8-719-083-18	DIODE SPB-25MVWF (KV-XJ29M50/M60(THAILAND))			
D3908	8-719-070-16	NNCD9.1A-T1			
<IC>					
IC3901	8-742-225-20	IC SBX3081-21			
<JACK>					
J3901	1-750-264-11	JACK			
J3903	1-770-329-11	JACK, PIN 3P			
<TRANSISTOR>					
Q3901	8-729-030-02	DTC144ESA			
Q3902	8-729-030-02	DTC144ESA			
<RESISTOR>					
R3907	1-249-426-11	CARBON	5.6K	5%	1/4W
R3908	1-249-413-11	CARBON	470	5%	1/4W
R3909	1-249-417-11	CARBON	1K	5%	1/4W
R3910	1-249-420-11	CARBON	1.8K	5%	1/4W
R3911	1-249-411-11	CARBON	330	5%	1/4W
R3912	1-247-843-11	CARBON	3.3K	5%	1/4W
R3913	1-249-429-11	CARBON	10K	5%	1/4W

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

H5 **J4** **V1 (KV-XJ29M31/XJ29M81)**

REF NO.	PART NO.	DESCRIPTION	REMARK
R3914	1-249-411-11	CARBON 330	5% 1/4W
R3915	1-249-429-11	CARBON 10K	5% 1/4W
R3916	1-249-401-11	CARBON 47	5% 1/4W
R3920	1-247-807-31	CARBON 100	5% 1/4W
R3921	1-247-807-31	CARBON 100	5% 1/4W
<SWITCH>			
S3601	\triangle 1-571-433-31	SWITCH, PUSH (AC POWER)	
S3902	1-692-431-21	SWITCH, TACTILE	
S3903	1-692-431-21	SWITCH, TACTILE	
S3904	1-692-431-21	SWITCH, TACTILE	
S3905	1-692-431-21	SWITCH, TACTILE	
S3906	1-692-431-21	SWITCH, TACTILE	
S3907	1-692-431-21	SWITCH, TACTILE	
S3908	1-692-431-21	SWITCH, TACTILE	

* A-1388-338-A	J4 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)		
* A-1400-764-A	J4 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))		
* A-1400-647-A	J4 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))		*****
<CAPACITOR>			
C2410	1-126-967-11	ELECT 47UF	20.00% 50V
C2411	1-126-967-11	ELECT 47UF	20.00% 50V
C2412	1-126-967-11	ELECT 47UF	20.00% 50V
C2413	1-102-112-00	CERAMIC 330PF	10.00% 50V
C2414	1-102-112-00	CERAMIC 330PF	10.00% 50V
C2418	1-126-960-11	ELECT 1UF	20.00% 50V
C2419	1-126-960-11	ELECT 1UF	20.00% 50V
<CONNECTOR>			
CN2410	* 1-564-523-11	PLUG, CONNECTOR 8P	
<DIODE>			
D2410	8-719-929-15	HZS9.1NB2 (Except KV-XJ29M50/M60(THAILAND))	
D2410	8-719-070-16	NNCD9.1A-T1 (KV-XJ29M50/M60(THAILAND))	
D2411	8-719-929-15	HZS9.1NB2 (Except KV-XJ29M50/M60(THAILAND))	
D2411	8-719-070-16	NNCD9.1A-T1 (KV-XJ29M50/M60(THAILAND))	
D2412	8-719-929-15	HZS9.1NB2 (Except KV-XJ29M50/M60(THAILAND))	
D2412	8-719-070-16	NNCD9.1A-T1 (KV-XJ29M50/M60(THAILAND))	
D2414	8-719-929-15	HZS9.1NB2 (Except KV-XJ29M50/M60(THAILAND))	
D2414	8-719-070-16	NNCD9.1A-T1 (KV-XJ29M50/M60(THAILAND))	
D2415	8-719-929-15	HZS9.1NB2 (Except KV-XJ29M50/M60(THAILAND))	
D2415	8-719-070-16	NNCD9.1A-T1 (KV-XJ29M50/M60(THAILAND))	

REF NO.	PART NO.	DESCRIPTION	REMARK
<JACK>			
J2410	1-784-623-11	BLOCK, PIN JACK 5P	
<RESISTOR>			
R2410	1-247-804-11	CARBON 75	5% 1/4W
R2411	1-247-804-11	CARBON 75	5% 1/4W
R2412	1-247-804-11	CARBON 75	5% 1/4W
R2414	1-247-887-00	CARBON 220K	5% 1/4W
R2415	1-249-431-11	CARBON 15K	5% 1/4W
R2417	1-247-887-00	CARBON 220K	5% 1/4W
R2418	1-249-431-11	CARBON 15K	5% 1/4W
R2419	1-249-409-11	CARBON 220	5% 1/4W
R2420	1-249-409-11	CARBON 220	5% 1/4W
R2421	1-249-409-11	CARBON 220	5% 1/4W

* A-1347-164-A	V1 BOARD COMPLETE (KV-XJ29M31/XJ29M81)		*****
<CAPACITOR>			
C801	1-126-947-11	ELECT 47UF	20.00% 16V
C805	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C806	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C814	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C815	1-163-251-11	CERAMIC CHIP 100PF	5.00% 50V
C816	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C817	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C818	1-163-239-11	CERAMIC CHIP 33PF	5.00% 50V
C820	1-163-239-11	CERAMIC CHIP 33PF	5.00% 50V
C821	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C822	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C823	1-126-933-11	ELECT 100UF	20.00% 16V
C826	1-126-963-11	ELECT 4.7UF	20.00% 50V
C829	1-163-247-91	CERAMIC CHIP 68PF	5.00% 50V
C830	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C831	1-126-933-11	ELECT 100UF	20.00% 16V
C832	1-126-964-11	ELECT 10UF	20.00% 50V
C835	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C837	1-126-933-11	ELECT 100UF	20.00% 16V
<CONNECTOR>			
CN801	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P	
CN803	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P	
<DIODE>			
D802	8-719-941-09	DAP202U	
D803	8-719-105-46	RD3.3M-B2	
D804	8-719-105-91	RD5.6M-B2	
<FERRITE BEAD>			
FB801	1-410-397-21	FERRITE 1.1UH	
FB802	1-410-397-21	FERRITE 1.1UH	
FB803	1-410-397-21	FERRITE 1.1UH	

KV-XJ29M31/XJ29M50/XJ29M60/
XJ29M80/XJ29M81
RM-952

V1 (KV-XJ29M31/XJ29M81)

VM1

REF NO.	PART NO.	DESCRIPTION	REMARK
FB804	1-414-223-11	INDUCTOR	470UH
FB805	1-410-397-21	FERRITE	1.1UH
<IC>			
IC801	8-759-476-87	SAA5261	
<CHIP CONDUCTOR>			
JR800	1-216-295-91	SHORT CHIP	0
JR801	1-216-295-91	SHORT CHIP	0
JR802	1-216-295-91	SHORT CHIP	0
JR804	1-216-295-91	SHORT CHIP	0
JR805	1-216-295-91	SHORT CHIP	0
<TRANSISTOR>			
Q801	8-729-120-28	2SC1623-L5L6	
Q803	8-729-120-28	2SC1623-L5L6	
Q805	8-729-120-28	2SC1623-L5L6	
Q806	8-729-120-28	2SC1623-L5L6	
Q807	8-729-120-28	2SC1623-L5L6	
Q808	8-729-120-28	2SC1623-L5L6	
Q810	8-729-120-28	2SC1623-L5L6	
Q811	8-729-019-01	2SD2394-EF	
Q817	8-729-421-22	UN2211	
<RESISTOR>			
R800	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R801	1-216-295-91	SHORT CHIP	0
R802	1-216-025-11	RES-CHIP	100 5% 1/10W
R803	1-216-295-91	SHORT CHIP	0
R804	1-216-295-91	SHORT CHIP	0
R805	1-216-295-91	SHORT CHIP	0
R807	1-216-295-91	SHORT CHIP	0
R813	1-216-295-91	SHORT CHIP	0
R820	1-216-073-91	RES-CHIP	10K 5% 1/10W
R821	1-216-083-00	RES-CHIP	27K 5% 1/10W
R822	1-216-025-11	RES-CHIP	100 5% 1/10W
R824	1-216-295-91	SHORT CHIP	0
R825	1-216-295-91	SHORT CHIP	0
R827	1-216-295-91	SHORT CHIP	0
R828	1-216-025-11	RES-CHIP	100 5% 1/10W
R829	1-216-025-11	RES-CHIP	100 5% 1/10W
R830	1-216-295-91	SHORT CHIP	0
R831	1-216-295-91	SHORT CHIP	0
R832	1-208-790-11	METAL CHIP	2.2K 0.5% 1/10W
R835	1-216-295-91	SHORT CHIP	0
R839	1-216-655-11	METAL CHIP	1.5K 0.5% 1/10W
R841	1-216-025-11	RES-CHIP	100 5% 1/10W
R842	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R843	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R844	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R845	1-216-049-11	RES-CHIP	1K 5% 1/10W
R846	1-216-049-11	RES-CHIP	1K 5% 1/10W
R847	1-216-049-11	RES-CHIP	1K 5% 1/10W
R848	1-216-049-11	RES-CHIP	1K 5% 1/10W
R849	1-216-049-11	RES-CHIP	1K 5% 1/10W
R850	1-216-105-91	RES-CHIP	220K 5% 1/10W
R851	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R853	1-216-067-00	RES-CHIP	5.6K 5% 1/10W

REF NO.	PART NO.	DESCRIPTION	REMARK
R857	1-216-077-91	RES-CHIP	15K 5% 1/10W
R861	1-216-049-11	RES-CHIP	1K 5% 1/10W
R862	1-260-095-11	CARBON	470 5% 1/2W
R863	1-216-049-11	RES-CHIP	1K 5% 1/10W
R864	1-216-041-00	RES-CHIP	470 5% 1/10W
R866	1-215-880-00	METAL OXIDE	10 5% 2W
R871	1-216-037-00	RES-CHIP	330 5% 1/10W
R879	1-216-073-91	RES-CHIP	10K 5% 1/10W
R880	1-216-041-00	RES-CHIP	470 5% 1/10W
R882	1-216-049-11	RES-CHIP	1K 5% 1/10W
R884	1-216-025-11	RES-CHIP	100 5% 1/10W
<CRYSTAL>			
X801	1-578-774-11	VIBRATOR, CRYSTAL	

	* A-1400-168-A	VM1 BOARD MOUNTED (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)	
	* A-1400-765-A	VM1 BOARD MOUNTED (KV-XJ29M50/M60(THAILAND))	
	* A-1400-648-A	VM1 BOARD MOUNTED (KV-XJ29M50/M80(INDIA))	

	4-382-854-11	SCREW (M3X10), P, SW (+)	
<CAPACITOR>			
C5902	1-104-661-91	ELECT	330UF 20.00% 16V
C5903	1-161-830-00	CERAMIC	0.0047UF 500V
C5905	1-126-935-11	ELECT	470UF 20.00% 10V
C5906	1-130-491-00	MYLAR	0.047UF 5.00% 50V
C5907	1-107-638-11	ELECT	33UF 20.00% 160V
C5908	1-106-383-00	MYLAR	0.047UF 10.00% 200V
C5909	1-126-933-11	ELECT	100UF 20.00% 16V
C5910	1-130-471-00	MYLAR	0.001UF 5.00% 50V
C5911	1-107-949-11	ELECT	2.2UF 20.00% 160V
C5912	1-104-999-11	MYLAR	0.1UF 10.00% 200V
C5913	1-130-471-00	MYLAR	0.001UF 5.00% 50V
C5914	1-126-933-11	ELECT	100UF 20.00% 16V
C5916	1-130-491-00	MYLAR	0.047UF 5.00% 50V
C5917	1-126-935-11	ELECT	470UF 20.00% 10V
C5918	1-115-341-51	CERAMIC	120PF 10.00% 500V
C5920	1-126-964-11	ELECT	10UF 20.00% 50V
C5921	1-102-852-91	CERAMIC	47PF 5.00% 50V
<CONNECTOR>			
CN2801	* 1-564-506-11	PLUG, CONNECTOR 3P	
CN5901	* 1-564-510-11	PLUG, CONNECTOR 7P	
CN5904	* 1-770-723-11	CONNECTOR, BOARD TO BOARD 8P	
<DIODE>			
D5901	8-719-911-19	1SS119-25	
D5902	8-719-110-86	RD39ES-B	
D5903	8-719-911-19	1SS119-25	
D5904	8-719-110-86	RD39ES-B	
D5905	8-719-911-19	1SS119-25	



REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
D5906	1-249-406-11	CARBON	120	5%	1/4W		
D5907	1-249-406-11	CARBON	120	5%	1/4W		
		<COIL>					
L5901	1-414-187-11	INDUCTOR	47UH			3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)
L5902	1-414-856-11	INDUCTOR	10UH			* 4-029-168-01	BAG, PROTECTION (KV-XJ29M31/XJ29M81/XJ29M80(E/ME))
		<TRANSISTOR>				* 4-054-764-01	BAG, PROTECTION (KV-XJ29M50/M60(THAILAND))
Q5901	8-729-230-45	2SC2458-YGR (Except KV-XJ29M50/M60(THAILAND))				* 4-065-594-01	BAG, PROTECTION (KV-XJ29M50/M80(INDIA))
Q5901	8-729-119-78	2SC2785-HFE (KV-XJ29M50/M60(THAILAND))				* 4-054-319-01	TRAY (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)
Q5902	8-729-809-26	2SA1606-E				* 4-057-329-01	TRAY (KV-XJ29M50/M60(THAILAND))
Q5903	8-729-230-45	2SC2458-YGR (Except KV-XJ29M50/M60(THAILAND))				4-065-210-01	JOINT
Q5903	8-729-119-78	2SC2785-HFE (KV-XJ29M50/M60(THAILAND))				* 4-071-224-01	CUSHION (LOWER)(ASSY) (KV-XJ29M31/XJ29M80 (E/ME)/XJ29M81)
Q5904	8-729-026-39	2SA933AS-QT (KV-XJ29M50/M60(THAILAND))				* 4-073-486-01	CUSHION(LOWER)(ASSY) (KV-XJ29M50/M60(THAILAND))
Q5904	8-729-119-76	2SA1175-HFE (Except KV-XJ29M50/M60(THAILAND))				* 4-088-158-01	CUSHION (LOWER)(ASSY) (KV-XJ29M50/M80(INDIA))
Q5905	8-729-230-45	2SC2458-YGR (Except KV-XJ29M50/M60(THAILAND))				* 4-071-225-02	CUSHION (UPPER)(ASSY) (KV-XJ29M31/XJ29M80 (E/ME)/XJ29M81)
Q5905	8-729-119-78	2SC2785-HFE (KV-XJ29M50/M60(THAILAND))				* 4-073-485-02	CUSHION(UPPER)(ASSY) (KV-XJ29M50/M60(THAILAND))
Q5906	8-729-809-29	2SC4159-E				* 4-088-155-01	CUSHION (UPPER)(ASSY) (KV-XJ29M50/M80(INDIA))
Q5908	8-729-119-78	2SC2785-HFE				* 4-072-935-01	INDIVIDUAL CARTON (KV-XJ29M31/XJ29M80 (E/ME)/XJ29M81)
Q5909	8-729-119-78	2SC2785-HFE				* 4-073-166-01	INDIVIDUAL CARTON (KV-XJ29M50/M60(THAILAND))
		<RESISTOR>				* 4-088-153-01	INDIVIDUAL CARTON (KV-XJ29M50/M80(INDIA))
R5901	1-249-409-11	CARBON	220	5%	1/4W	4-088-619-11	MANUAL, INSTRUCTION (KV-XJ29M31)
R5902	1-249-414-11	CARBON	560	5%	1/4W	4-088-514-11	MANUAL, INSTRUCTION (KV-XJ29M50/M60(THAILAND))
R5903	1-247-734-11	CARBON	39	5%	1/2W	4-088-152-11	MANUAL, INSTRUCTION (KV-XJ29M50/M80(INDIA))
R5904	1-249-411-11	CARBON	330	5%	1/4W	4-086-152-12	MANUAL, INSTRUCTION (KV-XJ29M80(E))
R5905	1-249-417-11	CARBON	1K	5%	1/4W	4-088-651-11	MANUAL, INSTRUCTION (KV-XJ29M80(ME)/XJ29M81)
R5906	1-249-417-11	CARBON	1K	5%	1/4W	4-392-003-11	BAND, HOLD (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)
R5907	1-249-417-11	CARBON	1K	5%	1/4W	4-392-003-31	BAND, HOLD (KV-XJ29M50/M80(INDIA))
R5908	1-249-383-11	CARBON	1.5	5%	1/4W	4-392-003-21	BAND, HOLDING (KV-XJ29M50/M60(THAILAND))
R5909	1-249-409-11	CARBON	220	5%	1/4W	4-392-004-11	CLIP (KV-XJ29M31/XJ29M80(E/ME)/XJ29M81)
R5910	1-249-403-11	CARBON	68	5%	1/4W	4-059-705-01	CLIP (KV-XJ29M50/M60(THAILAND))
R5911	1-249-439-11	CARBON	68K	5%	1/4W	4-392-004-21	CLIP (KV-XJ29M50/M80(INDIA))
R5912	1-249-437-11	CARBON	47K	5%	1/4W		
R5914	1-249-403-11	CARBON	68	5%	1/4W		
R5915	1-249-429-11	CARBON	10K	5%	1/4W		
R5916	1-249-419-11	CARBON	1.5K	5%	1/4W		
R5917	1-249-416-11	CARBON	820	5%	1/4W		
R5918	1-249-429-11	CARBON	10K	5%	1/4W		
R5919	1-249-417-11	CARBON	1K	5%	1/4W		
R5920	1-249-439-11	CARBON	68K	5%	1/4W		
R5921	1-216-476-11	METAL OXIDE	180	5%	3W		
R5922	1-249-414-11	CARBON	560	5%	1/4W		
R5923	1-249-383-11	CARBON	1.5	5%	1/4W		
R5925	1-249-400-11	CARBON	39	5%	1/4W		
R5929	1-215-880-00	METAL OXIDE	10	5%	2W		
R5930	1-249-413-11	CARBON	470	5%	1/4W		
R5931	1-249-413-11	CARBON	470	5%	1/4W	1-418-163-61	REMOTE COMMANDER (RM-952)
R5932	1-249-413-11	CARBON	470	5%	1/4W	9-939-697-01	BATTERY COVER REMOTE COMMANDER
R5933	1-249-413-11	CARBON	470	5%	1/4W		
R5934	1-249-430-11	CARBON	12K	5%	1/4W		
R5935	1-249-429-11	CARBON	10K	5%	1/4W		

