


TOSHIBA

FILE NO. 050-200402

SERVICE MANUAL

COLOR TELEVISION

24AF44

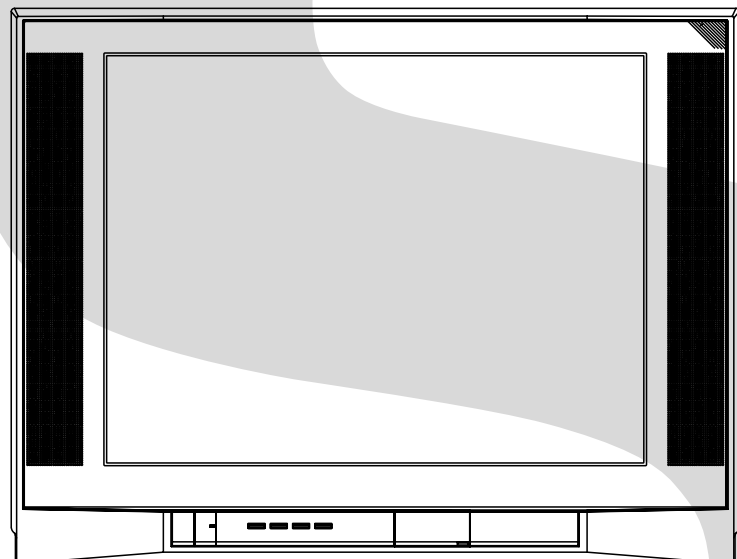

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

TABLE OF CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
TABLE OF CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-5
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF ANODE CAP	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C1-1
CONFIRMATION OF HOURS USED	C1-1
WHEN REPLACING EEPROM (MEMORY) IC	C1-1
ELECTRICAL ADJUSTMENTS	D-1~D-5
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN	F-1~F-4
CRT/VM COIL	F-5
SCHEMATIC DIAGRAMS	
MICON	G-1, G-2
CHROMA	G-3, G-4
DEFLECTION	G-5, G-6
POWER	G-7, G-8
SOUND	G-9, G-10
TUNER/STEREO	G-11, G-12
AV	G-13, G-14
COMB/FILTER	G-15, G-16
CRT/SVM	G-17, G-18
WAVEFORMS	H-1, H-2
MECHANICAL EXPLODED VIEWS	I-1, 1-2
MECHANICAL REPLACEMENT PARTS LIST	J1-1, J1-2
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~J2-5

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	24 inch / 600mmV	
			CRT Type	Flat	
			Deflection	101 degree	
			Magnetic Field BV/BH	+0.45G/0.18G	
			Color System	NTSC	
			Speaker	2 Speaker	
				Position	Front Side
				Size	2 x 4.7 Inch
				Impedance	8 ohm
			Sound Output	MAX	5.0+5.0 W
		10%(Typical)	4.0+4.0 W		
		NTSC3.58+4.43 /PAL60Hz	No		
G-2	Tuning System	Broadcasting System		US System M	
		Tuner and Receive CH	System	1Tuner	
			Destination	USA(W/ CATV)	
			Tuning System	F-Synth	
			Input Impedance	VHF/UHF 75 ohm	
				CH Coverage	2 - 69, 4A, A-5 - A-1, A - 1, J - W, W+1 - W+84
			Intermediate Frequency	Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.50MHz
			Preset CH		No
	Stereo/Dual TV Sound		Yes		
	Tuner Sound Muting		Yes		
G-3	Power	Power Source	AC	120V AC 60Hz	
			DC		
		Power Consumption		at AC	
			Stand by (at AC)		125 W at AC 120 V 60 Hz
			Per Year		3 W at AC 120 V 60 Hz
			-- kWh/Year		
	Protector	Power Fuse	Yes		
		Safety Circuit	Yes		
		IC Protector(Micro Fuse)	No		
G-4	Regulation	Safety		UL/CSA	
		Radiation		FCC/IC	
		X-Radiation		DHHS/HWC	
G-5	Temperature	Operation		+5oC ~ +40oC	
		Storage		-20oC ~ +60oC	
G-6	Operating Humidity			Less than 80% RH	

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Menu Type	Yes		
			Icon	Yes		
			Picture	Yes		
			Contrast	Yes		
			Brightness	Yes		
			Color	Yes		
			Tint	Yes		
			Sharpness	Yes		
			Sound	Yes		
			Bass	Yes		
			Treble	Yes		
			Balance	Yes		
			BBE On/Off	Yes		
			Stable Sound On/Off	Yes		
			Surround On/Off	Yes		
			Set Up	Yes		
			TV/CATV	Yes		
			Auto CH Memory	Yes		
			Add/ Delete	Yes		
			Option	Yes		
			Language	Yes		
			CH Label	Yes		
			Favorite CH	Yes		
			V-Chip	Yes		
			Lock	Yes		
			On/Off Timer	Yes		
			Color Stream DVD/DTV	Yes		
			Control Level	Yes		
			Volume	Yes		
			Brightness	Yes		
			Contrast	Yes		
Color	Yes					
Tint	Yes					
Sharpness	Yes					
Tuning	No					
Bass	Yes					
Treble	Yes					
Balance	Yes					
Back Light	No					
Stereo,Audio Output,SAP	Yes					
Video	Yes					
Color Stream	Yes					
Channel(TV/Cable)	Yes					
CH Label	Yes					
Game Timer	Yes					
Sleep Timer	Yes					
Sound Mute	Yes					
V-chip Rating	Yes					
16: 9	Yes					
G-8	OSD Language		English	French	Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min		
			Step	10 Min		
		On/Off Timer	Program(On Timer / Off Timer)	Yes		
		Wake Up Timer			No	
		Timer Back-up (at Power Off Mode)	more than	--	Min Sec	

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GW	
		Glow in Dark Remocon	Yes	
		Format	Toshiba	
		Custom Code	TV:40-BF h	
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs
		Total Keys		50 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	Yes
			CH Up	Yes
			CH Down	Yes
			Volume Up	Yes
			Volume Down	Yes
			TV/Caption/Text	Yes
			CH1/CH2	Yes
			TV/Video(TV/AV)	Yes
			CH RTN/CH ENT(Quick View)	Yes
			Sleep	Yes
			RE Call(Call)	Yes
			Reset	Yes
			Menu/Enter	Yes
			Mute	Yes
			Exit	Yes
			MTS(Audio Select)	Yes
			Fav.Up	Yes
			Fav.Down	Yes
			16: 9	Yes
			Multi Brand Keys	
			CH Up(VCR)	Yes
			CH Down(VCR)	Yes
			Pause/Still	Yes
			TV/VCR(VCR)	Yes
			FF	Yes
			Rew	Yes
			Rec	Yes
			Play	Yes
			Stop	Yes
			TV	Yes
			VCR	Yes
			Cable	Yes
			DVD	Yes
			CODE	Yes
			Volume Up(DVD)	Yes
			Volume Down(DVD)	Yes
			DVD CLEAR	Yes
			TOP MENU	Yes
			DVD MENU	Yes
			DISPLAY	Yes

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA, Toshiba Type
		BBE	Yes
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	Yes
		Full OSD	No
		Premiere	No
		Comb Filter	Yes 3 Lines
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
		G-12	Accessories
Remote Control Unit	English / French Yes		
Rod Antenna	No		
Poles Terminal			
Loop Antenna	No		
Terminal	-		
U/V Mixer	No		
DC Car Cord (Center+)	No		
Guarantee Card	No		
Warning Sheet	No		
Circuit Diagram	No		
Antenna Change Plug	No		
Service Station List	No		
Important Safety Instruction	No		
Dew/AHC Caution Sheet	No		
AC Plug Adapter	No		
Quick Set-up Sheet	No		
Battery	Yes UM-4 x 2		
UM size x pcs OEM Brand	No		
AC Cord	No		
AV Cord (2Pin-1Pin)	No		
Registration Card (NDL Card)	Yes		
PTB Sheet	No		
ESP Card	Yes		
300 ohm to 75 ohm Antenna Adapter	No		

GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
		Indicator	Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO3	RCA
				Audio Input = VIDEO3	RCA x 2
				Other Terminal	Head Phone
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	RCA
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2
				Euro Scart	No
				Color Stream	RCA x 3
S Input	Yes				
Diversity	No				
Ext Speaker	No				
DC Jack 12V(Center +)	No				
VHF/UHF Antenna Input	F Type				
AC Outlet	No				
G-14	Set Size	Approx. W x D x H (mm)		670 x 471.5 x 509	
G-15	Weight	Net (Approx.)		33 kg (72.8 lbs)	
		Gross (Approx.)		36.5 kg (80.5 lbs)	
G-16	Carton	Master Carton		No	
			Content	--- Sets	
			Material	-- /--	
			Dimensions W x D x H(mm)	-- x -- x --	
			Description of Origin	No	
		Gift Box		Yes	
			Material	Double/Brown	
			Dimensions W x D x H(mm)	760 x 589 x 614	
			Design	As per Buyer's	
			Description of Origin	Yes	
		Drop Test		Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces	
Height (cm)	60 (ORION SPEC:31)				
Container Stuffing		180 Sets/40' container			
G-17	Cabinet Material	Cabinet	Cabinet Front	PS 94V0 DECABROM	
			Cabinet Rear	PS 94V0 DECABROM	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-18	Environment	Pb Free	Lead-free Solder	No	
		Cd Free		No	

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

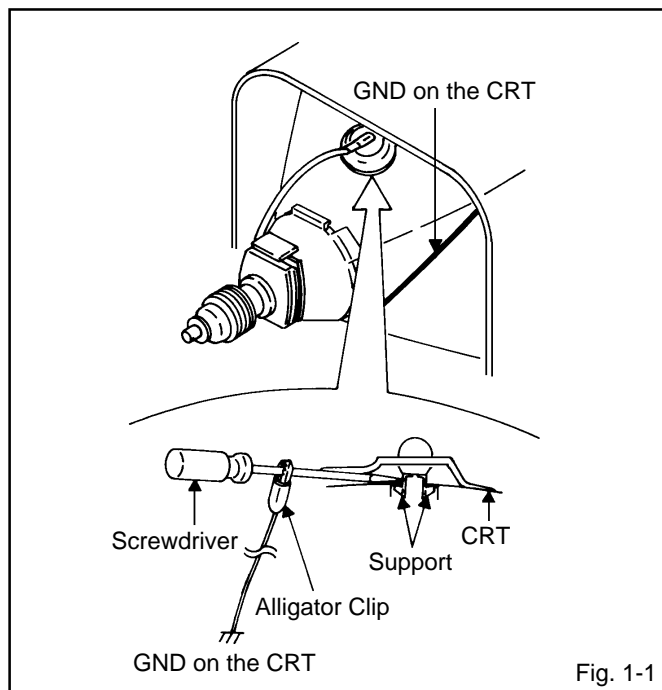


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

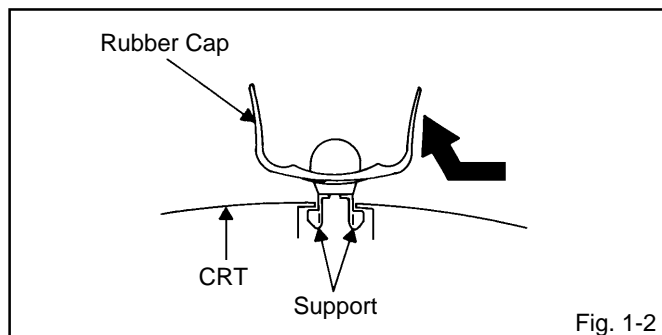


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

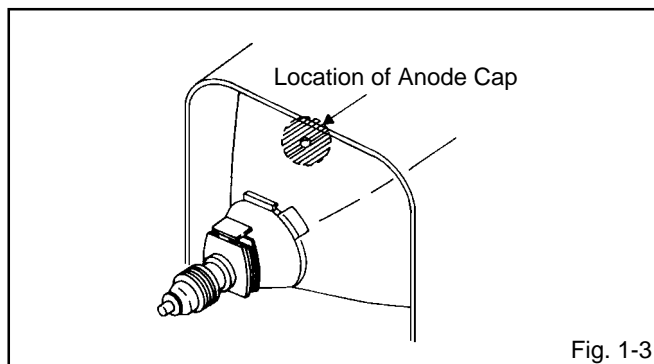


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

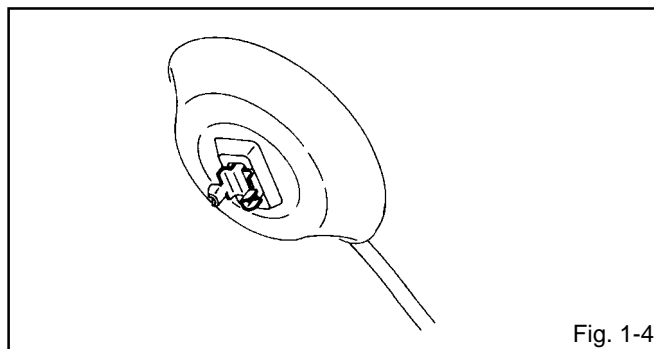


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

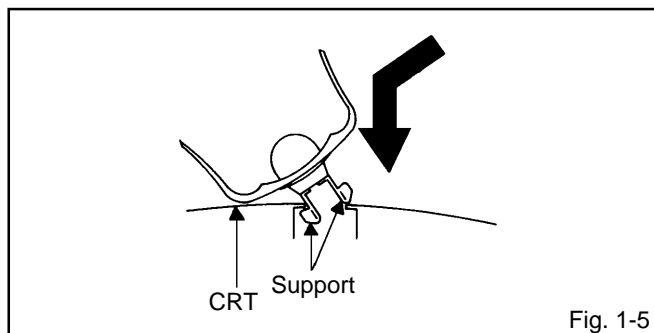


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

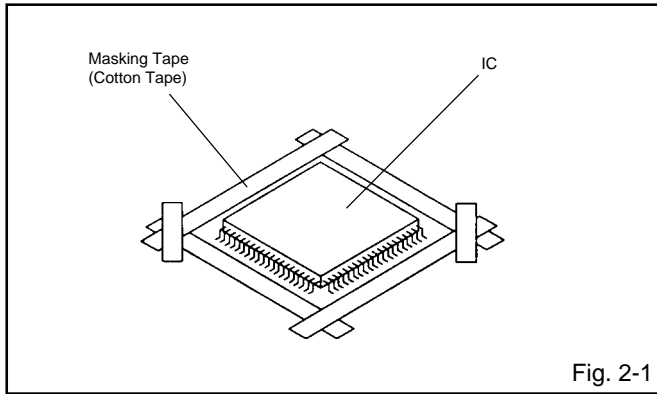

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

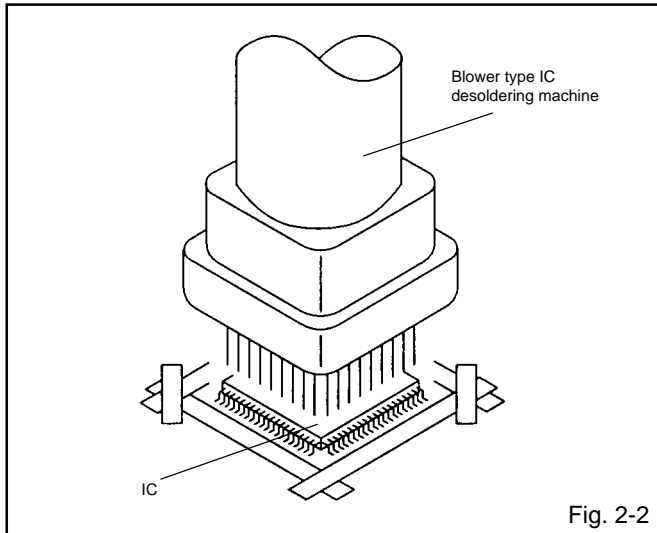

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

NOTE

Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

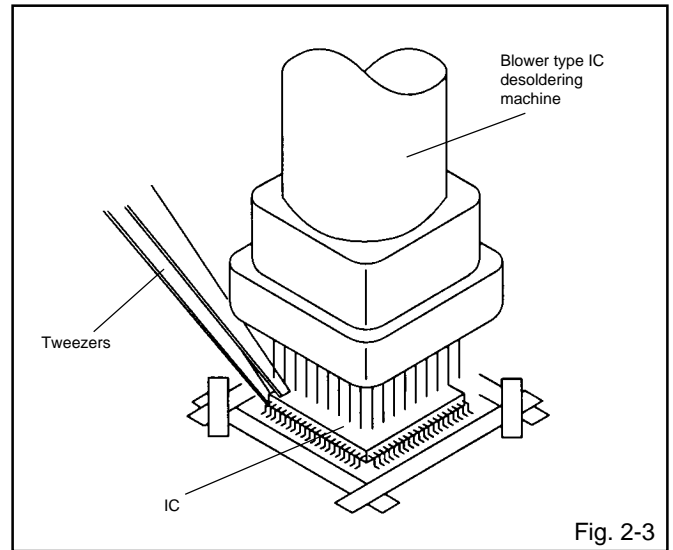


4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

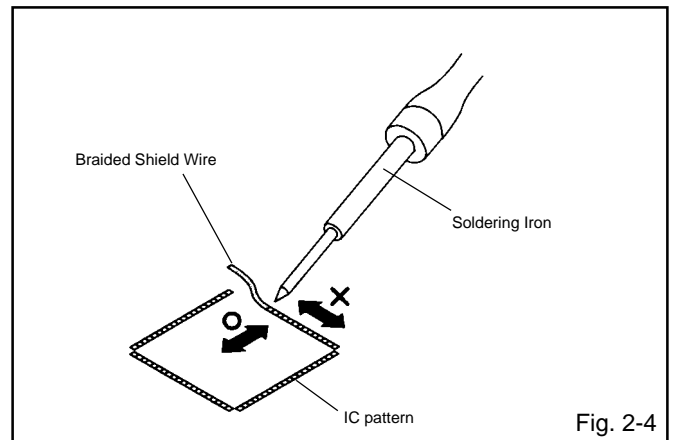


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

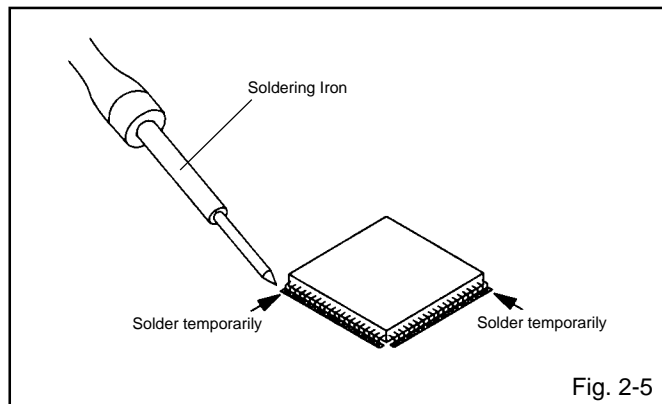


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

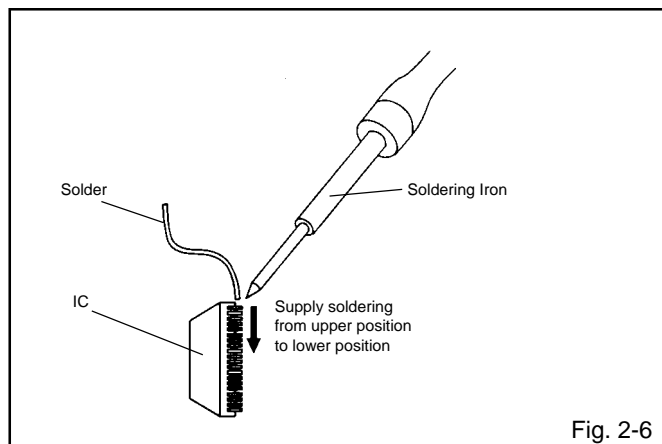


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

NOTE

Do not absorb the solder to excess.

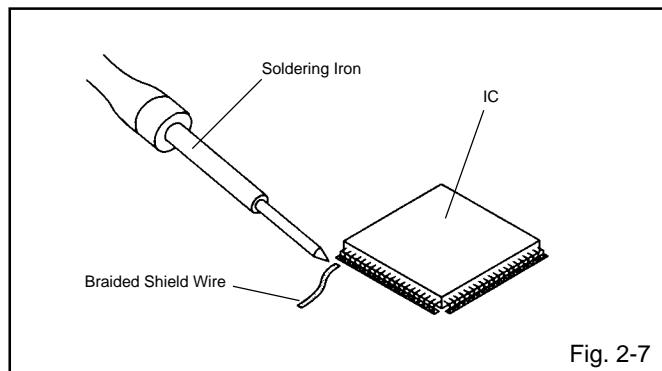

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

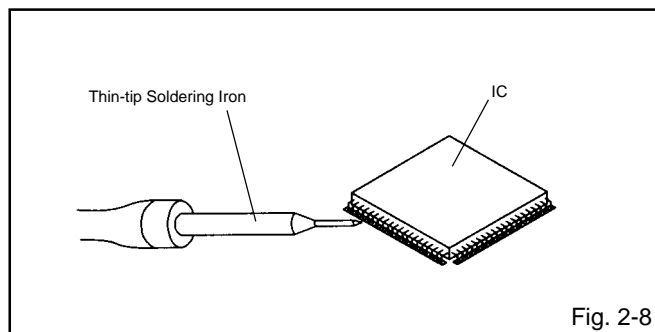

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 1 second.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

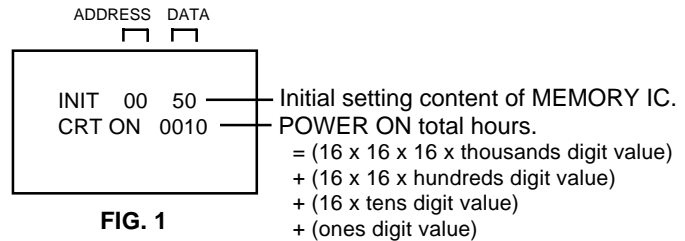

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 1F due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	E8	0A	44	5E	B3	24	B7	3D	AC	AA	04	40	40	40	7F
10	50	00	00	00	00	00	00	99	3F	0F	0D	E2	A4	88	43	00

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
 2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
 3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
 4. Press ENTER to select DATA. When DATA is selected, it will "blink".
 5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
 6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
 7. Repeat steps 3 to 6 until all data has been checked.
 8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
 9. Turn POWER on.
 10. Press both VOL. DOWN button on the set and Channel button (1) on the remote control for more than 1 second.
 11. After the finishing of the initializing of shipping, the unit will turn off automatically.
- The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in Fig. 1-1.

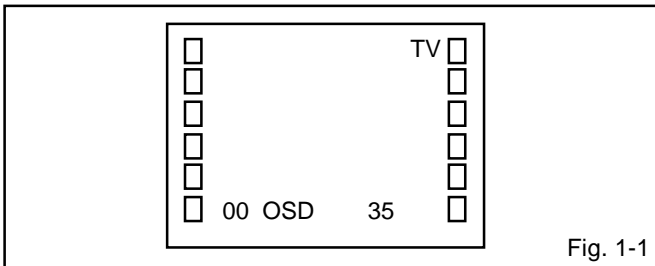


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	19	CONTRAST CENT
01	CUT OFF	20	CONTRAST MIN
02	H. VCO	21	COLOR MAX
03	H. PHASE	22	COLOR CENTER
04	AFC GAIN	23	COLOR MIN
05	V. SHIFT	24	TINT
06	H. SIZE	25	SHARPNESS
07	V. SIZE	26	CB DELAY FINE
08	V. LINEARITY	27	CR DELAY FINE
09	VS CORRECTION	28	CB PEDESTAL ADJ
10	R DRIVE	29	CR PEDESTAL ADJ
11	B DRIVE	30	E/W PARABOLA
12	R BIAS	31	E/W CORNER
13	G BIAS	32	E/W TRAPEZIUM
14	B BIAS	33	LEVEL
15	BRIGHT MAX	34	SEPARATION1
16	BRIGHT CENT	35	SEPARATION2
17	BRIGHT MIN	36	X-RAY
18	CONTRAST MAX	88	READ DATA

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Set condition is AV MODE without signal.
3. Connect the digital voltmeter to the TP003.
4. Adjust the VR502 until the digital voltmeter is $117 \pm 1V$.

2-2: CUT OFF

1. Adjust the unit to the following settings.
R DRIVE=64, B DRIVE=64, R CUT OFF=127,
G CUT OFF=127, B CUT OFF=127
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "CUT OFF".
4. Adjust the Screen Volume until a dim raster is obtained.

2-3: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (10) on the remote control to select "R DRIVE".
5. Press the CH. UP/DOWN button on the remote control to select the "R. BIAS", "G. BIAS", "B. BIAS", "B. DRIVE" or "R. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, B. DRIVE, and R. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

2-5: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (03) on the remote control to select "H. PHAS".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

ELECTRICAL ADJUSTMENTS

2-6: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "H. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes $11 \pm 1\%$.

2-7: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-8: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes $9 \pm 2\%$.

2-9: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-8. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V. LIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-10: LEVEL

1. Receive the monoscope pattern (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is $85 \pm 2\text{mV}$.

2-11: PARABOLA

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select "PARABOLA".
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

2-12: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select "TRAPEZIUM".
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

2-13: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch=Non input and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **Audio Out Jack (L-ch)**.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(35)** on the remote control to select "SEP 2".
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum.

ELECTRICAL ADJUSTMENTS

2-14: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 0% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "80".

2-15: TINT/COLOR CENT

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP806**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line **(Refer to Fig. 2-1)**
5. Connect the oscilloscope to **TP804**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $120 \pm 10\%$ of the white level. **(Refer to Fig. 2-2)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7.
10. Press the TV/VIDEO button on the remote control to set to the CS mode.
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

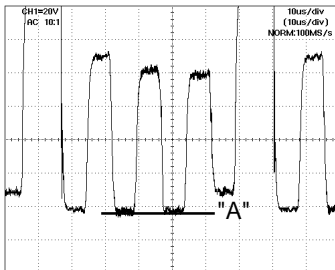


Fig. 2-1

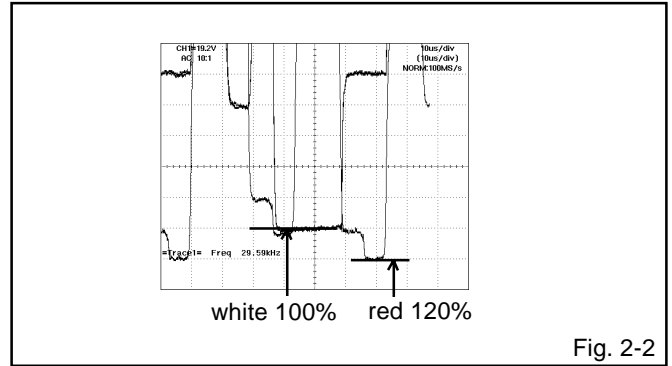


Fig. 2-2

2-16: CONTRAST MAX MANUAL

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "95".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 1~3.

2-17: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-3)**

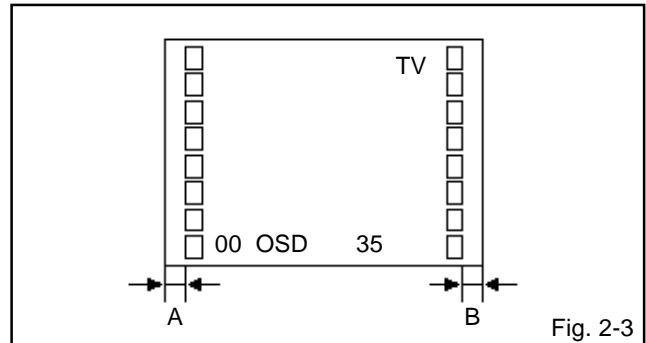


Fig. 2-3

2-18: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below. (RF/AV/CS)

NO.	FUNCTION	STEP NO.	NO.	FUNCTION	STEP NO.
02	H.VCO	03	20	CONT.MIN	15
04	AFC GAIN	04	21	COL.MAX	90
05	V.SHIFT	02	23	COL.MIN	00
09	VS.CORRECTION	38	25	SHARPNESS	40
15	BRI.MAX	160	26	CB DL	00
17	BRI.MIN	50	27	CR DL	00
19	CONT.CENT	64			

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

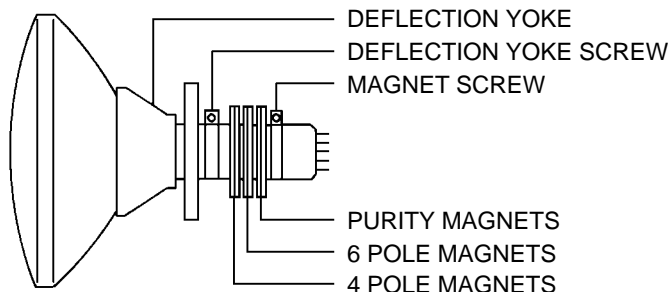


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


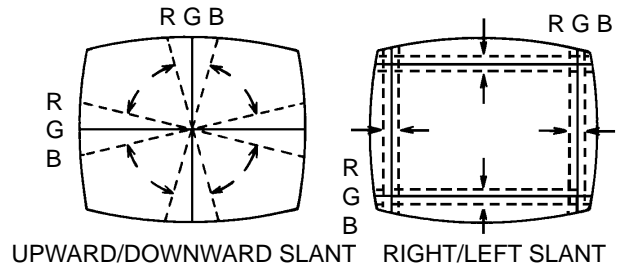


Fig. 3-2-a

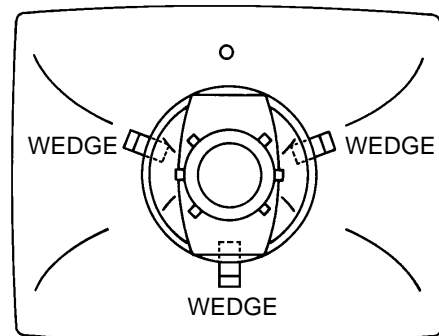


WEDGE POSITION


Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

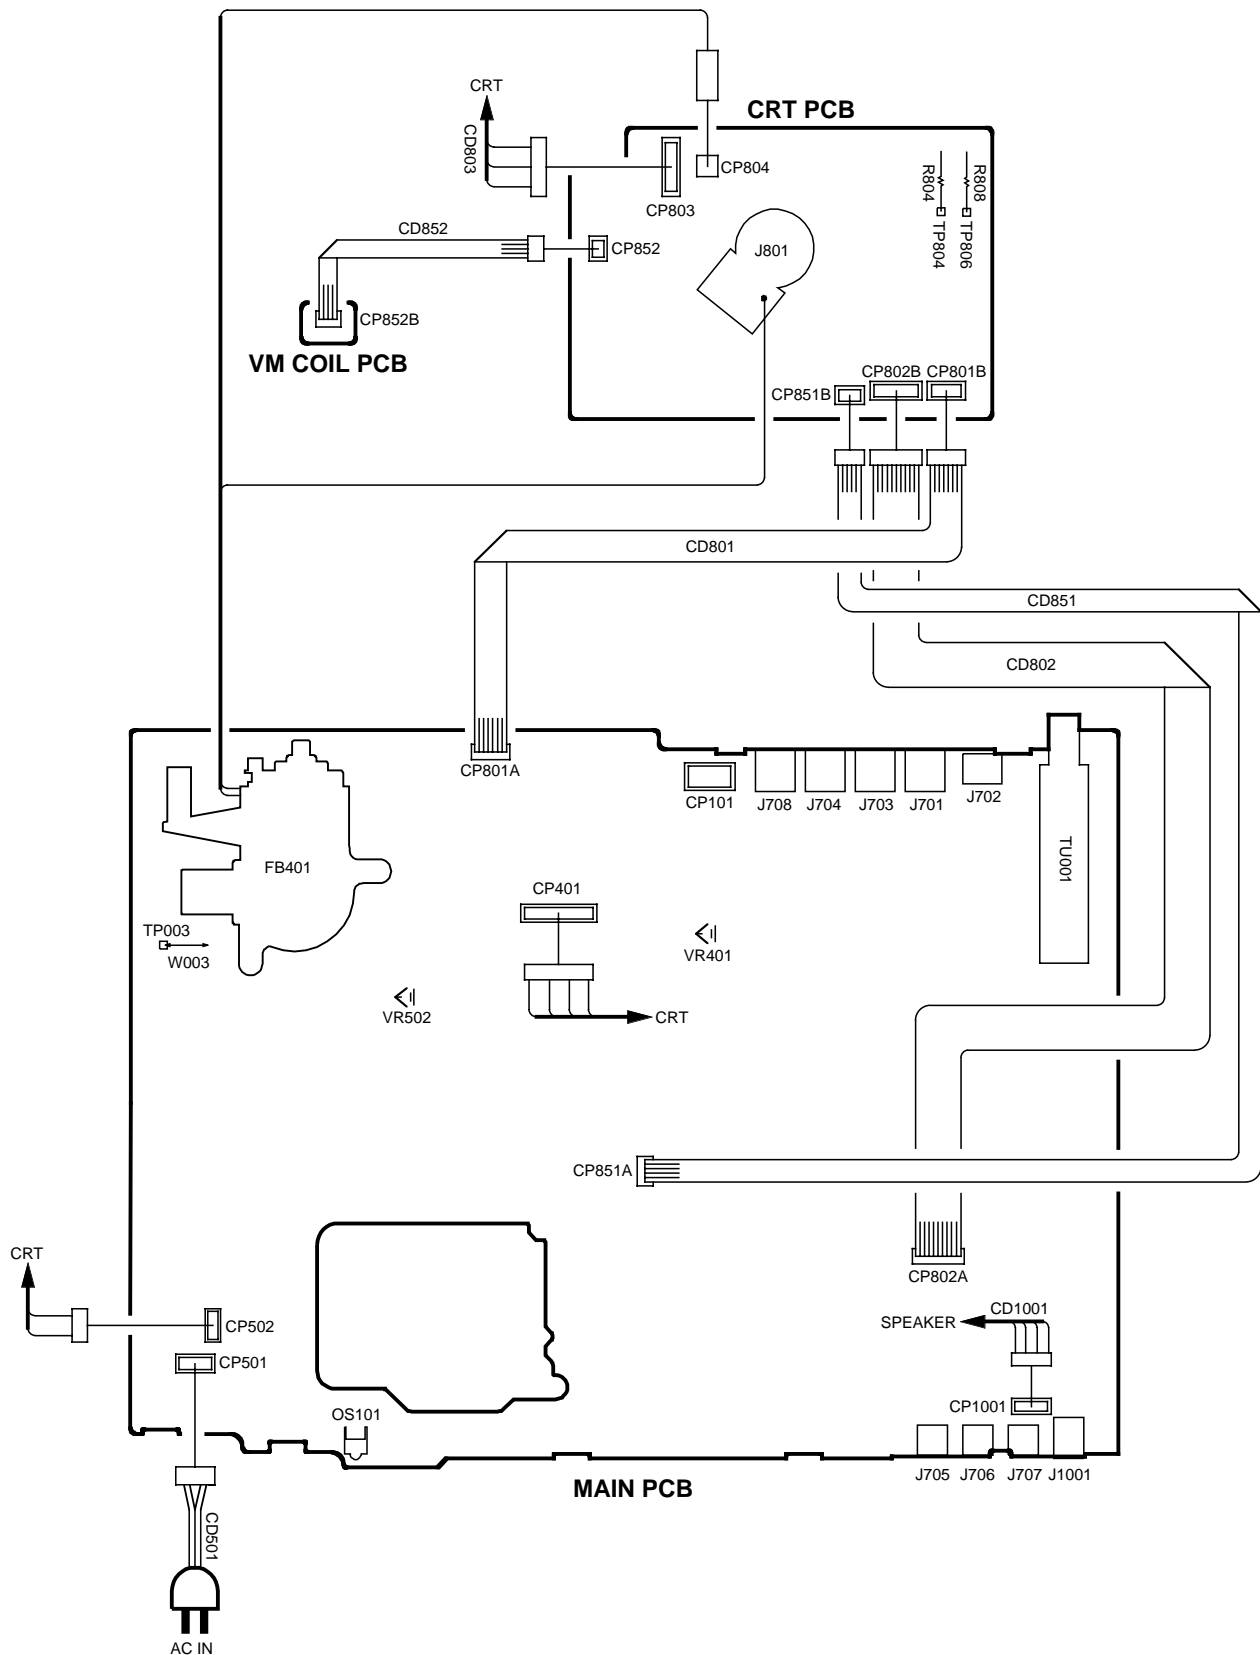


BLOCK DIAGRAM

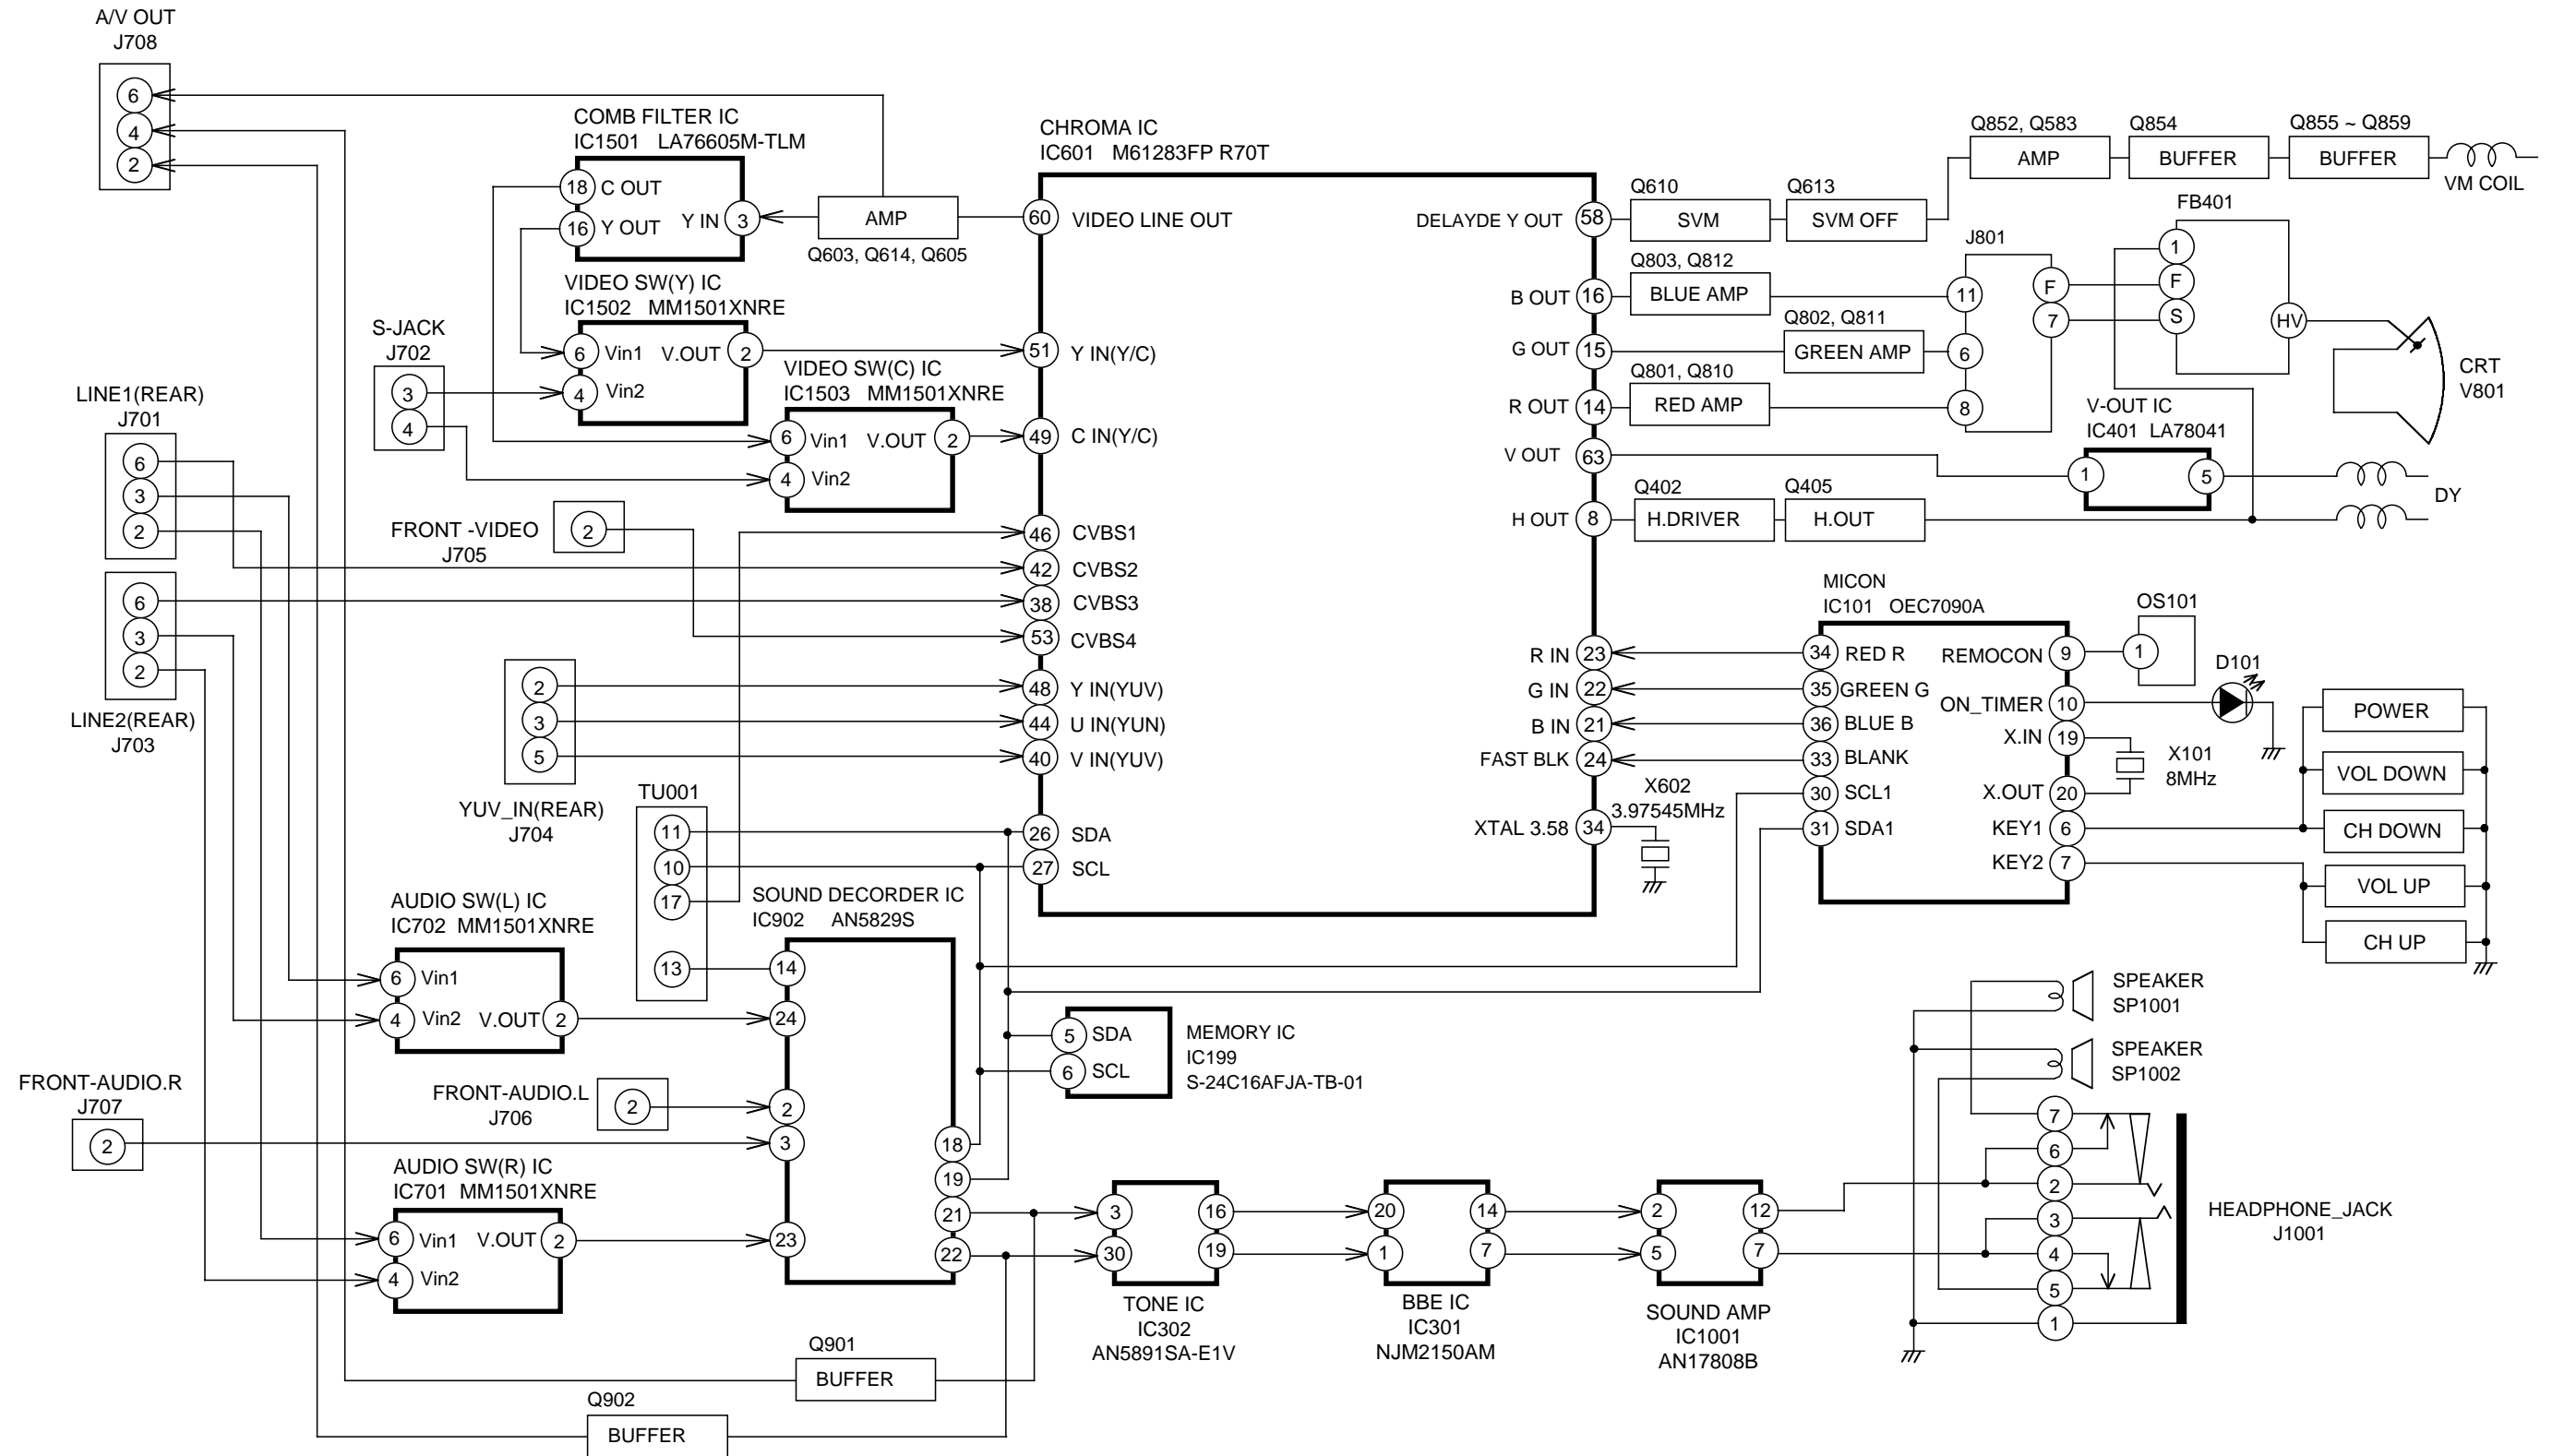

PRINTED CIRCUIT BOARDS CRT/VM COIL SOLDER SIDE

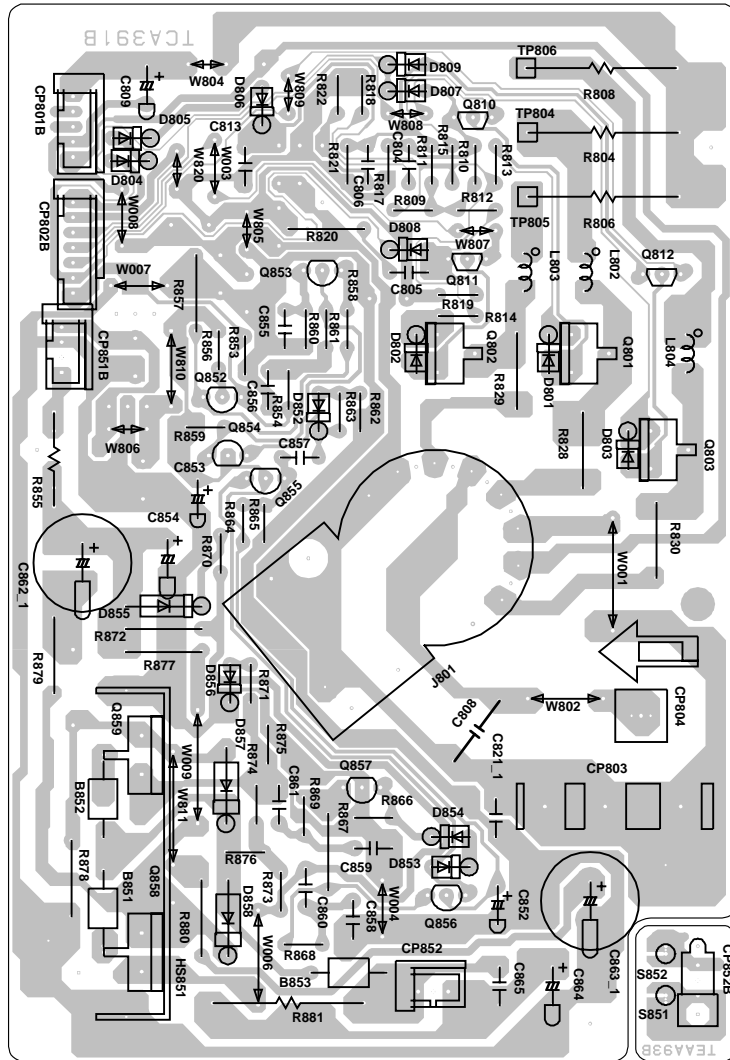


MICON SCHEMATIC DIAGRAM (MAIN PCB)

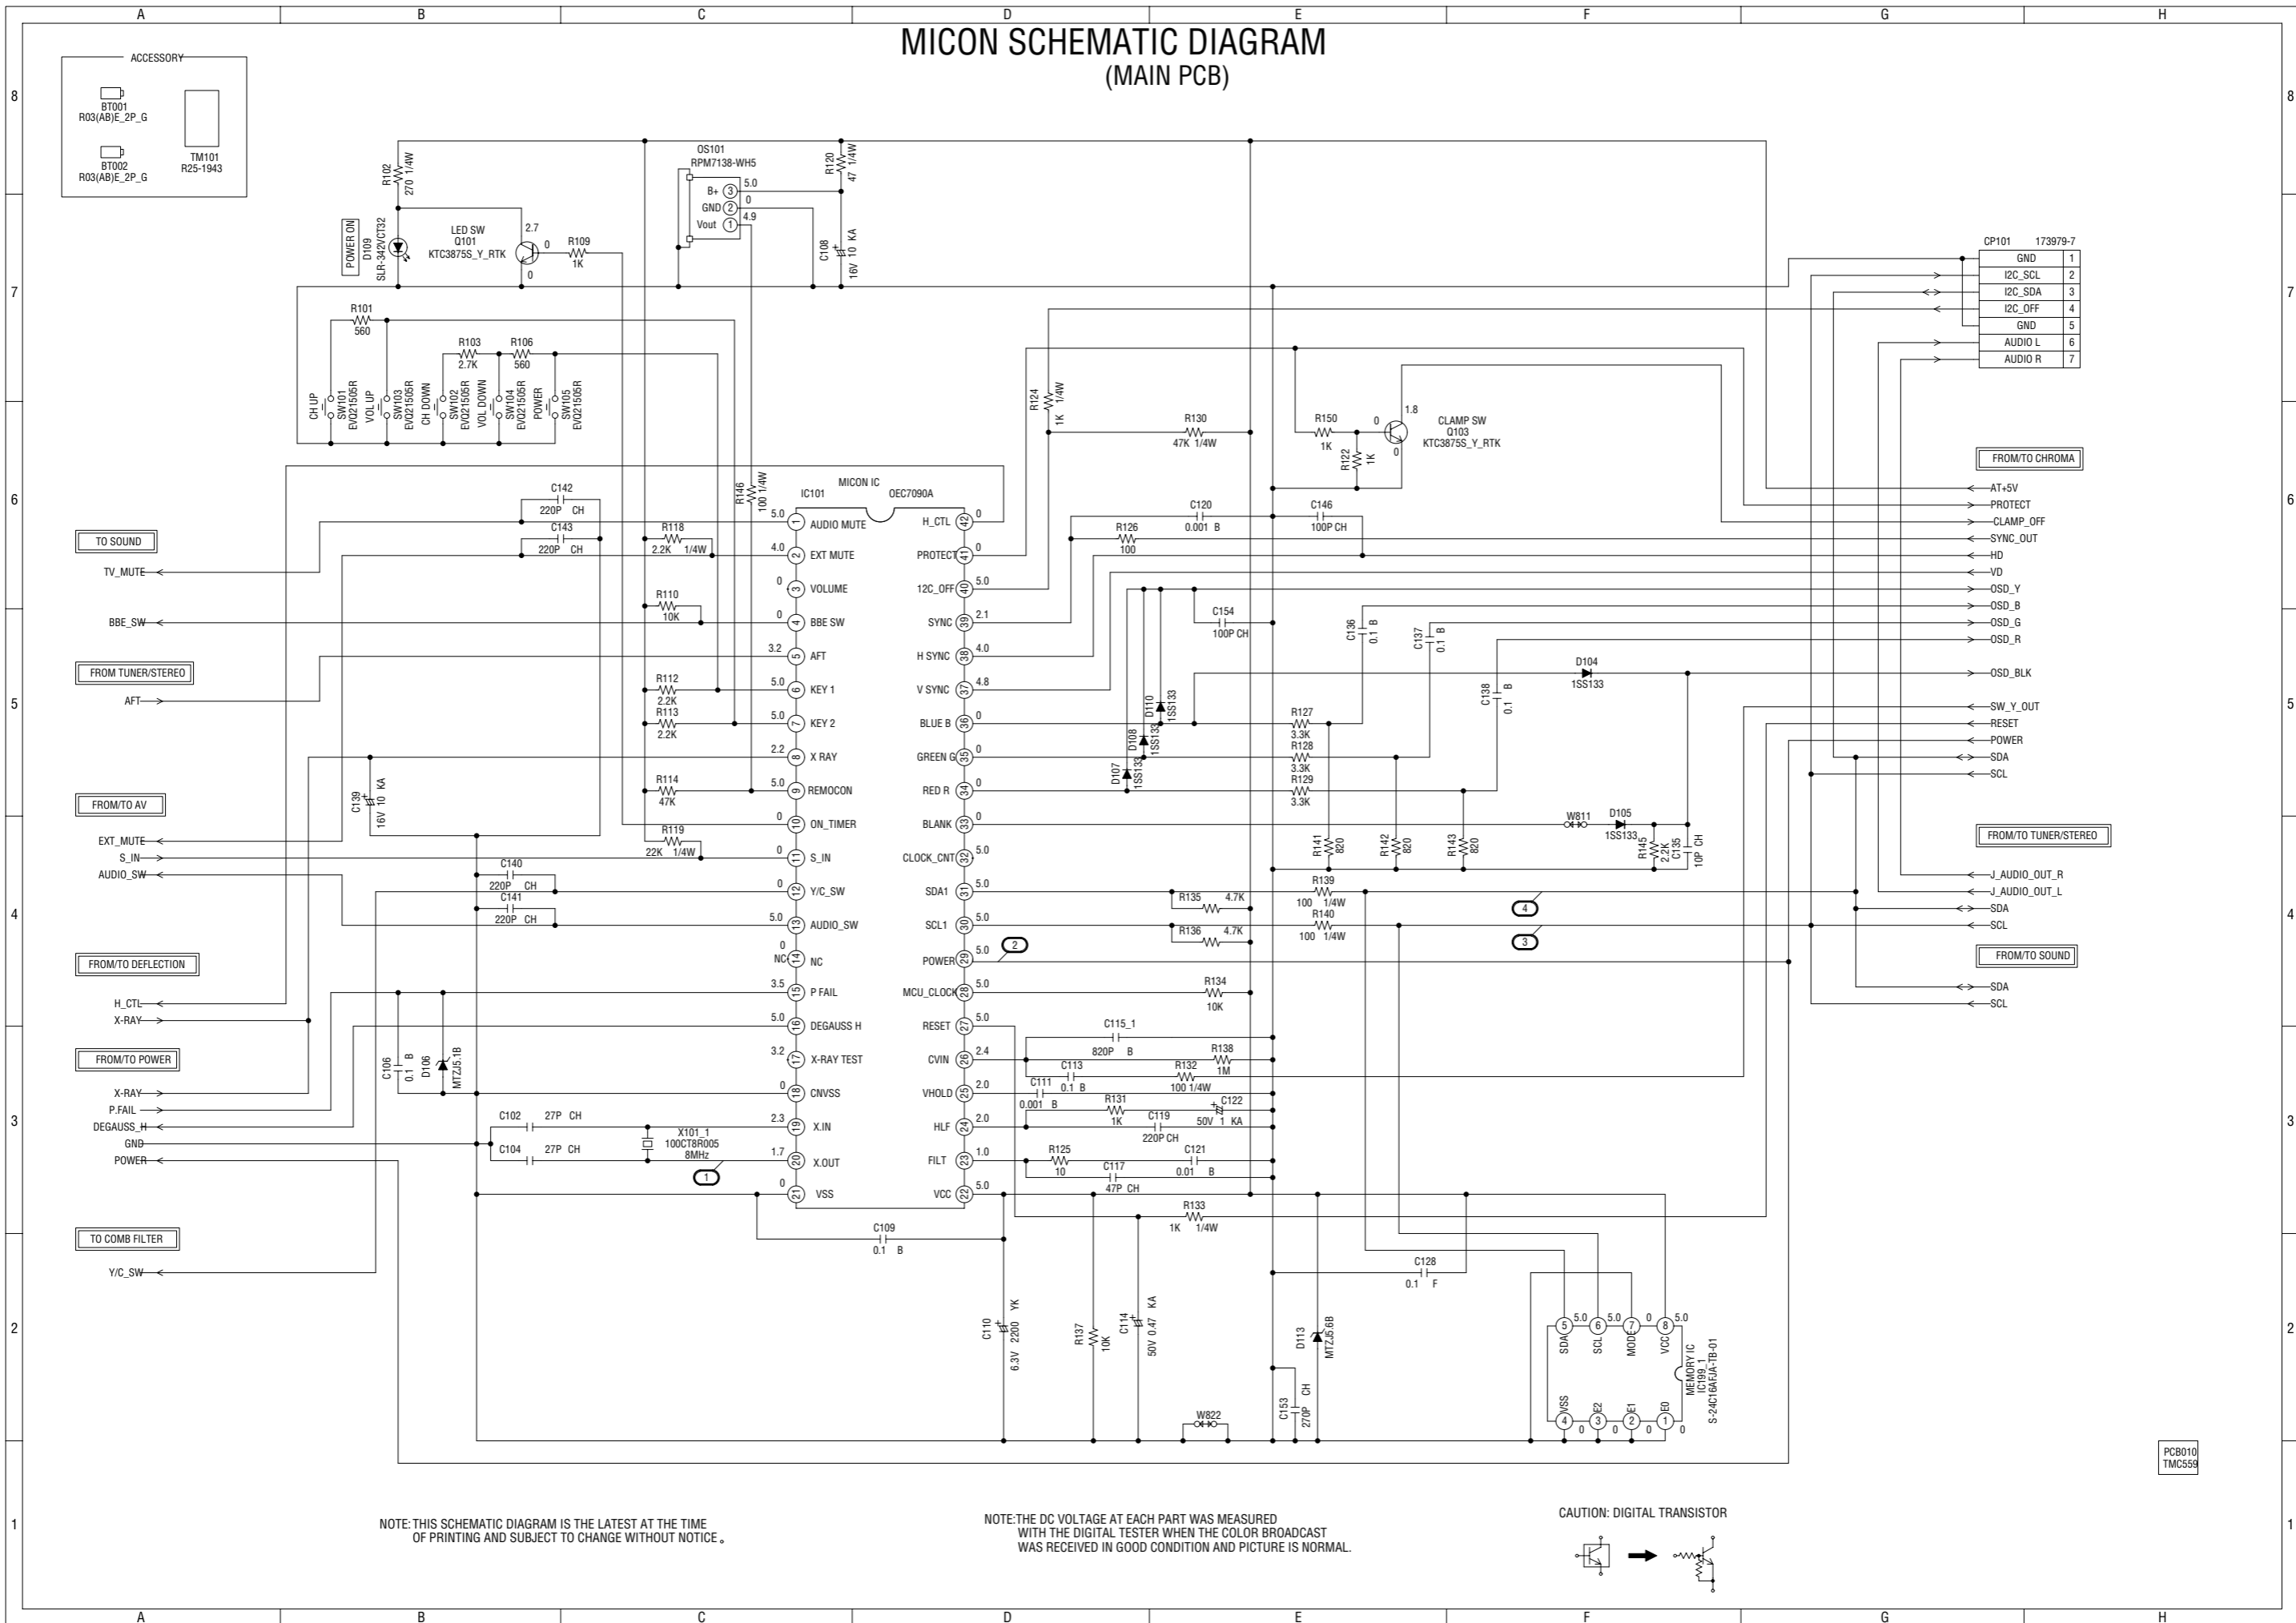

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR



PCB010
TMC558

CHROMA SCHEMATIC DIAGRAM (MAIN PCB)

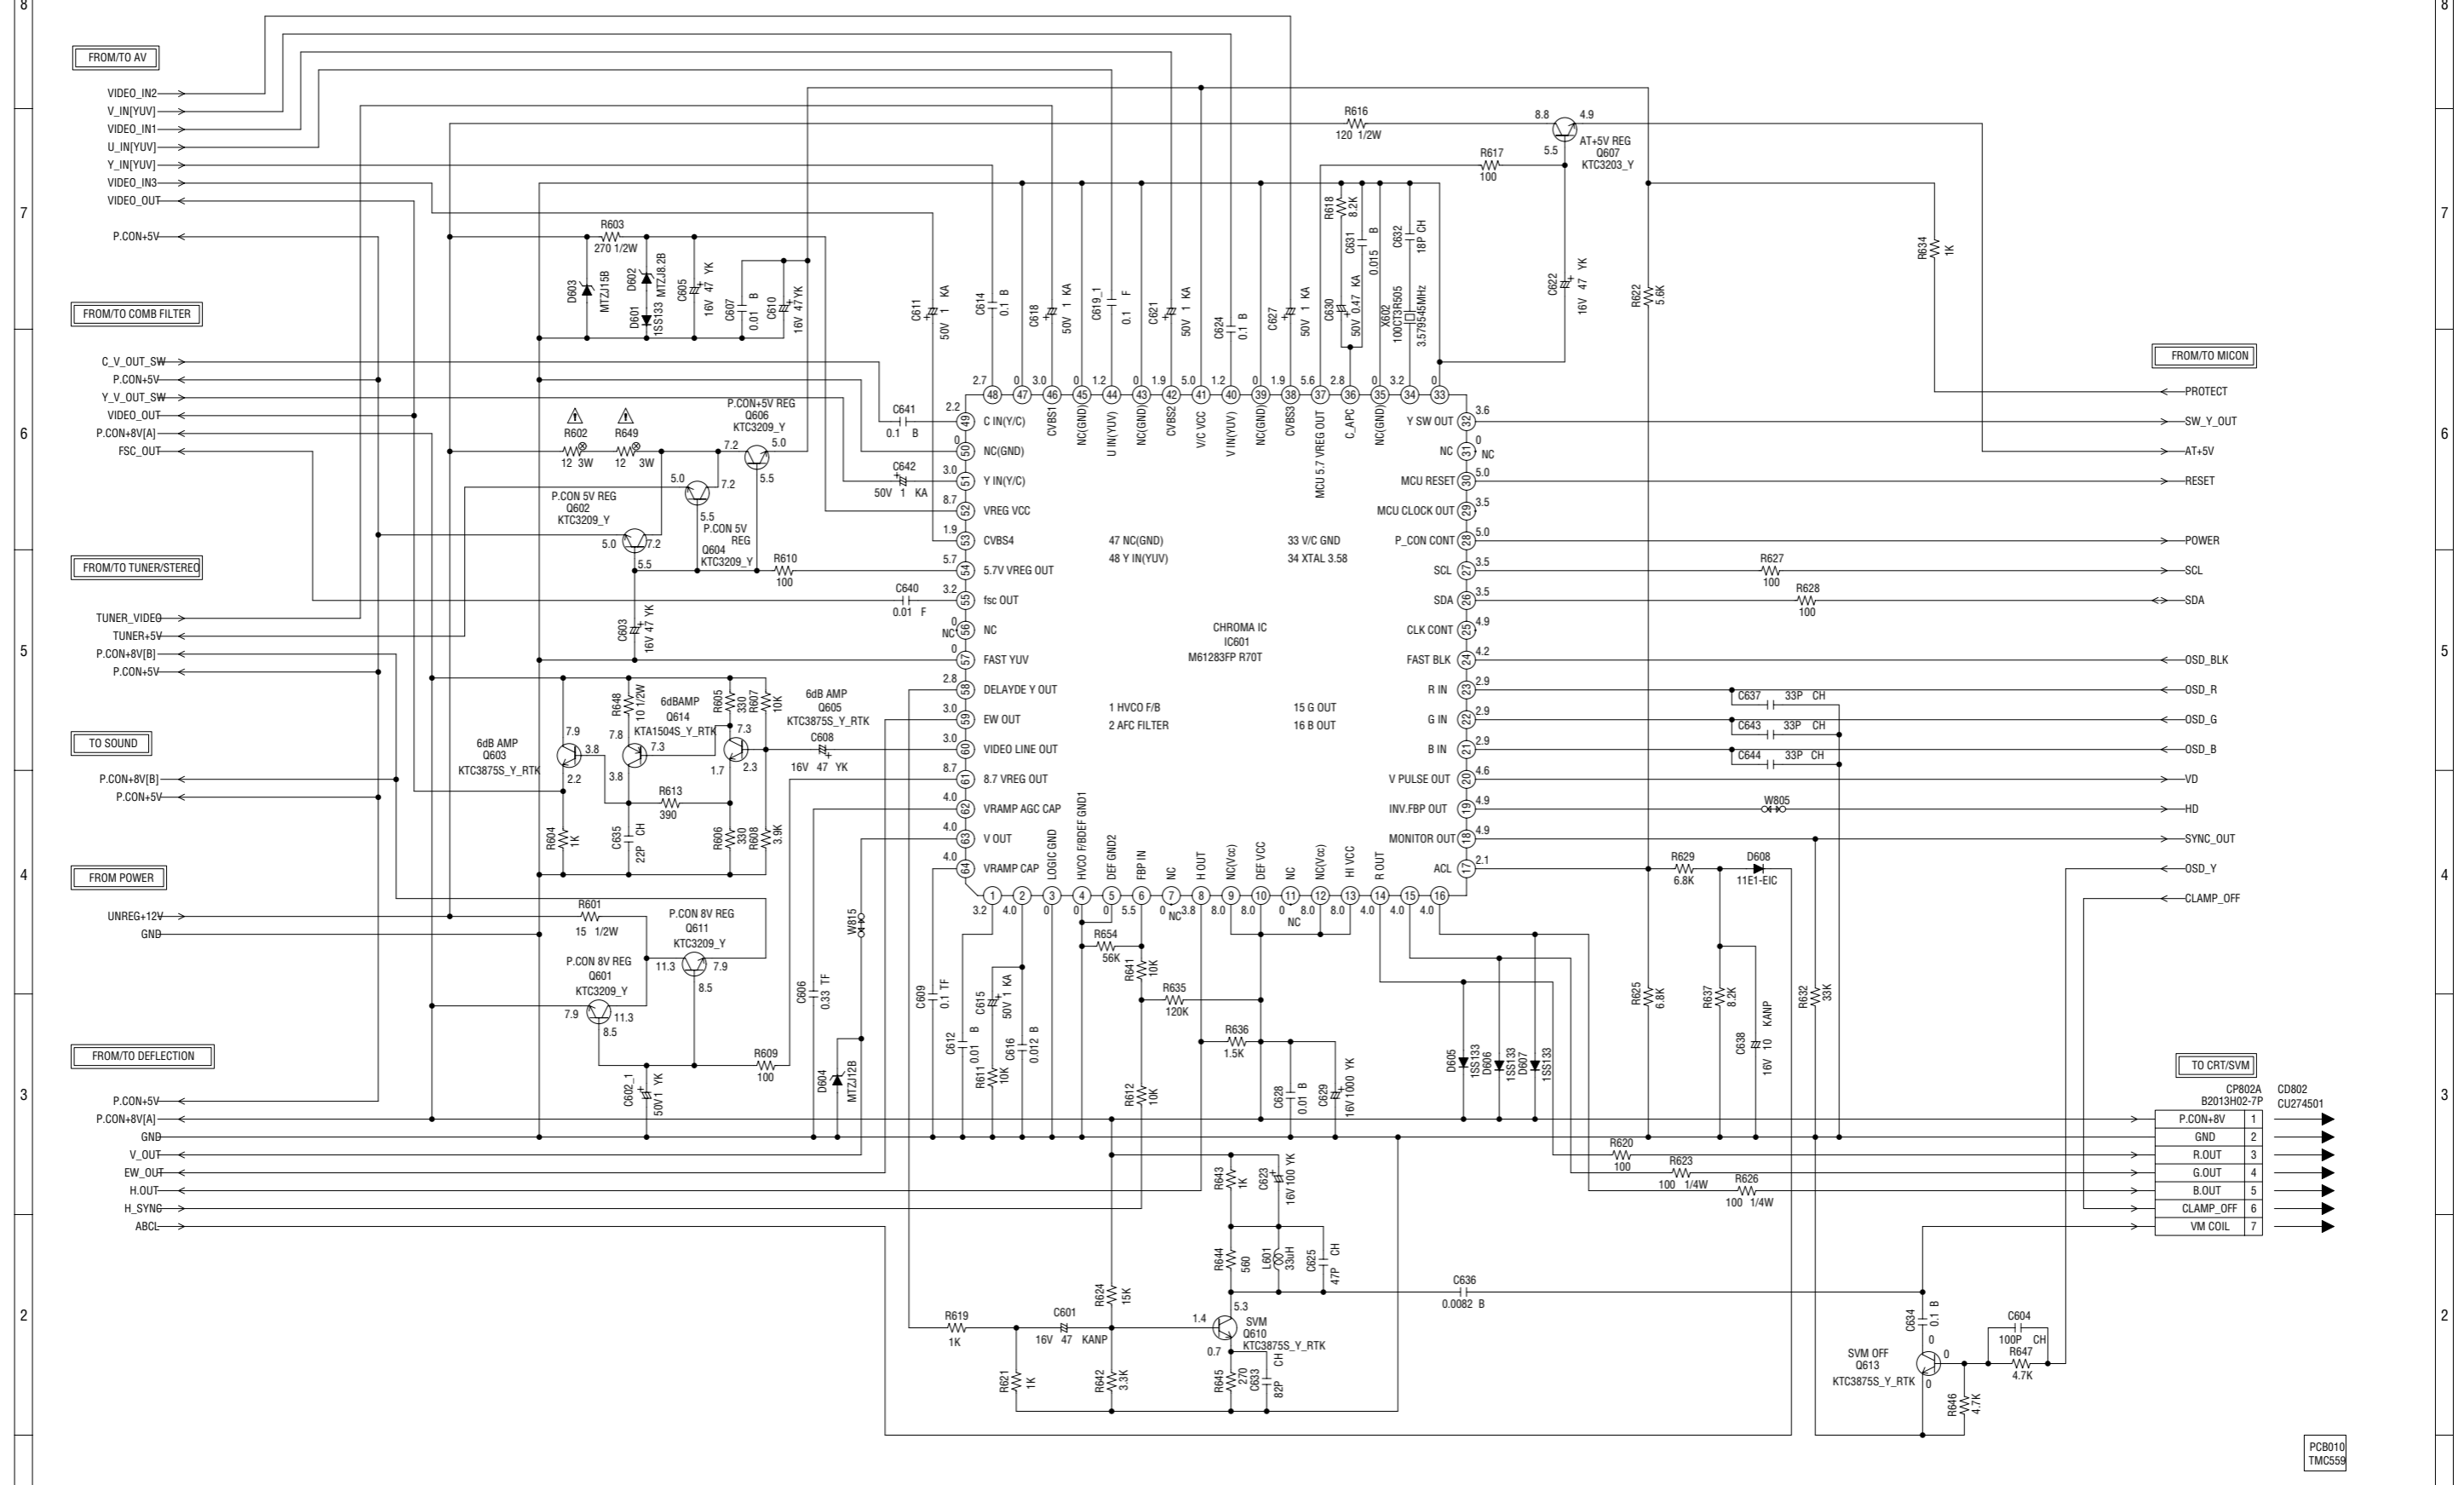


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

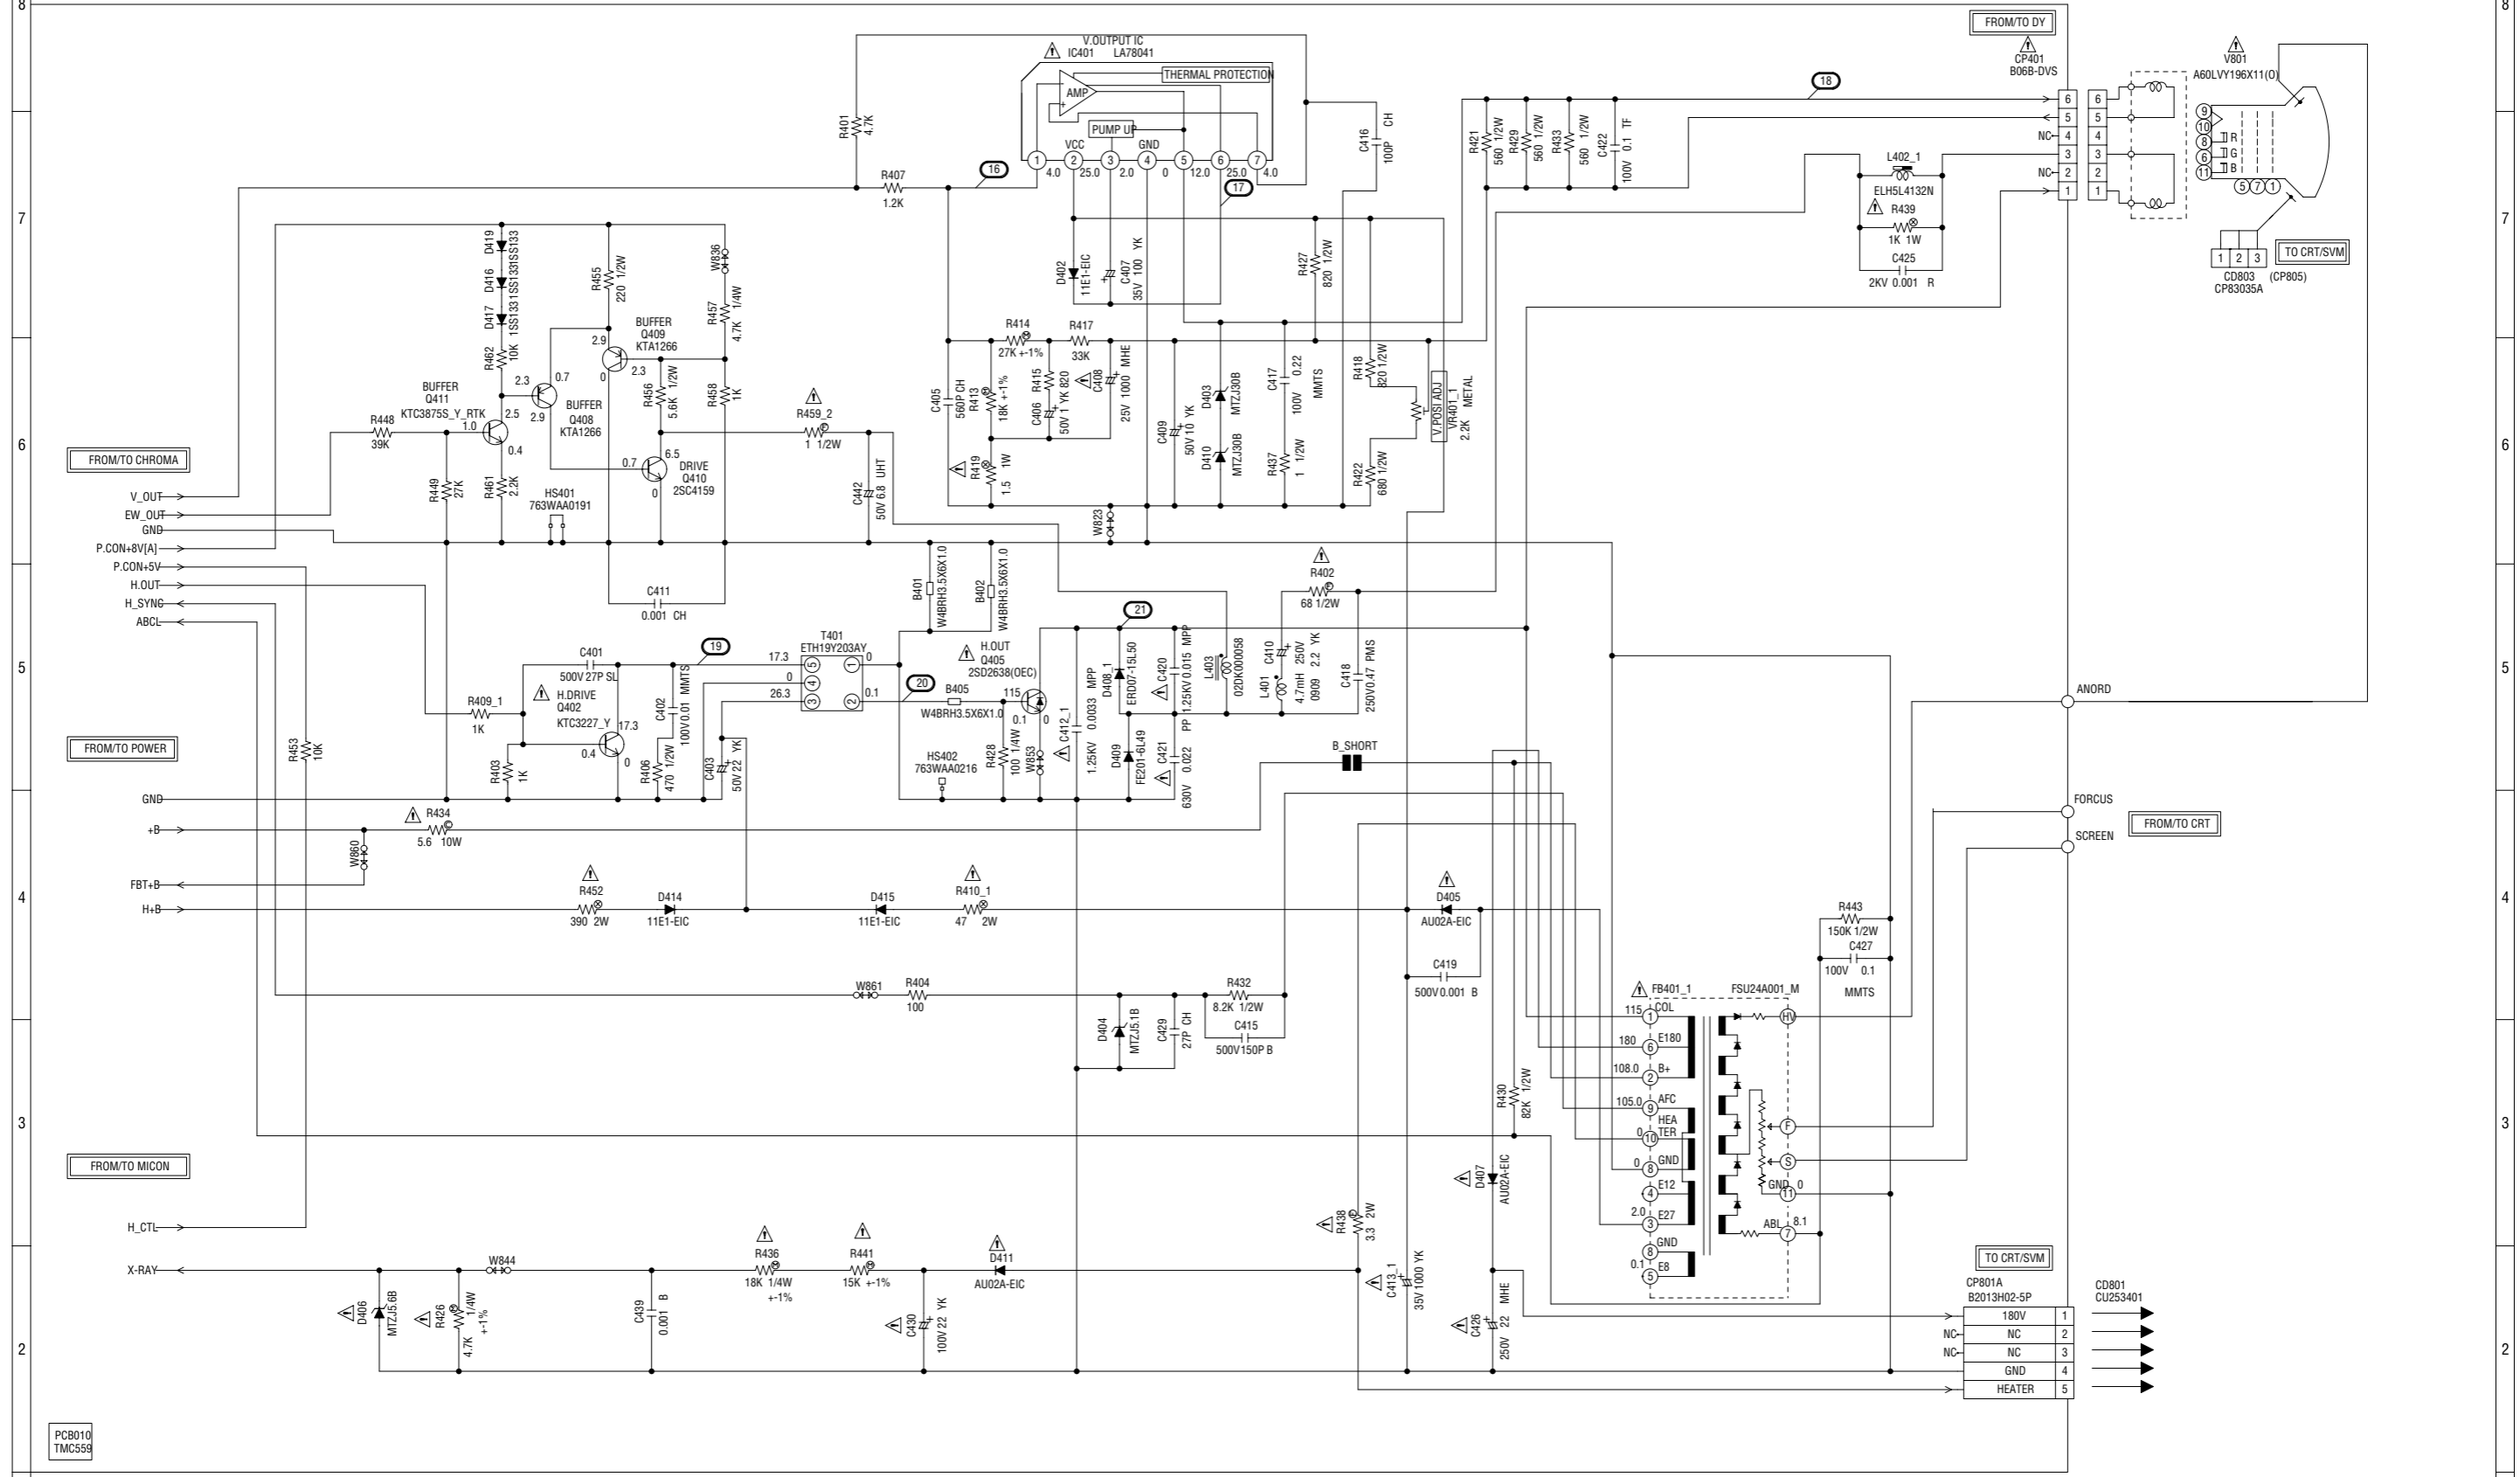

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION - LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION - SINCE THESE PARTS MARKED WITH ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

POWER SCHEMATIC DIAGRAM (MAIN PCB)

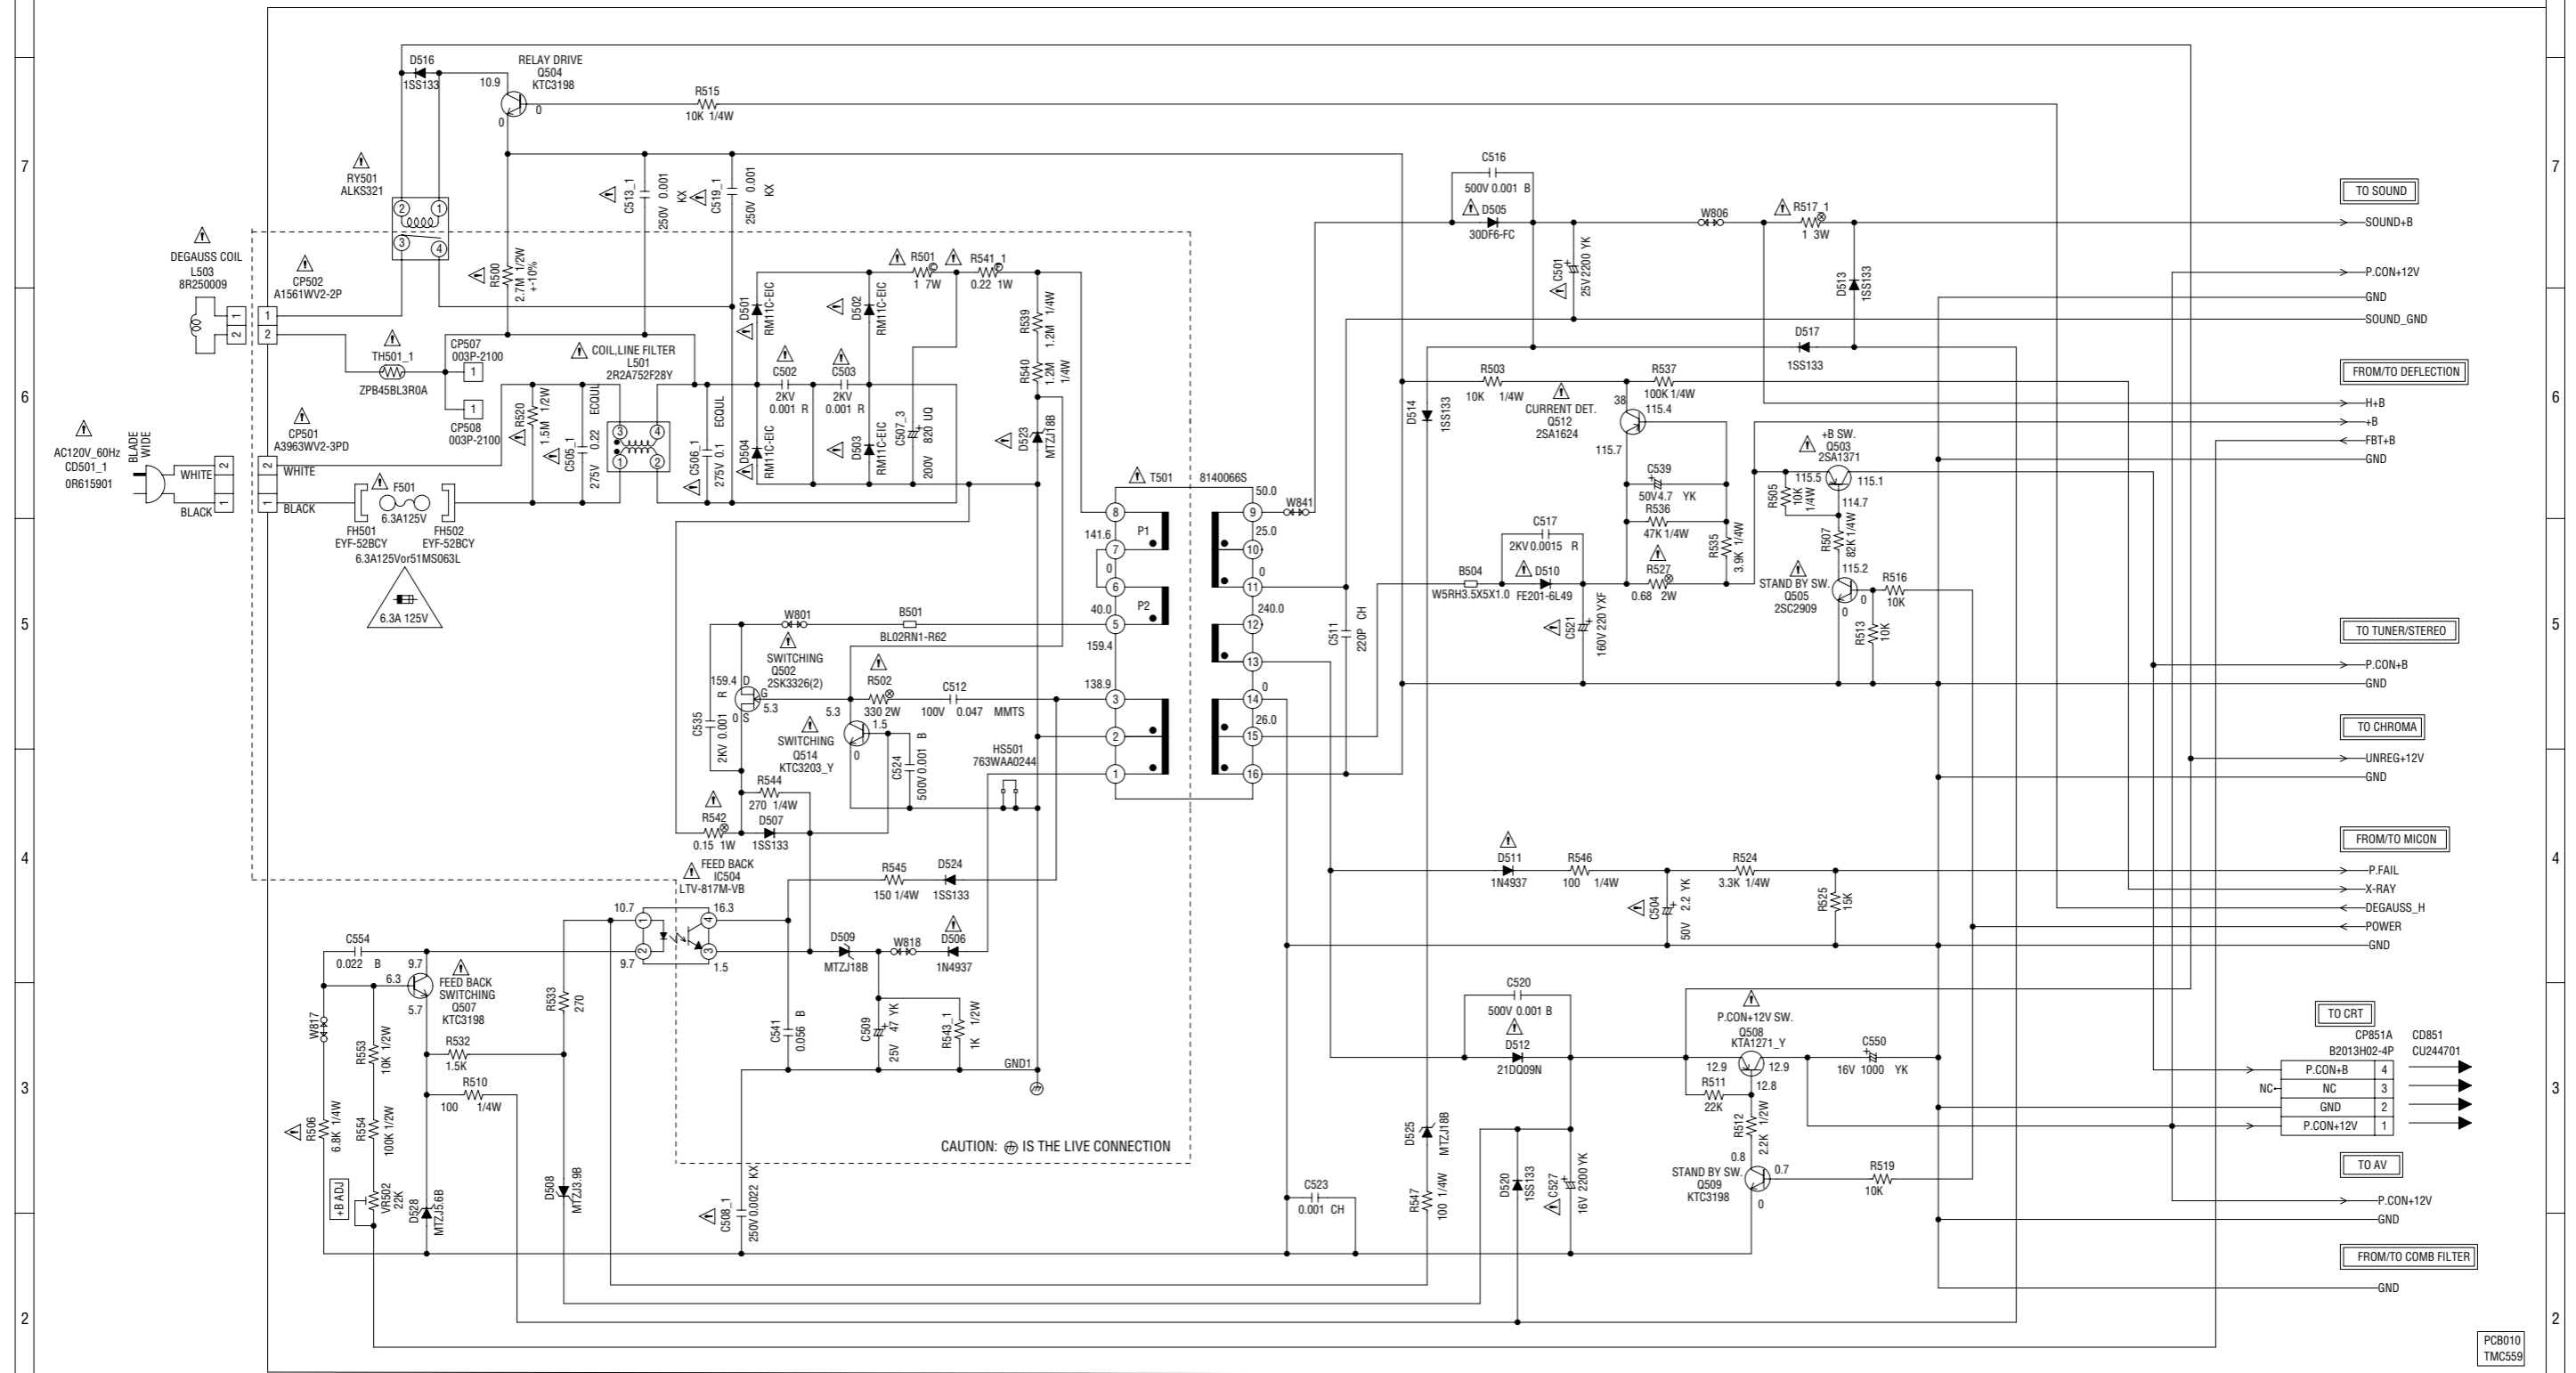

CAUTION FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501)

ATTENTION POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V(F501)

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

CAUTION SINCE THESE PARTS MARKED ARE CRITICAL FOR SAFETY USE ONES DESCRIBED IN PARTS LIST ONLY.

SOUND SCHEMATIC DIAGRAM (MAIN PCB)

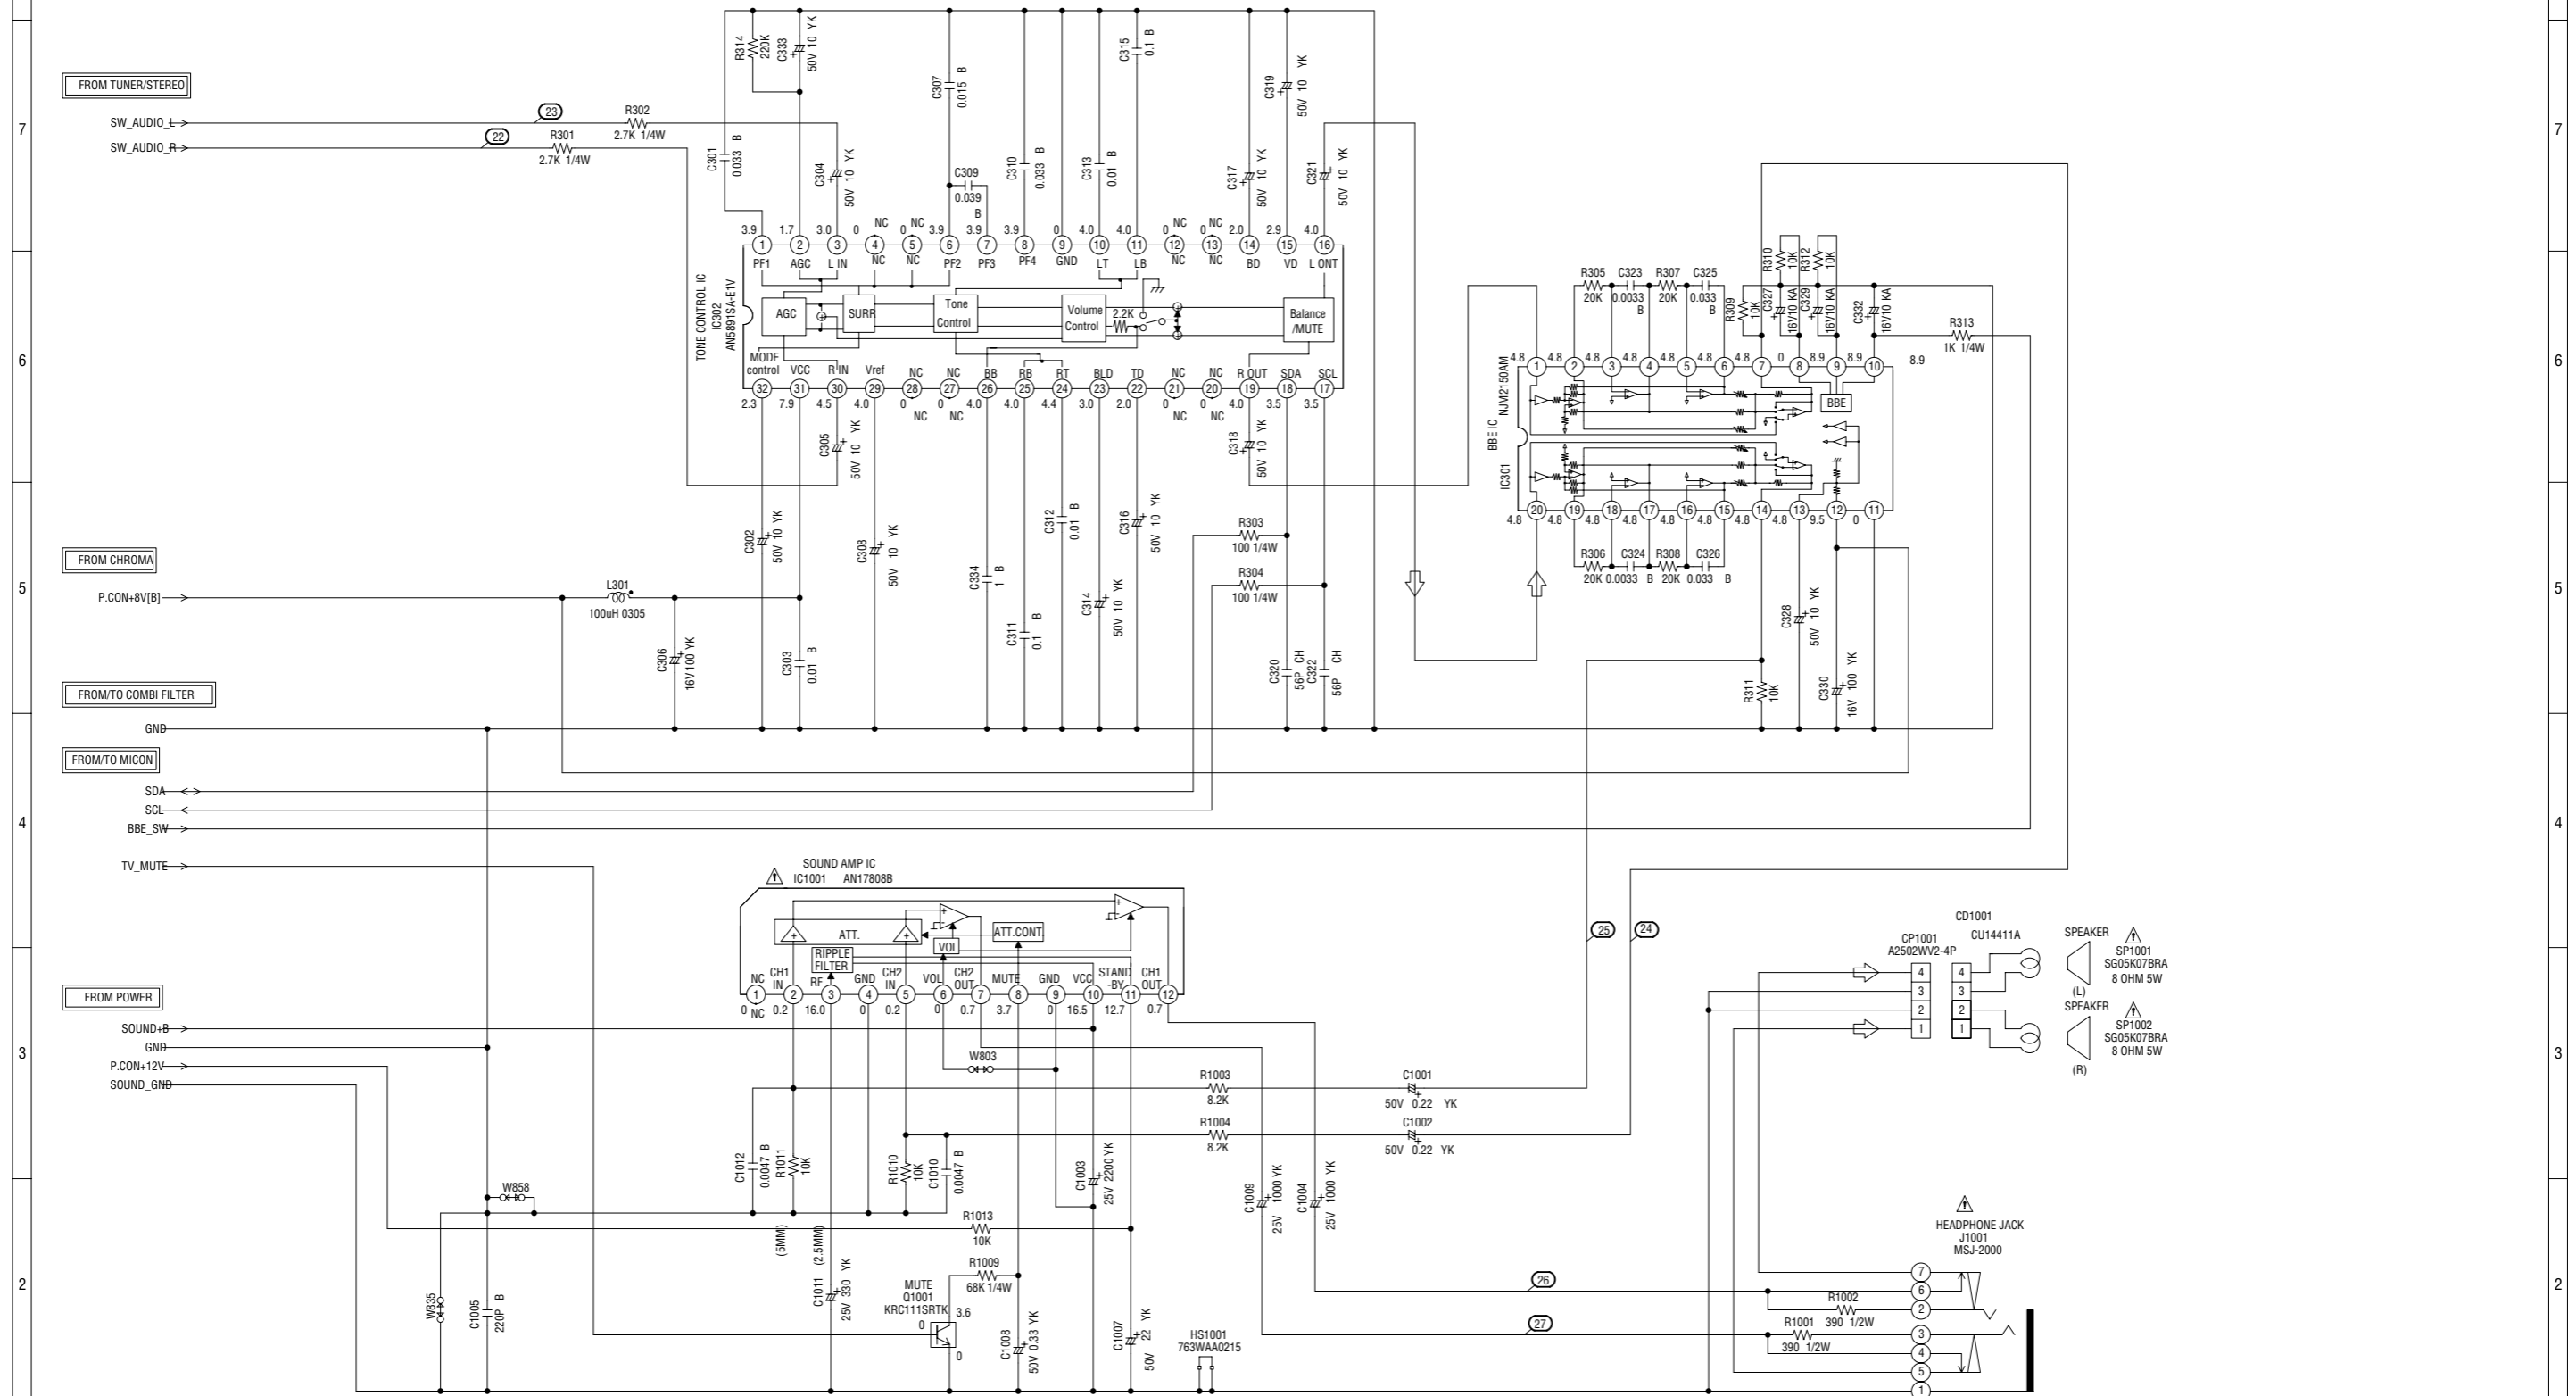


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


ATTENTION - LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION - SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



TUNER/STEREO SCHEMATIC DIAGRAM (MAIN PCB)

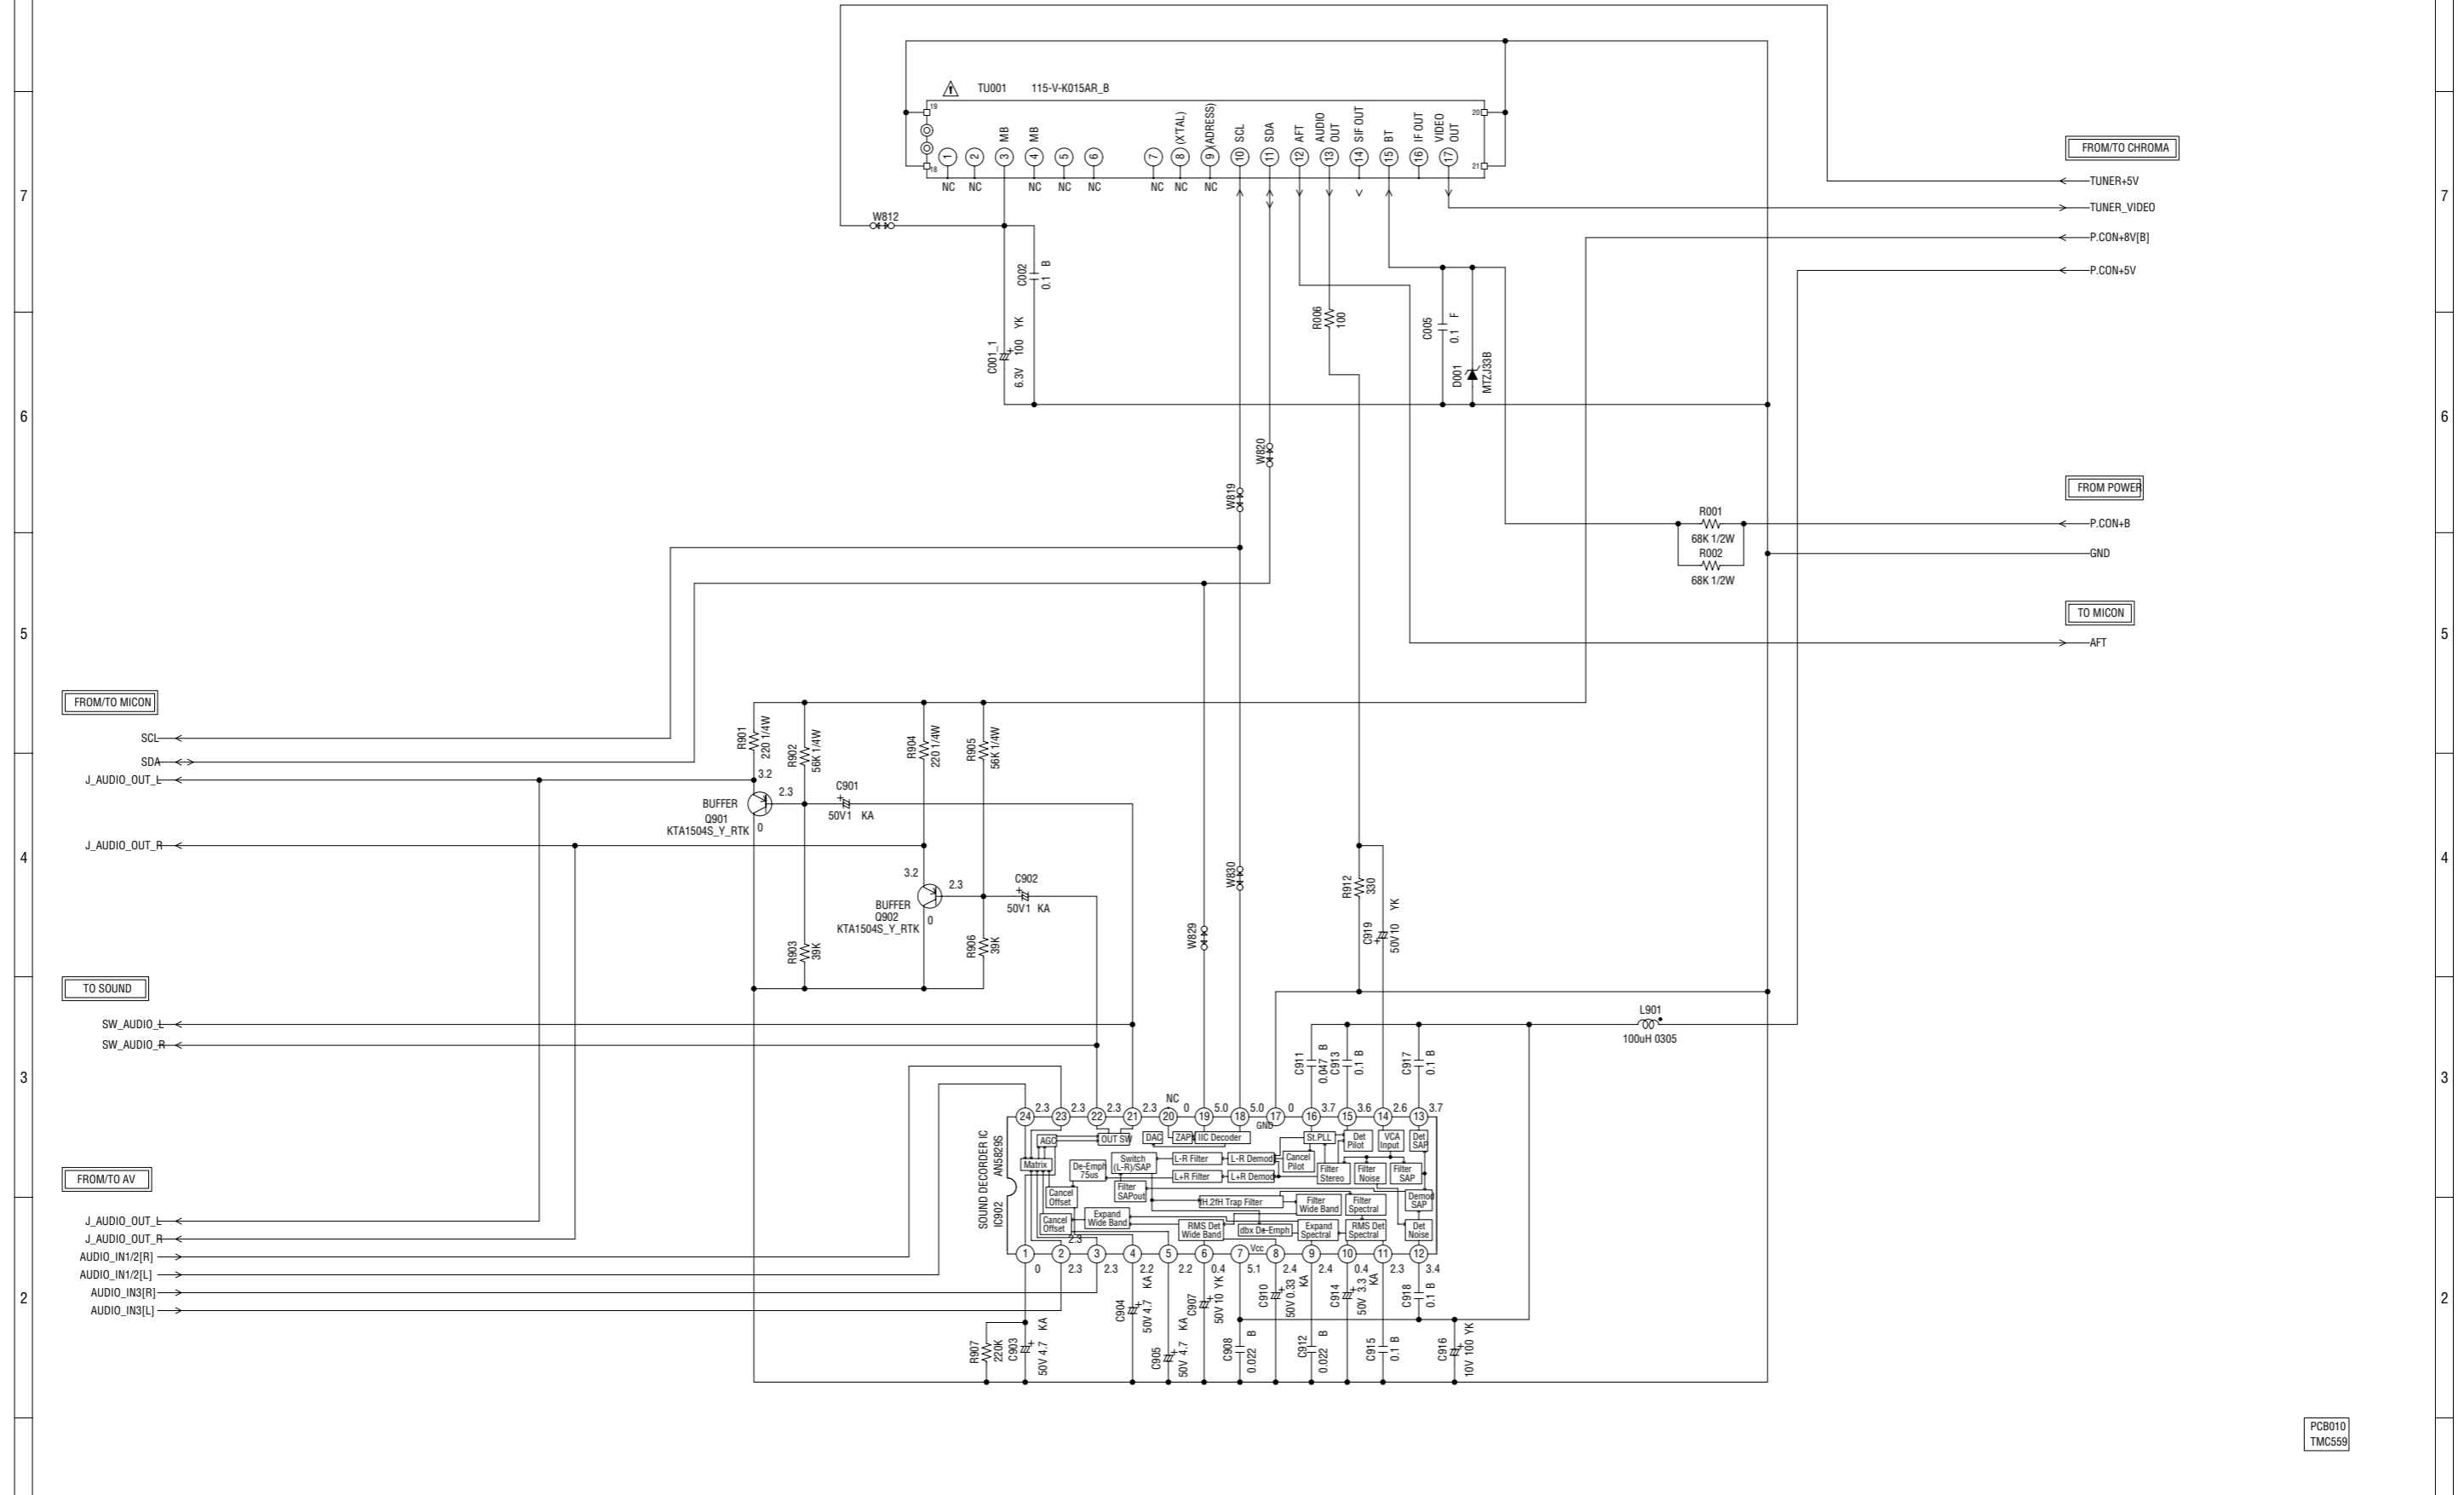

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

PCB010
TMC559


AV SCHEMATIC DIAGRAM (MAIN PCB)

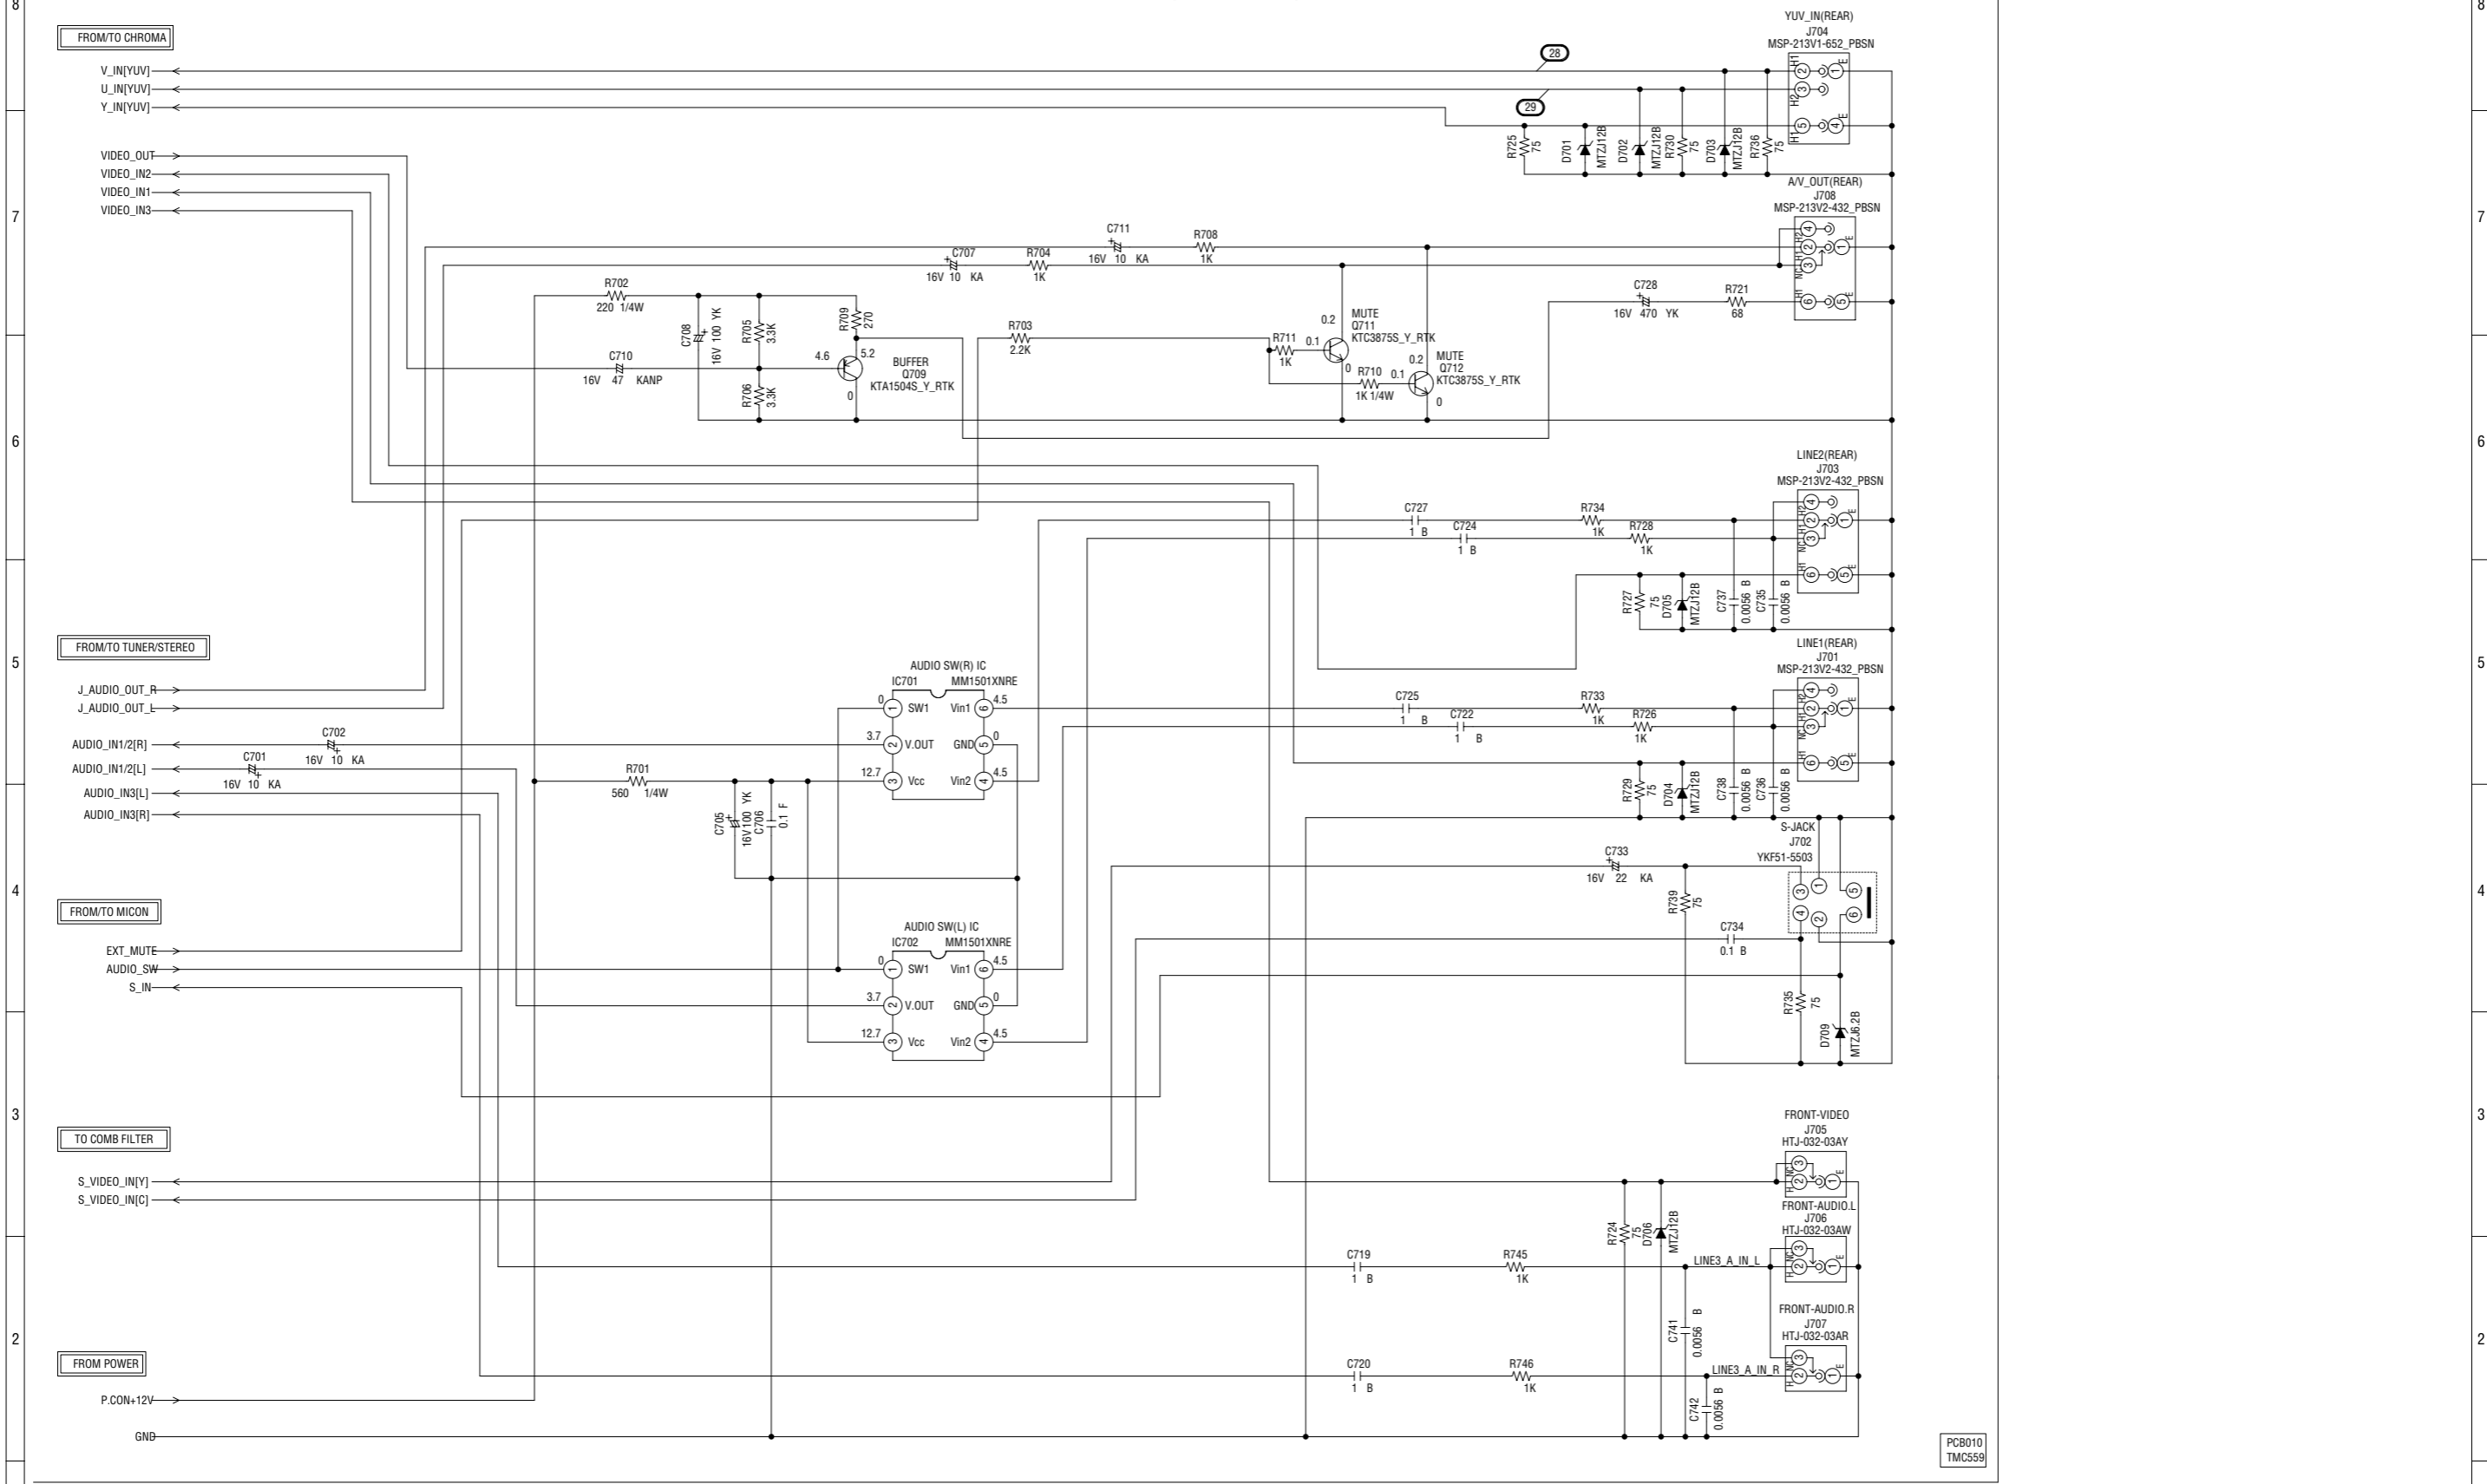


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR



COMB/FILTER SCHEMATIC DIAGRAM (MAIN PCB)

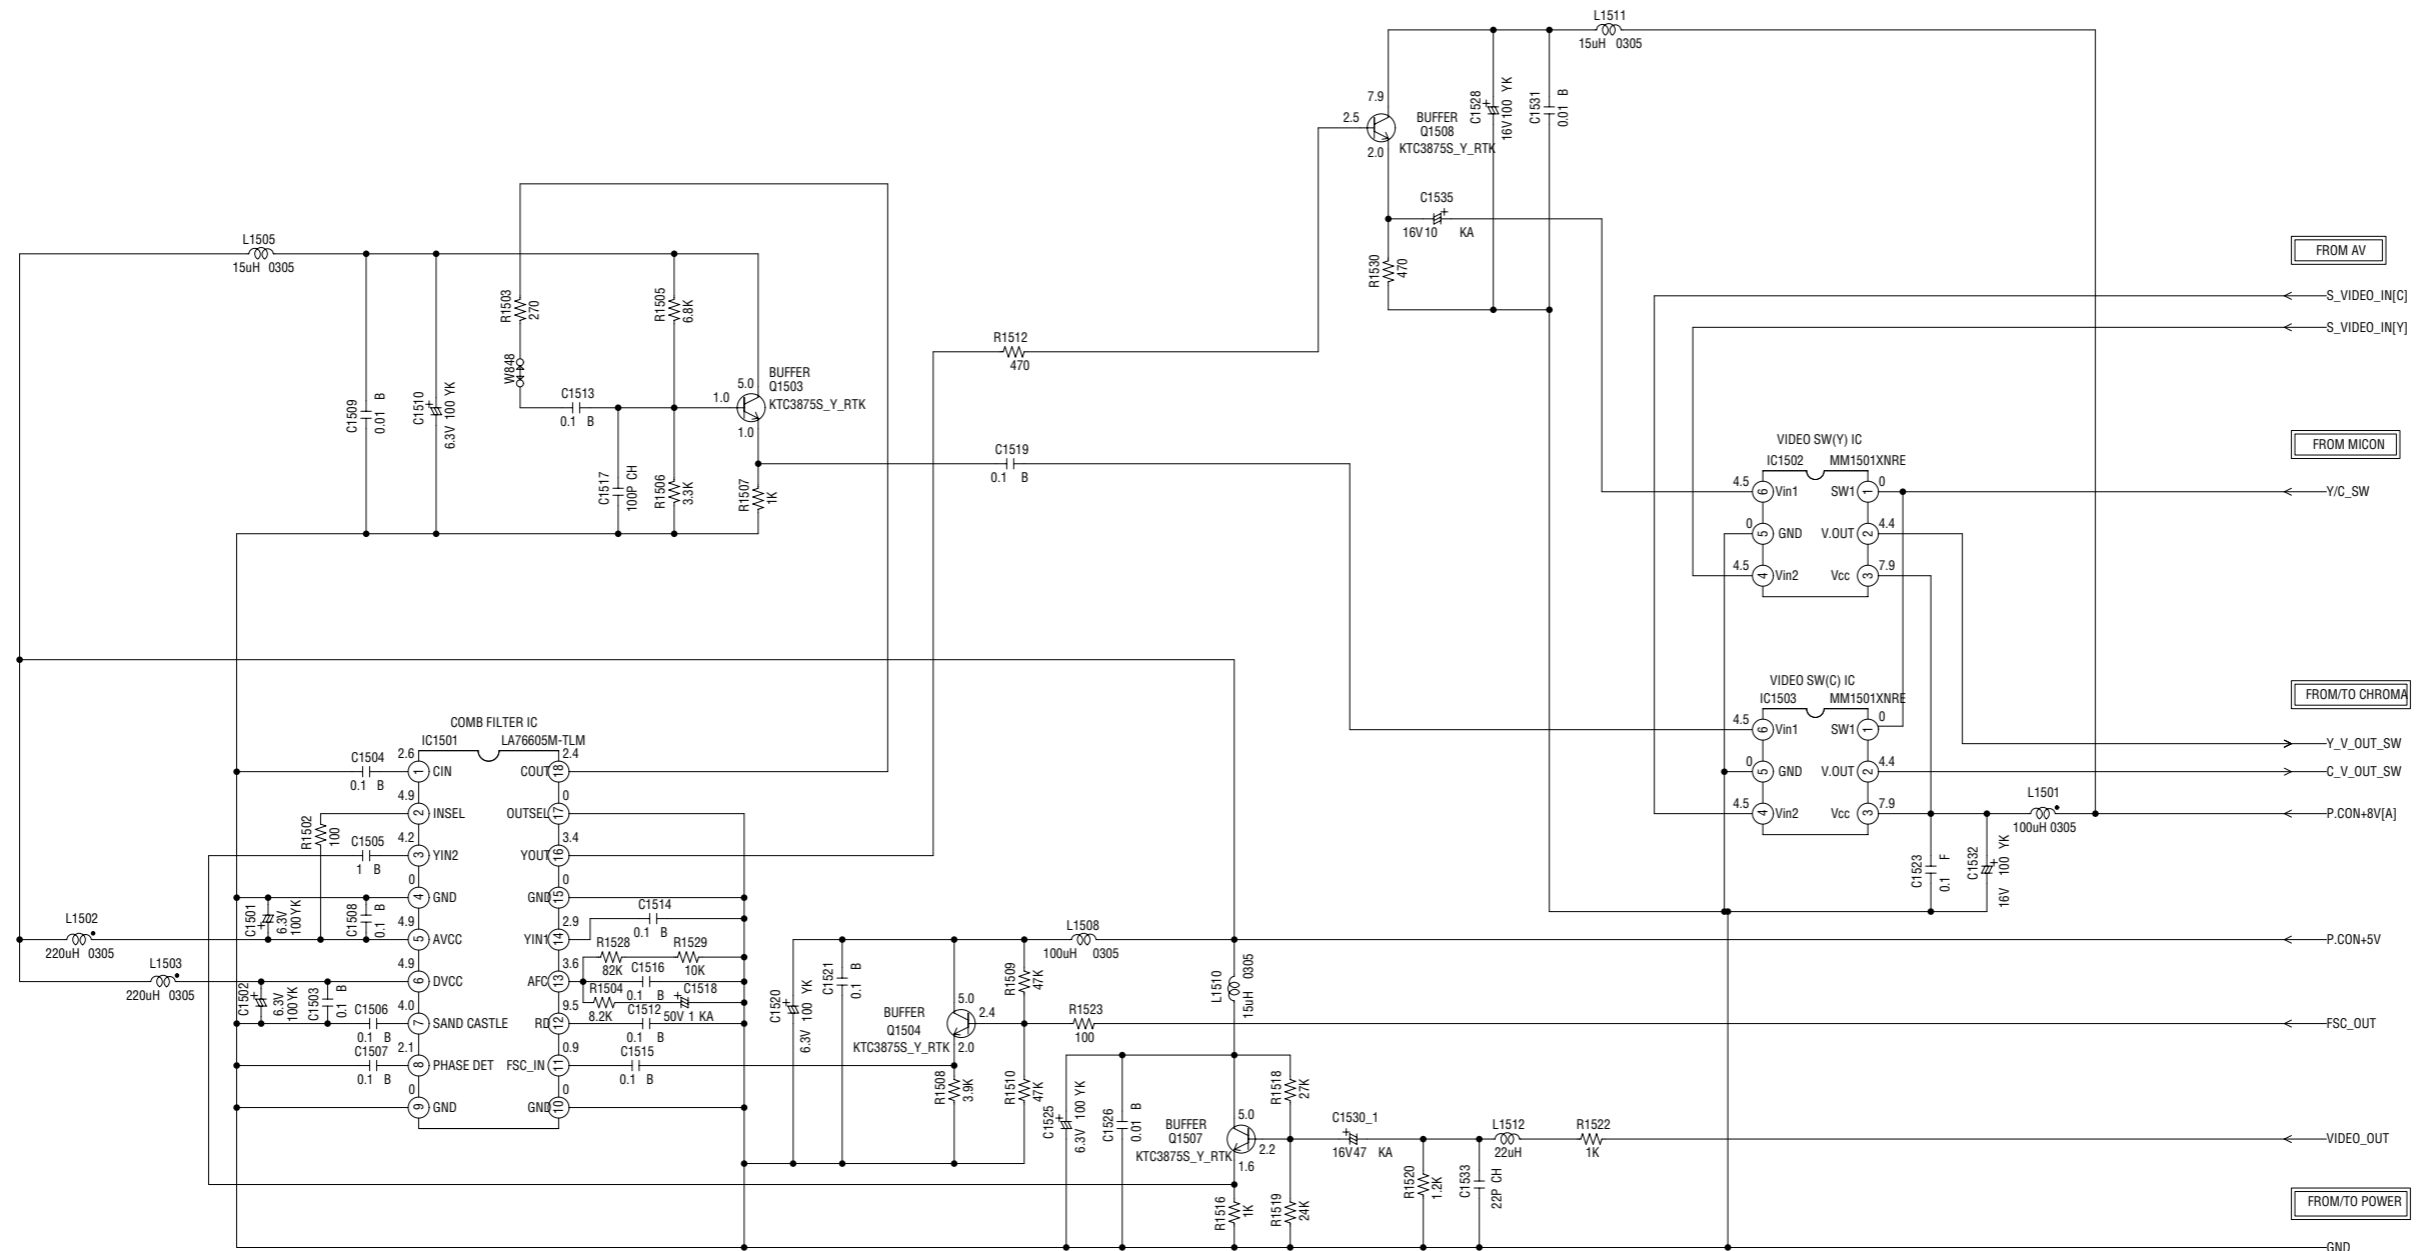

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB010
TMC559

CRT/SVM SCHEMATIC DIAGRAM (CRT PCB)

CRT BLOCK

SVM BLOCK

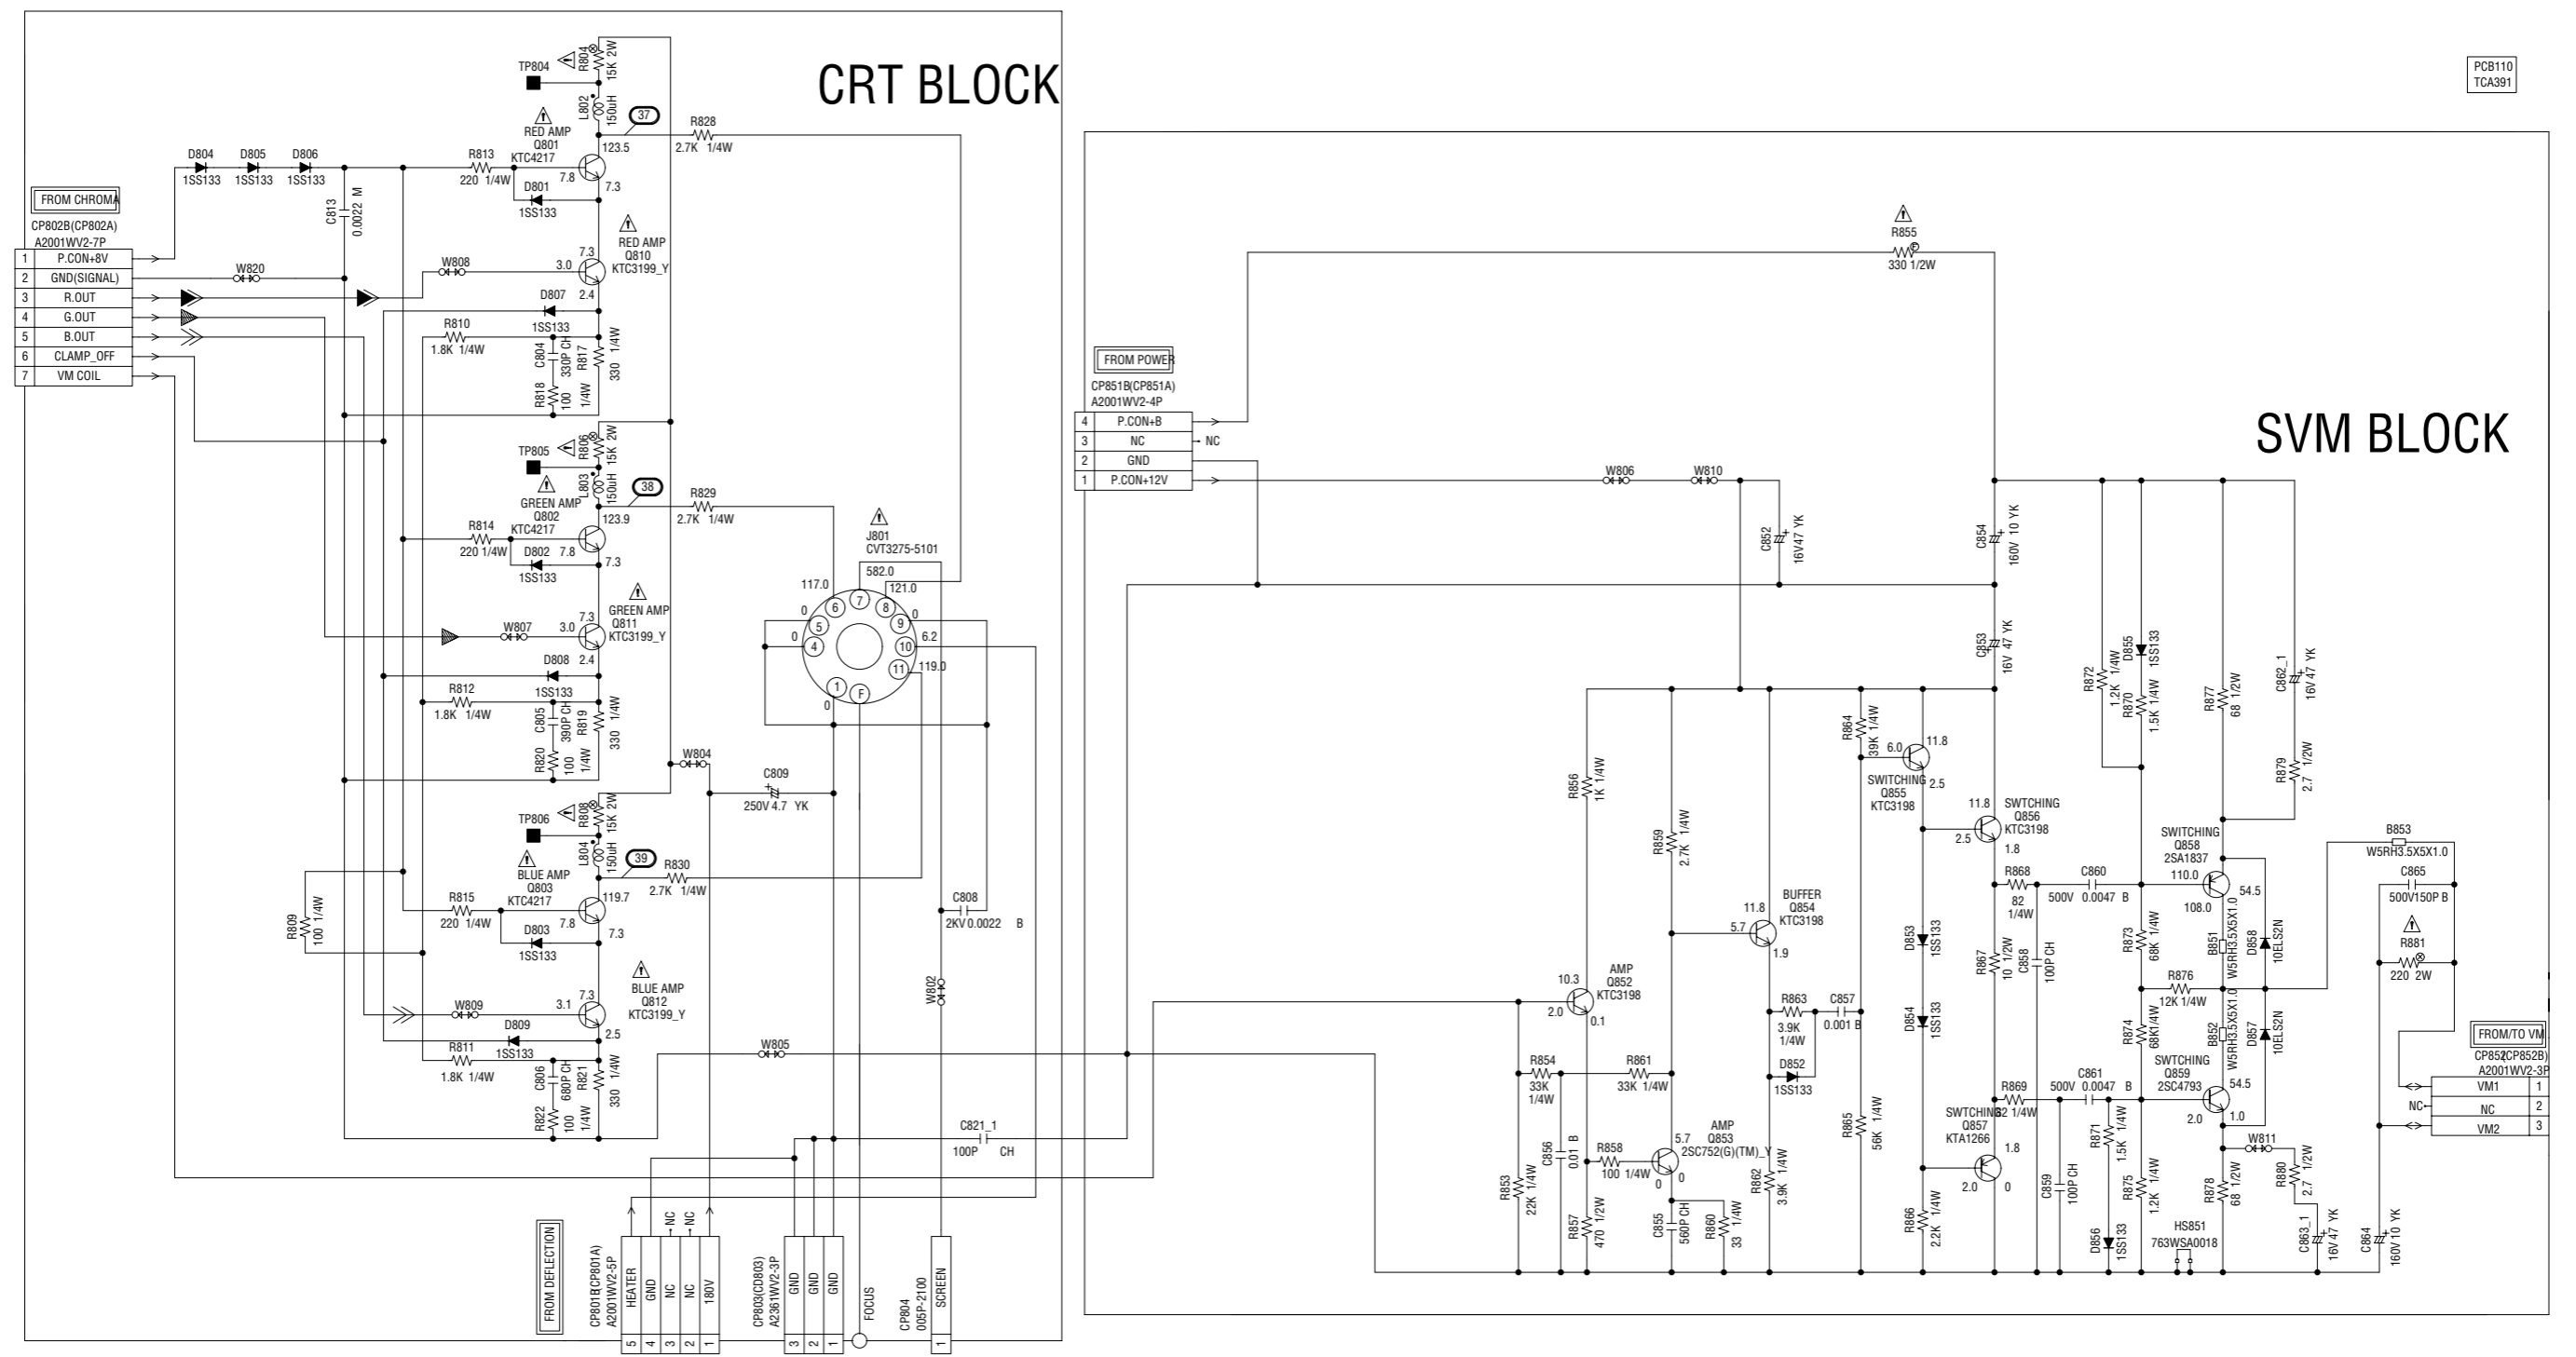


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION - LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.





CAUTION - SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

R.SIGNAL
 G.SIGNAL
 B.SIGNAL






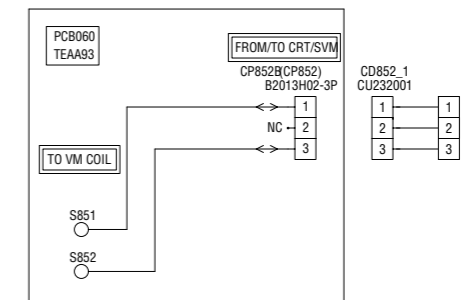


WAVEFORMS






MICON

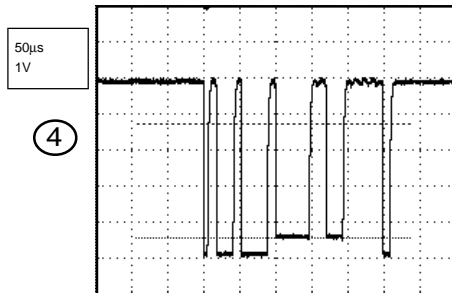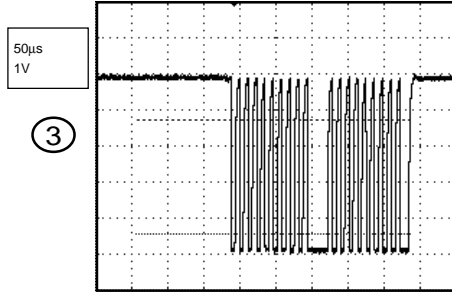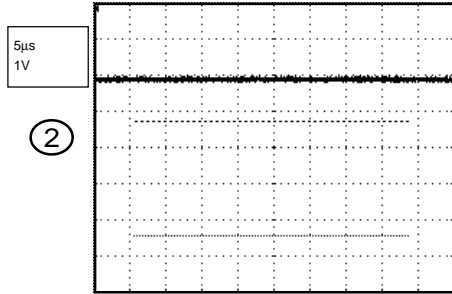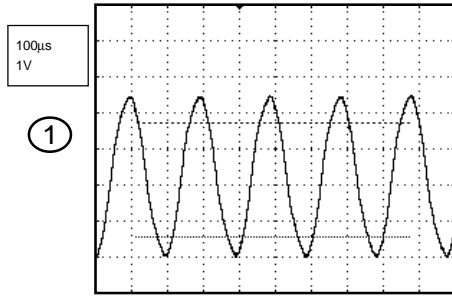

DEFLECTION

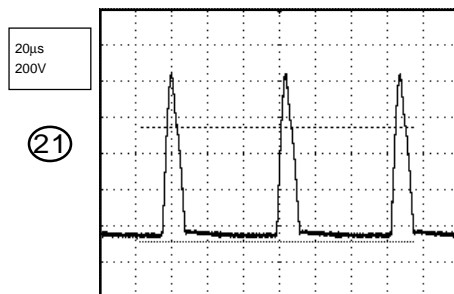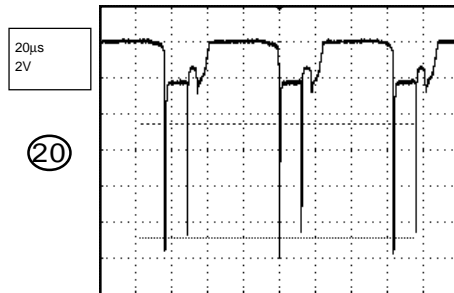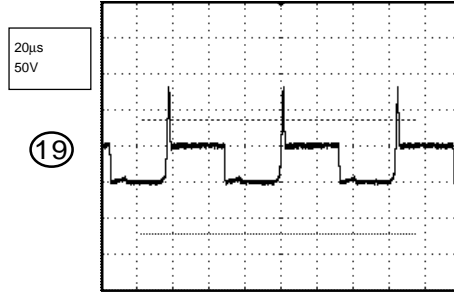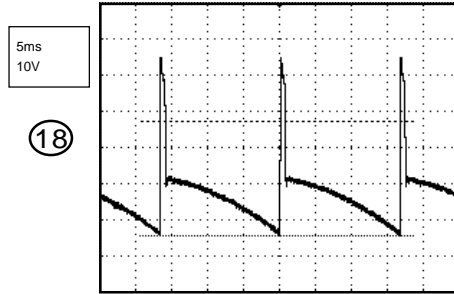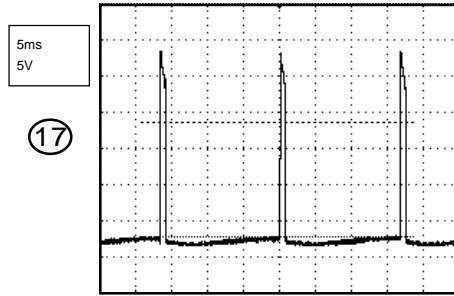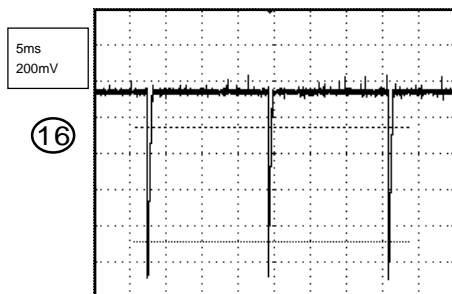

SOUND

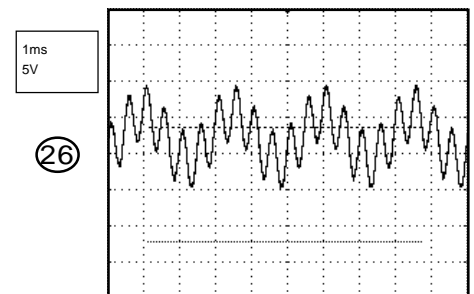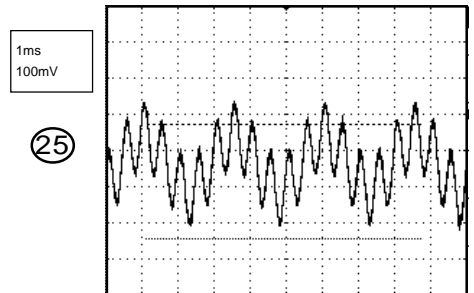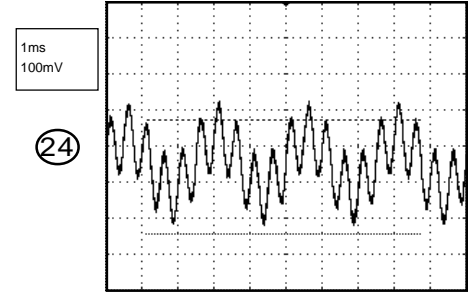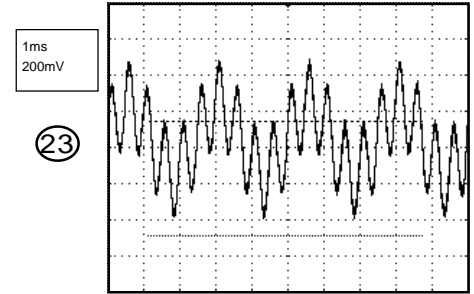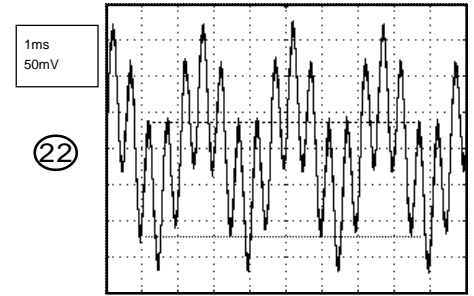


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS


1ms
5V

27

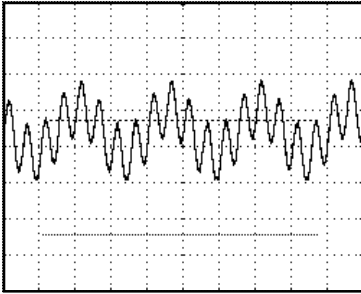

20μs
50V


39

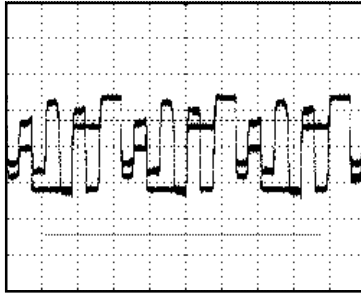

AV


20μs
200mV

28

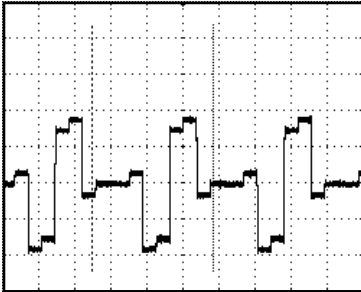

20μs
200mV


29

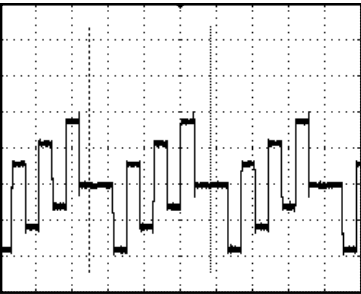

CRT/SVM


20μs
50V

37

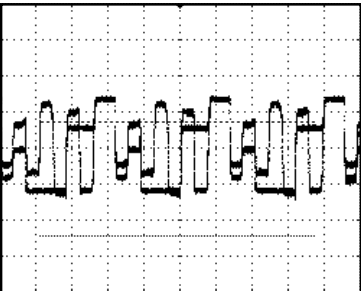


20μs
50V

38

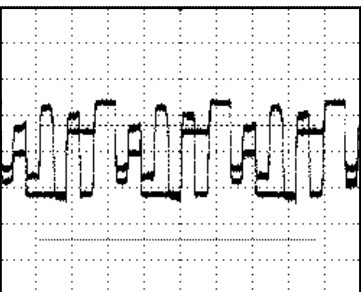

NOTE: The following waveforms were measured at the point of the corresponding balloon numZber in the schematic diagram.

MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

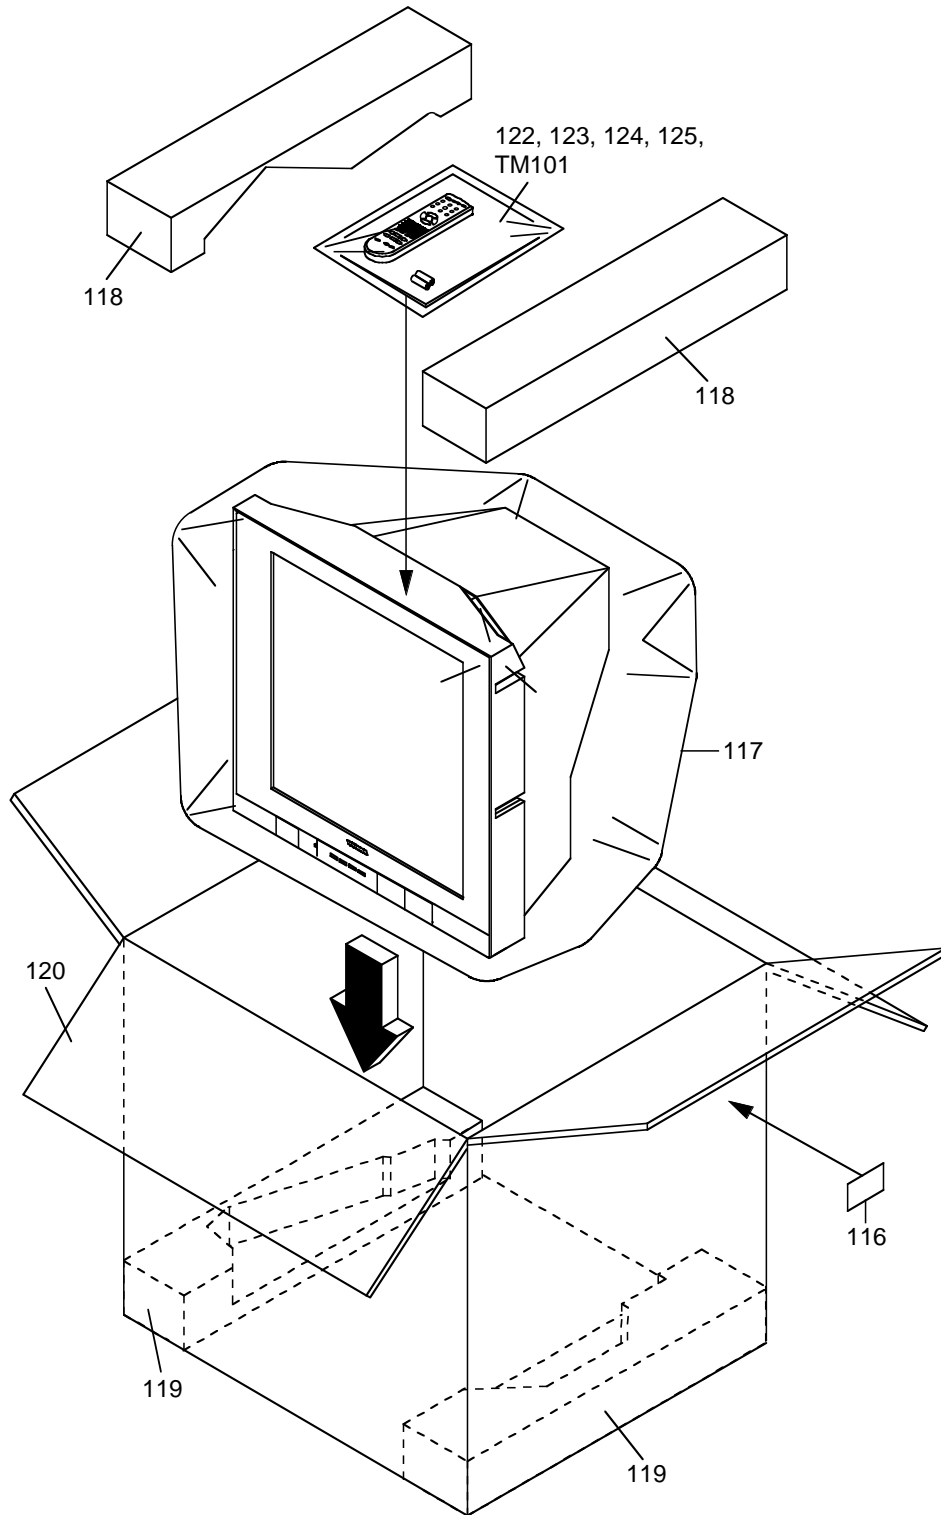

MECHANICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description	
101	AE003064	A3M6060720	CABINET,FRONT ASSY	
101A	AE003065	701WPJC572	CABINET,FRONT	
101B	AD302143	711WPA0182	PLATE,FRONT	
101C	AE003066	712WPBA089	DOOR	
101D	AD302145	713WPA0261	GLASS,LED	
101E	AD302146	723549A012	AV LABEL	
101F	AD302008	7235490036	BADGE,BRAND	
101G	AD302147	735WPA0725	STOPPER,BUTTON	
101H	AD302010	735WPA0732	STOPPER,BUTTON2	
101I	AE003067	735WPBB014	BUTTON,FRAME	
101J	AE003068	735WPJA823	BUTTON,POWER	
101K	AE003069	800WQ0A070	FELT SHEET	
102	AE003070	A3M6060740	CABINET,BACK ASSY	
102A	AD302149	702WPAA210	CABINET,BACK	
102B	AE003071	800WQ0A041	FELT SHEET	
102C	AE003072	800WQ0A045	FELT SHEET	
103	AD300759	741WUA0021	SPRING,EARTH	
104	AE000007	7220001107	SHEET,HWC	
105	AE000006	7220001119	SHEET,CSA WARNING	
106	AE003073	722549A314	SHEET,RATING	
107	AE003338	723000C270	POP LABEL	
108	AD300132	7230006818	SHEET,CAUTION	
109	AD301133	726000A030	SHEET,CRT NO.	
110	AD302015	761WPA0220	HOLDER,SPEAKER	
111	BZ710259	762WPA0011	HOLDER,CRT WIRE	
112	AD300135	769WSA0011	WASHER CRT T=0.5	
113	AD300518	801WR00001	DAMPER,SPEAKER	
114	AD300519	82A40B0104	FLAT WASHER	
115	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
116	AE003075	723000C492	SHEET,BAR CODE	
117	AD300432	791WHA0092	LAMIFILM,BAG	
118	AD302153	792WHA0438	PACKAGE, TOP	
119	AD302154	792WHA0439	PACKAGE,BOTTOM	
120	AE003077	793WCDC092	GIFT BOX	
121	AE003076	A3M7110975	INSTRUCTION BOOK KIT	
122	AD301213	JA4UD300	POLYBAG,INSTRUCTION(RED CAUTION)	
123	AD300022	J3I70417	REGISTRATION CARD	
124	AD300023	J3I70436	ESP CARD	
125	AE003080	J3M71101A	INSTRUCTION BOOK	
201	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
202	BZ710034	8117140A24	SCREW,TAPPING(B0) PAN	4x12
203	AD302054	8141J50C54	SCREW,TAP TITE(P) GW22	5x35
204	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
207	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8

MECHANICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description	
101	AE003064	A3M6060720	CABINET,FRONT ASSY	
101A	AE003065	701WPJC572	CABINET,FRONT	
101B	AD302143	711WPA0182	PLATE,FRONT	
101C	AE003066	712WPBA089	DOOR	
101D	AD302145	713WPA0261	GLASS,LED	
101E	AD302146	723549A012	AV LABEL	
101F	AD302008	7235490036	BADGE,BRAND	
101G	AD302147	735WPA0725	STOPPER,BUTTON	
101H	AD302010	735WPA0732	STOPPER,BUTTON2	
101I	AE003067	735WPBB014	BUTTON,FRAME	
101J	AE003068	735WPJA823	BUTTON,POWER	
101K	AE003069	800WQ0A070	FELT SHEET	
102	AE003070	A3M6060740	CABINET,BACK ASSY	
102A	AD302149	702WPAA210	CABINET,BACK	
102B	AE003071	800WQ0A041	FELT SHEET	
102C	AE003072	800WQ0A045	FELT SHEET	
103	AD300759	741WUA0021	SPRING,EARTH	
104	AE000007	7220001107	SHEET,HWC	
105	AE000006	7220001119	SHEET,CSA WARNING	
106	AE003073	722549A314	SHEET,RATING	
107	AE003074	723000C504	POP LABEL	
108	AD300132	7230006818	SHEET,CAUTION	
109	AD301133	726000A030	SHEET,CRT NO.	
110	AD302015	761WPA0220	HOLDER,SPEAKER	
111	BZ710259	762WPA0011	HOLDER,CRT WIRE	
112	AD300135	769WSA0011	WASHER CRT T=0.5	
113	AD300518	801WR00001	DAMPER,SPEAKER	
114	AD300519	82A40B0104	FLAT WASHER	
115	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
116	AE003075	723000C492	SHEET,BAR CODE	
117	AD300432	791WHA0092	LAMIFILM,BAG	
118	AD302153	792WHA0438	PACKAGE, TOP	
119	AD302154	792WHA0439	PACKAGE,BOTTOM	
120	AE003077	793WCDC092	GIFT BOX	
121	AE003076	A3M7110975	INSTRUCTION BOOK KIT	
122	AD301213	JA4UD300	POLYBAG,INSTRUCTION(RED CAUTION)	
123	AD300022	J3I70417	REGISTRATION CARD	
124	AD300023	J3I70436	ESP CARD	
125	AE003080	J3M71101A	INSTRUCTION BOOK	
201	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
202	BZ710034	8117140A24	SCREW,TAPPING(B0) PAN	4x12
203	AD302054	8141J50C54	SCREW,TAP TITE(P) GW22	5x35
204	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
207	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
RESISTORS			
△ R410	AD302107	R3X18A470J	R,METAL OXIDE 47 OHM 2W
R419	AE000415	R3X1811R5J	R,METAL OXIDE 1.5 OHM 1W
△ R426	BZ210030	R4X5T4472F	R,METAL 4.7K OHM 1/4W
R434	AD301972	R5X2CF5R6J	R,CEMENT 5.6 OHM 10W
△ R436	BZ210023	R4X5T4183F	R,METAL 18K OHM 1/4W
△ R438	AD302133	R6358A3R3J	R,FUSE 3.3 OHM 2W
△ R439	AE000676	R3K181102J	R,METAL 1K OHM 1W
△ R441	AD300037	R4X5T6153F	R,METAL 15K OHM 1/6W
△ R452	AD301385	R3X18A391J	R,METAL OXIDE 390 OHM 2W
R459	AD301595	R65582010J	R,FUSE 1 OHM 1/2W
△ R500	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
△ R501	AD301596	R5X2AE010J	R,CEMENT 1 OHM 7W
△ R502	AD301016	R3X28A331J	R,METAL OXIDE 330 OHM 2W
△ R506	BZ210162	R002T4682J	RC 6.8K OHM 1/4W
△ R517	BZ210191	R3X28B010J	R,METAL 1 OHM 3W
△ R520	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
△ R527	BZ210149	R3X18AR68J	R,METAL OXIDE 0.68 OHM 2W
△ R541	BZ210190	R63581R22J	R,FUSE 0.22 OHM 1W
△ R542	AD301017	R3X181R15J	R,METAL OXIDE 0.15 OHM 1W
△ R602	AD301975	R3X28B120J	R,METAL OXIDE 12 OHM 3W
△ R649	AD301975	R3X28B120J	R,METAL OXIDE 12 OHM 3W
△ R804	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△ R806	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△ R808	BZ210026	R3X18A153J	R,METAL OXIDE 15K OHM 2W
△ R855	AD301019	R65582331J	R,FUSE 330 OHM 1/2W
△ R881	BZ210087	R3X18A221J	R,METAL OXIDE 220 OHM 2W
CAPACITORS			
C153	AE001132	CQGTCH4K2J	CC 270 PF 50V CH
△ C402	AE000416	P232W1103J	CMP 0.01 UF 100V MMTS
C408	BZ110032	E5EZ3102M	CE 1000 UF 25V
C412	AD301303	P4N8FJ332H	CMPP 0.0033UF 1.25KV
C413	AD301977	E0ELF4102M	CE 1000 UF 35V
C418	BZ210173	P4J7F3474J	CMPP 0.47 UF 250V PMS
△ C420	AD300723	P4N8FJ153H	CMPP 0.015 UF 1.25KV
C421	AD301600	P3N1F5223J	CPP 0.022 UF 630V
C425	BZ110182	C03L0R713K	CC 0.001 UF 2KV R
C426	AD300061	E5EZFD220M	CE 22 UF 250V
△ C430	BZ110195	E02LU8220M	CE 22 UF 100V
C442	AD301601	E53FF56R8M	CE 6.8 UF 50V NP
C501	BZ210176	E02LF3222M	CE 2200 UF 25V
C502	BZ110182	C03L0R713K	CC 0.001 UF 2KV R
C503	BZ110182	C03L0R713K	CC 0.001 UF 2KV R
△ C505	BZ110025	P2122B224M	CMP 0.22 UF 275V ECQUL
△ C506	BZ110035	P2122B104M	CMP 0.1 UF 275V ECQUL
C507	AE000417	E51DFC821M	CE 820 UF 200V
△ C508	AD301108	CD39E0MH3M	CC 0.0022UF 250V
△ C513	AD301026	CD39E0M13M	CC 0.001 UF 250V
C517	BZ110191	C03L0R7E3K	CC 0.0015UF 2KV R
△ C519	AD301026	CD39E0M13M	CC 0.001 UF 250V
C521	AD301025	E62NFB221M	CE 220 UF 160V
C527	BZ110119	E02LF2222M	CE 2200 UF 16V
C535	BZ110182	C03L0R713K	CC 0.001 UF 2KV R
C808	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
△ C855	AE000418	CQGTCH4S2J	CC 560 PF 50V CH
C1003	BZ210176	E02LF3222M	CE 2200 UF 25V
C1004	BZ110053	E02LF3102M	CE 1000 UF 25V
C1009	BZ110053	E02LF3102M	CE 1000 UF 25V
DIODES			
D001	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D104	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D105	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D106	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D107	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D108	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D109	BZ410054	0021721150	LED SLR-342VCT32
D110	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D113	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D402	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D403	BZ410019	D97U03001B	DIODE,ZENER MTZJ30B T-77
D404	BZ410020	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77
D405	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
DIODES			
△D406	BZ410021	D97U05R61B	DIODE,ZENER
D407	BZ410063	D2WTAU02A0	DIODE,SILICON
D408	AD302110	D2CF0715L0	DIODE,SILICON
D409	AD301980	D2CF2016L0	DIODE,SILICON
D410	BZ410019	D97U03001B	DIODE,ZENER
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON
D414	BZ410043	D2WT011E10	DIODE,SILICON
D415	BZ410043	D2WT011E10	DIODE,SILICON
D416	BZ410006	D1VT001330	DIODE,SILICON
D417	BZ410006	D1VT001330	DIODE,SILICON
D419	BZ410006	D1VT001330	DIODE,SILICON
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON
D505	AD300076	D28F30DF60	DIODE,RECTIFIER
D506	AD300731	D2WXN49370	DIODE,SILICON
D507	BZ410006	D1VT001330	DIODE,SILICON
D508	BZ410064	D97U03R91B	DIODE,ZENER
D509	AD300671	D97U01801B	DIODE,ZENER
D510	AD301980	D2CF2016L0	DIODE,SILICON
D511	AD300731	D2WXN49370	DIODE,SILICON
D512	BZ410010	D28T21DQ9N	DIODE,SCHOTTKY
D513	BZ410006	D1VT001330	DIODE,SILICON
D514	BZ410006	D1VT001330	DIODE,SILICON
D516	BZ410006	D1VT001330	DIODE,SILICON
D517	BZ410006	D1VT001330	DIODE,SILICON
D520	BZ410006	D1VT001330	DIODE,SILICON
D523	AD300671	D97U01801B	DIODE,ZENER
D524	BZ410006	D1VT001330	DIODE,SILICON
D525	AD300671	D97U01801B	DIODE,ZENER
D528	BZ410021	D97U05R61B	DIODE,ZENER
D601	BZ410006	D1VT001330	DIODE,SILICON
D602	BZ410058	D97U08R21B	DIODE,ZENER
D603	AD300670	D97U01501B	DIODE,ZENER
D604	AD300070	D97U01201B	DIODE,ZENER
D605	BZ410006	D1VT001330	DIODE,SILICON
D606	BZ410006	D1VT001330	DIODE,SILICON
D607	BZ410006	D1VT001330	DIODE,SILICON
D608	BZ410043	D2WT011E10	DIODE,SILICON
D701	AD300070	D97U01201B	DIODE,ZENER
D702	AD300070	D97U01201B	DIODE,ZENER
D703	AD300070	D97U01201B	DIODE,ZENER
D704	AD300070	D97U01201B	DIODE,ZENER
D705	AD300070	D97U01201B	DIODE,ZENER
D706	AD300070	D97U01201B	DIODE,ZENER
D709	BZ410066	D97U06R21B	DIODE,ZENER
D801	BZ410006	D1VT001330	DIODE,SILICON
D802	BZ410006	D1VT001330	DIODE,SILICON
D803	BZ410006	D1VT001330	DIODE,SILICON
D804	BZ410006	D1VT001330	DIODE,SILICON
D805	BZ410006	D1VT001330	DIODE,SILICON
D806	BZ410006	D1VT001330	DIODE,SILICON
D807	BZ410006	D1VT001330	DIODE,SILICON
D808	BZ410006	D1VT001330	DIODE,SILICON
D809	BZ410006	D1VT001330	DIODE,SILICON
D852	BZ410006	D1VT001330	DIODE,SILICON
D853	BZ410006	D1VT001330	DIODE,SILICON
D854	BZ410006	D1VT001330	DIODE,SILICON
D855	BZ410006	D1VT001330	DIODE,SILICON
D856	BZ410006	D1VT001330	DIODE,SILICON
D857	BZ410011	D28TELS2N2	DIODE,RECTIFIER
D858	BZ410011	D28TELS2N2	DIODE,RECTIFIER
ICS			
IC101	AD301981	I56F07090A	IC
IC199	AD302135	A3M601Z015	IC
IC301	AD300055	I0QF021500	IC
IC302	AD301983	I01FF58910	IC
IC401	AD300414	I03TD80410	IC
△IC504	BZ410088	0002E00610	PHOTO COUPLER
IC601	AE002803	I06FC1283A	IC
			MTZJ5.6B T-77
			AU02A-EIC
			ERD07-15L50
			FE201-6L49
			MTZJ30B T-77
			AU02A-EIC
			11E1-EIC
			11E1-EIC
			1SS133T-77
			1SS133T-77
			1SS133T-77
			RM11C-EIC
			RM11C-EIC
			RM11C-EIC
			RM11C-EIC
			30DF6-FC
			1N4937
			1SS133T-77
			MTZJ3.9B T-77
			MTZJ18B T-77
			FE201-6L49
			1N4937
			21DQ09N-TA2B1
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			MTZJ18B T-77
			1SS133T-77
			MTZJ18B T-77
			MTZJ5.6B T-77
			1SS133T-77
			MTZJ8.2B T-77
			MTZJ15B T-77
			MTZJ12B T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			11E1-EIC
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ12B T-77
			MTZJ6.2B T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			1SS133T-77
			10ELS2N-TA1B2
			10ELS2N-TA1B2
			OEC7090A
			S-24C16AFJA-TB-01
			NJM2150AM
			AN5891SA-E1V
			LA78041
			LTV-817M-VB
			M61283FP R70T

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
			ICS
IC701	AD301988	I0UF015010	IC
IC702	AD301988	I0UF015010	IC
IC902	AD300059	I01FF58290	IC
△IC1001	AE003081	I0FSP7808B	IC
IC1501	AE003002	I03FE76605	IC
IC1502	AD301988	I0UF015010	IC
IC1503	AD301988	I0UF015010	IC
			TRANSISTORS
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON
Q405	AD302136	TD50026380	TRANSISTOR,SILICON
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON
Q410	AD300027	TC30041590	TRANSISTOR,SILICON
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q502	BZ510098	T220033260	FET
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON
Q610	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON
Q613	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
△Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON
△Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON
△Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON
△Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON
△Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON
△Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON
Q1001	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON
			COILS & TRANSFORMERS
L301	BZ310041	02167F101J	COIL
L401	BZ310004	021679472K	COIL
L402	AD300400	022100034A	COIL,LINEARITY
L403	AD301606	02DK000058	COIL,CHOKE
△L501	AD301124	029T000101	COIL,LINE FILTER
△L503	AD300401	028R250009	COIL,DEGAUSS
L601	AD301989	0216A6330J	COIL
L802	AD300123	021673151K	COIL
L803	AD300123	021673151K	COIL
L804	AD300123	021673151K	COIL

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
COILS & TRANSFORMERS			
L901	BZ310041	02167F101J	COIL 100 UH
L1501	BZ310041	02167F101J	COIL 100 UH
L1502	AD301417	02167F221J	COIL 220 UH
L1503	AD301417	02167F221J	COIL 220 UH
L1505	AD300613	02167F150J	COIL 15 UH
L1508	BZ310041	02167F101J	COIL 100 UH
L1510	AD300613	02167F150J	COIL 15 UH
L1511	AD300613	02167F150J	COIL 15 UH
L1512	AD301608	0216A6220J	COIL 22 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE ETH19Y203AY
△T501	AD301034	048140066S	TRANSFORMER,SWITCHING 8140066S
JACKS			
J701	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK YKF51-5503
J703	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
△J801	BZ614115	066C130017	SOCKET,CATHODE RAY TUBE CVT3275-5101
J1001	BZ614361	060J131015	HEADPHONE JACK MSJ-2000
SWITCHES			
SW101	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
VARIABLE RESISTORS			
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED EVNVCYAA03BE4
P.C.BOARD ASSEMBLIES			
PCB010	AE003082	A3M6060010	PCB ASS'Y TMC559D
PCB060	AE003083	A3M6060060	PCB ASS'Y TEAA93B
PCB110	AE003084	A3M6060110	PCB ASS'Y TCA391B
MISCELLANEOUS			
B401	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B402	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
△CD501	AD300746	120R615901	CORD,AC BUSH OR615901
CD801	AD301042	06CU253401	CORD,CONNECTOR CU253401
CD802	AE000423	06CU274501	CORD,CONNECTOR CU274501
CD803	AD300094	06CP83035A	CORD,CONNECTOR CP83035A
CD851	AD302371	06CU244701	CORD,CONNECTOR CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR CU232001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE 173979-7
CP401	AD300095	069X460029	CONNECTOR PCB SIDE B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE A3963WV2-3PD
CP502	AD300687	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
CP803	AD301996	069S330010	CONNECTOR PCB SIDE A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE 005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE A2001WV2-3P
CD1001	AD300093	06CU14411A	CORD,CONNECTOR CU14411A
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE A2001WV2-5P
CP802A	AD301997	067U007029	WIRE HOLDER B2013H02-7P
CP802B	BZ614485	069S270629	CONNECTOR PCB SIDE A2001WV2-7P
CP851A	BZ614334	067U004029	WIRE HOLDER B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER B2013H02-3P
EL001	BZ614044	124120301A	EYE LET XRY20X30BD

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
MISCELLANEOUS			
EL002	BZ614043	124116281A	EYE LET
△F501	AD301046	081PC6R305	FUSE
△FB401	AE003085	043224007F	TRANSFORMER,FLYBACK
FH501	AE002634	06710T0009	HOLDER,FUSE
FH502	AE002634	06710T0009	HOLDER,FUSE
OS101	AD301048	0773071001	REMOTE RECEIVER
△RY501	AD300114	0560V20115	RELAY
SP1001	AD301050	070C457003	SPEAKER
SP1002	AD301050	070C457003	SPEAKER
△TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT
TM101	AE003009	076R0GW020	TRANSMITTER
△TU001	AE000273	0163300005	RF UNIT
△V801	AD301131	098W250401	CRT W/DY
X101	AD302002	100CT8R005	CRYSTAL
X602	AD302003	100CT3R505	CRYSTAL

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CMPL..... METAL PLASTIC CAPACITOR
 CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN